


ASSEMBLY INSTRUCTIONS MANUAL

#60381 48 POCKET GREETING CARD RACK

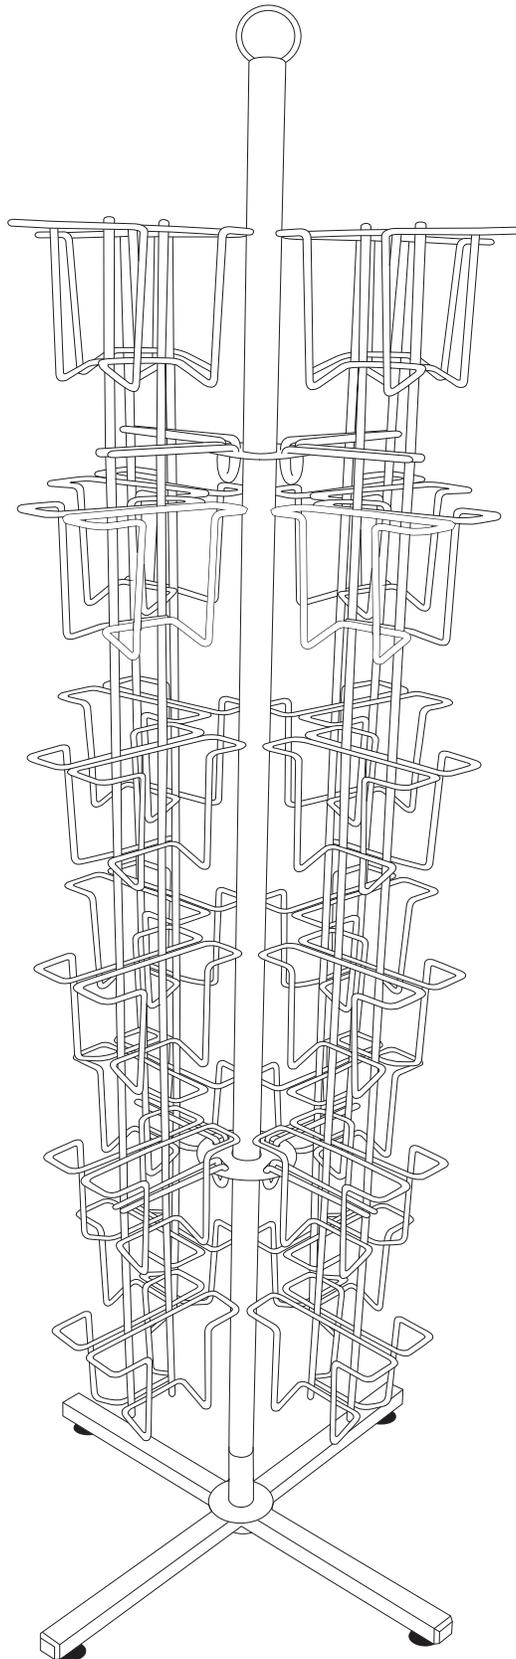

#60381 ASSEMBLY INSTRUCTIONS

48 POCKET GREETING CARD RACK

PARTS IN CARTON:


TOP TUBE
1 EACH




BOTTOM TUBE
1 EACH




SLOTTED WASHER
2 EACH

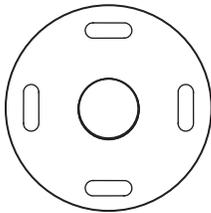

FLAT WASHER
2 EACH

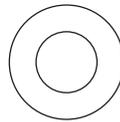

BEARING THRUST
RETAINER
1 EACH

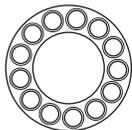


WIRE SIGN HOLDER
1 EACH




COTTER PIN
2 EACH



X-BASE (WITH ADJUSTABLE GLIDES
AND TUBE END-CAPS PRE-ATTACHED)
1 EACH

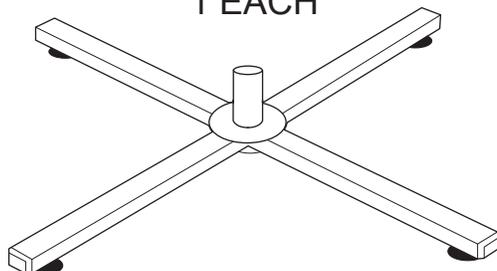

WIRE MERCHANDISER
4 EACH

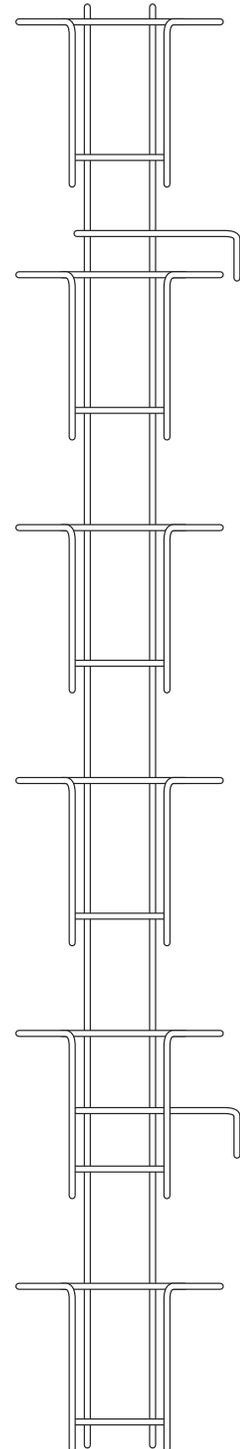


#60381 ASSEMBLY INSTRUCTIONS

48 POCKET GREETING CARD RACK

STEP 1


IDENTIFY THE TOP TUBE AND THE BOTTOM TUBE, PLEASE NOTE THAT EACH TUBE HAS A REGULAR END AT THE TOP, AND A TAPERED END AT THE BOTTOM. PLEASE MEASURE THE DISTANCE FROM THE TOP OF EACH TO THE HOLE. THE TUBE WHOSE HOLE-TO-END DISTANCE IS 12-3/4 INCHES IS THE TOP TUBE. THE OTHER TUBE IS THE BOTTOM TUBE.

TOP TUBE

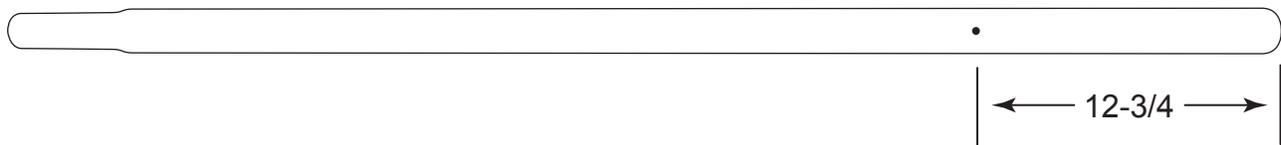

STEP 2

ATTACH THE BOTTOM TUBE TO THE BASE BY INSERTING THE TAPERED END OF THE TUBE INTO THE BASE. AFTER THE TUBE IS INSERTED, TWIST THE TUBE CLOCKWISE UNTIL IT LOCKS INTO THE BASE

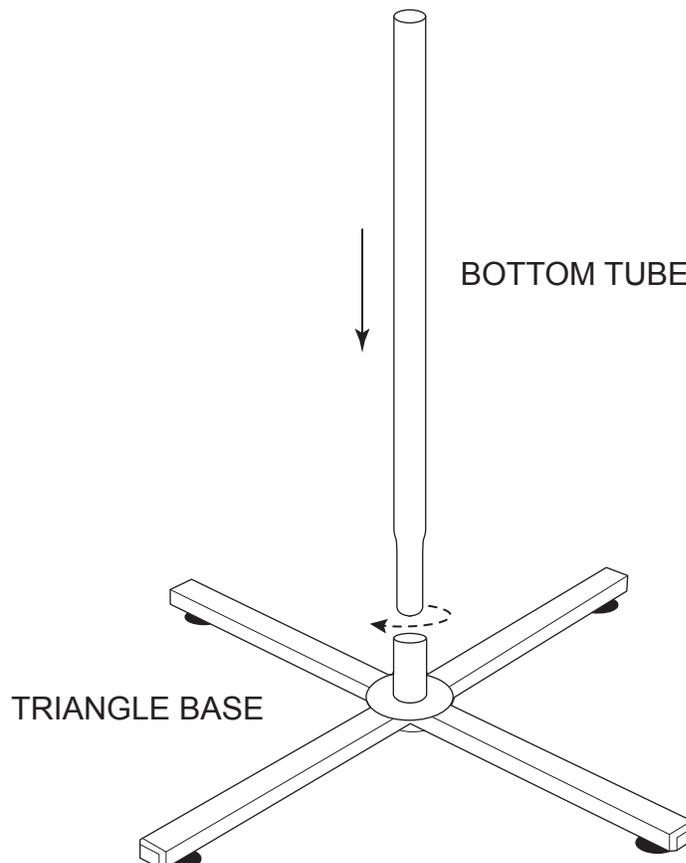

#60381 ASSEMBLY INSTRUCTIONS


48 POCKET GREETING CARD RACK

STEP 4

LOCATE THE HOLE IN THE BOTTOM TUBE. INSERT A COTTER PIN INTO THE HOLE. AFTER THE COTTER PIN IS INSERTED ALL THE WAY, BEND THE LONGER WIRE END OF THE COTTER PIN AWAY FROM THE SHORTER WIRE END. THIS WILL SECURE THE COTTER PIN INTO THE HOLE SO IT WON'T FALL OUT. USING PLIERS IS RECOMMENDED TO BEND THE WIRE.

STEP 5

PLACE A FLAT WASHER, THEN A BEARING THRUST RETAINER, AND THEN A SLOTTED WASHER ONTO THE TUBE. THEY SHOULD ALL REST ON TOP OF THE COTTER PIN.

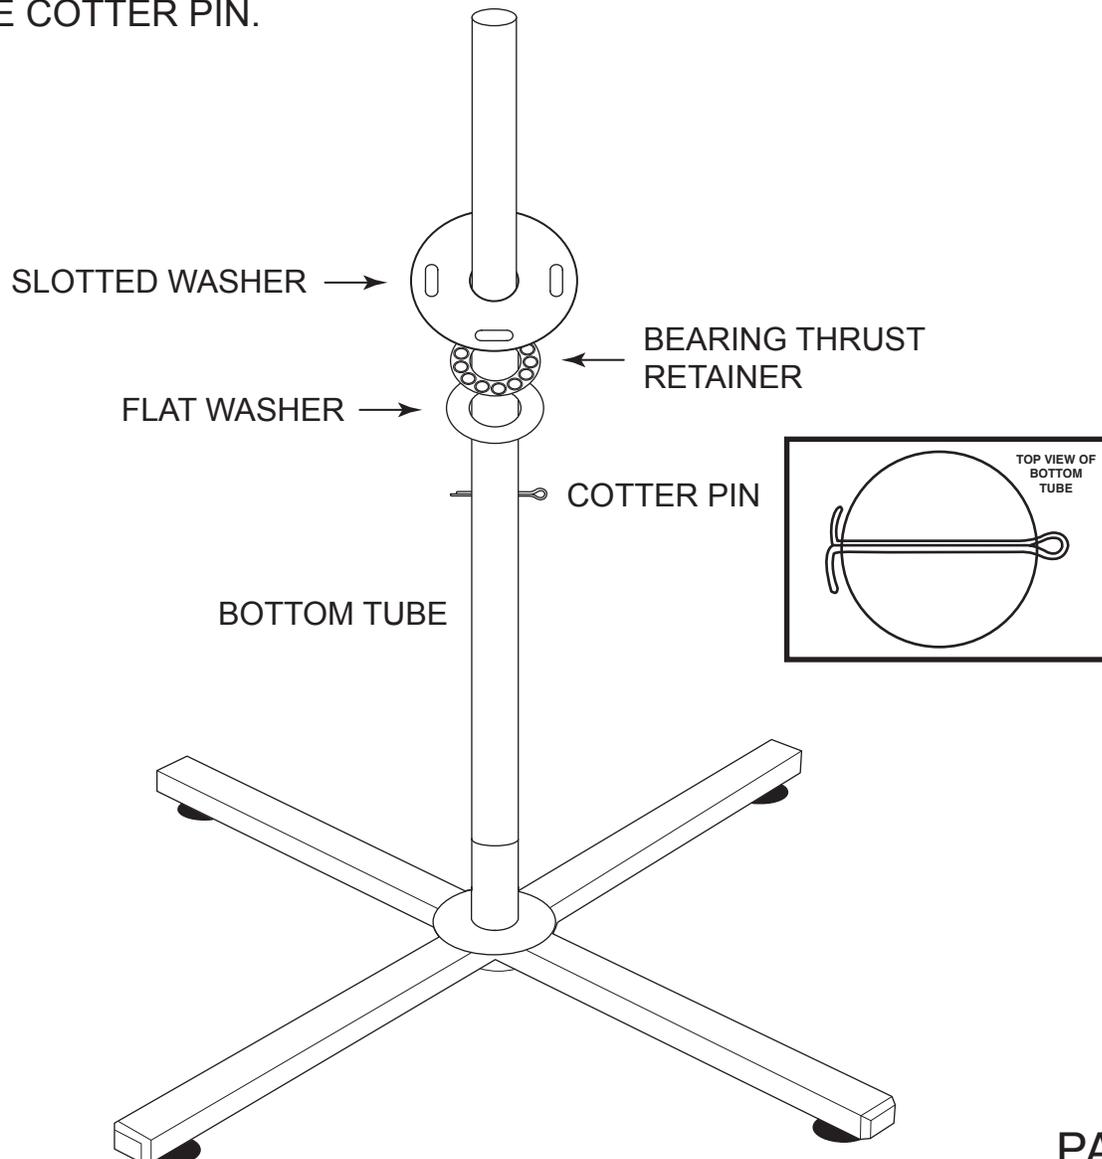


#60381 ASSEMBLY INSTRUCTIONS

48 POCKET GREETING CARD RACK

STEP 6

LOCATE THE THE HOLE IN THE TOP TUBE.
INSERT THE REMAINING COTTER PIN INTO THE
HOLE AND BEND THE WIRE AS DONE IN STEP 5.

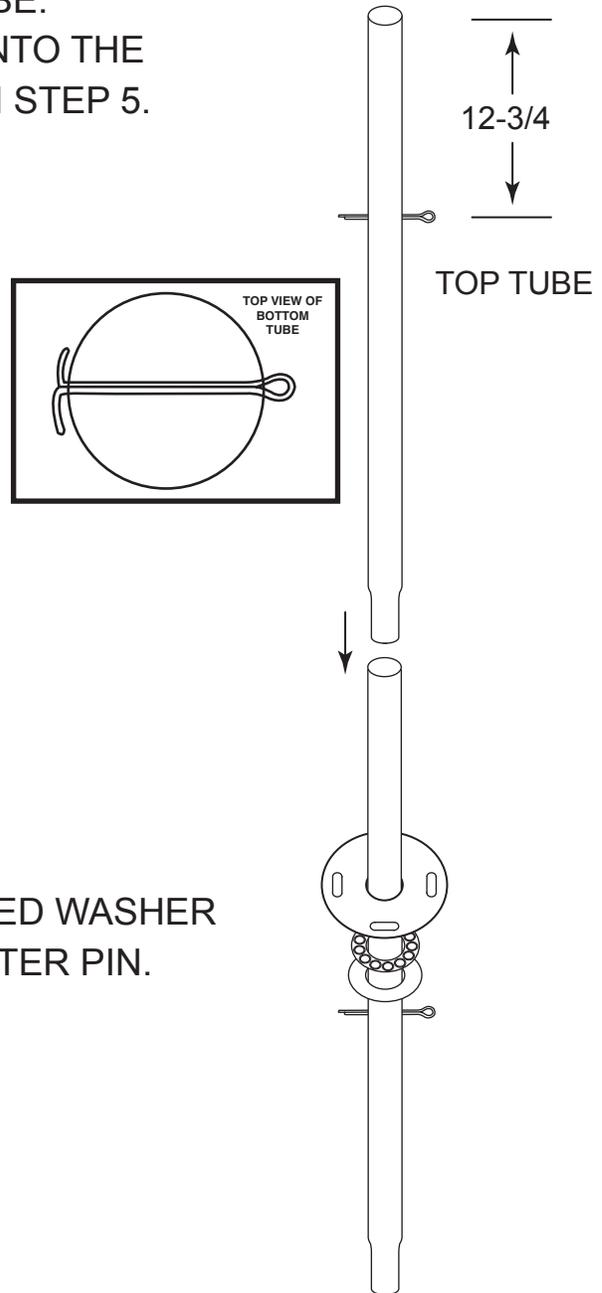

STEP 7


PLACE A FLAT WASHER, THEN A SLOTTED WASHER
ONTO THE TUBE TO REST ON THE COTTER PIN.

#60381 ASSEMBLY INSTRUCTIONS

48 POCKET GREETING CARD RACK


STEP 8

HANG EACH WIRE MERCHANDISER AS SHOWN. THE BENT HOOKS IN THE WIRE MERCHANDISERS FIT INTO THE SLOTS OF THE SLOTTED WASHERS.

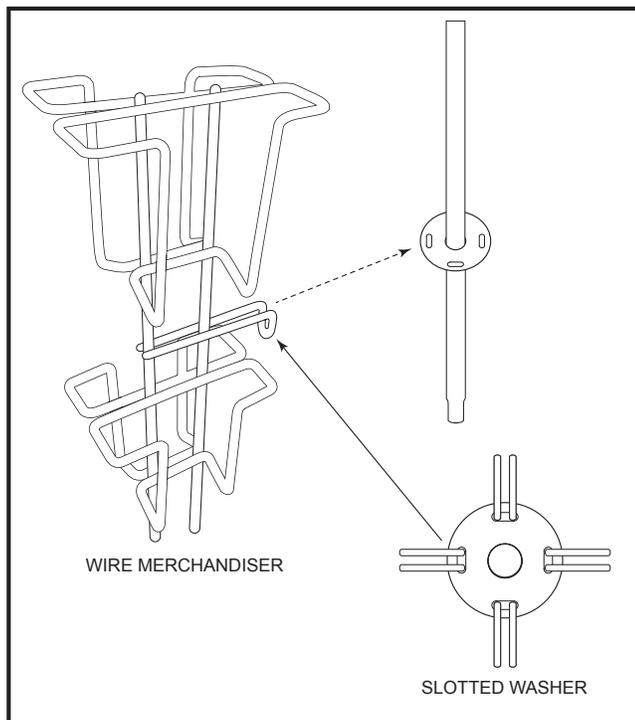

STEP 9

HANG EACH WIRE MERCHANDISER AS SHOWN. THE BENT HOOKS IN THE WIRE MERCHANDISERS FIT INTO THE SLOTS OF THE SLOTTED WASHERS.

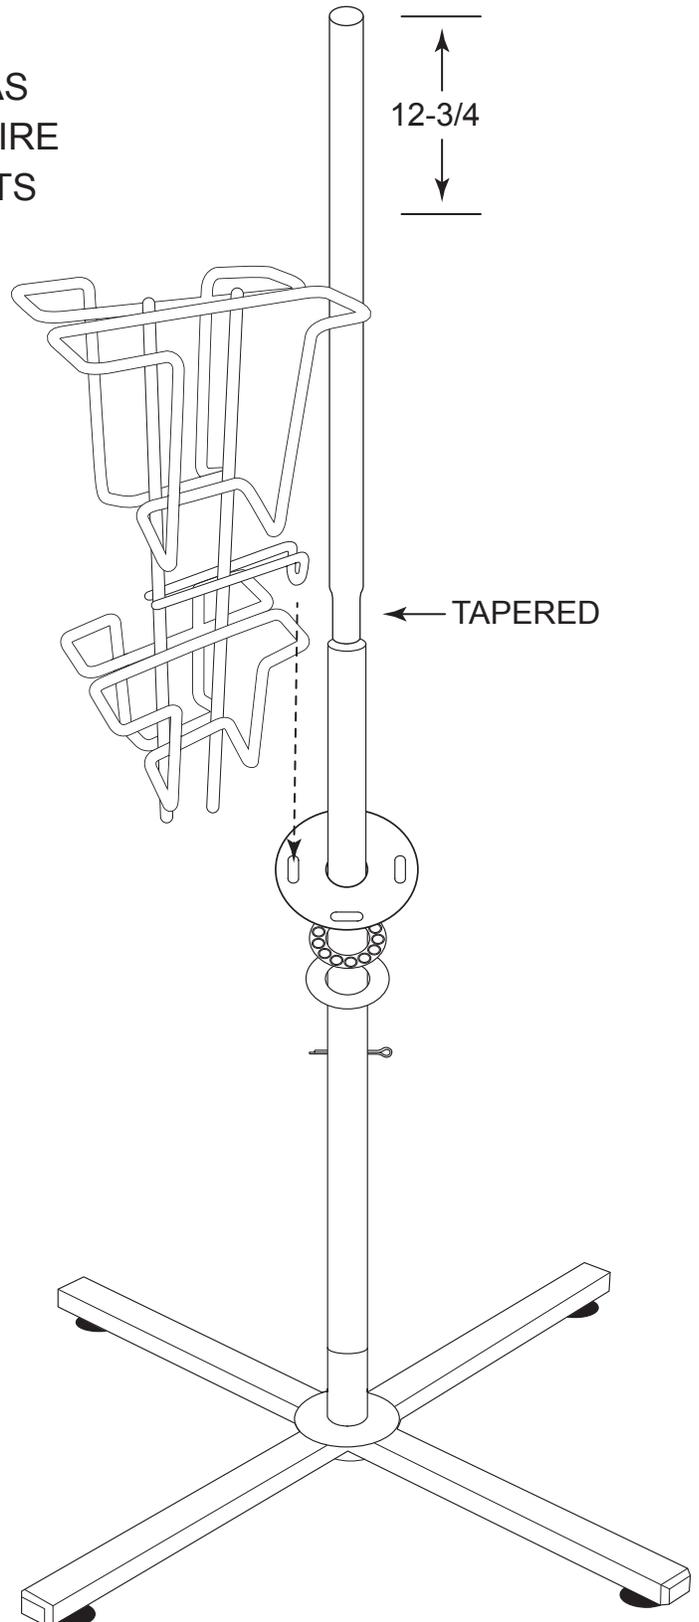

#60381 ASSEMBLY INSTRUCTIONS

48 POCKET GREETING CARD RACK

STEP 9

ATTACH THE WIRE SIGN
HOLDER TO THE TOP
OF THE RACK

STEP 10

USE THE ATTACHED
ADJUSTABLE GLIDES
LOCATED AT THE BOTTOM
OF THE BASE TO LEVEL THE
RACK ON UNEVEN FLOORS.

