

#### 94-502 SSW 2-LINE LABELER INSTRUCTIONS

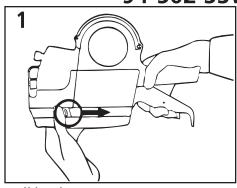


Pull back THE BASE-PLATE-OPEN-KEY as shown by arrow.



Pull up the LABEL-CASE as shown by arrow.

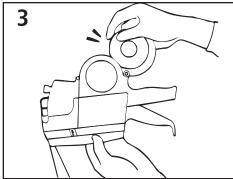

Load the label roll onto the LABEL-CASE.

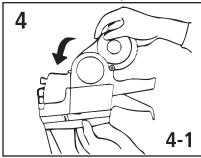



4" 4-2

Insert the label roll through the tunnel (4-1) allowing about 4" length out the bottom (4-2). Then close the LABEL-COVER completely.



 
Fold back the label roll at the PRINT-PLATE-PIN while pressing the BASE-PLATE slowly.

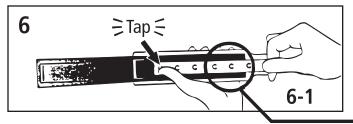




After lining feed roller with label roll (6-2) carefully close the base plate with a "TAP" sound. (6-1).


# STORE SUPPLY WAREHOUSE SSW 2-LINE LABELER

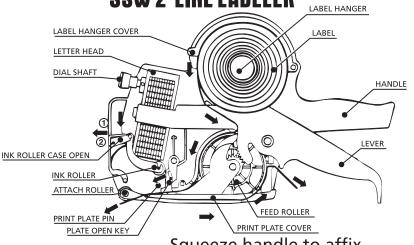

Squeeze handle to affix label onto merchandise.

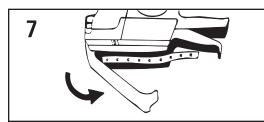


Close the BASE-PLATE-COVER

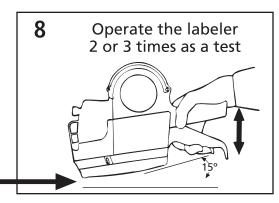

## 94-502 SSW - 2-LINE LABELER INSTRUCTIONS

### **Setting the Letter-Head**

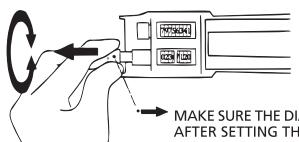


- 1. Pull or push the DIAL-SHAFT to the desired band.
- 2. Rotate the DIAL-SHAFT in either direction. When bands are set, push the DIAL-SHAFT forward.

MAKE SURE THE DIAL-SHAFT IS RETURNED TO THE ORIGINAL POSITION AFTER SETTING THE BANDS.

## **Adjusting the Printing Position**

Adjust printing position with LETTER-CONTROL-SCREW on the LETTER-HEAD.

Printing position is moved back and forth by Approx. 1/2".

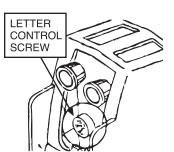

1234567890

For right printing position, turn the screw to minus (-).




1234567890 1234567890


For left printing position, turn the screw to plus (+).



## Changing the Ink-Roller

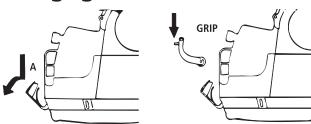

 2. PRESS THE INK-ROLLER-HOLDER in direction shown by arrow to take out the old INK-ROLLER, then insert the new INK-ROLLER per arrow.



1. Press and pull part A to open the INK-ROLLER CASE.



FOR LABELS, INK ROLLERS — AND ALL YOUR STORE SUPPLIES AND EQUIPMENT, CHOOSE STORE SUPPLY WAREHOUSE. YOUR ITEMS WILL BE SHIPPED TO YOU THE SAME DAY WE RECEIVE YOUR ORDER.