 
 
SSW TAGGING GUN OPERATING INSTRUCTIONS



1 Insert either end of the fastener connecting bar into the feed slot at the top of gun. Push the clip of fasteners into the slot as








Release trigger completely and withdraw gun. The tag should be securely fastened.




To remove fastener clip from gun — push fastener release button on top of gun toward rear of gun. Pull fastener clip straight up to remove from gun.

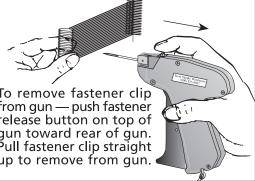


REPLACING **NEEDLE**




 To replace needle, turn needle lock outward, pointing toward the needle's point.



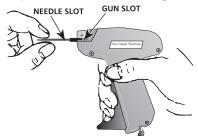

Turn needle lock toward the rear of the gun to lock needle in place.

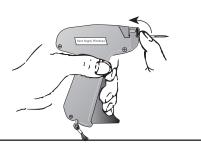

TO CLEAR A FASTENER JAM



If a fastener jams: First release the trigger and remove the needle (as shown above). Then carefully remove the jammed fastener from the gun or needle.



If a fastener can't be easily and safely removed from the needle simply replace the needle with a new one (as shown above).



OR DAMAGE TO THE GUN. NEEDLE: For best results we recommend using SSW tagging gun needles.

WARRANTY: Your SSW Tagging Gun is Warranted for 5-Years. If it should fail to perform, for any

reason, simply return it to us and we will either repair or replace it.

SAFETY NOTE: Tagging guns have needles which, when exposed, may cause accidental injury.

FOR SAFETY — KEEP NEEDLE GUARD ON WHEN GUN IS NOT IN USE

TO REORDER FASTENERS. NEEDLES OR TAGS CALL 1-800-823-8887

STORE SUPPLY WAREHOUSE, LLC • 9801 PAGE AVENUE • ST, LOUIS MO 63132-1428

PHONE: 1-800-823-8887 FAX: 1-800-823-0004 ON THE WEB: www.storesupply.com