4-Way Clothing Racks

ITEMS #60102, #60331, #60330, #60333



THIS GUIDE COVERS

- 4-Way Accent Clothing Rack with Straight Arms Chrome #60102
- 4-Way Accent Clothing Rack with Straight Arms Black #60331
- 4-Way Accent Clothing Rack with 2 Straight Arms and 2 Slant Arms Black #60330
- 4-Way Clothing Rack with Slant Arms Black #60333

BEFORE YOU BEGIN

STEPS	PARTS
8 steps	16 pieces, checklist on page 2

Need help?

Missing a part or have a question? We can help.

CALL
1-800-823-8887

EMAIL
contactus@storesupply.com


ONLINE
storesupply.com

MAIL
12955 Enterprise Way, Bridgeton, MO 63044

Scan to see this product online

Parts in the carton

Note: Identify all parts and review all instructions before beginning.

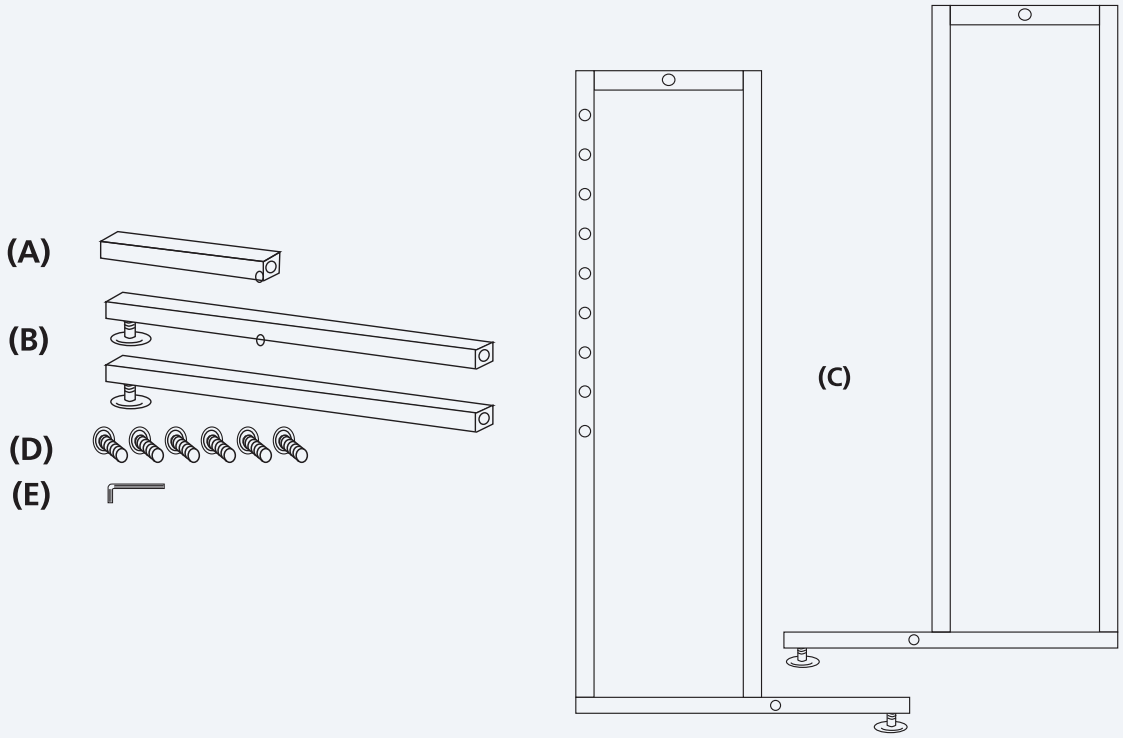

Check the carton

Tick off each part before you start.

- ☐ **1 ×** 8 inch spanner bar (A)
- ☐ **2 ×** 21 1/2 inch base bars with leveler (B)
- ☐ **2 ×** 47 inch uprights (C)
- ☐ **6 ×** Bolts, removed from spanner bar and base bars (D)
- ☐ **1 ×** Allen wrench (E)
- ☐ **4 ×** Adjustable rack arms (not shown)

STEP 1

Remove all bolts from spanner bar (part A) and base bars (part B).

Note: Refer to the illustration for detailed alignment of the parts.

STEP 2a

Place the two uprights (part C) with the legs facing in opposite directions and with the button holes for the arms facing inside (toward the other upright).

STEP 2b

Place the spanner bar (part A) between the top of the two uprights and attach with two of the bolts (part D).

STEP 3a

Position the base bar (part B) with the leveler toward the bottom.

STEP 3b


Attach the end of one of the base bars to the middle of the upright with one of the bolts.

STEP 3c

Place a second bolt through the middle of the base bar and attach to the end of the other upright.

STEP 4

Attach the other base bar on the other side of the uprights in the same manner.

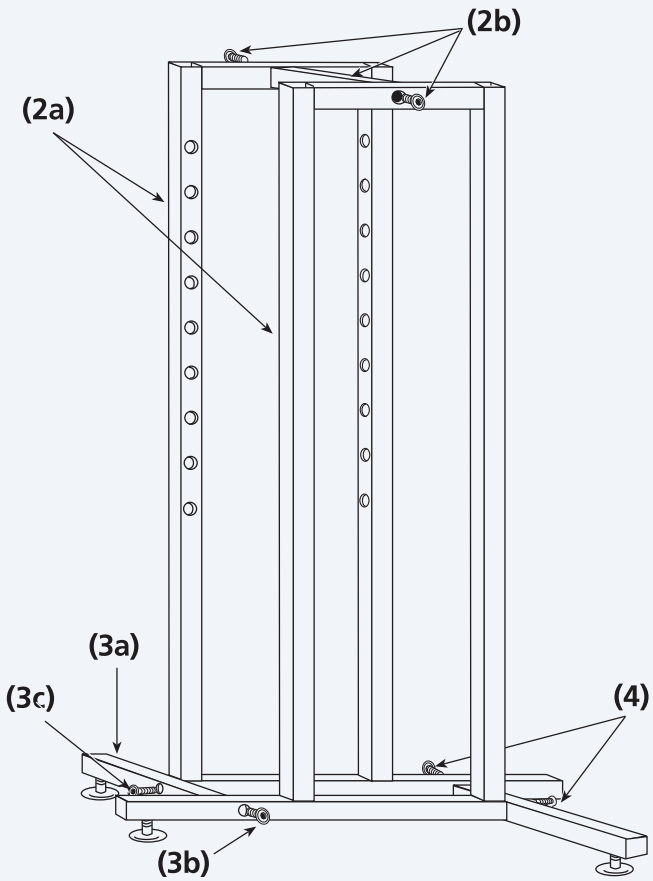

STEP 5

When all parts are attached, tighten all 6 bolts.

Slide in arms (pushing buttons) to desired height.