
ASSEMBLY INSTRUCTION MANUAL
#60-119 CHROME 4-WAY HANDBAG RACKS WITH J-HOOKS

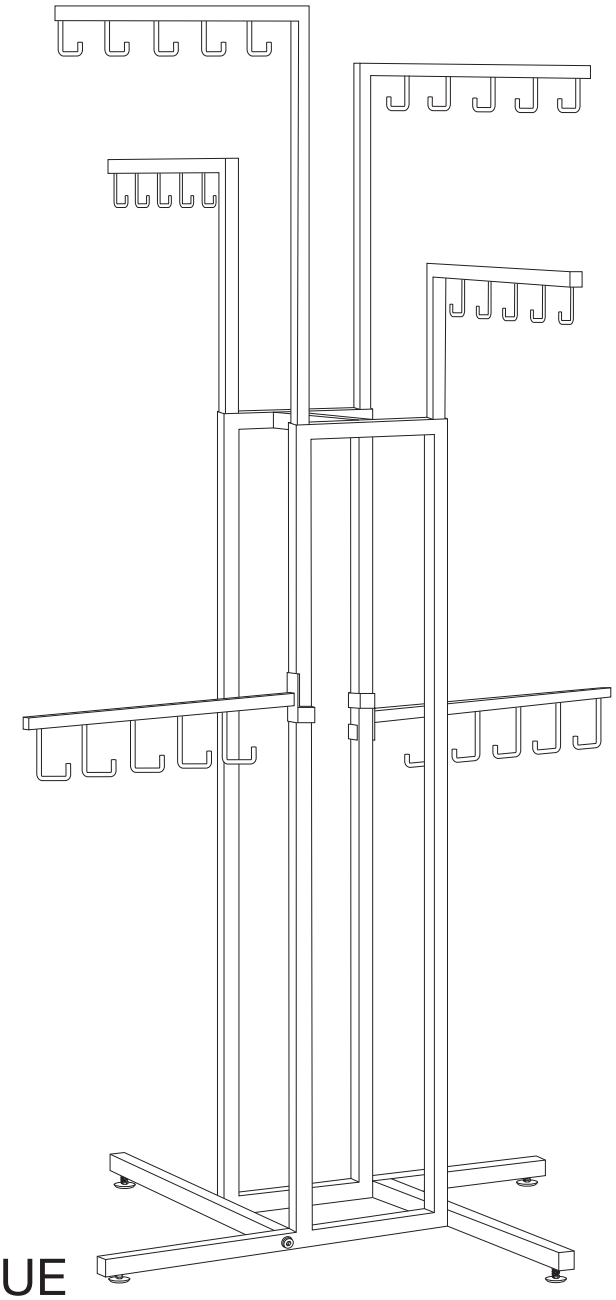


9801 PAGE AVENUE
ST. LOUIS, MO. 63132-1428
TEL: (314) 427-8887
or (800) 823-8887
FAX: (314) 427-0004
or (800) 823-0004


STORE SUPPLY Warehouse LLC

#60-119 ASSEMBLY INSTRUCTIONS
CHROME 4-WAY HANDBAG RACKS WITH J-HOOKS


PARTS IN CARTON:

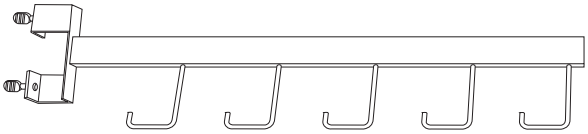


SIDE RACK
2 EACH

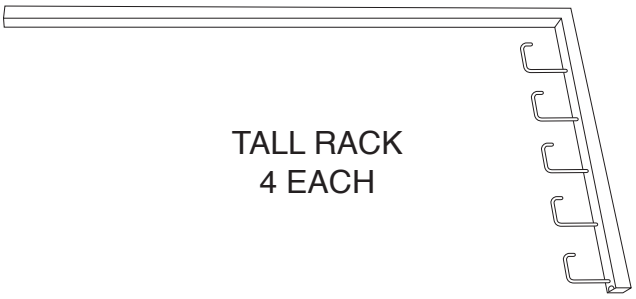


TALL RACK
4 EACH



LEG BAR
2 EACH



SUPPORT BAR
1 EACH

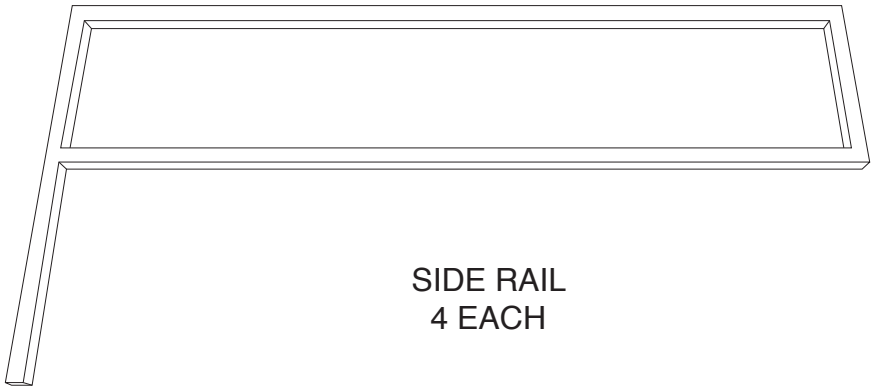


SIDE RAIL
4 EACH

HARDWARE AND TOOLS IN BAG:


NOTE: HARDWARE BELOW IS SHOW AT ACTUAL SIZE.
IF YOU ARE NOT SURE WHICH PART IS CORRECT,
THEN PLACE PIECE ON TOP OF DRAWING BELOW
FOR HELP DURING ASSEMBLY.




2" ALLEN SCREWS
6 EACH

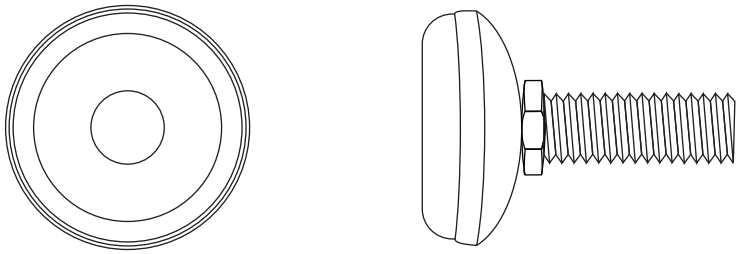

LEG SCREWS
4 EACH

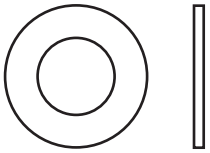

3/4" WASHERS
6 EACH

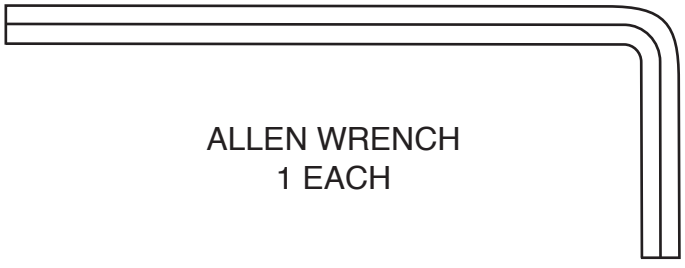


ALLEN WRENCH
1 EACH


STORE SUPPLY Warehouse LLC


RESUME FOR STEP BY STEP INSTRUCTIONS

#60-119 ASSEMBLY INSTRUCTIONS
CHROME 4-WAY HANDBAG RACKS WITH J-HOOKS

STEP 1:
LOCATE:
(4) FOUR LEG SCREWS
(2) TWO LEG BARS
(2) TWO SIDE RAILS



4 (ea.)


2 (ea.)

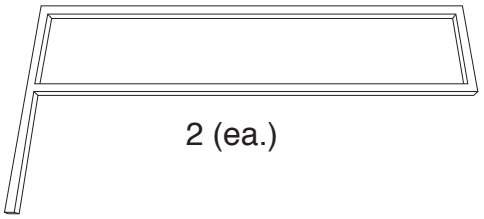

2 (ea.)


STEP 2: (SEE FIGURE 1)
INSERT AND HAND-TIGHTEN THE (4) FOUR LEG SCREWS INTO THE BOTTOM OF THE (2) TWO LEG BARS AND THE (2) TWO SIDE RAILS.

FIGURE 1

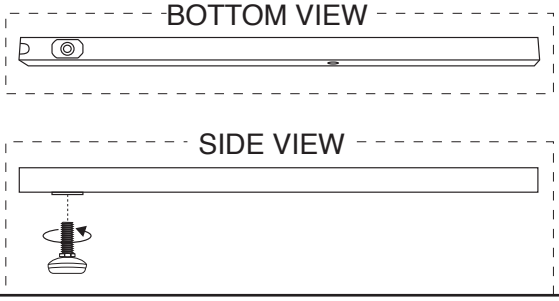


STEP 3:
LOCATE:
(1) ONE SIDE RAIL
(1) ONE LEG BAR
(1) ONE 3/4" WASHERS
(1) ONE 2" ALLEN SCREW
(1) ALLEN WRENCH


1 (ea.)

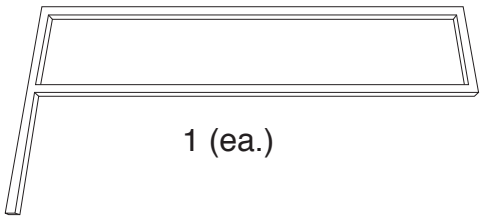
1 (ea.)


1 (ea.)


1 (ea.)


1 (ea.)

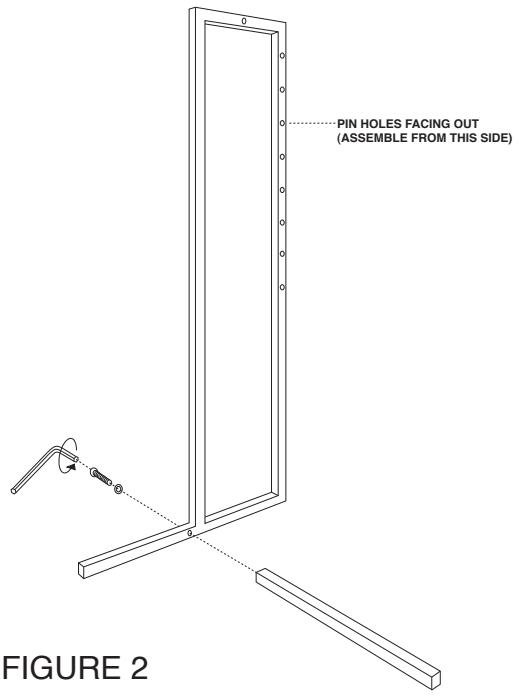


FIGURE 2

STEP 4: (SEE FIGURE 2)
INSERT (1) ONE 3/4" WASHER ONTO (1) ONE 2" ALLEN SCREW. LINE UP THE SCREW HOLES OF (1) ONE LEG BAR AND (1) ONE SIDE RAIL (INSTALLED LEGS FACING DOWN) AND SLIDE THE (1) ONE 2" ALLEN SCREW THROUGH THEM. TIGHTEN SCREW WITH THE ALLEN WRENCH.


ASSEMBLY NOTE:
INSTALL FROM THE EXACT SIDES AS SHOWN IN FIGURE 2. IF YOU DO NOT THE INSTALLATION WILL BE WRONG.

STORE SUPPLY Warehouse LLC


#60-119 ASSEMBLY INSTRUCTIONS
CHROME 4-WAY HANDBAG RACKS WITH J-HOOKS

STEP 5:
REPEAT STEPS 3 AND 4 FOR THE INSTALLATION ON THE REMAINING SIDE RAIL.

STEP 6:
LOCATE:
(2) TWO 3/4" WASHERS
(2) TWO 2" ALLEN SCREW
(1) ALLEN WRENCH



2 (ea.)


2 (ea.)


1 (ea.)


STEP 7: (SEE FIGURE 3)
THIS STEP INVOLVES COMBINING THE TWO BASES CREATED FROM STEPS 3 THROUGH 5. FACE THE ENDS OF YOUR BASES OPPOSITE OF EACH OTHER. LINE UP THE SCREW HOLES OF THE BASES SO THEY MATCH FIGURE 3. INSERT (2) TWO 3/4" WASHERS ONTO (2) TWO 2" ALLEN SCREWS. INSERT THE (2) TWO ALLEN SCREWS INTO THE HOLES AS SHOWN IN FIGURE 3. TIGHTEN SCREWS WITH THE ALLEN WRENCH.


ASSEMBLY NOTE:
MAKE SURE ALL OF THE ALLEN SCREWS ARE PROPERLY TIGHTENED TO ENSURE SAFE AND EASY INSTALLATION.

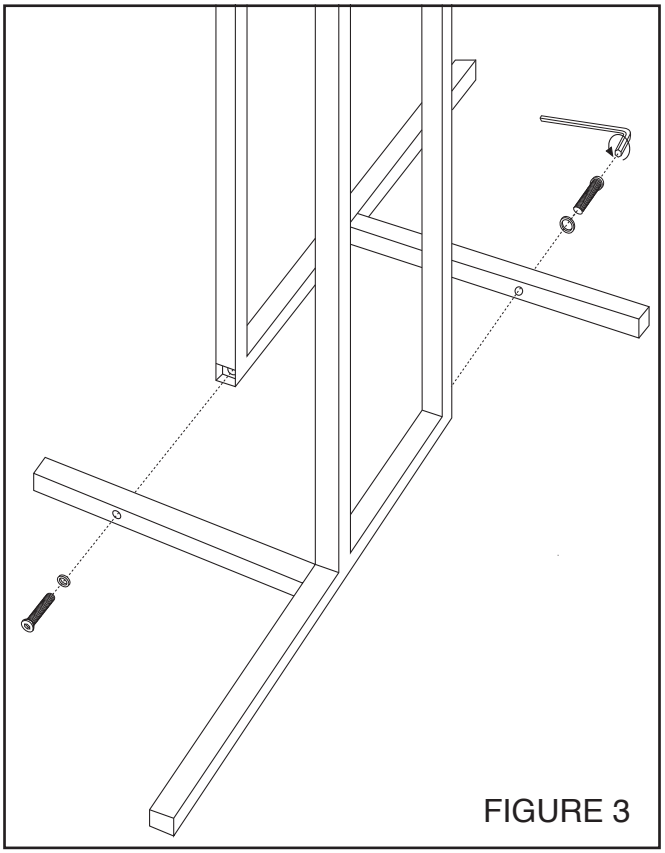

FIGURE 3

STEP 8:
LOCATE:
(2) TWO 3/4" WASHERS
(2) TWO 2" ALLEN SCREW
(1) ONE SUPPORT BAR
(1) ALLEN WRENCH


2 (ea.)


2 (ea.)


1 (ea.)


1 (ea.)


STORE SUPPLY Warehouse LLC

#60-119 ASSEMBLY INSTRUCTIONS
CHROME 4-WAY HANDBAG RACKS WITH J-HOOKS

STEP 9: (SEE FIGURE 4)
INSERT (2) TWO 3/4" WASHERS ONTO (2) TWO 2" ALLEN SCREWS.

SECURE THE (1) ONE SUPPORT BAR AT THE TOP OF THE ASSEMBLY BY LINING UP THE SCREW HOLES AND USING THE (2) TWO 2" ALLEN SCREWS. TIGHTEN SCREWS WITH THE ALLEN WRENCH.

FIGURE 4

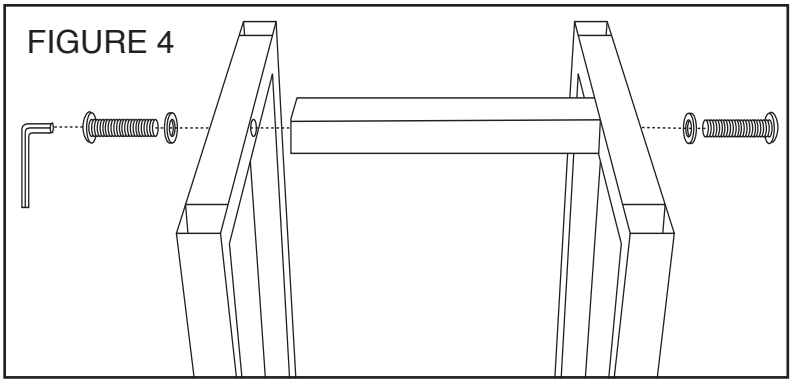


STEP 10:
LOCATE:
(4) FOUR TALL RACKS



4 (ea.)

FIGURE 5

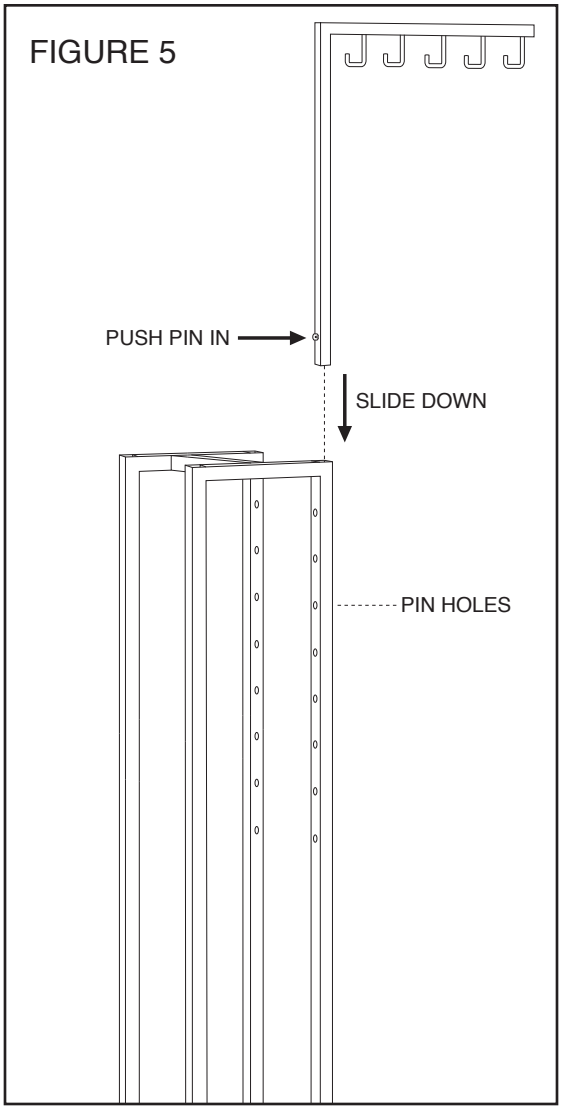

STEP 11: (SEE FIGURE 5)
SLIDE IN (1) ONE TALL RACK INTO THE ASSEMBLY BY:

- LINING UP THE PIN OF THE TALL RACK TO THE PINHOLES OF THE ASSEMBLY.

- PUSH IN THE PIN ON THE TALL RACK AND SLIDING IT DOWN UNTIL IT LOCKS INTO PLACE INSIDE OF A PIN HOLE.


REPEAT THE ABOVE STEPS FOR THE REMAINING (3) THREE TALL RACKS.

ADJUST THE TALL RACKS TO YOUR DESIRED HEIGHT.

STORE SUPPLY Warehouse LLC

#60-119 ASSEMBLY INSTRUCTIONS
CHROME 4-WAY HANDBAG RACKS WITH J-HOOKS

STEP 12:
LOCATE:
(2) TWO SIDE RACKS

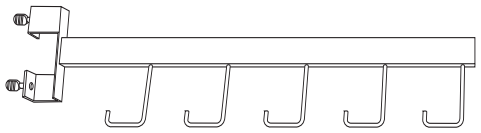

2 (ea.)


STEP 13: (SEE FIGURE 6 FOR STEPS)
INSTALL THE (2) TWO SIDE RACKS BY:

1. ALIGN THE END OF THE SIDE RACK BRACKET TO YOUR DESIRED RAIL.

2. TWIST THE SIDE RACK CLOCKWISE.


3. TWIST UNTIL THE SIDE RACK BRACKET IS SNUG ONTO THE RAIL.

4. TWIST THE THUMB SCREWS CLOCKWISE ON THE SIDE RACK BRACKET TO TIGHTEN IT TO THE RAIL.

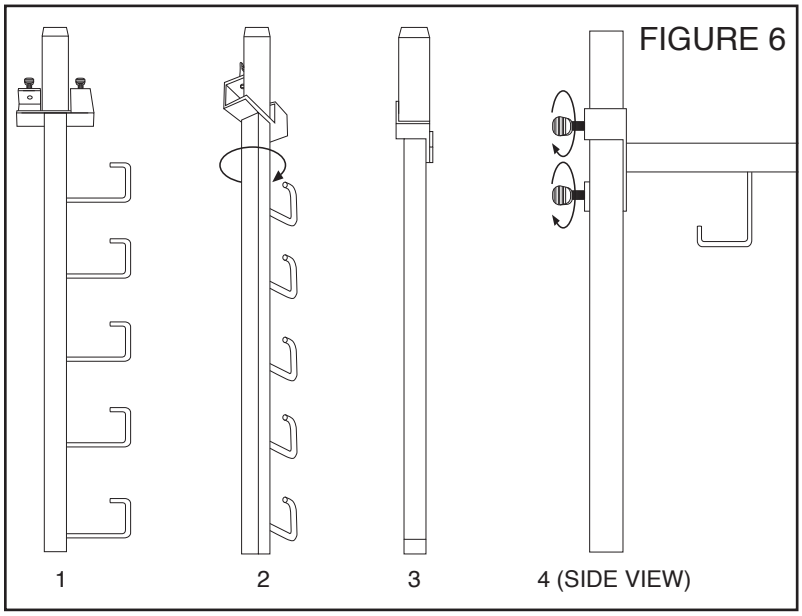

ASSEMBLY COMPLETE

NOTE: MAKE SURE ALL SCREWS ARE SECURED TIGHTLY BEFORE HANGING MERCHANDISE.

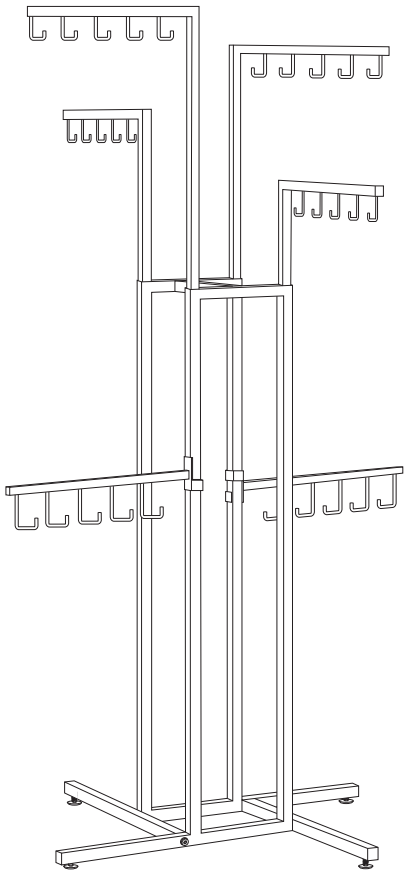

STORE SUPPLY Warehouse LLC