
ASSEMBLY INSTRUCTION MANUAL

#60502 COBBLESTONE COUNTER HOOK

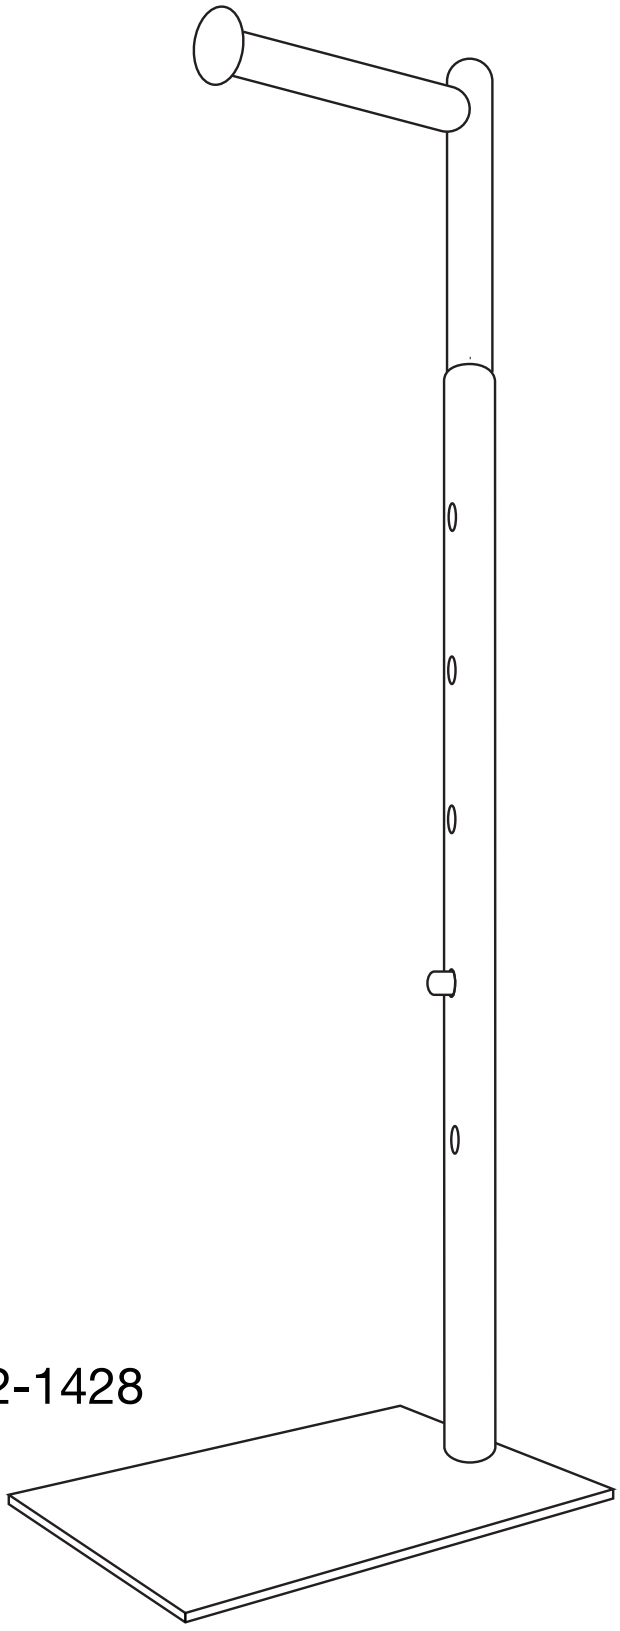


9801 PAGE AVENUE
ST. LOUIS, MO. 63132-1428
TEL: (314) 427-8887
or (800) 823-8887
FAX: (314) 427-0004
or (800) 823-0004


STORE SUPPLY Warehouse LLC

60502 ASSEMBLY INSTRUCTIONS
COBBLESTONE COUNTER HOOK


PARTS IN CARTON:




EXTENSION
SUPPORT BAR
1 EACH

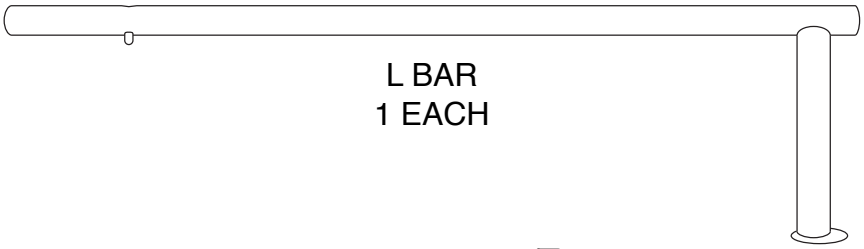

L BAR
1 EACH

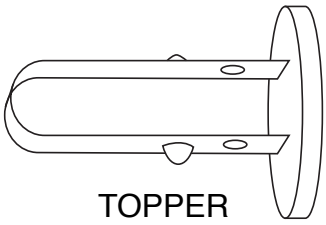


TOPPER
1 EACH

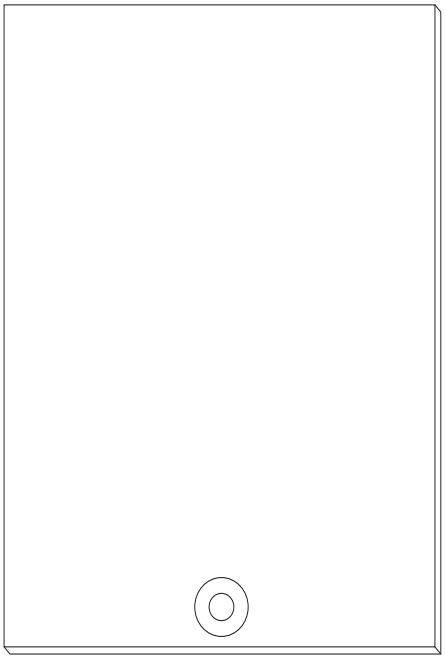


STAND BOTTOM
1 EACH

HARDWARE AND TOOLS IN BAG:

NOTE: HARDWARE BELOW IS SHOW AT ACTUAL SIZE.
IF YOU ARE NOT SURE WHICH PART IS CORRECT,
THEN PLACE PIECE ON TOP OF DRAWING BELOW
FOR HELP DURING ASSEMBLY.



1" HEX SCREW

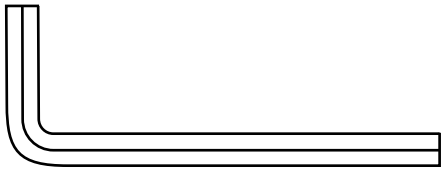



ALLEN WRENCH

RESUME FOR STEP BY STEP INSTRUCTIONS


60502 ASSEMBLY INSTRUCTIONS
COBBLESTONE COUNTER HOOK

STEP 1
LOCATE: (1) BOTTOM BASE
(1) 1” HEX SCREW

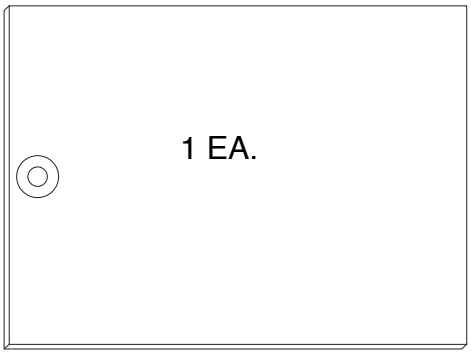




1 EA.

STEP 2 (SEE FIGURE 1)
INSERT THE 1” HEX SCREW THROUGH THE HOLE IN THE BOTTOM BASE.

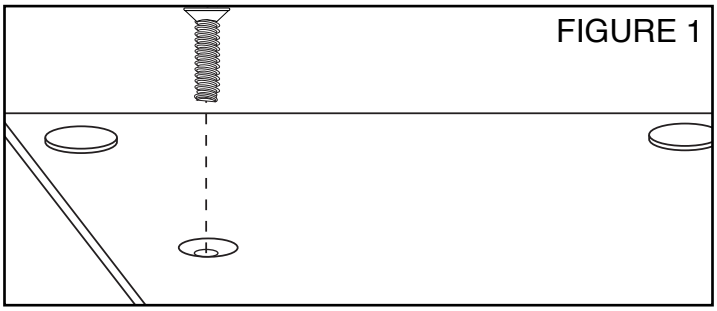

FIGURE 1

STEP 3
LOCATE: (1) EXTENSION SUPPORT BAR
(1) ALLEN WRENCH


1 EA.

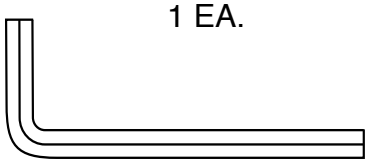

STEP 4
USING THE ALLEN WRENCH, SCREW THE 1” HEX SCREW INTO THE BOTTOM OF THE EXTENSION SUPPORT BAR.

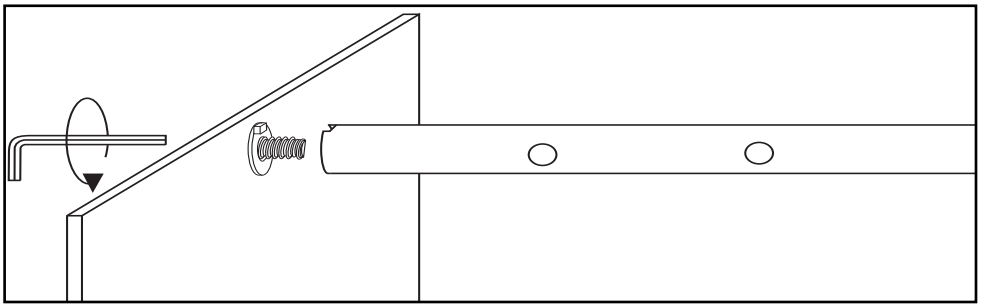


NOTE:
MAKE SURE THE GROOVE IN THE EXTENSION SUPPORT BAR IS PROPERLY ALIGNED WITH THE INDENTIONS ON THE BOTTOM BASE.


STORE SUPPLY Warehouse LLC


60502 ASSEMBLY INSTRUCTIONS
COBBLESTONE COUNTER HOOK

STEP 5
LOCATE: (1) L BAR

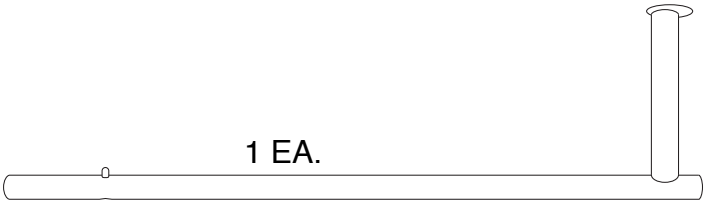

STEP 6 (SEE FIGURE 3)
INSERT THE BOTTOM OF THE L BAR INTO THE TOP OF THE EXTENSION SUPPORT BAR. PUSH IN THE SILVER PIN TO LOCK THE L BAR INTO THE HOLES IN THE EXTENSION SUPPORT BAR.

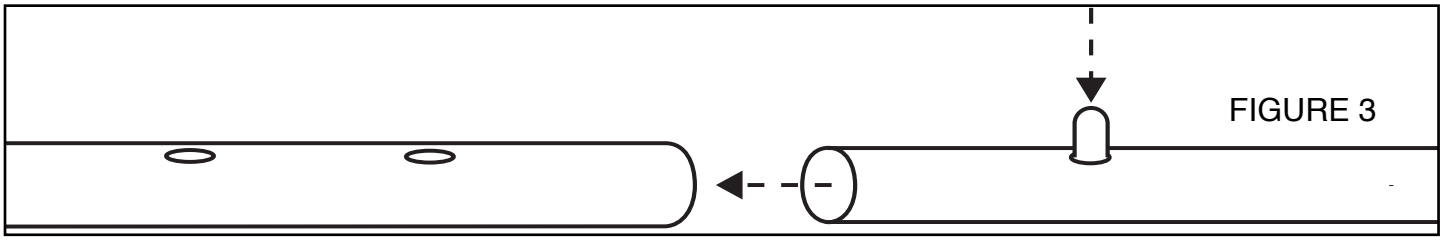

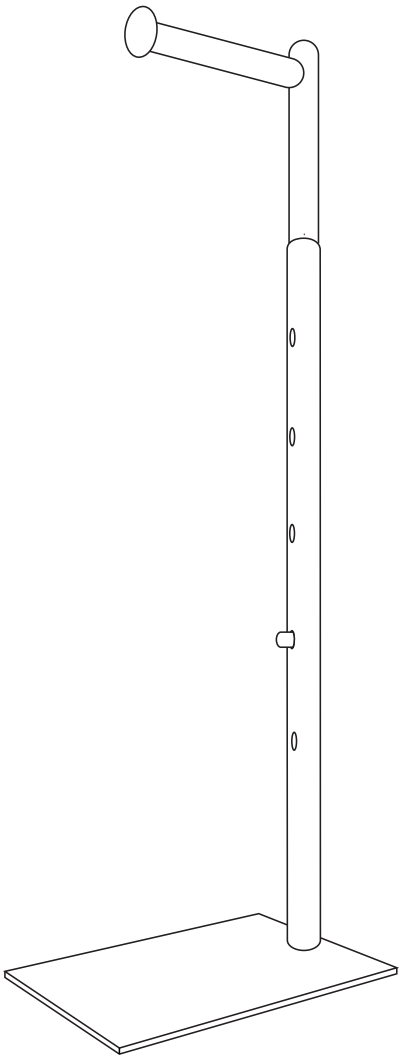

NOTE: MAKE SURE ALL SCREWS ARE SECURED TIGHTLY BEFORE HANGING MERCHANDISE.