
ASSEMBLY INSTRUCTION MANUAL
#60-560 BOUTIQUE IVORY
3-WAY CLOTHES RACK

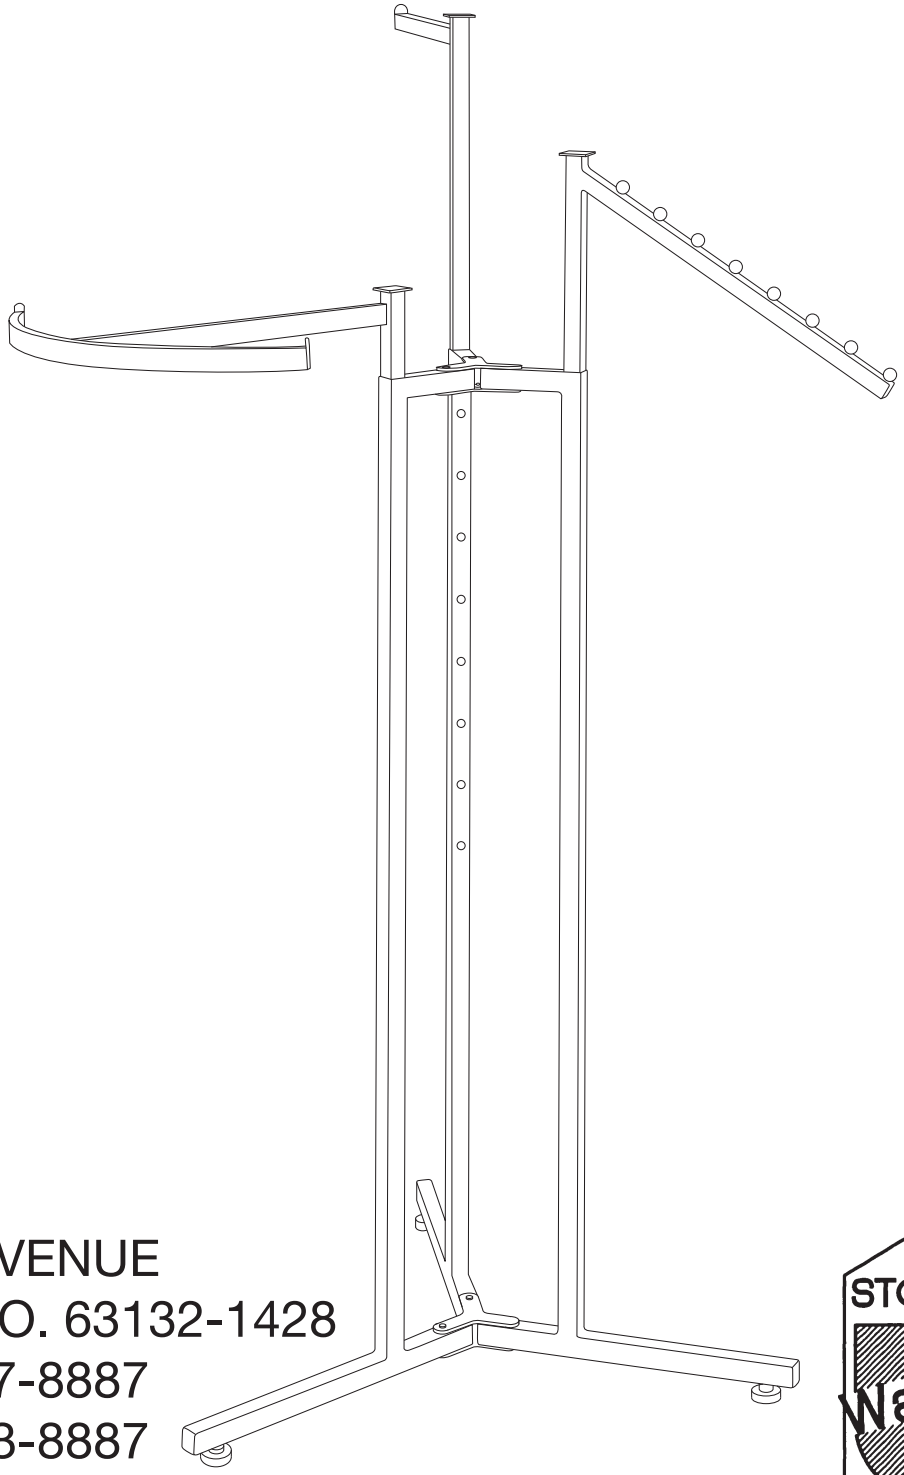

9801 PAGE AVENUE
ST. LOUIS, MO. 63132-1428
TEL: (314) 427-8887
or (800) 823-8887
FAX: (314) 427-0004
or (800) 823-0004

STORE SUPPLY Warehouse LLC


#60-560 ASSEMBLY INSTRUCTIONS

BOUTIQUE IVORY 3-WAY CLOTHES RACK


PARTS IN CARTON:




CURVE ARM
1 EACH

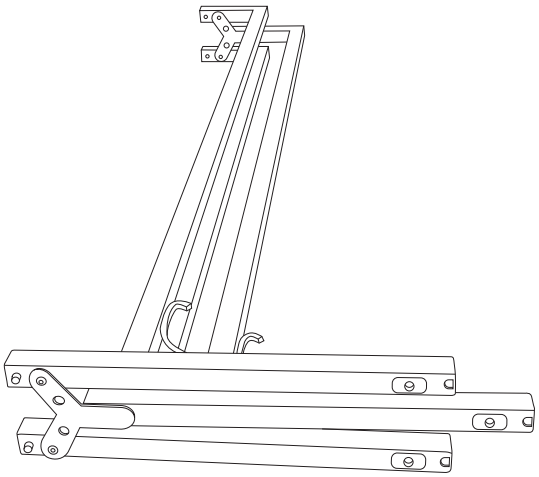

FRAME
1 EACH

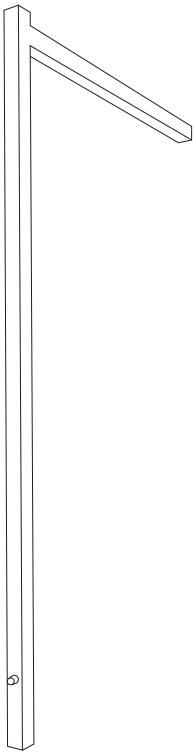

STRAIGHT BAR
1 EACH

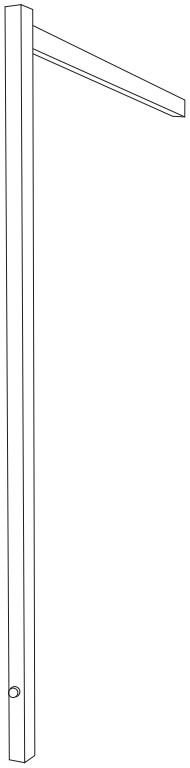


CURVE BAR
1 EACH




SLANT BAR
1 EACH


HARDWARE AND TOOLS IN BAG:

NOTE: HARDWARE BELOW IS SHOW AT ACTUAL SIZE. IF YOU ARE NOT SURE WHICH PART IS CORRECT, THEN PLACE PIECE ON TOP OF DRAWING BELOW FOR HELP DURING ASSEMBLY.

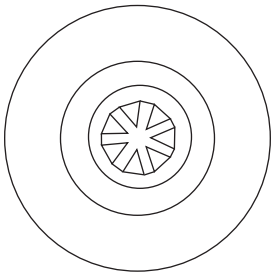

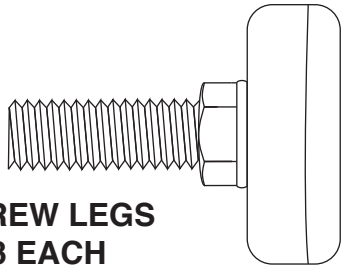


SCREW LEGS
3 EACH



3/4" SCREW
2 EACH

HARDWARE AND TOOLS **NOT** IN BAG:

NOTE: YOU WILL NEED TO SUPPLY YOUR OWN PHILLIPS HEAD SCREWDRIVER FOR THIS ASSEMBLY.

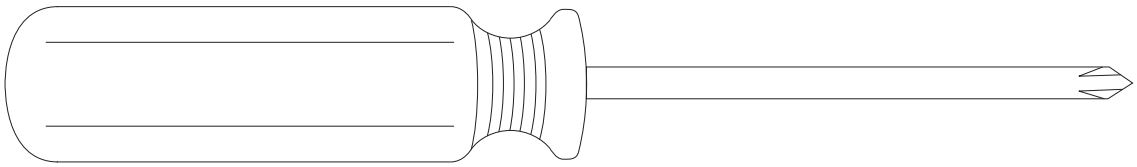

STORE SUPPLY Warehouse LLC


RESUME FOR STEP BY STEP INSTRUCTIONS

#60-560 ASSEMBLY INSTRUCTIONS


BOUTIQUE IVORY 3-WAY CLOTHES RACK

STEP 1:

LOCATE: (1) ONE FRAME
(3) THREE LEG SCREWS

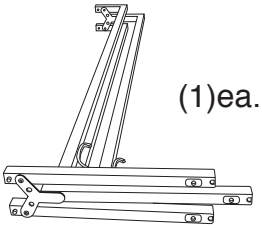

(1)ea.



(3)ea.

STEP 2: (SEE FIGURE 1)

IDENTIFY THE 3 SCREW HOLES LOCATED ON EACH LEG OF THE FRAME. SCREW IN ALL (3) THREE LEG SCREWS BY HAND UNTIL IT IS FULLY TIGHTENED AND FLUSH WITH THE FRAME.

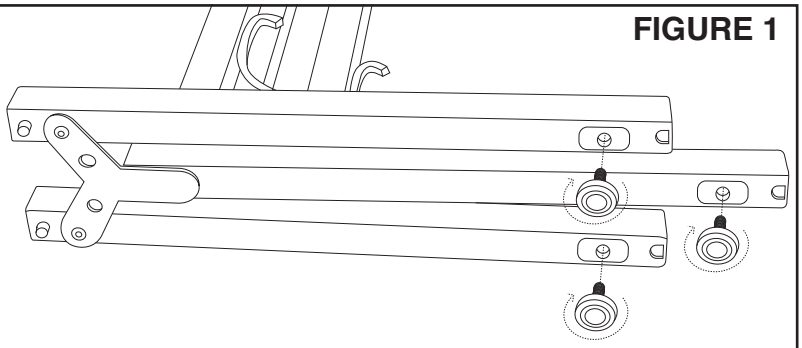


FIGURE 1

STEP 3: (SEE FIGURE 2)

SWING OUT THE LEGS OF THE FRAME.
A: STAND THE FRAME UPRIGHT.
B: SWING ONE OF THE LEGS OUT UNTIL IT SNAPS INTO PLACE.
C: REPEAT STEP **B** FOR THE REMAINING LEG.

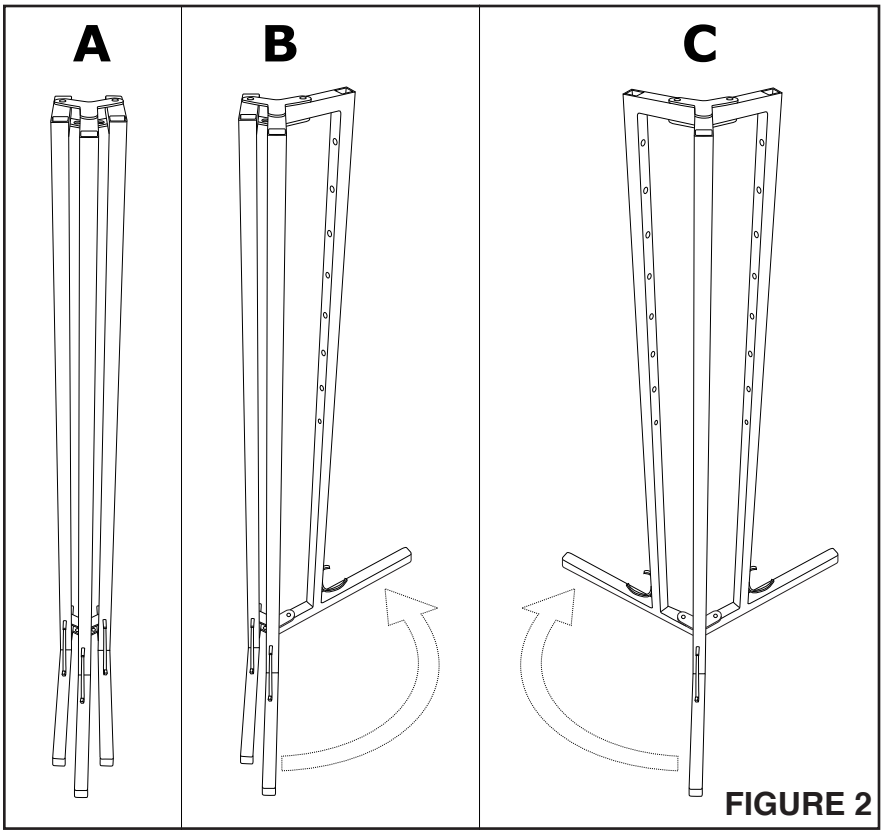


FIGURE 2

NOTE: THE LEGS ARE ON HINGES THAT LOCK INTO PLACE WITH THE USE OF PINS (LOCATED AT THE TOP AND BOTTOM OF THE LEGS). MAKE SURE THE PINS OF THE LEGS ARE LOCKED INTO PLACE BEFORE HANGING MERCHANDISE.


STORE SUPPLY Warehouse LLC

#60-560 ASSEMBLY INSTRUCTIONS

BOUTIQUE IVORY 3-WAY CLOTHES RACK

STEP 4:

LOCATE: (1) ONE CURVE BAR
(1) ONE CURVE ARM
(2) TWO 3/4" SCREWS
YOUR SUPPLIED SCREWDRIVER

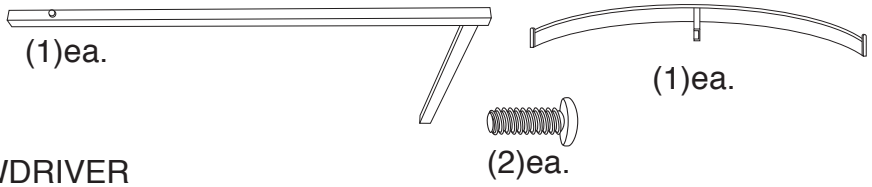


STEP 5: (SEE FIGURE 3)

SLIDE THE CURVE ARM INTO THE SHAFT OF THE CURVE BAR. LINE UP THE SCREW HOLES AND INSERT THE (2) TWO 3/4" SCREWS USING YOUR OWN SUPPLIED SCREWDRIVER.


NOTE: MAKE SURE ALL SCREWS FOR UNIT ARE TIGHTLY SECURED BEFORE HANGING MERCHANDISE.

FIGURE 3

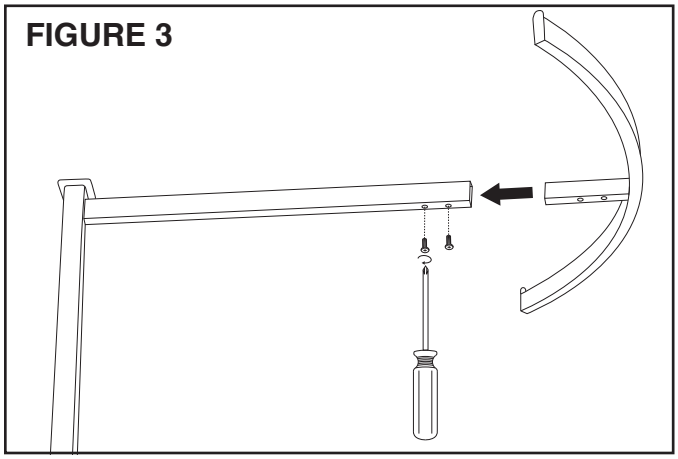

STEP 6:

LOCATE: (1) ONE FRAME
(1) ONE SLANT BAR
(1) ONE STRAIGHT BAR
ASSEMBLED CURVE BAR

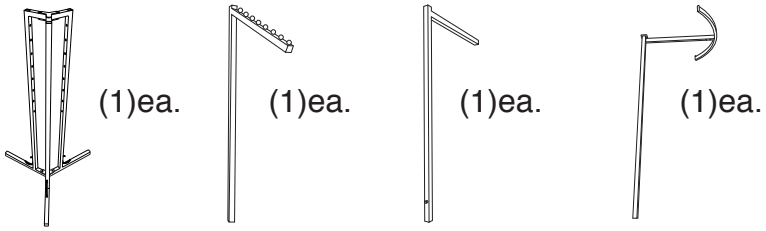

STEP 7: (SEE FIGURE 4)

CHOOSE WHICH BAR YOU WISH TO INSTALL FIRST. SLIDE THAT BAR INTO THE FRAME BY:

(1) ALIGNING THE PIN OF BAR (LOCATED AT THE BASE OF THE BAR) TO THE PINHOLES OF THE FRAME.


(2) PUSH IN THE PIN OF THE BAR AND SLIDE IT DOWN UNTIL IT LOCKS INTO PLACE INSIDE OF A PIN HOLE.

(3) REPEAT THE ABOVE STEPS FOR THE REMAINING 2 BARS. ADJUST THE BARS TO DESIRED HEIGHT.

NOTE: MAKE SURE ALL PINS OF THE BARS ARE LOCKED INTO THE FRAME BEFORE HANGING MERCHANDISE.

ASSEMBLY COMPLETE.

FIGURE 4

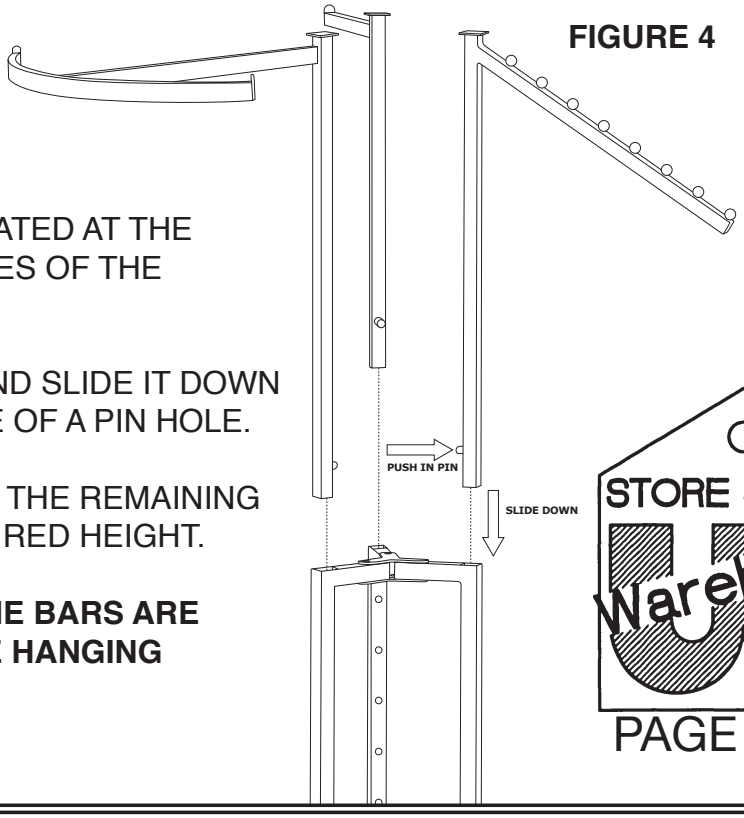

STORE SUPPLY Warehouse LLC