
# ASSEMBLY INSTRUCTION MANUAL
# #60-566 IVORY 2-WAY RACK WITH STRAIGHT ARMS

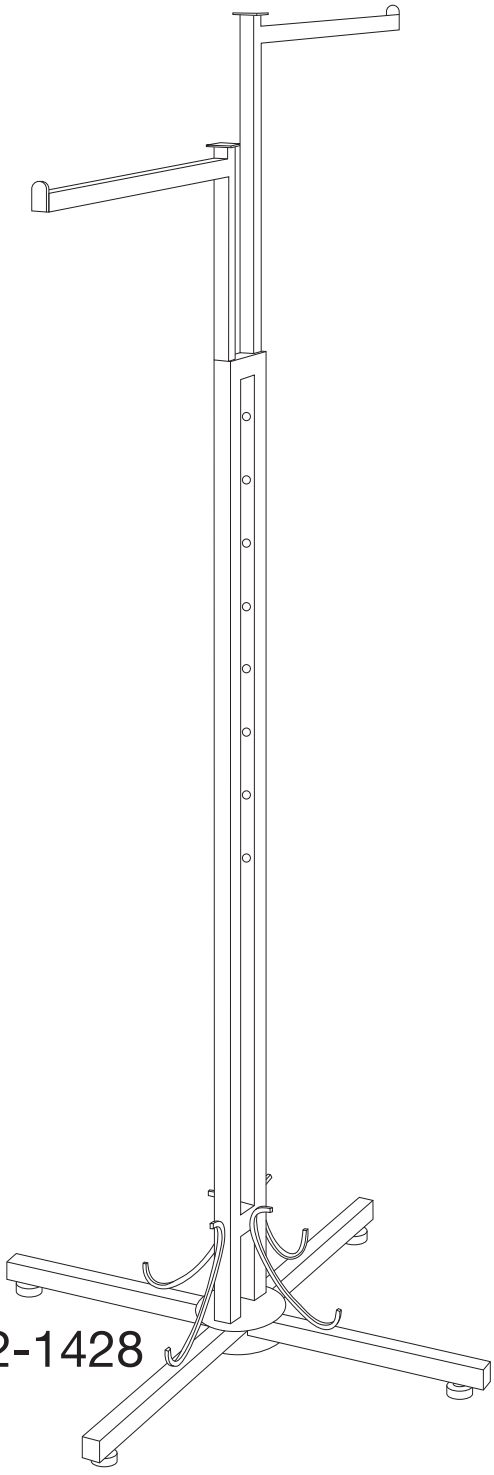


9801 PAGE AVENUE
ST. LOUIS, MO. 63132-1428
TEL: (314) 427-8887
or (800) 823-8887
FAX: (314) 427-0004
or (800) 823-0004

STORE SUPPLY Warehouse LLC


# #60-566 ASSEMBLY INSTRUCTIONS

## IVORY 2-WAY RACK WITH STRAIGHT ARMS


## PARTS IN CARTON:

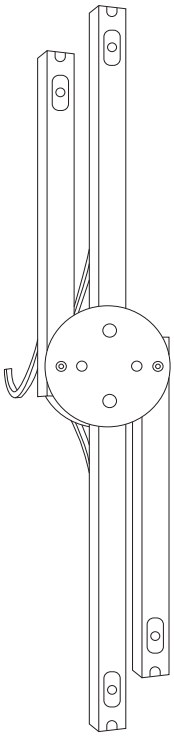


**BASE**
**1 EACH**

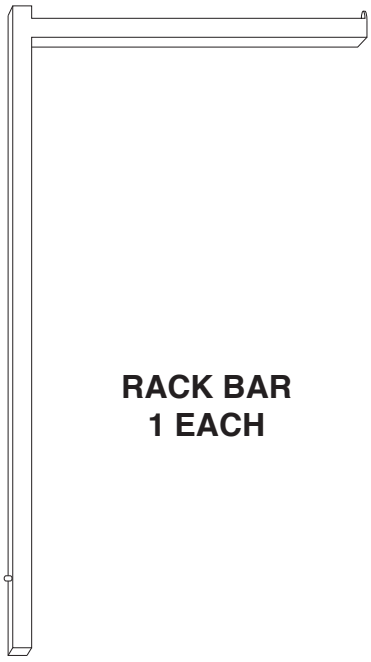

**RACK BAR**
**1 EACH**

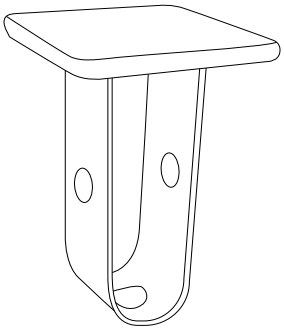


**BAR TOP**
**1 EACH**




**FRAME**
**1 EACH**


## HARDWARE AND TOOLS IN BAG:

NOTE: HARDWARE BELOW IS SHOW AT ACTUAL SIZE. IF YOU ARE NOT SURE WHICH PART IS CORRECT, THEN PLACE PIECE ON TOP OF DRAWING BELOW FOR HELP DURING ASSEMBLY.

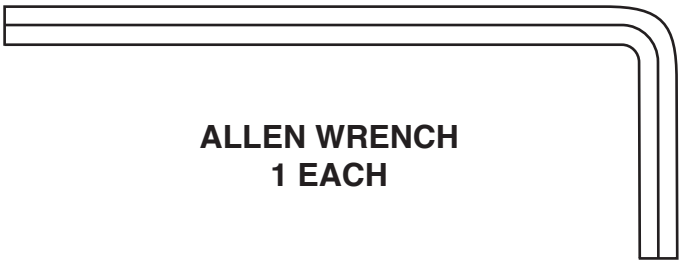


**ALLEN WRENCH**
**1 EACH**

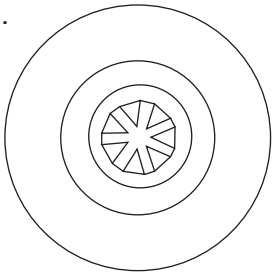


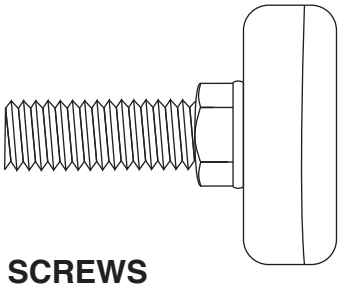

**LEG SCREWS**
**4 EACH**

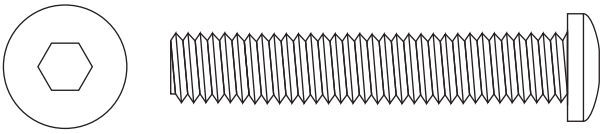

**2” ALLEN HEAD SCREW**
**2 EACH**

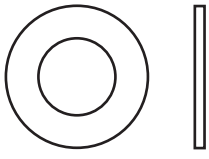


**3/4” WASHER**
**2 EACH**




RESUME FOR STEP BY STEP INSTRUCTIONS

# #60-566 ASSEMBLY INSTRUCTIONS
## IVORY 2-WAY RACK WITH STRAIGHT ARMS

**STEP 1:**
LOCATE: (1) ONE BASE
(4) FOUR LEG SCREWS

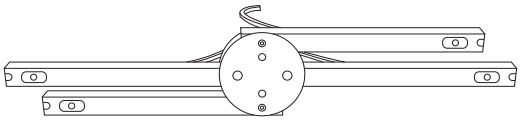


(1)ea.

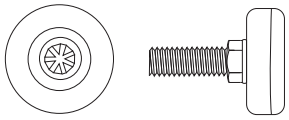

(4)ea.


**STEP 2: (SEE FIGURE 1)**
LOCATE THE 4 HOLES LOCATED BENEATH THE BASE ASSEMBLY. INSERT (4) FOUR LEG SCREWS INTO EACH HOLE, TIGHTENING THE LEG SCREWS BY HAND UNTIL IT IS FLUSH WITH THE ASSEMBLY.


**FIGURE 1**

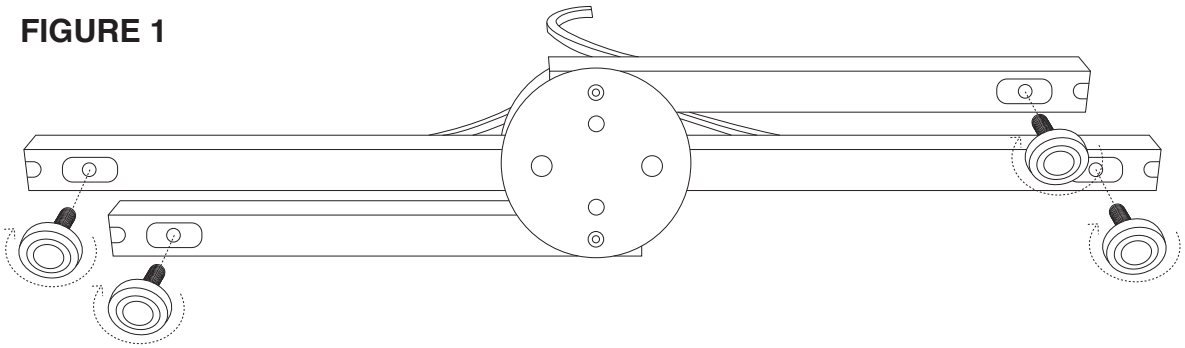


**STEP 3: (SEE FIGURE 2)**
SWING THE 2 BARS OF THE BASE ASSEMBLY OUT UNTIL THEY LOCK INTO PLACE.

**FIGURE 2**

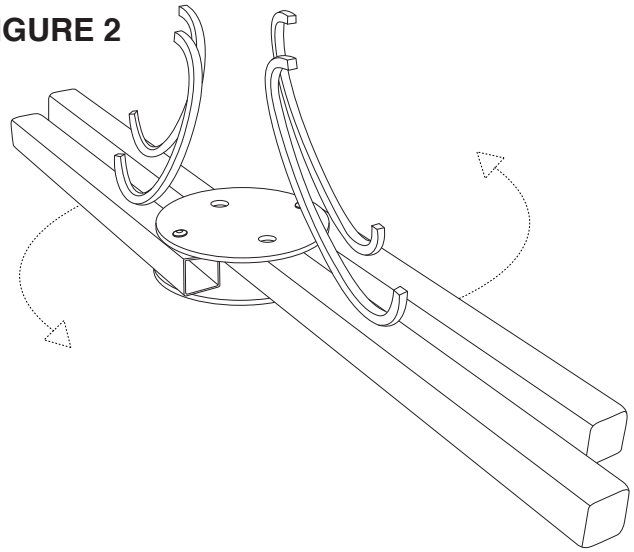


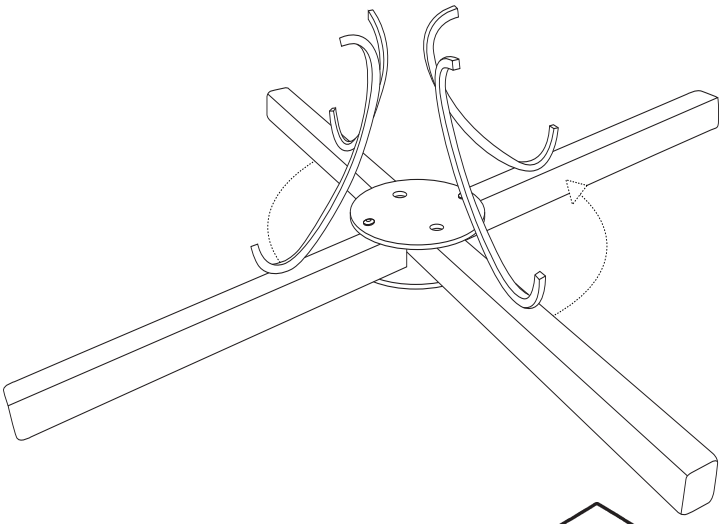

**STEP 4:**
LOCATE: (1) ONE BASE ASSEMBLY
(1) ONE FRAME
(2) TWO 3/4" WASHERS
(2) TWO ALLEN HEAD SCREWS

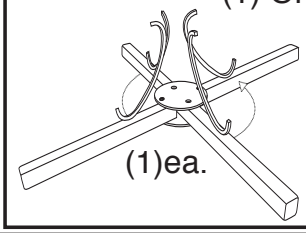


(1)ea.



(2)ea.



(2)ea.



(1)ea.


STORE SUPPLY Warehouse LLC

# #60-566 ASSEMBLY INSTRUCTIONS
## IVORY 2-WAY RACK WITH STRAIGHT ARMS

**STEP 5: (SEE FIGURE 3)**
INSERT THE (2) TWO 3/4" WASHERS ONTO THE (2) TWO 2" SCREWS.

LOCATE THE SCREW HOLES ON THE BOTTOM OF THE FRAME. ALIGN THOSE HOLES TO THOSE ON THE TOP OF THE BASE. SLIDE IN THE (2) TWO 2" ALLEN HEAD SCREWS INTO THOSE ALIGNED HOLES. TIGHTEN THE SCREWS WITH THE SUPPLIED ALLEN WRENCH.


**FIGURE 3**

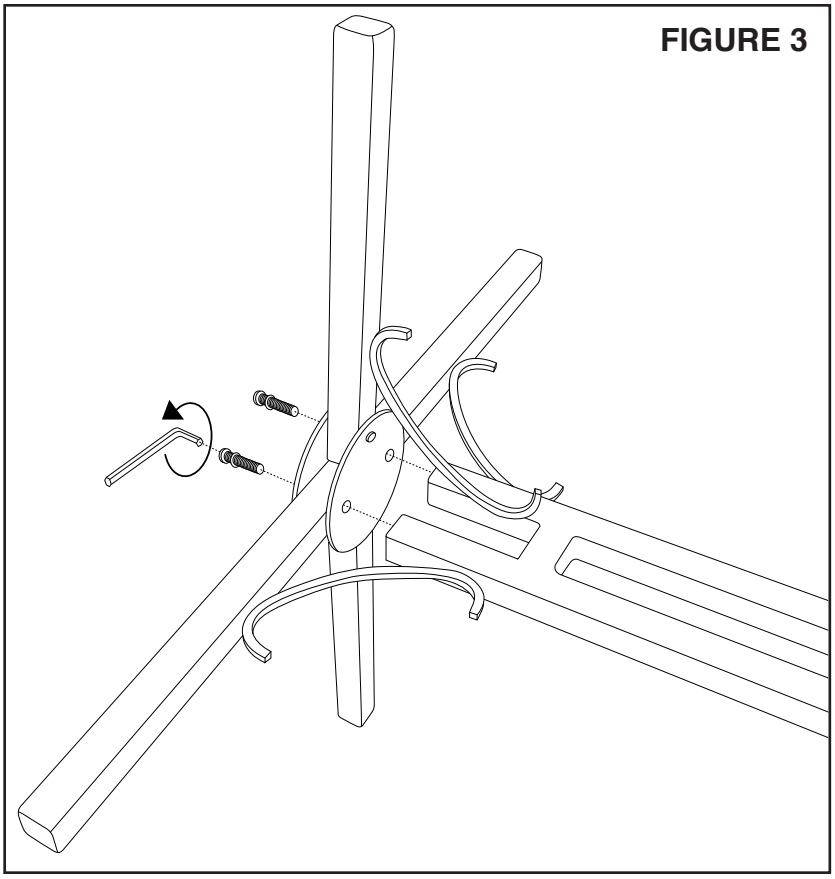

**STEP 6:**
LOCATE: (2) TWO RACK BARS
(2) TWO RACK TOPS



(2)ea.

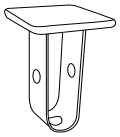

(2)ea.

**STEP 7: (SEE FIGURE 4)**
INSERT (1) ONE RACK TOP INTO THE TOP OF (1) ONE RACK BAR. PRESS FIRMLY DOWN TO FULLY INSERT THE RACK TOP.

REPEAT THE ABOVE STEP FOR THE REMAINING (1) ONE RACK TOP AND (1) ONE RACK BAR.

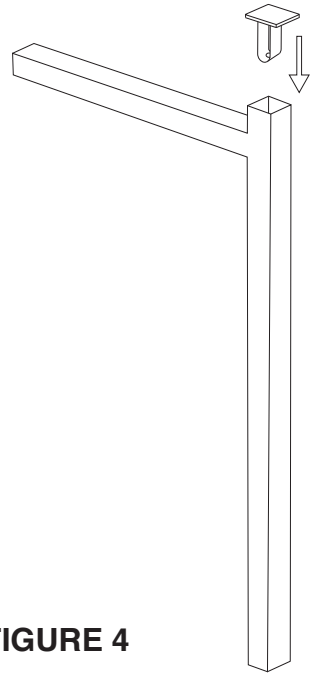


**FIGURE 4**

# #60-566 ASSEMBLY INSTRUCTIONS

## IVORY 2-WAY RACK WITH STRAIGHT ARMS

**STEP 8:**
LOCATE: (2) TWO RACK BARS



(2)ea.

**STEP 7: (SEE FIGURE 5)**
SLIDE IN (1) ONE RACK BAR INTO THE TOP OF THE FRAME BY PUSHING IN THE METAL PIN AND SLIDING DOWN INTO THE FRAME.


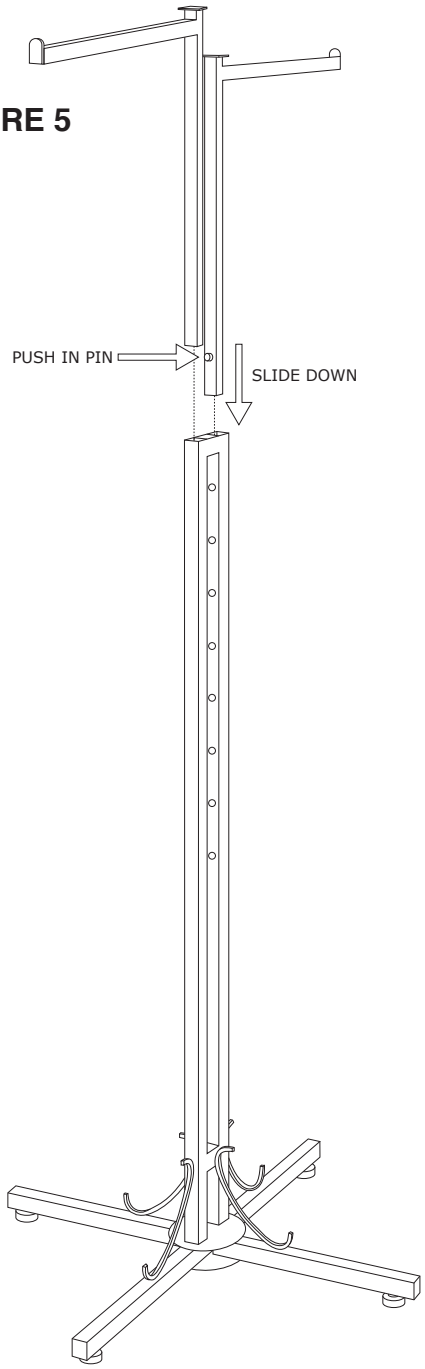



**FIGURE 5**

**STEP 8:**
**NOTE: MAKE SURE ALL SCREWS FOR UNIT ARE TIGHTLY SECURED BEFORE HANGING MERCHANDISE. MAKE SURE THE PINS ON THE RACK BARS ARE LOCKED INTO THE FRAME AT YOUR DESIRED HEIGHT.**

**ASSEMBLY COMPLETE**

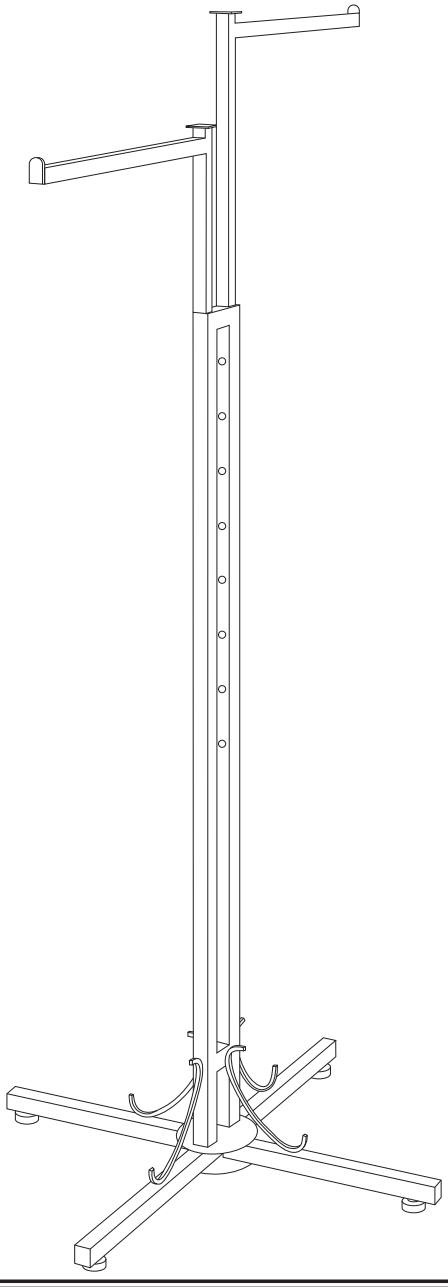

STORE SUPPLY Warehouse LLC