

EXTRA VISION REAR ACCESS CORNER PIECE

HARDWARE INSIDE BAG IN BOX

STEP 1: Place insert between front and side panels attach inserts using 5/8" screws (SEE DIAGRAM 1), Next insert cam locks into back bottom side panels, place end caps onto back side panels and attach to front side panels, tighten cam locks.

DIAGRAM 1





STEP 2: Place inserts on each side of back bottom side panel and place back panel in between inserts, secure inserts with 5/8" screws. (SEE DIAGRAM 2)

DIAGRAM 2



STEP 3: Insert cam locks into bottom deck (Opposite side from pegs), Next place foam into grooves on bottom deck, Place bottom base onto cam locks on the bottom deck, tighten inside cam locks. (SEE DIAGRAM 3)

DIAGRAM 3

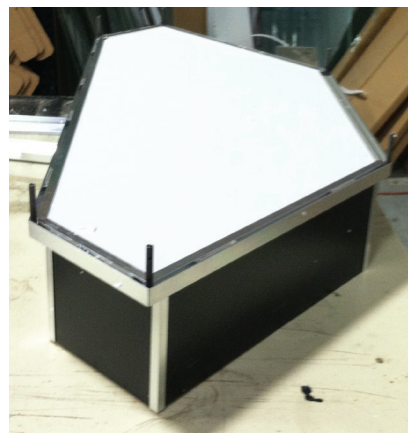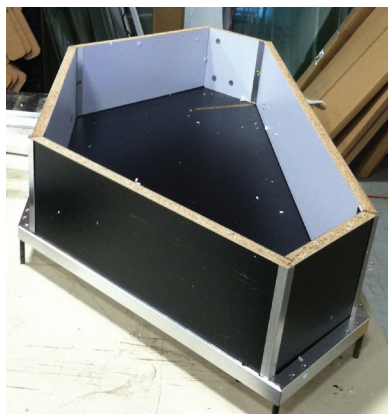

EXTRA VISION REAR ACCESS CORNER PIECE

STEP 4: Attach standard foot to bottom deck, Place side extrusions onto bottom deck pegs,
NOTE: Back extrusions have two grooves for door, extrusions need to be inserted on pegs with arrows pointing downward. (SEE DIAGRAM 1)

Side extrusion



Standard foot attached
to bottom base deck

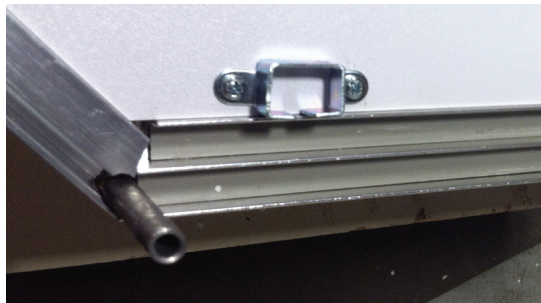


DIAGRAM 1



DIAGRAM 2




STEP 5: Place glass into grooves on
extrusions. (SEE DIAGRAM 2)

EXTRA VISION REAR ACCESS CORNER PIECE

STEP 6: Place foam in top frame groove, Set top frame onto side extrusions, Insert two screws at the top and bottom of each extrusion to secure to the top frame and base.

Top frame

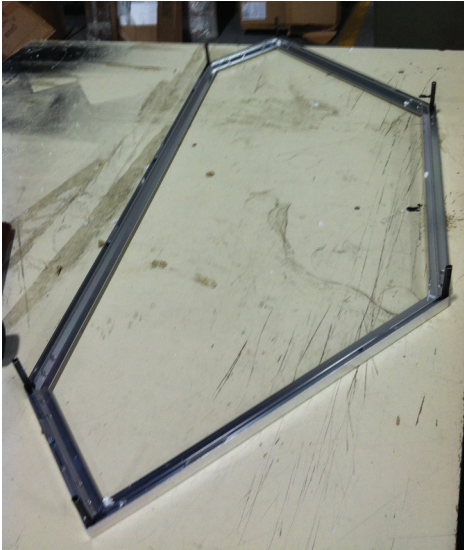


STEP 7: Insert standard into foot on the bottom deck, attach to back of case, Apply end cap on top of standard.

Standard attached



STEP 8: Apply tape around inside edge of top frame, Place glass onto top frame. Insert left door up and into back bottom track, Insert right door up and into front bottom groove.

FRONT OF COMPLETED CASE

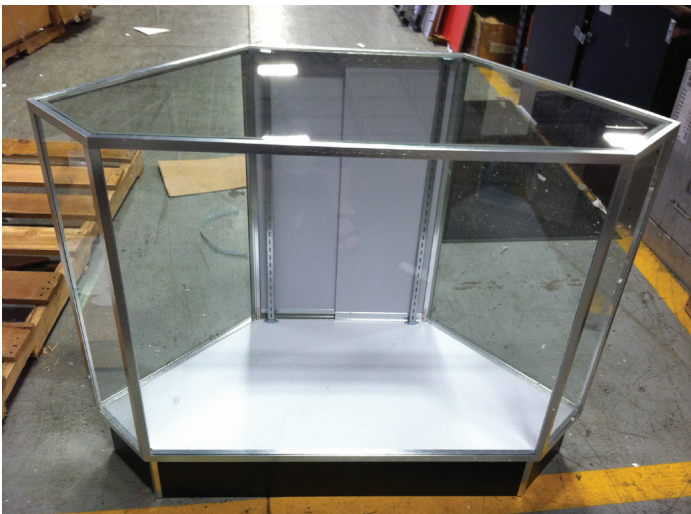

BACK OF COMPLETED CASE

