
GLASS FRONT WALL UNIT SHOWCASE

RECOMMENDED TOOLS FOR ASSEMBLY




PHILLIPS SCREW DRIVER



RUBBER MALLET


HARDWARE AND MISC. INCLUDED:




CAM LOCK PINS-1 3/4" L




WOODEN DOWEL

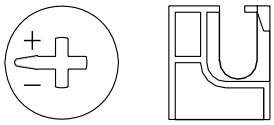


3/4 CAM LOCK CONNECTOR NUTS (INSERTED IN BOARDS)

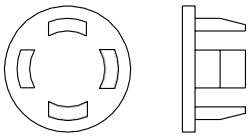


DOWNTUBE HOLE CAP

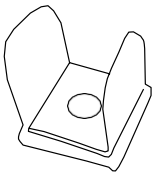

STANDARD FOOTPIECE



PAN HEAD SCREWS- 5/8" L

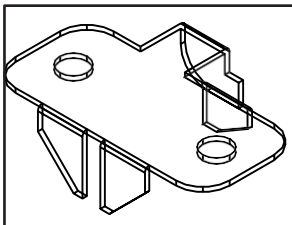

(20) EA. - SHELF CLIPS

HARDWARE IS IN BAG TO SEND TO CUSTOMER



(48) EA. RUBBER CUSHIONS

(10) SHELF BRACKETS



GLASS FRONT WALL UNIT SHOWCASE

STEP 1:
Screw 1-3/4" cam lock pins into holes on side panel, see DIAGRAM 1 (NOTE BOTTOM OF SIDE PANEL HAS MORE HOLES, TOP HAS LESS HOLES)

DIAGRAM 1

SIDE PANEL

BOTTOM END
OF SIDE PANEL



TOP END OF
SIDE PANEL

STEP 2:
Insert wooden dowels into bottom and top side panels, both sides will be in the same spot as shown in DIAGRAM 2

DIAGRAM 2





GLASS FRONT WALL UNIT SHOWCASE

STEP 3:
Install (6) cam locks into bottom base, Next insert bottom front and back panels onto cam locks on bottom base, see DIAGRAM 1, Last tighten inside cam locks

DIAGRAM 1

BOTTOM PANEL






STEP 4:
Install (4) cam locks into top panel and (4) into top side panels. Connect the middle board to the top side panels.

DIAGRAM 2

TOP PANEL





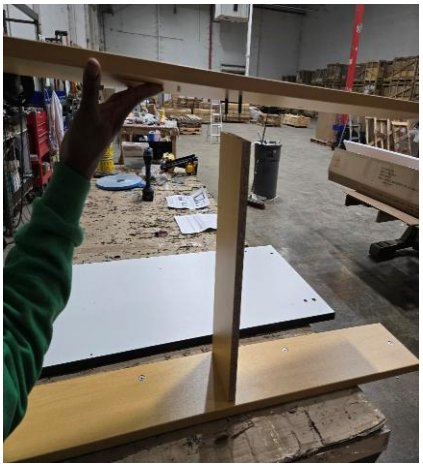

GLASS FRONT WALL UNIT SHOWCASE



STEP 5:
Place top base with top end of side panel, Then place bottom base on bottom end of side panel, as shown in DIAGRAM 1

DIAGRAM 1



STEP 6:
Make sure slotted standards are the same way, (1" in width at the bottom), Insert bottom ends into both standard foots, see DIAGRAM 2, place bolt and washers through underside of top base and into the hole at the end of the standard, as shown below in DIAGRAM 3, continue for both standards at the top and bottom of the case, then tighten all (4) bolts



GLASS FRONT WALL UNIT SHOWCASE

DIAGRAM 2



DIAGRAM 3



GLASS FRONT WALL UNIT SHOWCASE

STEP 7:
Insert backboard into back track of the case, then place other side panel other side of top and bottom base as shown in DIAGRAM 1.

BACKBOARD INSERTED
INTO BACK OF CASE



DIAGRAM 1



GLASS FRONT WALL UNIT SHOWCASE

STEP 8:
Insert bottom track into bottom of case, and upper track into top of case (NOTE: BOTTOM TRACK IS THINNER, UPPER TRACK IS THICKER), screw goes in outer track, as in DIAGRAM 1, Then place the black door track in both sides of the bottom track

DIAGRAM 1



BLACK DOOR TRACKS LAID IN BOTTOM TRACKS



STEP 9:
Place grey vinyl strips on bottom of glass panel, then place bottom wheeled track (part number H098, not in box) on top of vinyl and glass, (SEE DIAGRAM 2), use rubber mallet to secure, Then place plastic clip on opposite end of the glass door

DIAGRAM 2

Grey Vinyl Strip





PLASTIC CLIP ON TOP OF GLASS DOOR



STEP 10:
Install sliding door panels by lifting door up into back top track then dropping down into back bottom track, Then install other door other door into front top track, then drop down into front bottom track (MAKE SURE EACH DOOR IS IN A SEPARATE TRACK GROOVE, PLACE LEFT DOOR IN THE BACK GROOVE, AND THE RIGHT DOOR IN THE FRONT GROOVE), Place finger pull handles onto glass doors using wall unit guide.

GLASS FRONT WALL UNIT SHOWCASE

FRONT OF SHOWCASE



BACK OF SHOWCASE

