


ASSEMBLY INSTRUCTIONS MANUAL

#65275 INFINITY SHOWCASE

A. #65289 WITH LIGHTS (P. 1-8)


B. WITHOUT LIGHTS (P. 9-15)

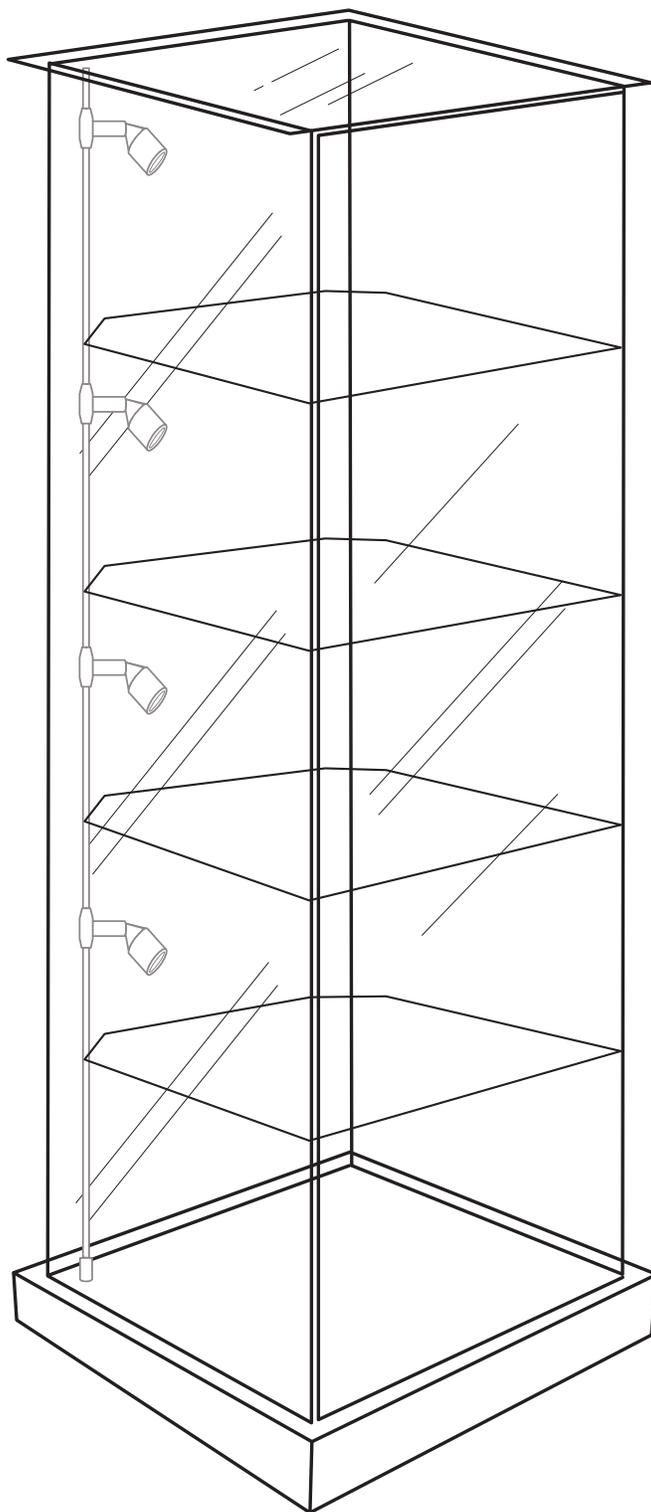







ASSEMBLY INSTRUCTIONS MANUAL

#65275/289 INFINITY SHOWCASE W/LIGHTS




RECOMMENDED TOOLS FOR ASSEMBLY:

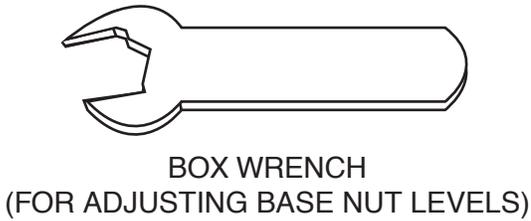

PARTS IN CARTON:

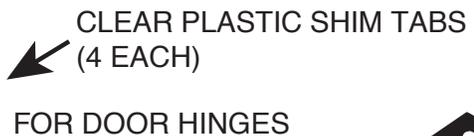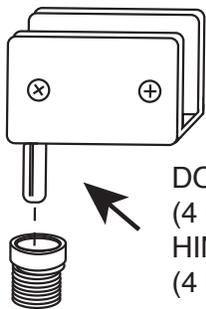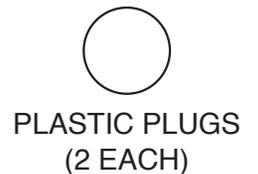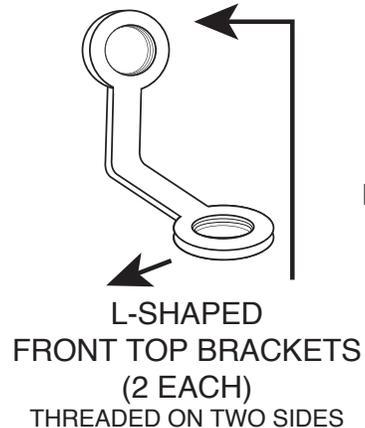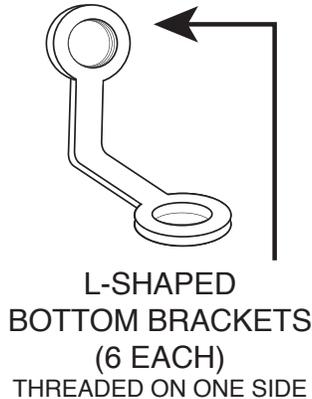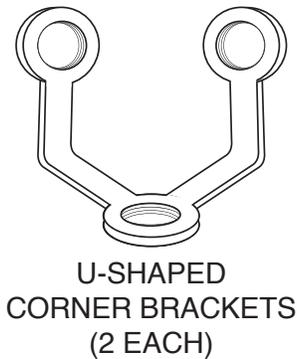

CABINET LOCK
(LOCK MUST GO ON
LEFT FRONT DOOR)

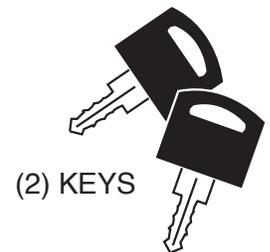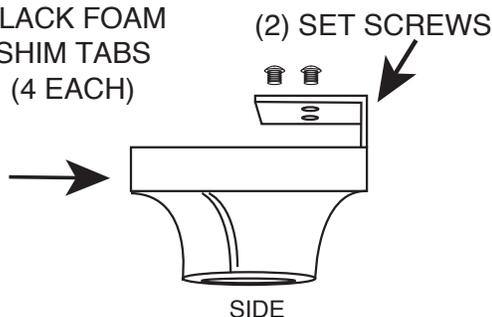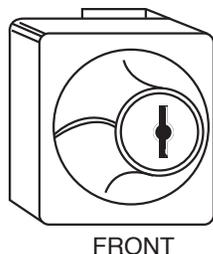


ASSEMBLY INSTRUCTIONS MANUAL

#65275/289 INFINITY SHOWCASE W/LIGHTS


PARTS IN CARTON:

CAREFULLY REMOVE
CABINET PIECES
FROM PACKING.
CABINET SETUP
INCLUDES:


- BACK GLASS
- LIGHT BAR
- STABILIZING BAR
- LIGHT ADAPTOR & AC
ADAPTOR / POWER CHORD
- CABINET BASE WITH
ROLLERS (PRE-ASSEMBLED)
- (2) SIDE GLASS
(LEFT & RIGHT)
- (4) INSIDE GLASS SHELVES

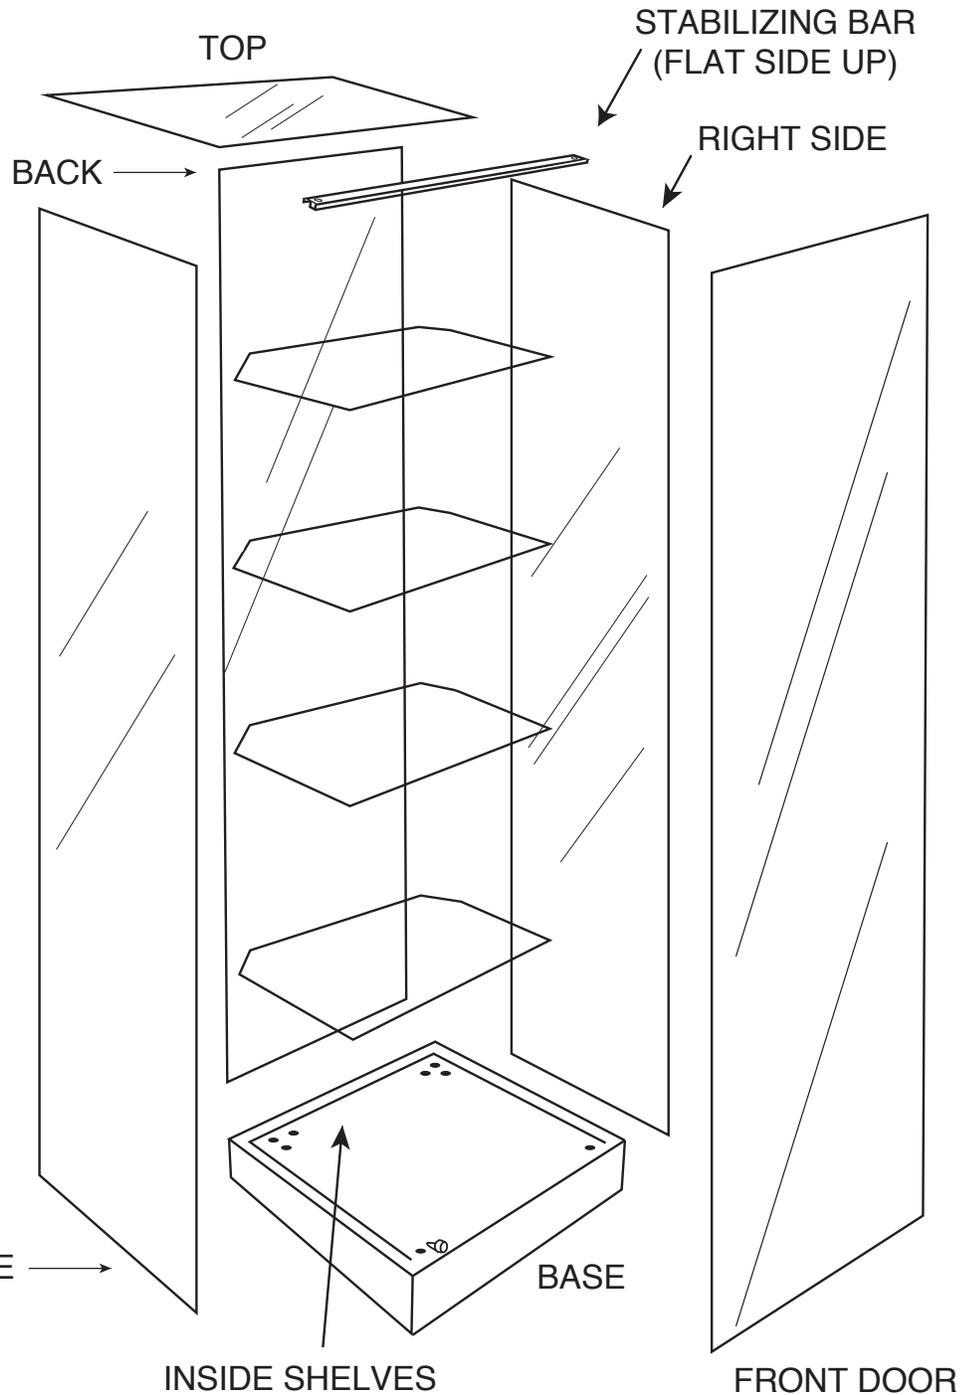

LIGHT BAR

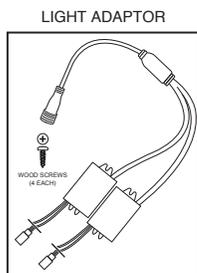

LIGHT ADAPTOR

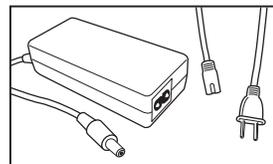




AC ADAPTOR & POWER CHORD

ASSEMBLY INSTRUCTIONS MANUAL

#65275/289 INFINITY SHOWCASE W/LIGHTS

* IN STEPS 1 THROUGH 4 OF THE ASSEMBLY - TWO PEOPLE ARE RECOMMENDED

STEP 1. PLACE BASE ON IT'S SIDE (PREFERABLY LONG/FRONT SIDE FOR STABILITY). INSERT LIGHT BAR THROUGH LIGHT BAR HOLES AND SECURE WITH WASHER AND NUT ON BOTTOM SIDE OF BASE WITH BOX WRENCH (PROVIDED). ***NOTE** - MAKE SURE LIGHT BARS ARE FACING INWARD - TOWARDS MIDDLE OF BASE.

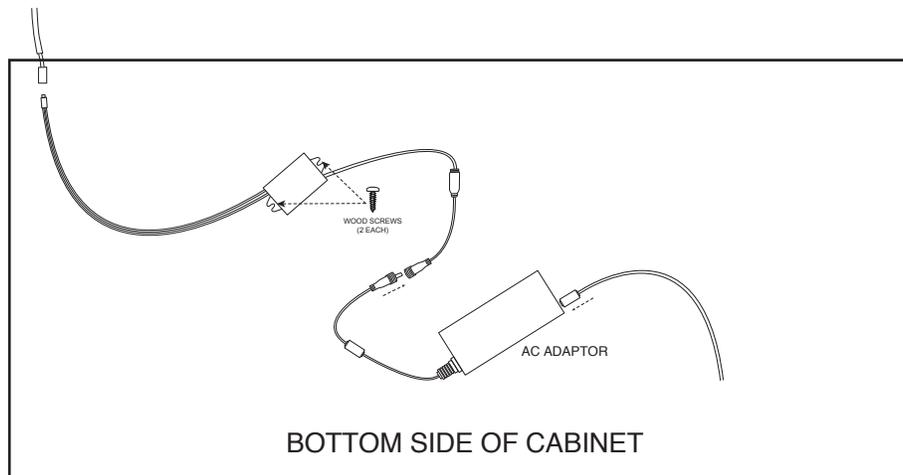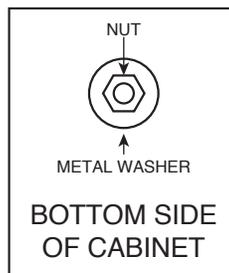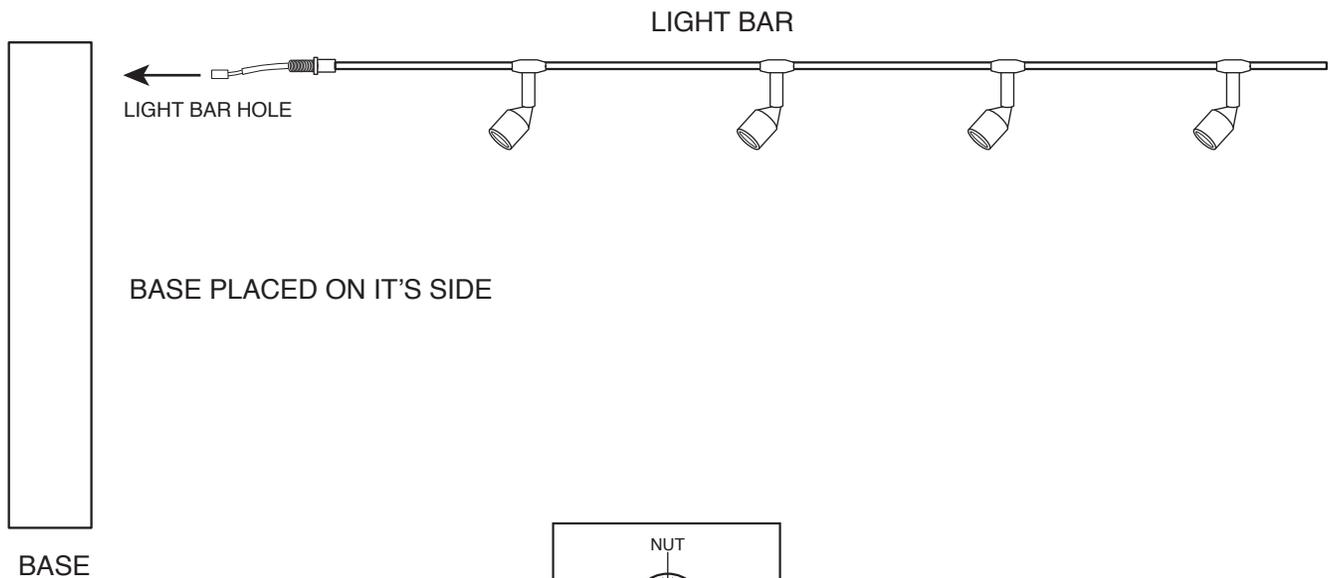


ASSEMBLY INSTRUCTIONS MANUAL

#65275/289 INFINITY SHOWCASE W/LIGHTS


IMPORTANT!

BOTTOM OF BOTH BACK AND SIDE GLASS HAS SLIGHTLY DIFFERENT HOLE PLACEMENT THAN THE TOP OF EACH PIECE OF GLASS

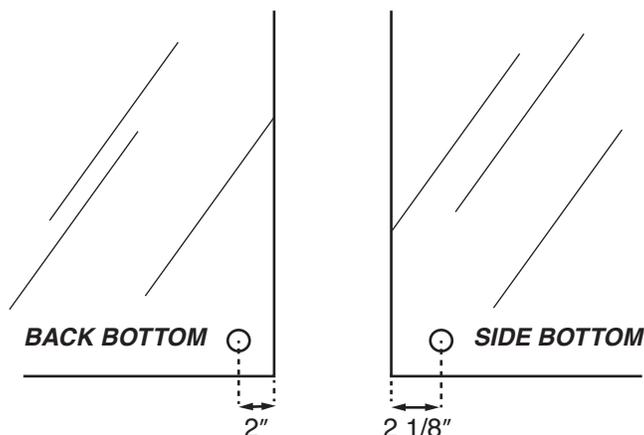

MEASURE THE GLASS SPACE BETWEEN EDGE OF GLASS AND CENTER OF HOLE. HOLE FURTHEST FROM EDGE GOES ON BOTTOM.

GLASS CAN ONLY BE ASSEMBLED ONE WAY!

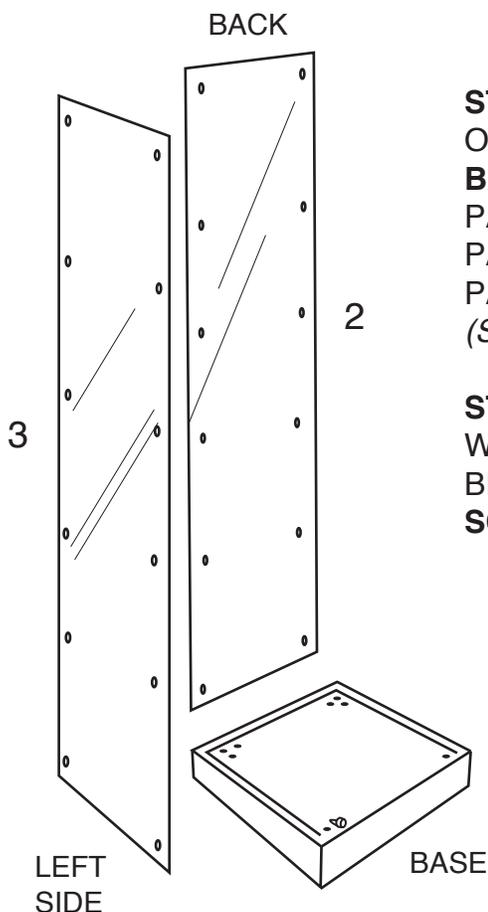


STEP 2. PLACE BACK GLASS PANEL INTO BACK GROOVE OF CABINET BASE. MAKE SURE GLASS PRECISELY FITS BACK BASE GROOVE IN ORDER TO ACCOMADATE THE SIDE PANELS NEXT. MAKE CERTAIN ON BOTH BACK AND SIDE PANELS THAT YOU RECOGNIZE THE BOTTOM OF EACH PANEL CORRECTLY. (SEE DETAILS BELOW)

STEP 3. PLACE LEFT SIDE GLASS INTO BASE GROOVE WHILE HOLDING BACK GLASS TO LINE UP FIRST GLASS BRACKET. ATTACH U-BRACKET WITH ALLEN WRENCH AND SCREWS.


ASSEMBLY INSTRUCTIONS MANUAL

#65275/289 INFINITY SHOWCASE W/LIGHTS

STEP 4. PLACE RIGHT SIDE GLASS INTO SIDE BASE GROOVE. ATTACH U-BRACKET WITH ALLEN WRENCH AND SCREWS.

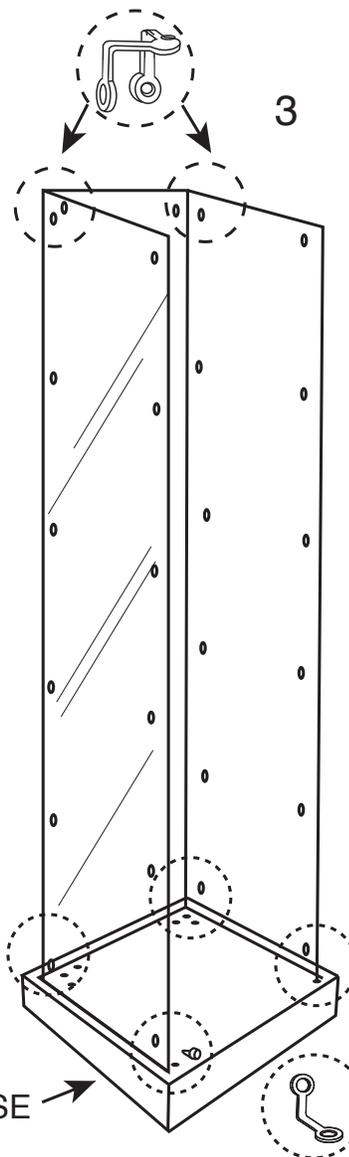

STEP 5. PLACE TOP GLASS ONTO ASSEMBLY ALONG WITH ALUMINUM STABILIZING BAR ATTACHING ALLEN SCREW AND PLASTIC WASHERS AND L-BRACKETS.

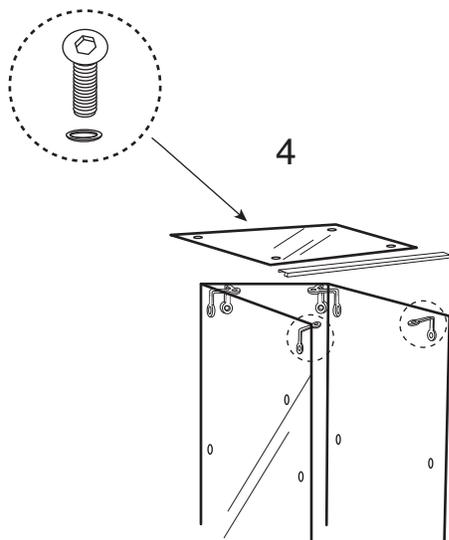


L-SHAPED BOTTOM
CORNER BRACKETS (6)
(THREADED ON ONE SIDE)

ASSEMBLY INSTRUCTIONS MANUAL


#65275/289 INFINITY SHOWCASE W/LIGHTS

WHEN INSERTING **HINGE DOOR PIN** INTO ASSEMBLY - INSERT **SLEEVE** INTO **BASE** AND THEN INTO **STABILIZING BAR (TOP)** - SLIDE DOOR PIN INTO **SLEEVE** TO STABILIZE DOOR. INSERT **TOP DOOR PIN** INTO GLASS TOP.


ATTACH **DOOR SLEEVES** APPROXIMATELY 1/16" FROM EDGE OF GLASS.

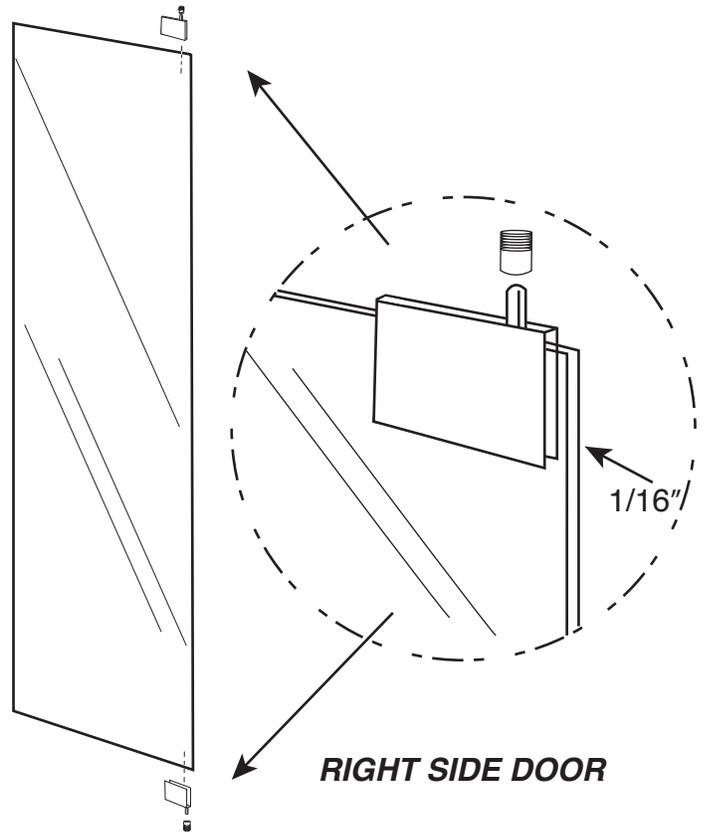

TOP RIGHT CORNER

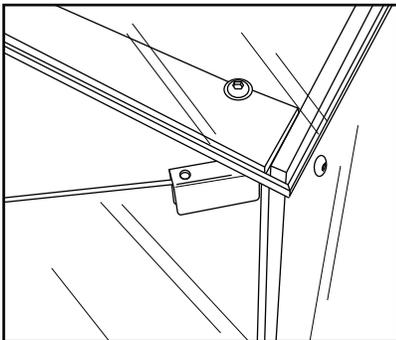


BOTTOM RIGHT CORNER

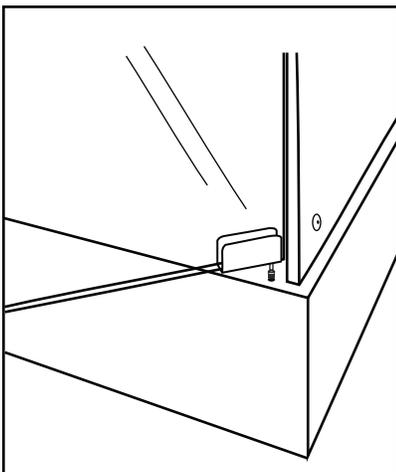

ATTACH **TOP RIGHT** OF FRONT DOOR (APPROXIMATELY 1/16" FROM EDGE OF GLASS) - **REPEAT** HINGE ASSEMBLY ON **BOTTOM**

(PLACE DROP OF GLUE ON PLASTIC TO HOLD IN PLACE)

INSERT PLASTIC BUFFER INSIDE HINGE TO BACK OF GLASS SIDE (AGAINST SCREWS)

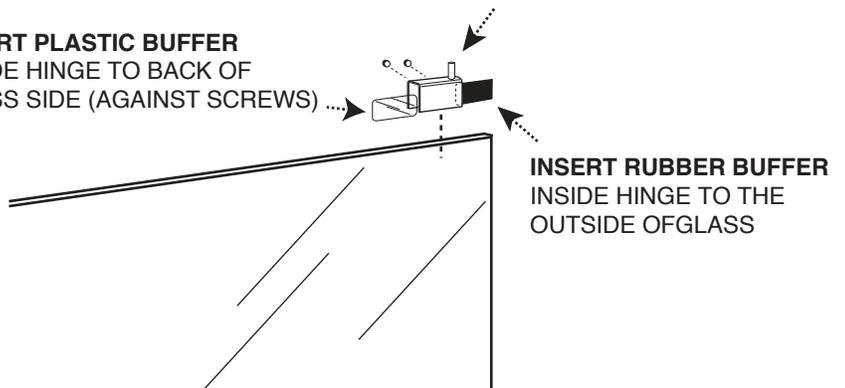


INSERT RUBBER BUFFER INSIDE HINGE TO THE OUTSIDE OF GLASS


ASSEMBLY INSTRUCTIONS MANUAL

#65275/289 INFINITY SHOWCASE W/LIGHTS


CABINET LOCK
(LOCK MUST GO ON
LEFT / TOP
OF FRONT DOOR)

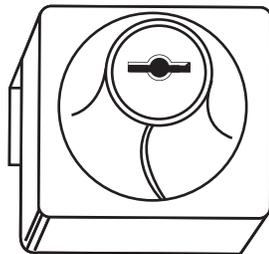

FRONT LOCK

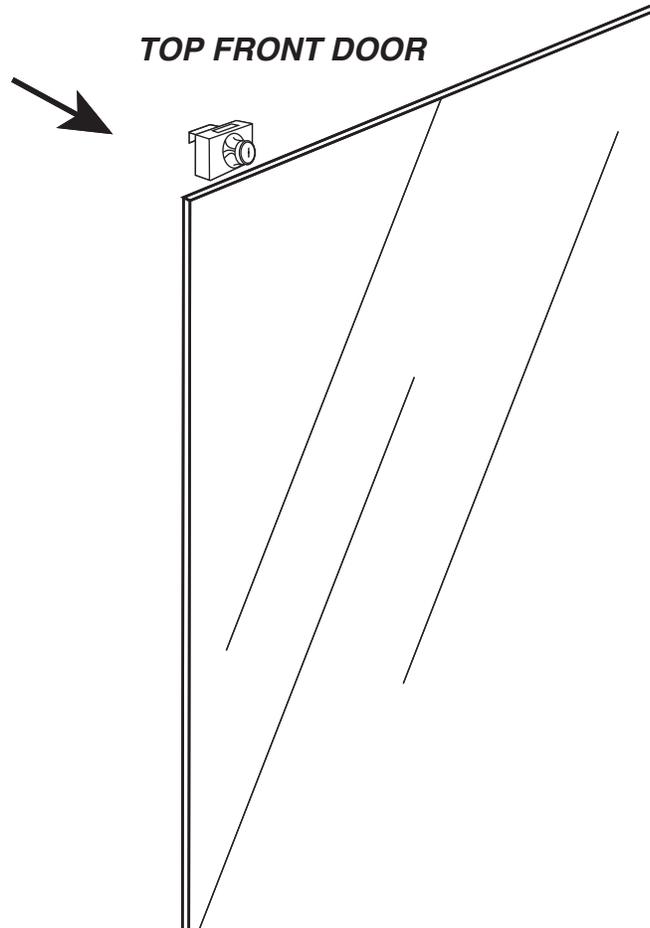


ADJUST DOOR BEFORE
ATTACHING THE LOCK.
EVEN AND LEVEL DOOR
BY ADJUSTING **DOOR
HINGE SCREWS.**

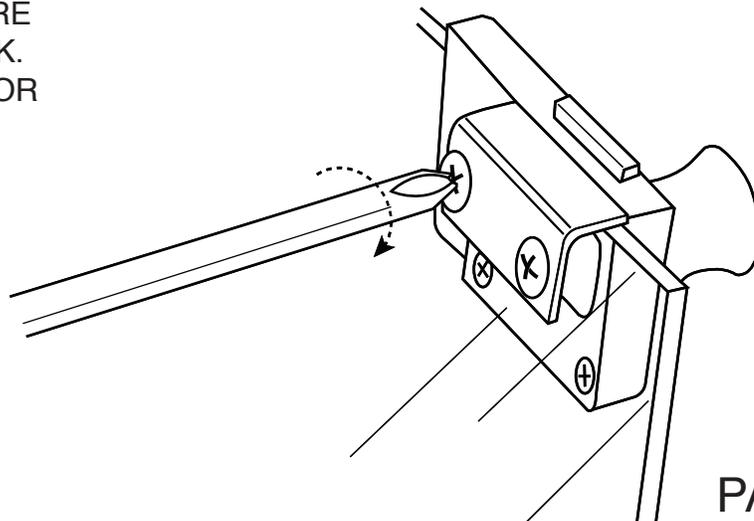

ASSEMBLY INSTRUCTIONS MANUAL


#65275 INFINITY SHOWCASE

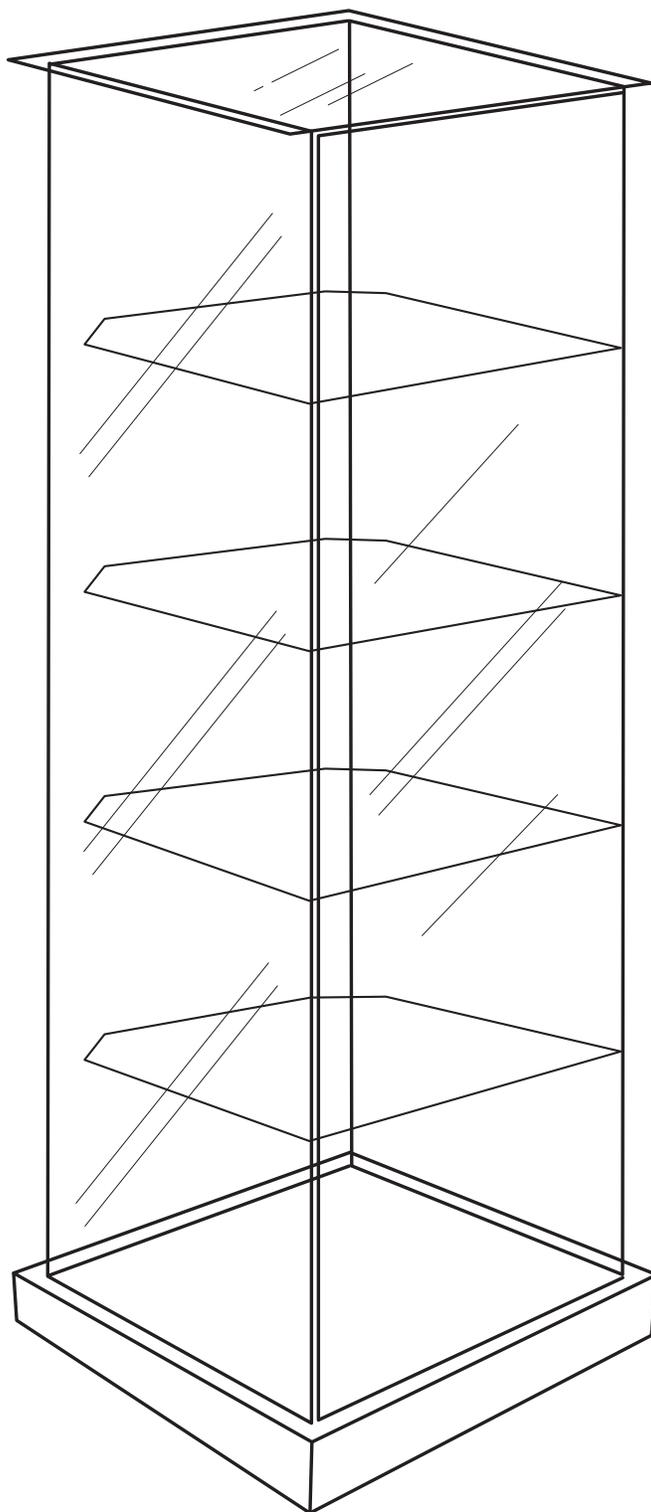

ASSEMBLY INSTRUCTIONS MANUAL

#65275 TALL GLASS CABINET CASE


RECOMMENDED TOOLS FOR ASSEMBLY:

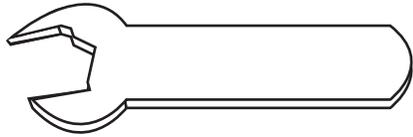

BOX WRENCH
(FOR ADJUSTING BASE NUT LEVELS)



ALLEN WRENCH



PHILLIPS SCREW DRIVER
(BOX WRENCH AND ALLEN WRENCH INCLUDED)


PARTS IN CARTON:



ALLEN WRENCH SCREWS
(23 EACH / 1 EXTRA)



PLASTIC WASHERS
(23 EACH / 1 EXTRA)




ROUND HEAD SCREWS
(9 EACH)




CHROME CYLINDERS
(9 EACH)




CLEAR RUBBER PLUGS
(9 EACH)

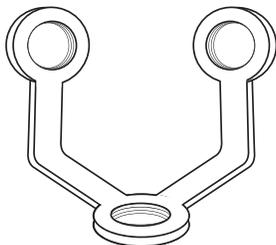

U-SHAPED CORNER BRACKETS
(2 EACH)

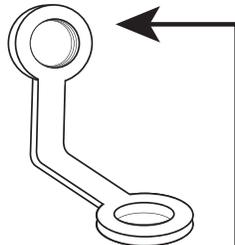


L-SHAPED BOTTOM BRACKETS
(6 EACH)
THREADED ON ONE SIDE

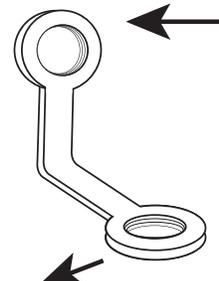


L-SHAPED FRONT TOP BRACKETS
(2 EACH)
THREADED ON TWO SIDES



PLASTIC PLUGS
(2 EACH)

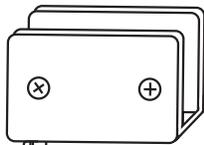

DOOR HINGES
(4 EACH)
HINGE SLEEVES
(4 EACH)

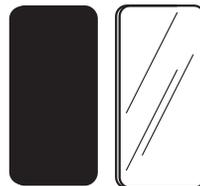


BLACK FOAM SHIM TABS
(4 EACH)

CLEAR PLASTIC SHIM TABS
(4 EACH)


FOR DOOR HINGES

(2) SET SCREWS

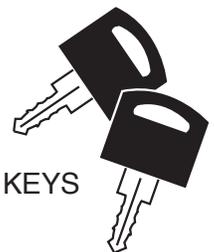

(2) KEYS

CABINET LOCK
(LOCK MUST GO ON LEFT FRONT DOOR)

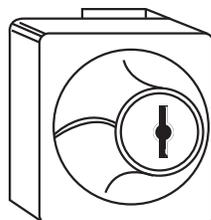

FRONT



SIDE


ASSEMBLY INSTRUCTIONS MANUAL

#65275 TALL GLASS CABINET CASE

PARTS IN CARTON:

CAREFULLY REMOVE CABINET
PIECES FROM PACKING.
CABINET SETUP
INCLUDES:

- BACK GLASS
- STABILIZING BAR
- CABINET BASE WITH
ROLLERS (PRE-ASSEMBLED)
- (2) SIDE GLASS
(LEFT & RIGHT)
- (4) INSIDE GLASS SHELVES

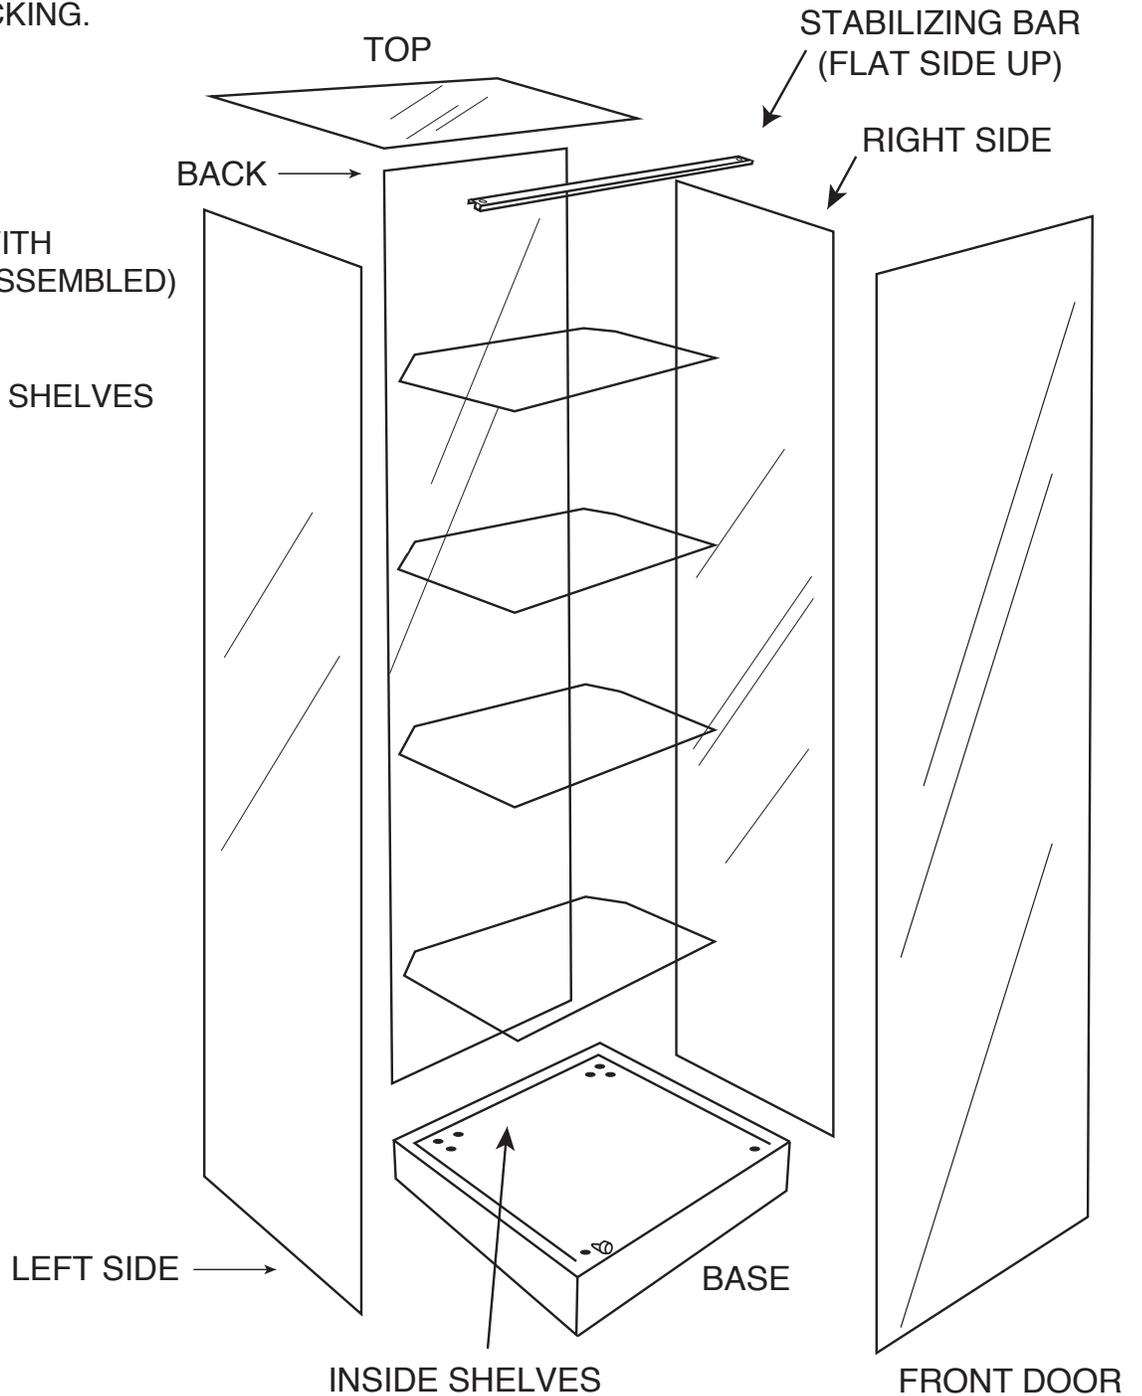


ASSEMBLY INSTRUCTIONS MANUAL

#65275 TALL GLASS CABINET CASE


IMPORTANT!

BOTTOM OF BOTH BACK AND SIDE GLASS HAS SLIGHTLY DIFFERENT HOLE PLACEMENT THAN THE TOP OF EACH PIECE OF GLASS

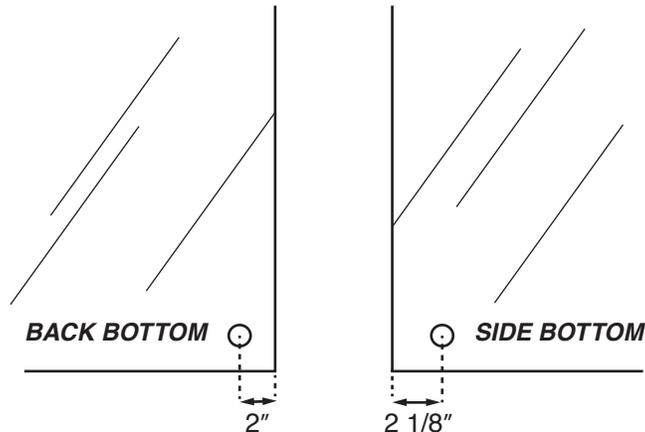

MEASURE THE GLASS SPACE BETWEEN EDGE OF GLASS AND CENTER OF HOLE. HOLE FURTHEST FROM EDGE GOES ON BOTTOM.

GLASS CAN ONLY BE ASSEMBLED ONE WAY!

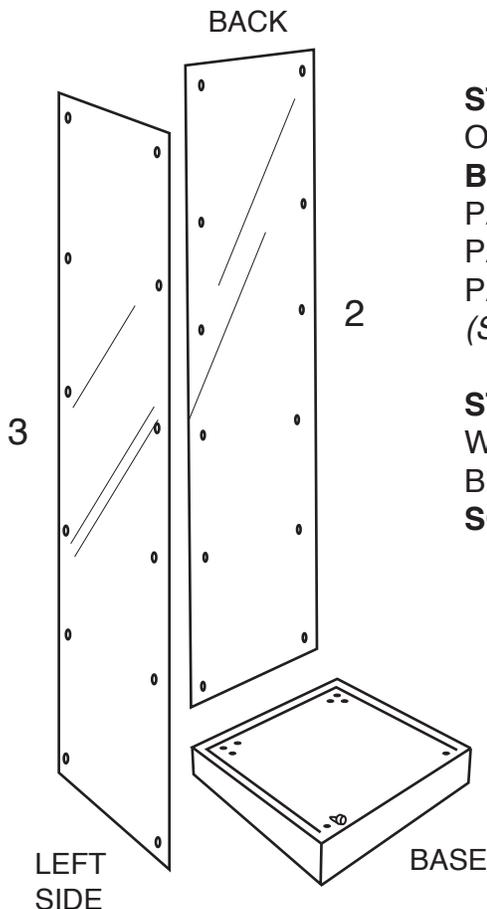


STEP 2. PLACE BACK GLASS PANEL INTO BACK GROOVE OF CABINET BASE. MAKE SURE GLASS PRECISELY FITS BACK BASE GROOVE IN ORDER TO ACCOMADATE THE SIDE PANELS NEXT. MAKE CERTAIN ON BOTH BACK AND SIDE PANELS THAT YOU RECOGNIZE THE BOTTOM OF EACH PANEL CORRECTLY. (SEE DETAILS BELOW)

STEP 3. PLACE LEFT SIDE GLASS INTO BASE GROOVE WHILE HOLDING BACK GLASS TO LINE UP FIRST GLASS BRACKET. ATTACH U-BRACKET WITH ALLEN WRENCH AND SCREWS.


ASSEMBLY INSTRUCTIONS MANUAL

#65275 TALL GLASS CABINET CASE

STEP 4. PLACE RIGHT SIDE GLASS INTO SIDE BASE GROOVE. ATTACH U-BRACKET WITH ALLEN WRENCH AND SCREWS.

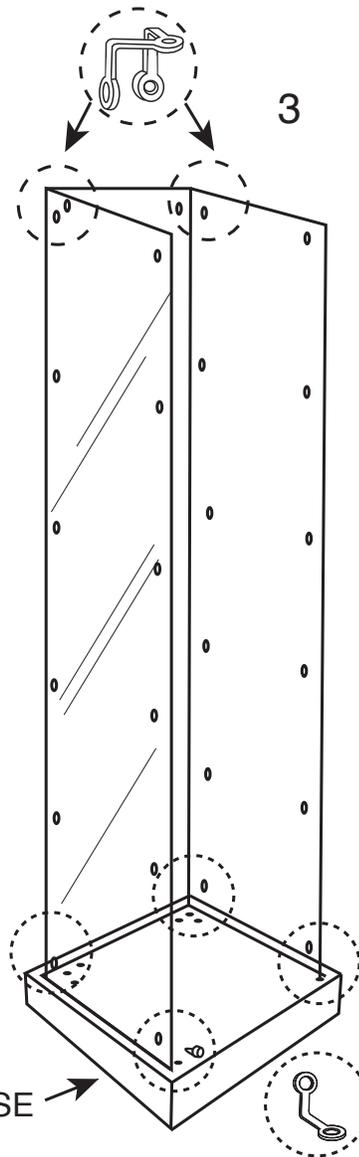

STEP 5. PLACE TOP GLASS ONTO ASSEMBLY ALONG WITH ALUMINUM STABILIZING BAR ATTACHING ALLEN SCREW AND PLASTIC WASHERS AND L-BRACKETS.

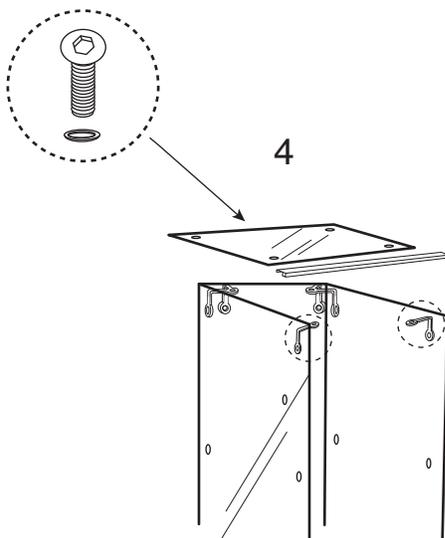


L-SHAPED BOTTOM
CORNER BRACKETS (6)
(THREADED ON ONE SIDE)

ASSEMBLY INSTRUCTIONS MANUAL


#65275 TALL GLASS CABINET CASE

WHEN INSERTING **HINGE DOOR PIN** INTO ASSEMBLY - INSERT **SLEEVE** INTO **BASE** AND THEN INTO **STABILIZING BAR (TOP)** - SLIDE DOOR PIN INTO **SLEEVE** TO STABILIZE DOOR. INSERT **TOP DOOR PIN** INTO GLASS TOP.


ATTACH **DOOR SLEEVES** APPROXIMATELY 1/16" FROM EDGE OF GLASS.

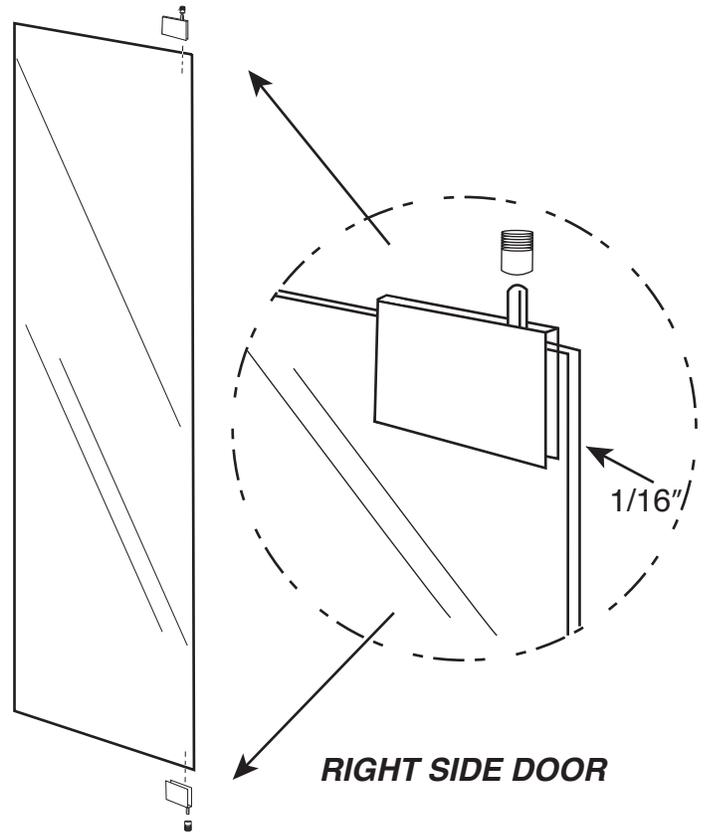

TOP RIGHT CORNER

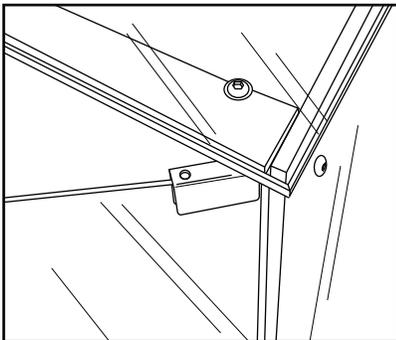


BOTTOM RIGHT CORNER

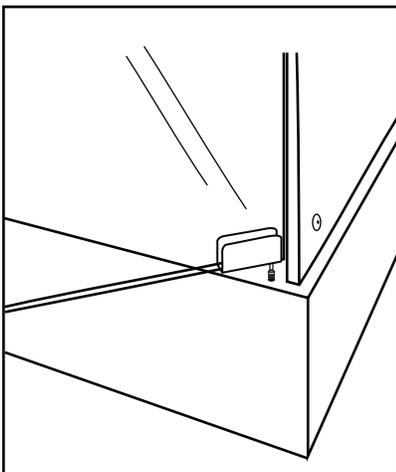

ATTACH **TOP RIGHT** OF FRONT DOOR (APPROXIMATELY 1/16" FROM EDGE OF GLASS) - **REPEAT** HINGE ASSEMBLY ON **BOTTOM**

(PLACE DROP OF GLUE ON PLASTIC TO HOLD IN PLACE)

INSERT PLASTIC BUFFER INSIDE HINGE TO BACK OF GLASS SIDE (AGAINST SCREWS)

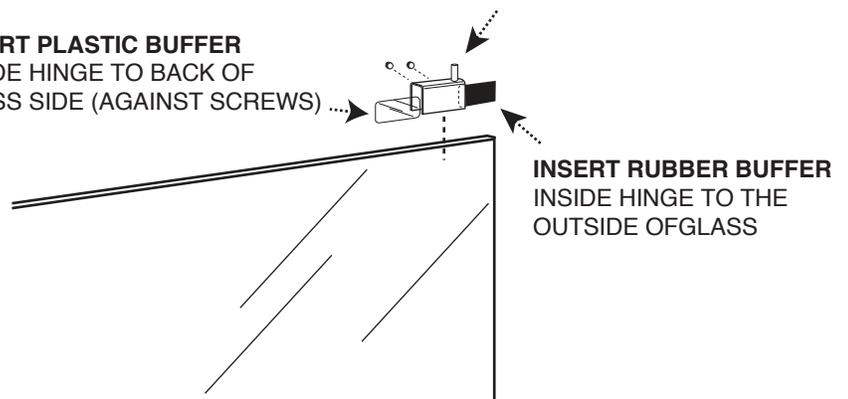


INSERT RUBBER BUFFER INSIDE HINGE TO THE OUTSIDE OF GLASS

ASSEMBLY INSTRUCTIONS MANUAL


#65275 TALL GLASS CABINET CASE

CABINET LOCK
(LOCK MUST GO ON
LEFT / TOP
OF FRONT DOOR)

TOP FRONT DOOR

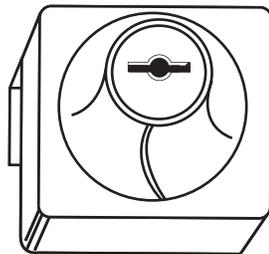

FRONT LOCK

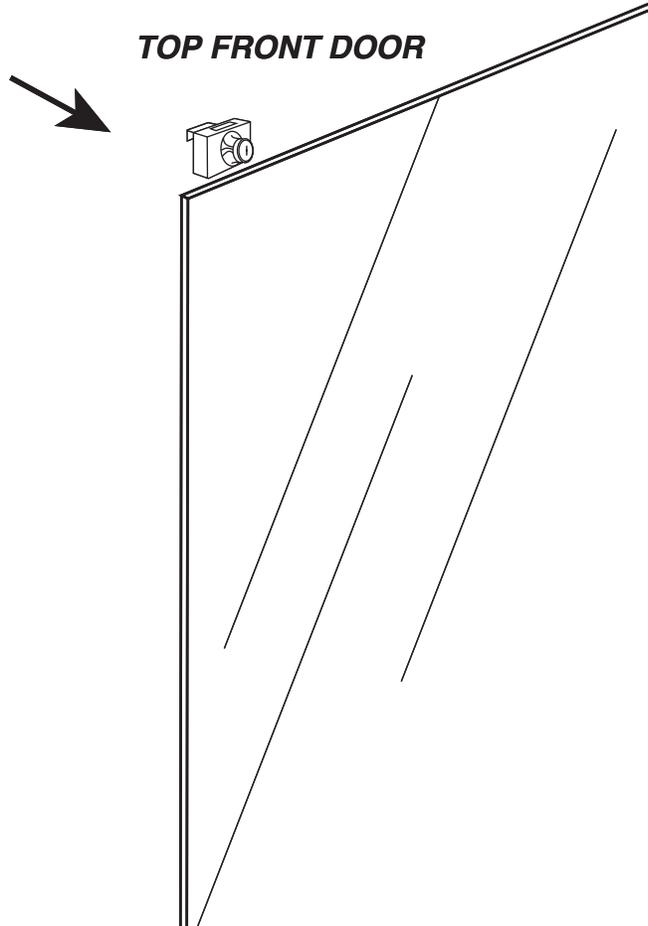

ADJUST DOOR BEFORE
ATTACHING THE LOCK.
EVEN AND LEVEL DOOR
BY ADJUSTING **DOOR
HINGE SCREWS.**

