


# ASSEMBLY INSTRUCTIONS MANUAL

## 65281 INFINITY JEWELRY PEDESTAL

A. #65287 WITH LIGHTS (P. 1-11)


B. WITHOUT LIGHTS (P. 12-21)

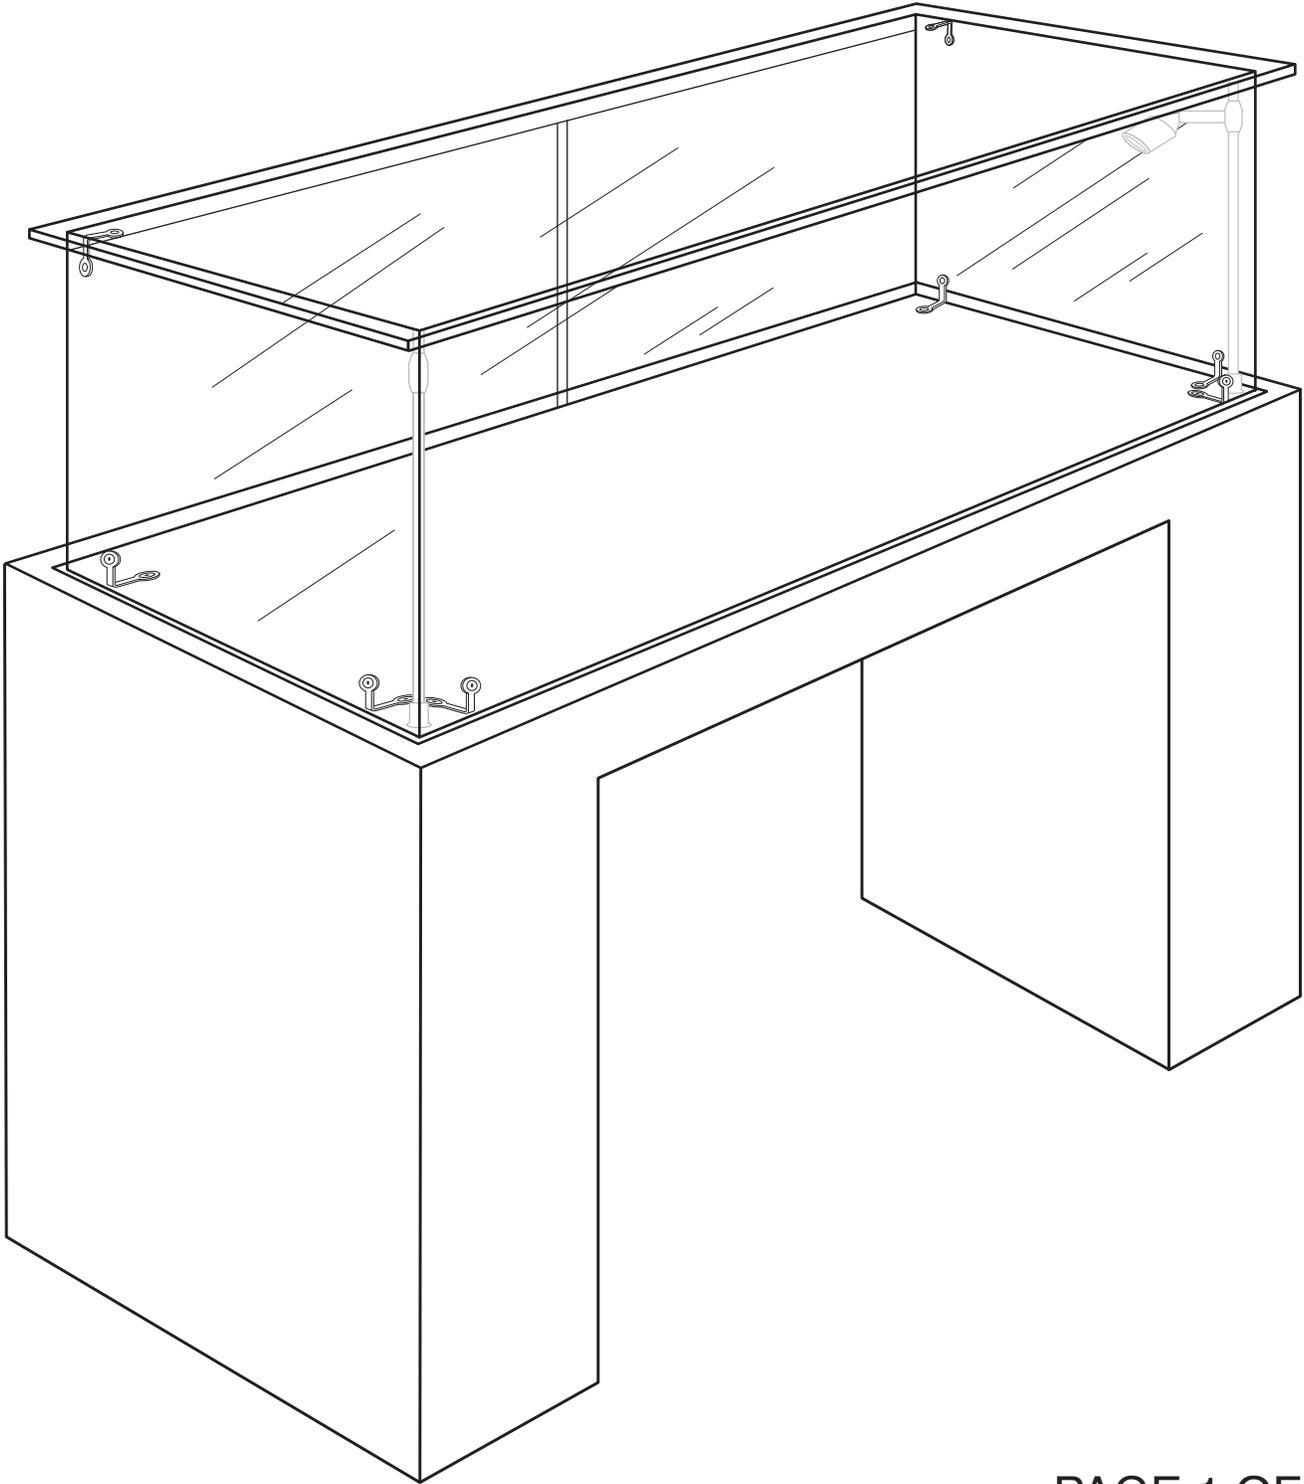


# ASSEMBLY INSTRUCTIONS MANUAL

## #65281/287 INFINITY JEWELRY PEDESTAL W/LIGHTS

### RECOMMENDED TOOLS FOR ASSEMBLY:

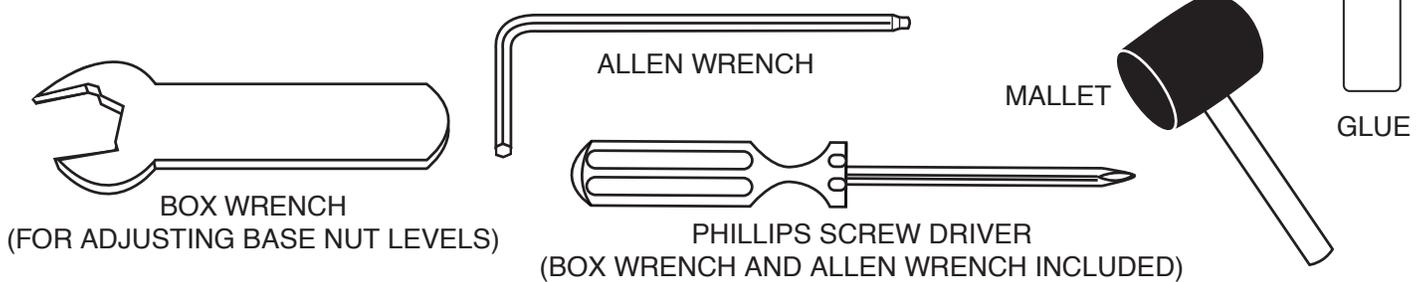

### PARTS IN CARTON:

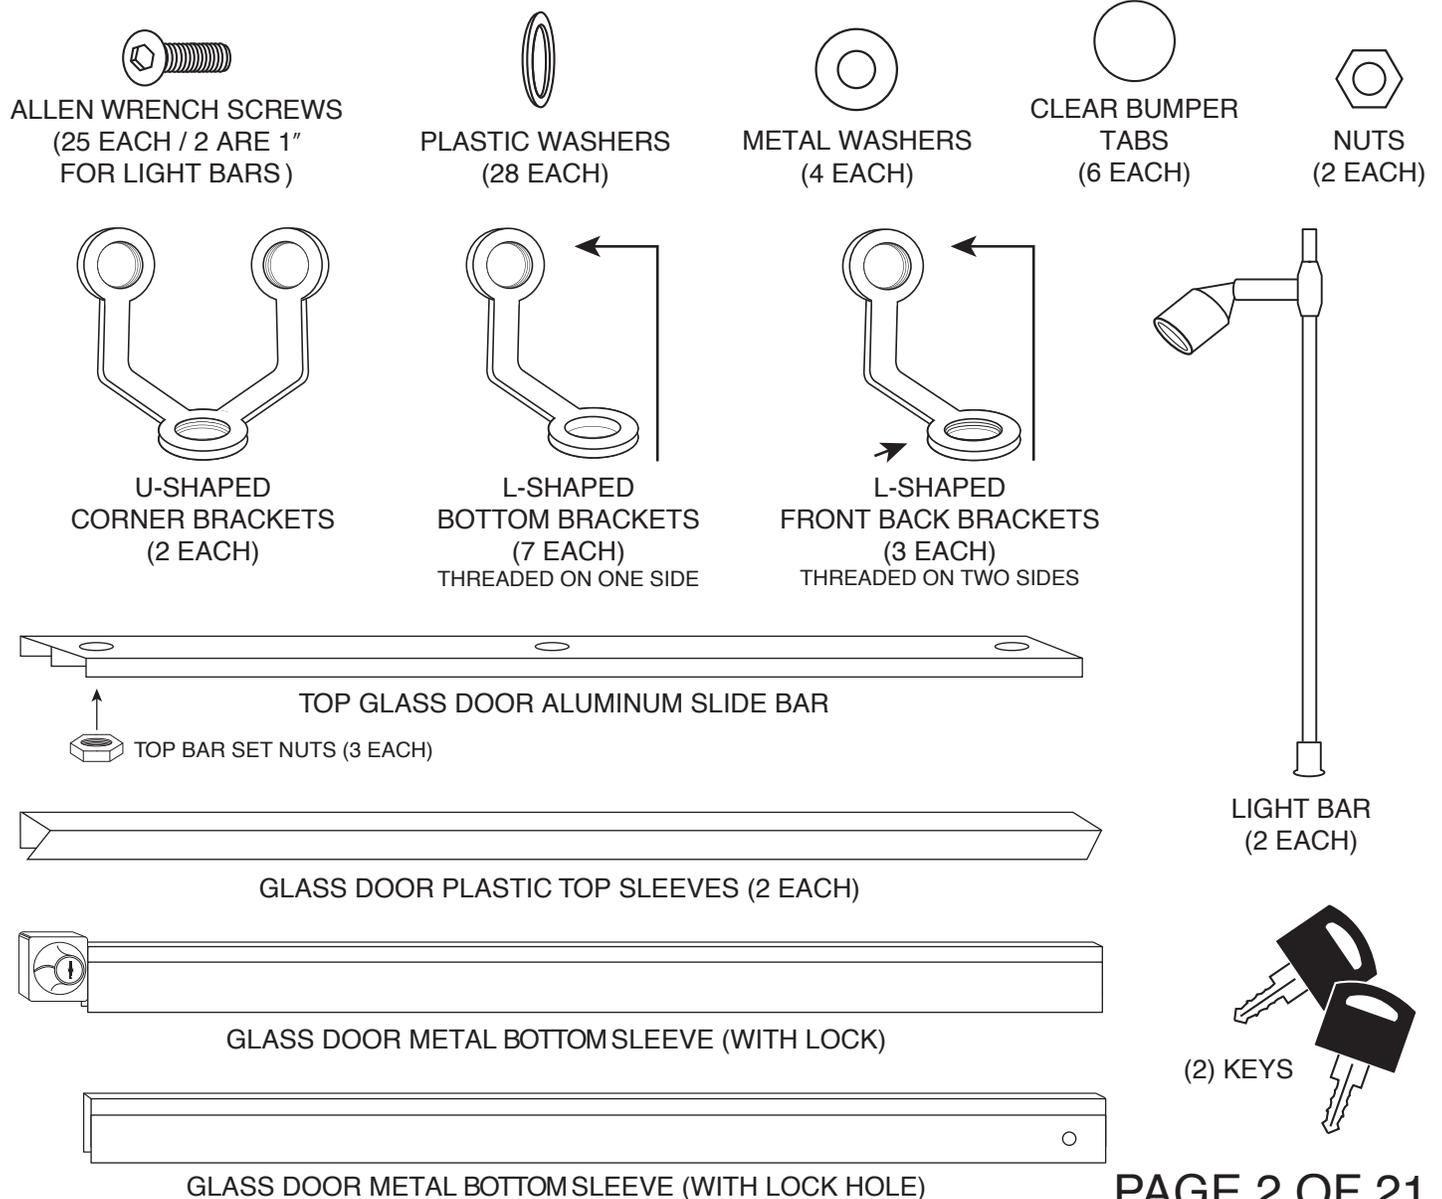

# ASSEMBLY INSTRUCTIONS MANUAL



## #65281/287 INFINITY JEWELRY PEDESTAL W/LIGHTS

### PARTS IN CARTON:



CAREFULLY REMOVE PEDESTAL PIECES FROM PACKING.  
CABINET SETUP INCLUDES:

- (2 EACH) SLIDING GLASS DOORS
- (2 EACH - LEFT & RIGHT) SIDE GLASS
- (2 EACH) PEDESTAL BASE WITH ROLLERS (PRE-ASSEMBLED)
- PEDESTAL TOP
- TOP GLASS
- FRONT GLASS

LIGHT ADAPTOR

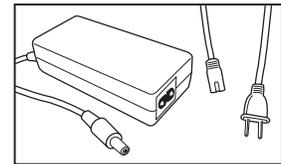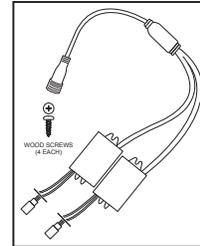


AC ADAPTOR & POWER CHORD

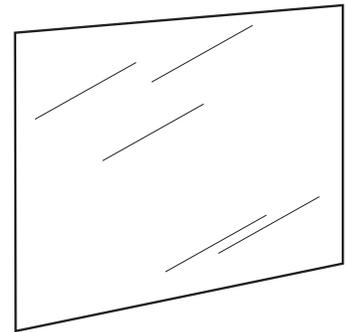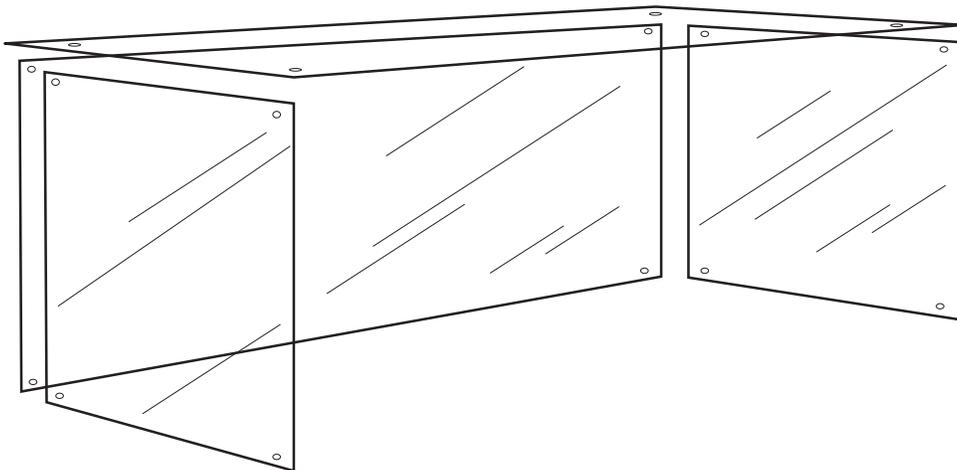


SLIDING GLASS DOORS

PEDESTAL BASE TOWER

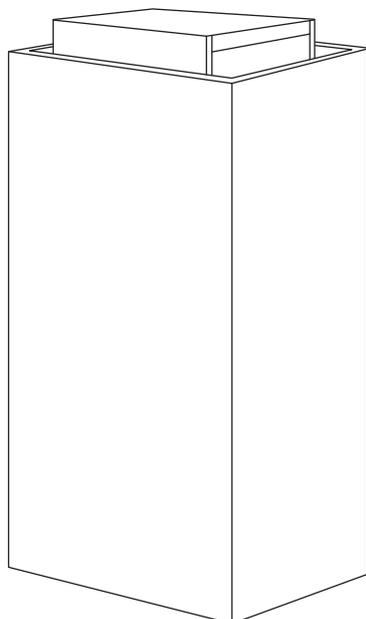

PEDESTAL TOP

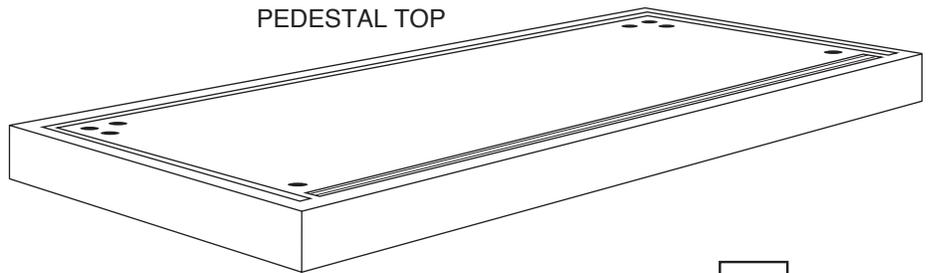

1" ALLEN WRENCH SCREWS  
(8 EACH) FOR BASE ASSEMBLY



(2) DOOR HANDLES  
(ADHESIVE-BACK)


# ASSEMBLY INSTRUCTIONS MANUAL

## #65281/287 INFINITY JEWELRY PEDESTAL W/LIGHTS

### ASSEMBLY OF THIS PRODUCT - 2 PEOPLE ARE RECOMMENDED

**STEP 1.** PLACE PARTS ON A SOFT CLOTH. PLACE PEDESTAL TOP ON IT'S SIDE LENGTHWISE (WITH TRACK ON TOP).

PLACE BOTH PEDESTAL TOWERS ON THEIR SIDES PARALLEL TO THE PEDESTAL TOP (WIRING HOLES SHOULD BE ON THE INSIDE).

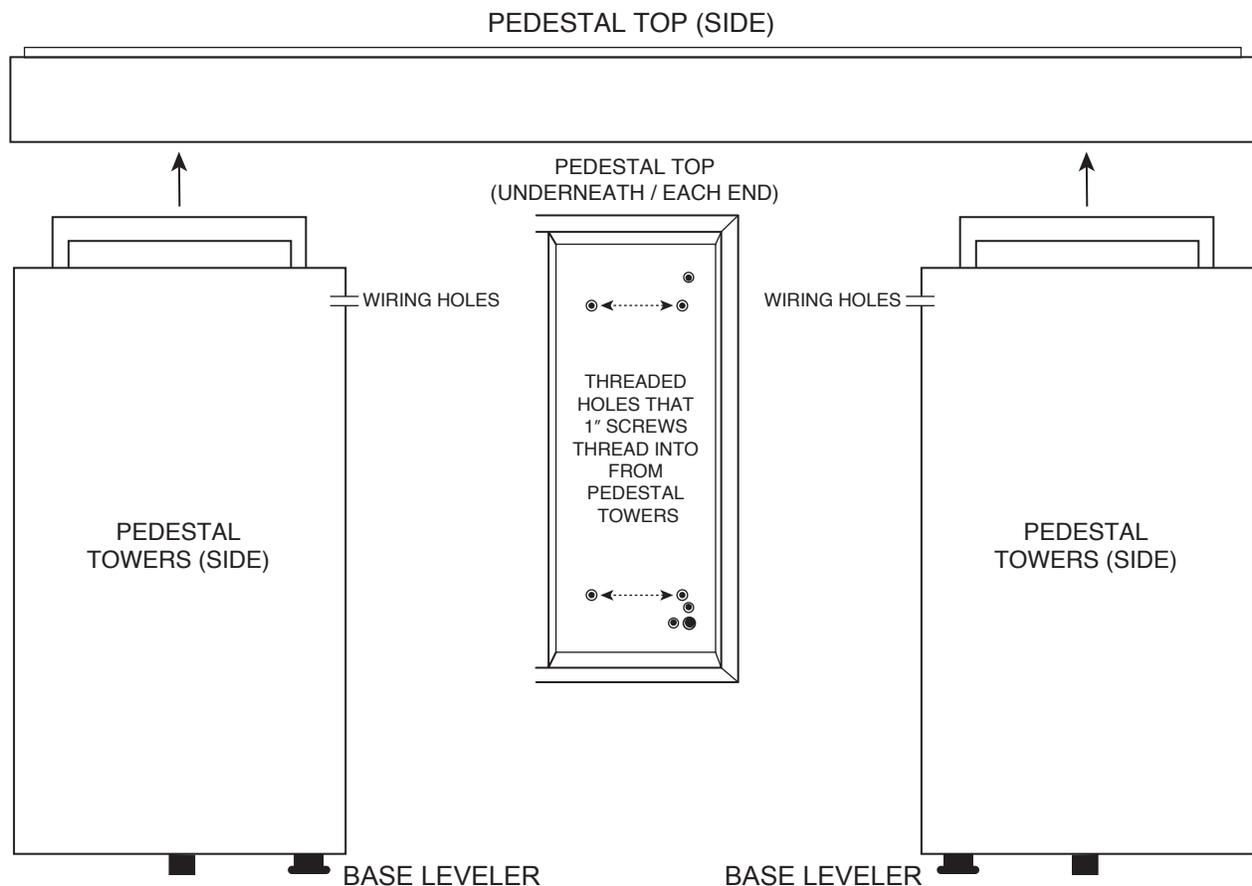

\*BE SURE THAT THE BASE LEVELER'S ARE ON THE INSIDE

**STEP 2.** INSERT EACH PEDESTAL BASE INTO THE RECESSED AREA ON EACH END OF THE PEDESTAL TOP UNTIL SECURE.

USING A PHILIPPS SCREWDRIVER (NOT PROVIDED), SCREW IN (4 EACH SIDE) 1\" SCREWS UNTIL TIGHT.

# ASSEMBLY INSTRUCTIONS MANUAL

## #65281/287 INFINITY JEWELRY PEDESTAL W/LIGHTS


**STEP 3.** INSERT LIGHT BARS THROUGH WASHERS, THEN LIGHT BAR HOLES IN BACK OF PEDESTAL AND SECURE WITH WASHER AND NUT ON BOTTOM (INSIDE OF PEDESTAL WALL) WITH BOX WRENCH (PROVIDED).

**\*NOTE -** MAKE SURE LIGHT BARS ARE FACING INWARD - TOWARDS MIDDLE OF DISPLAY CASE.

**STEP 4.** ATTACH LIGHT ADAPTOR TO INSIDE OF PEDESTAL WALL (LEFT OR RIGHT) WITH WOOD SCREWS USING A SCREWDRIVER. ATTACH LIGHT ADAPTOR END TO LIGHT BARS (2).

**\*NOTE -** THIS UNIT IS PRE-WIRED (BETWEEN PEDESTALS) LIGHT ADAPTOR ONLY CONNECTS TO ONE TERMINAL.

**STEP 5.** ATTACH LIGHT ADAPTOR TO AC ADAPTOR/POWER CHORD. WE RECOMMEND THAT YOU ATTACH IT TO THE INSIDE PEDESTAL WALL USING TWO WAY TAPE (NOT PROVIDED). OTHERWISE LET REST ON THE FLOOR.

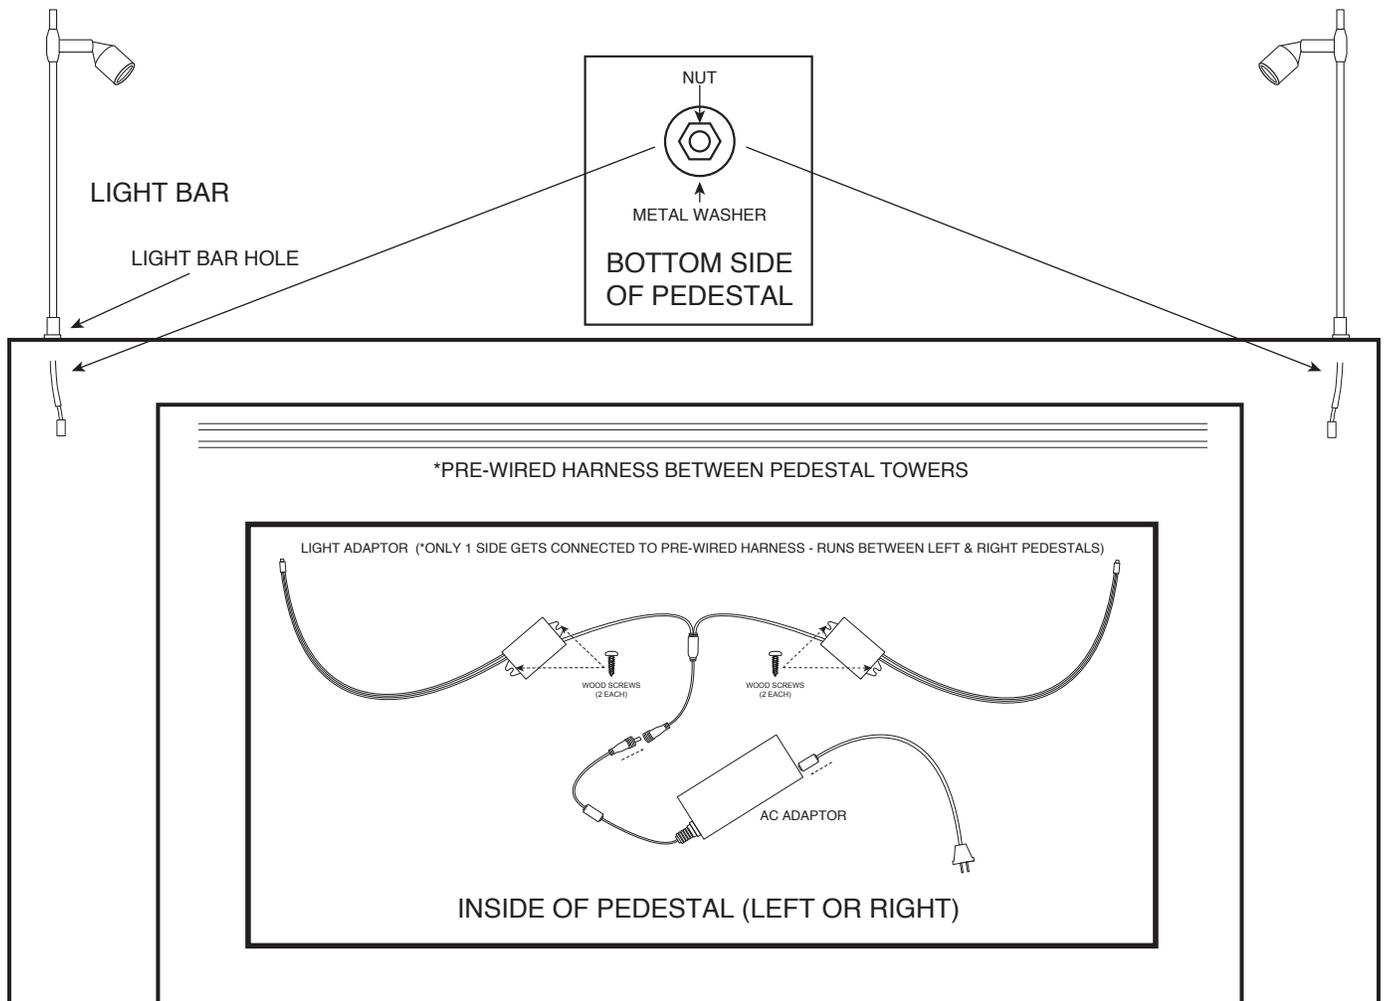


# ASSEMBLY INSTRUCTIONS MANUAL

#65281/287 INFINITY JEWELRY PEDESTAL W/LIGHTS

## IMPORTANT

BOTTOM OF FRONT BACK AND SIDE GLASS HAS A SLIGHTLY DIFFERENT HOLE PLACEMENT THAN THE TOP OF EACH PIECE OF GLASS

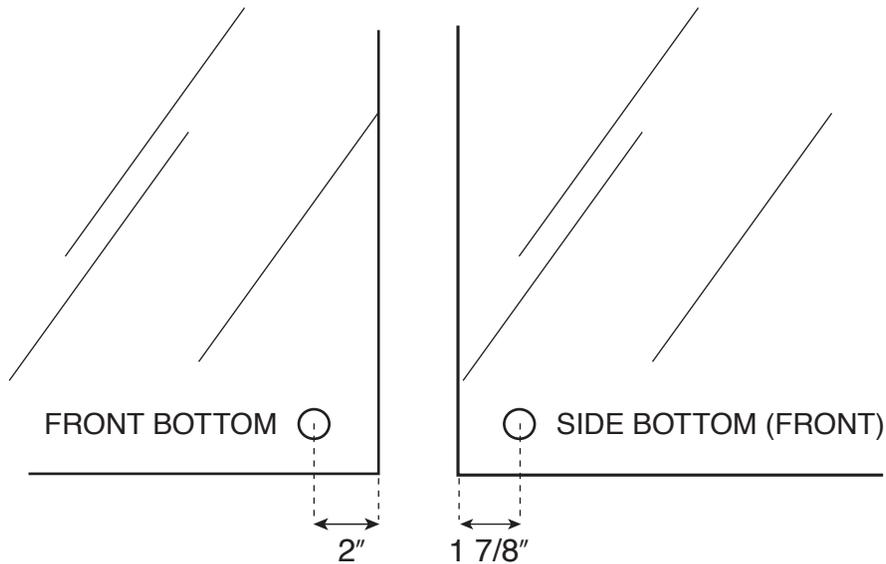

MEASURE THE GLASS SPACE BETWEEN EDGE OF GLASS AND CENTER OF HOLE.  
HOLE FURTHEST FROM EDGE GOES ON BOTTOM.

***GLASS CAN ONLY BE ASSEMBLED ONE WAY!***

# ASSEMBLY INSTRUCTIONS MANUAL

## #65281/287 INFINITY JEWELRY PEDESTAL W/LIGHTS


**STEP 6.** STAND PEDESTAL UPRIGHT. THE BOTTOM TRACK ON THE PEDESTAL TOP SHOULD BE TOWARDS YOU. (PLACE FRONT GLASS PANEL INTO FRONT GROOVE OF PEDESTAL TOP. MAKE SURE GLASS PRECISELY FITS FRONT BASE GROOVE IN ORDER TO ACCOMODATE THE SIDE PANELS NEXT. MAKE CERTAIN ON BOTH BACK AND SIDE PANELS THAT YOU RECOGNIZE THE BOTTOM OF EACH PANEL CORRECTLY. (SEE PAGE 5 FOR GLASS PLACEMENT)

**STEP 7.** PLACE LEFT SIDE GLASS INTO BASE GROOVE WHILE HOLDING FRONT GLASS TO LINE UP FIRST GLASS BRACKET. ATTACH U-BRACKET WITH ALLEN WRENCH SCREWS AND WASHERS.

**STEP 8.** REPEAT STEP 5 FOR RIGHT SIDE.

**STEP 9.** HAND SCREW IN BOTTOM BRACKETS. DO NOT TIGHTEN WITH ALLEN WRENCH YET. THIS ALLOWS FLEXIBILITY UNTIL ASSEMBLY IS NEARLY COMPLETE.

**STEP 10.** WHEN BOTH SIDE PANELS ARE COMPLETE, USE ALLEN WRENCH TO TIGHTEN. (DO NOT OVER TIGHTEN)

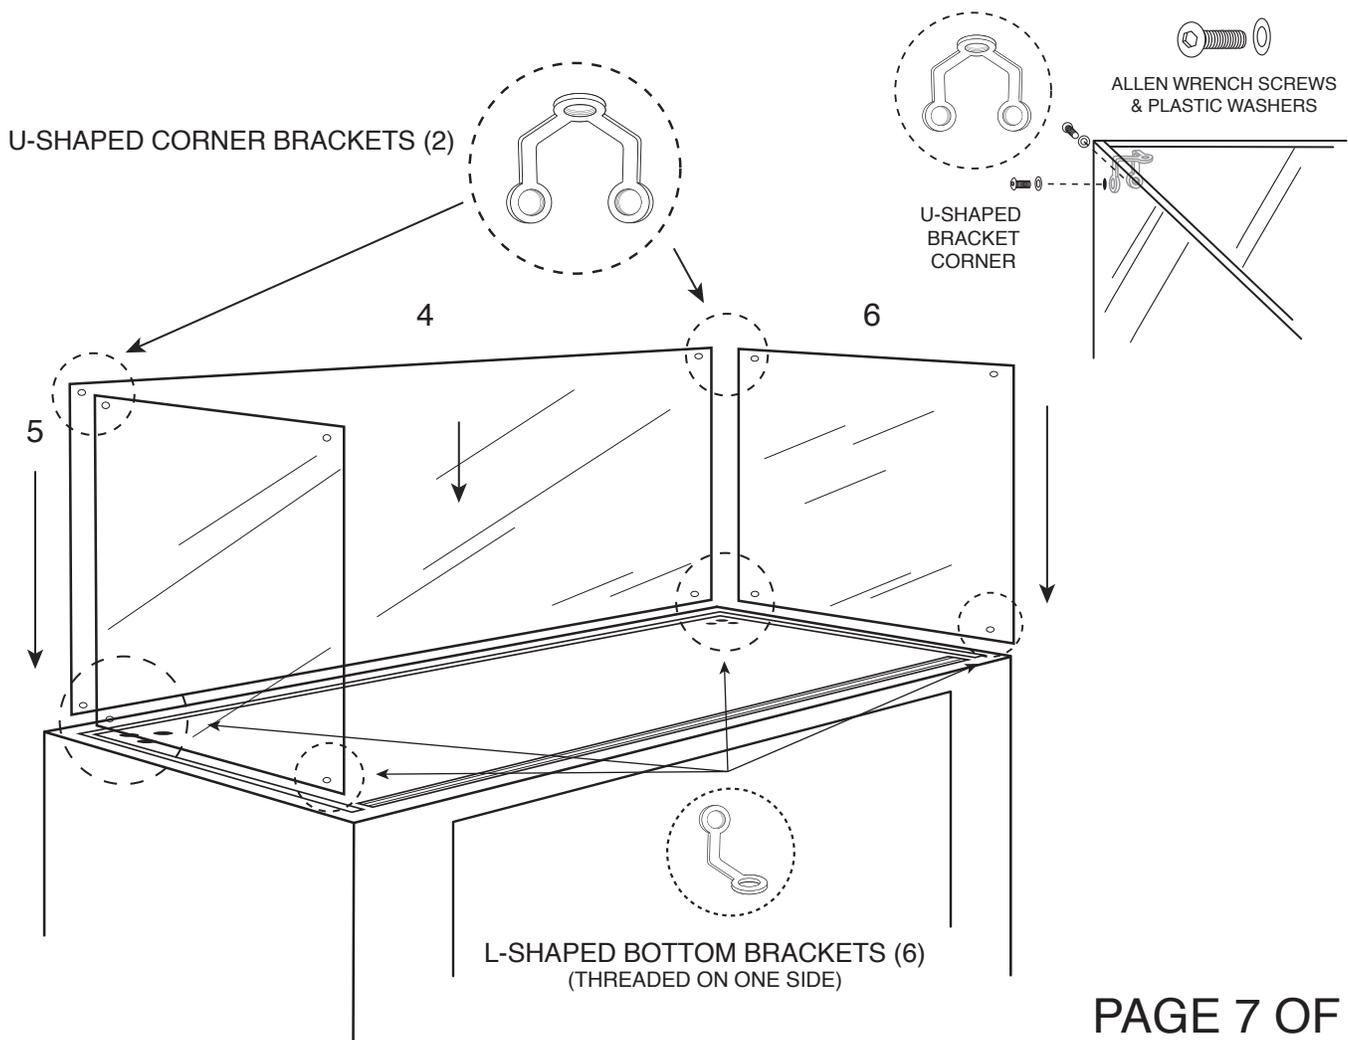


# ASSEMBLY INSTRUCTIONS MANUAL


## #65281/287 INFINITY JEWELRY PEDESTAL W/LIGHTS

**STEP 11.** CAREFULLY SLIDE TOP GLASS ONTO CABINET MAKING SURE YOU HAVE AN OVER-LAP ON BOTH SIDES.

**STEP 12.** SCREW ALLEN SCREWS (WITH PLASTIC WASHERS) INTO BOTH U-BRACKETS AND L-BRACKETS ON TOP. (**DO NOT OVER TIGHTEN**)

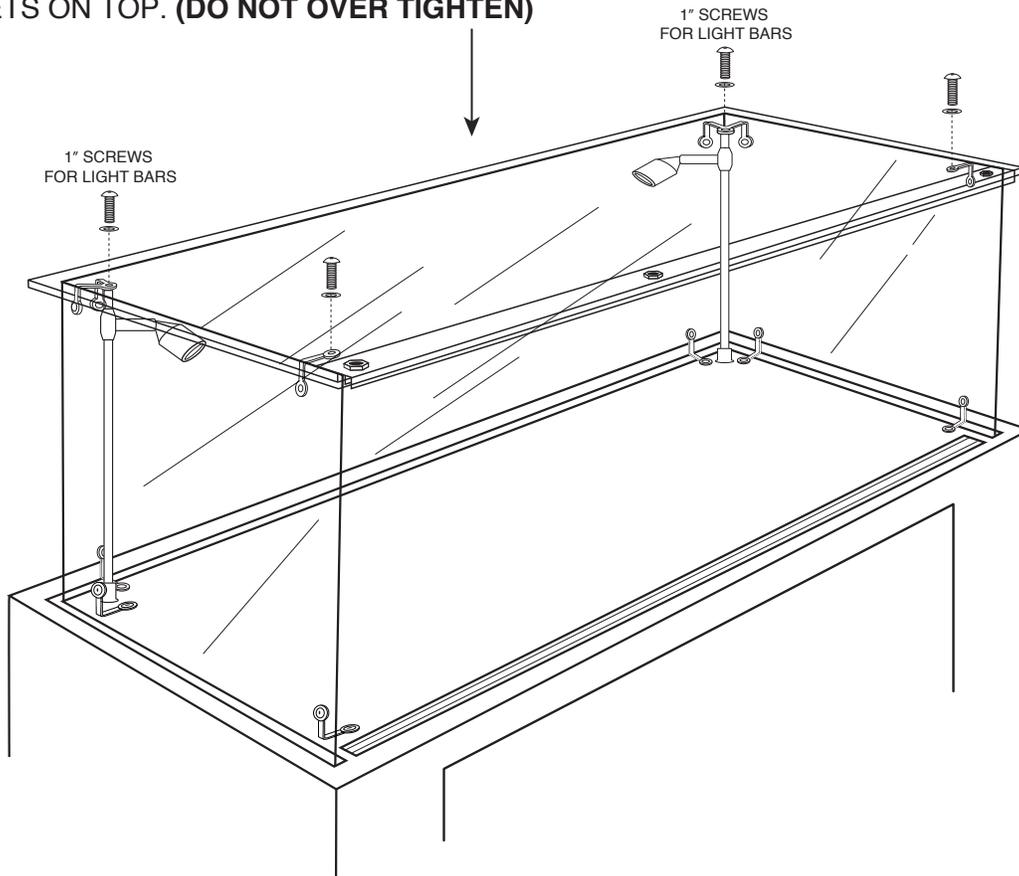


**STEP 13.** PLACE TOP GLASS DOOR ALUMINUM SLIDE GUIDE UNDER TOP GLASS.

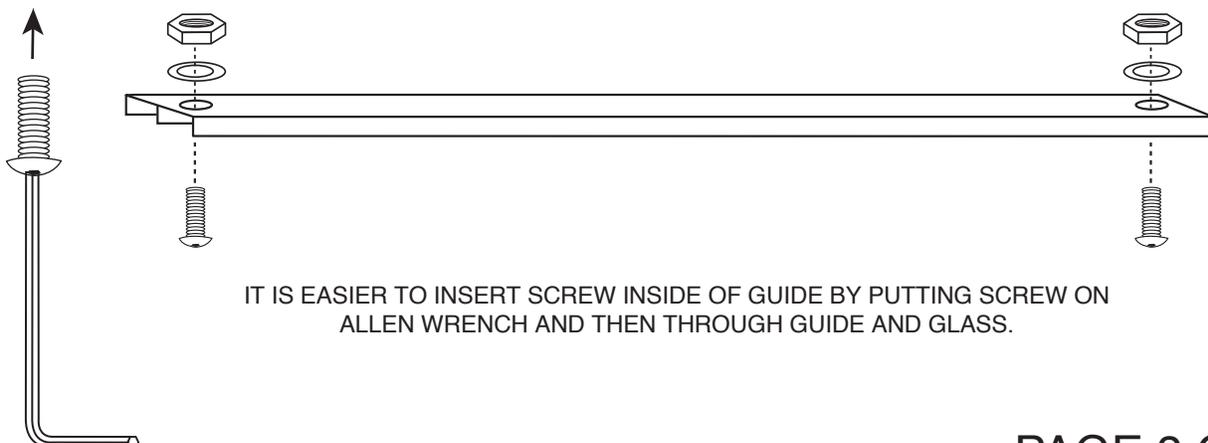

# ASSEMBLY INSTRUCTIONS MANUAL


## #65281/287 INFINITY JEWELRY PEDESTAL W/LIGHTS

**STEP 14. INSTALLING SLIDING GLASS DOORS. PLACE CLEAR PLASTIC SLEEVES ON TOP OF GLASS DOORS. TAP ON SLEEVES WITH RUBBER Mallet.**

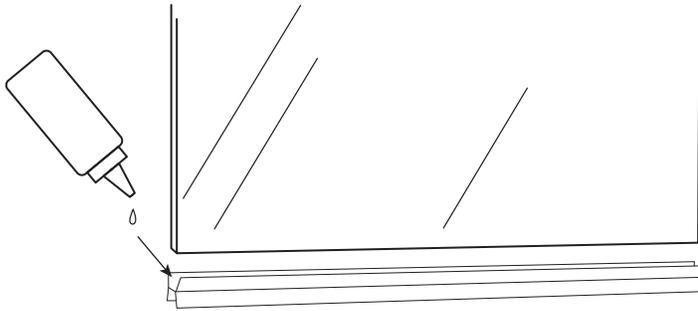


RUN BEAD OF ANY TYPE OF GLUE ON INSIDE (BOTTOM) OF TOP PLASTIC SLEEVE. THEN TAP SLEEVES ON TOP OF THE GLASS WITH A RUBBER Mallet.

*THIS PREVENTS THE SLEEVES FROM MOVING ONCE ASSEMBLY IS COMPLETE AND DOORS ARE MOVED.*

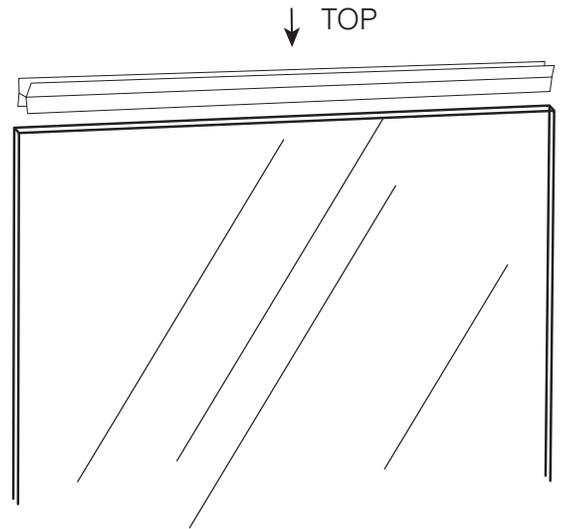


PLACE METAL SLEEVES (WITH LOCK TO THE LEFT) ON BOTTOM OF GLASS DOORS. TAP ON SLEEVES WITH RUBBER Mallet.

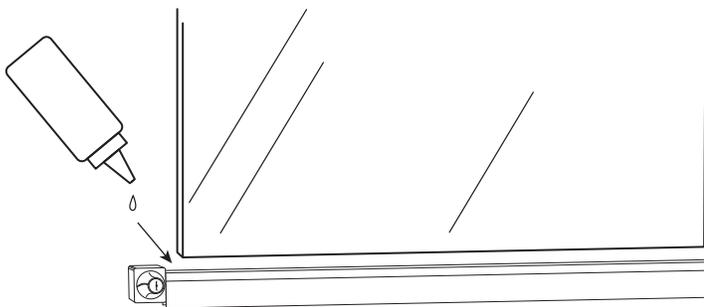

RUN BEAD OF ANY TYPE OF GLUE ON INSIDE (TOP) OF BOTTOM METAL SLEEVE. THEN TAP SLEEVES ON BOTTOM OF THE GLASS WITH A RUBBER Mallet.

*THIS PREVENTS THE SLEEVES FROM MOVING ONCE ASSEMBLY IS COMPLETE AND DOORS ARE MOVED.*

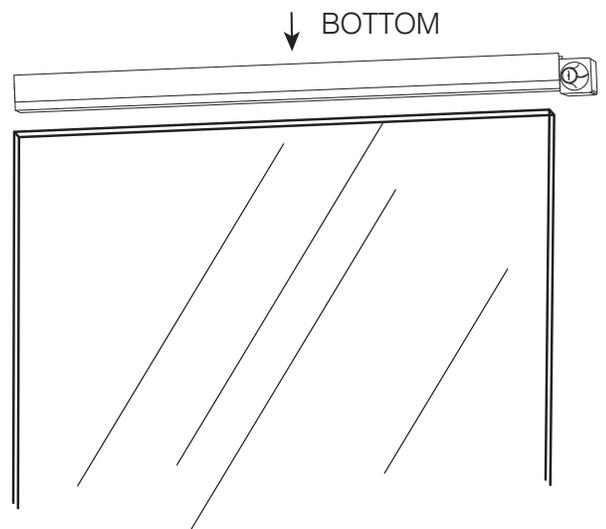


# ASSEMBLY INSTRUCTIONS MANUAL

## #65281/287 INFINITY JEWELRY PEDESTAL W/LIGHTS

**STEP 15.** INSERT LEFT DOOR (WITHOUT LOCK - MAKE SURE HOLE IN BOTTOM METAL SLEEVE IS FACING YOU / ON THE RIGHT) INTO TOP OF BACK TRACK, THEN LOWER INTO BOTTOM BACK TRACK AND SLIDE TO THE LEFT.

INSERT RIGHT DOOR (INSTALLED LOCK ASSEMBLY ON THE LEFT) INTO TOP OF FRONT TRACK, THEN LOWER INTO BOTTOM FRONT TRACK AND SLIDE TO THE RIGHT.

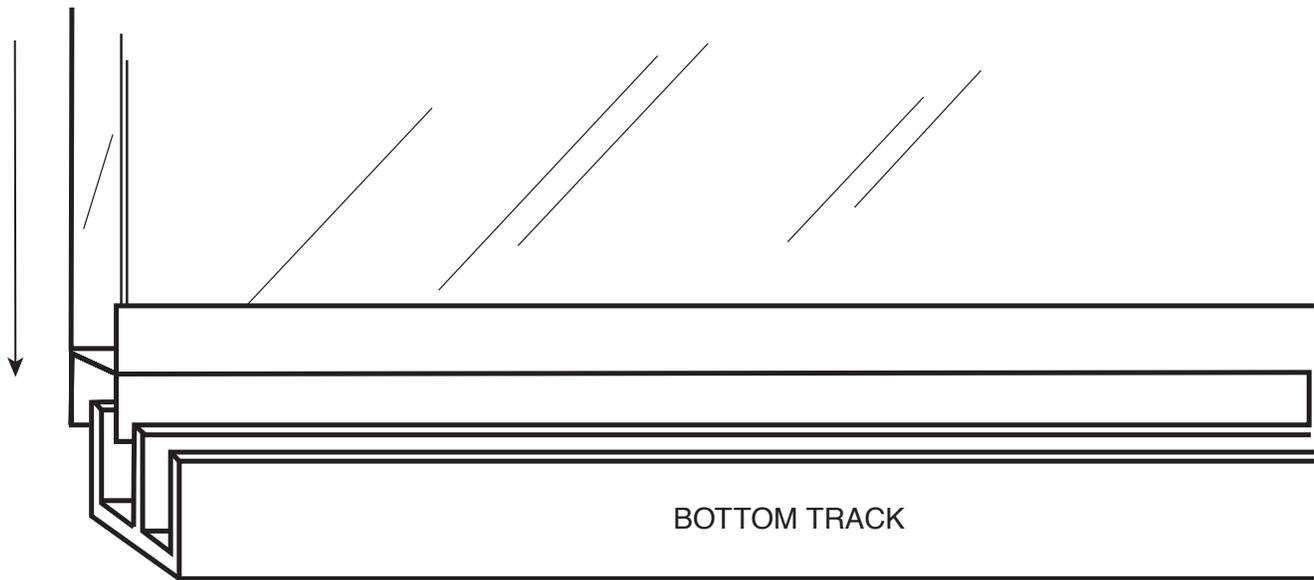

**STEP 16.** INSERT LEFT DOOR (WITHOUT LOCK - MAKE SURE HOLE IN BOTTOM METAL SLEEVE IS FACING YOU / ON THE RIGHT) INTO TOP OF BACK TRACK, THEN LOWER INTO BOTTOM BACK TRACK AND SLIDE TO THE LEFT.

INSERT RIGHT DOOR (INSTALLED LOCK ASSEMBLY ON THE LEFT) INTO TOP OF FRONT TRACK, THEN LOWER INTO BOTTOM FRONT TRACK AND SLIDE TO THE RIGHT.



# ASSEMBLY INSTRUCTIONS MANUAL

## #65281/287 INFINITY JEWELRY PEDESTAL W/LIGHTS

**STEP 17.** STICK CLEAR BUMPER TABS ON EACH SIDE OF CABINET TO **STOP** GLASS DOORS FROM TOUCHING SIDES (3 EACH SIDE). →


**STEP 18.** CLOSE DOORS AND MEASURE FROM OUTSIDE EDGE ONE INCH IN - PEEL BACK OFF HANDLE PIECES AND STICK TO EACH DOOR.

THIS COMPLETES THE ASSEMBLY.

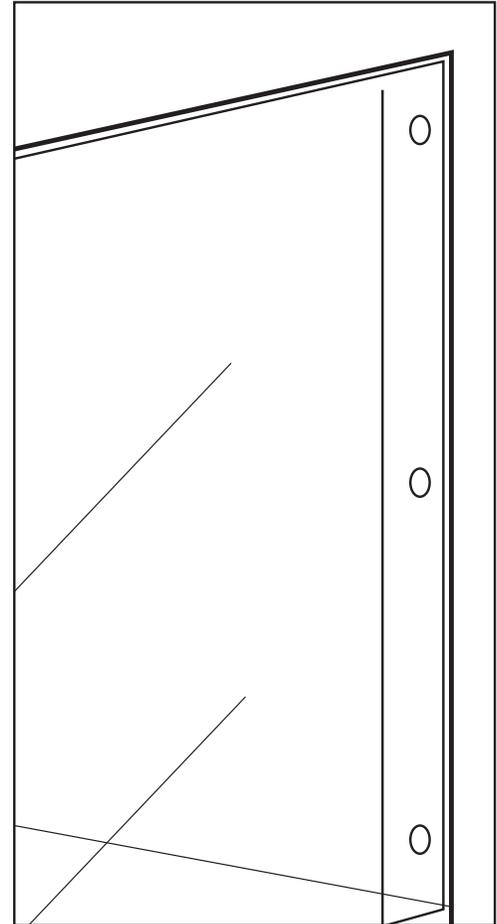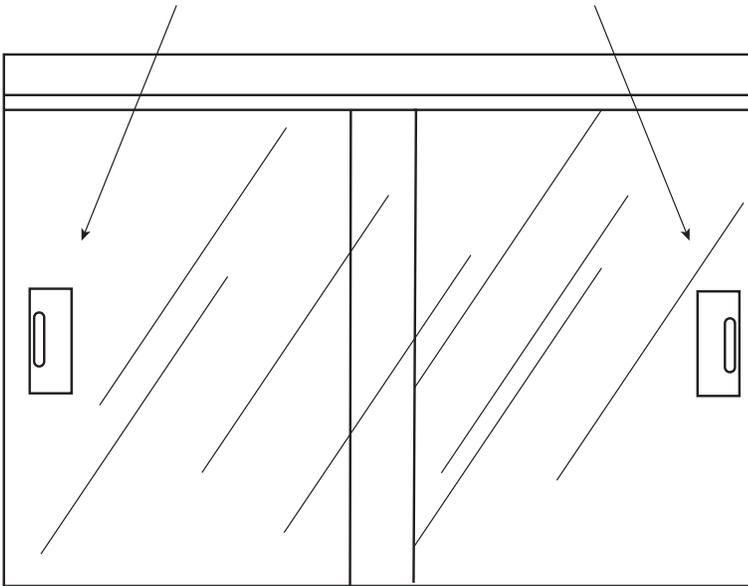

# ASSEMBLY INSTRUCTIONS MANUAL


## 65281 INFINITY JEWELRY PEDESTAL

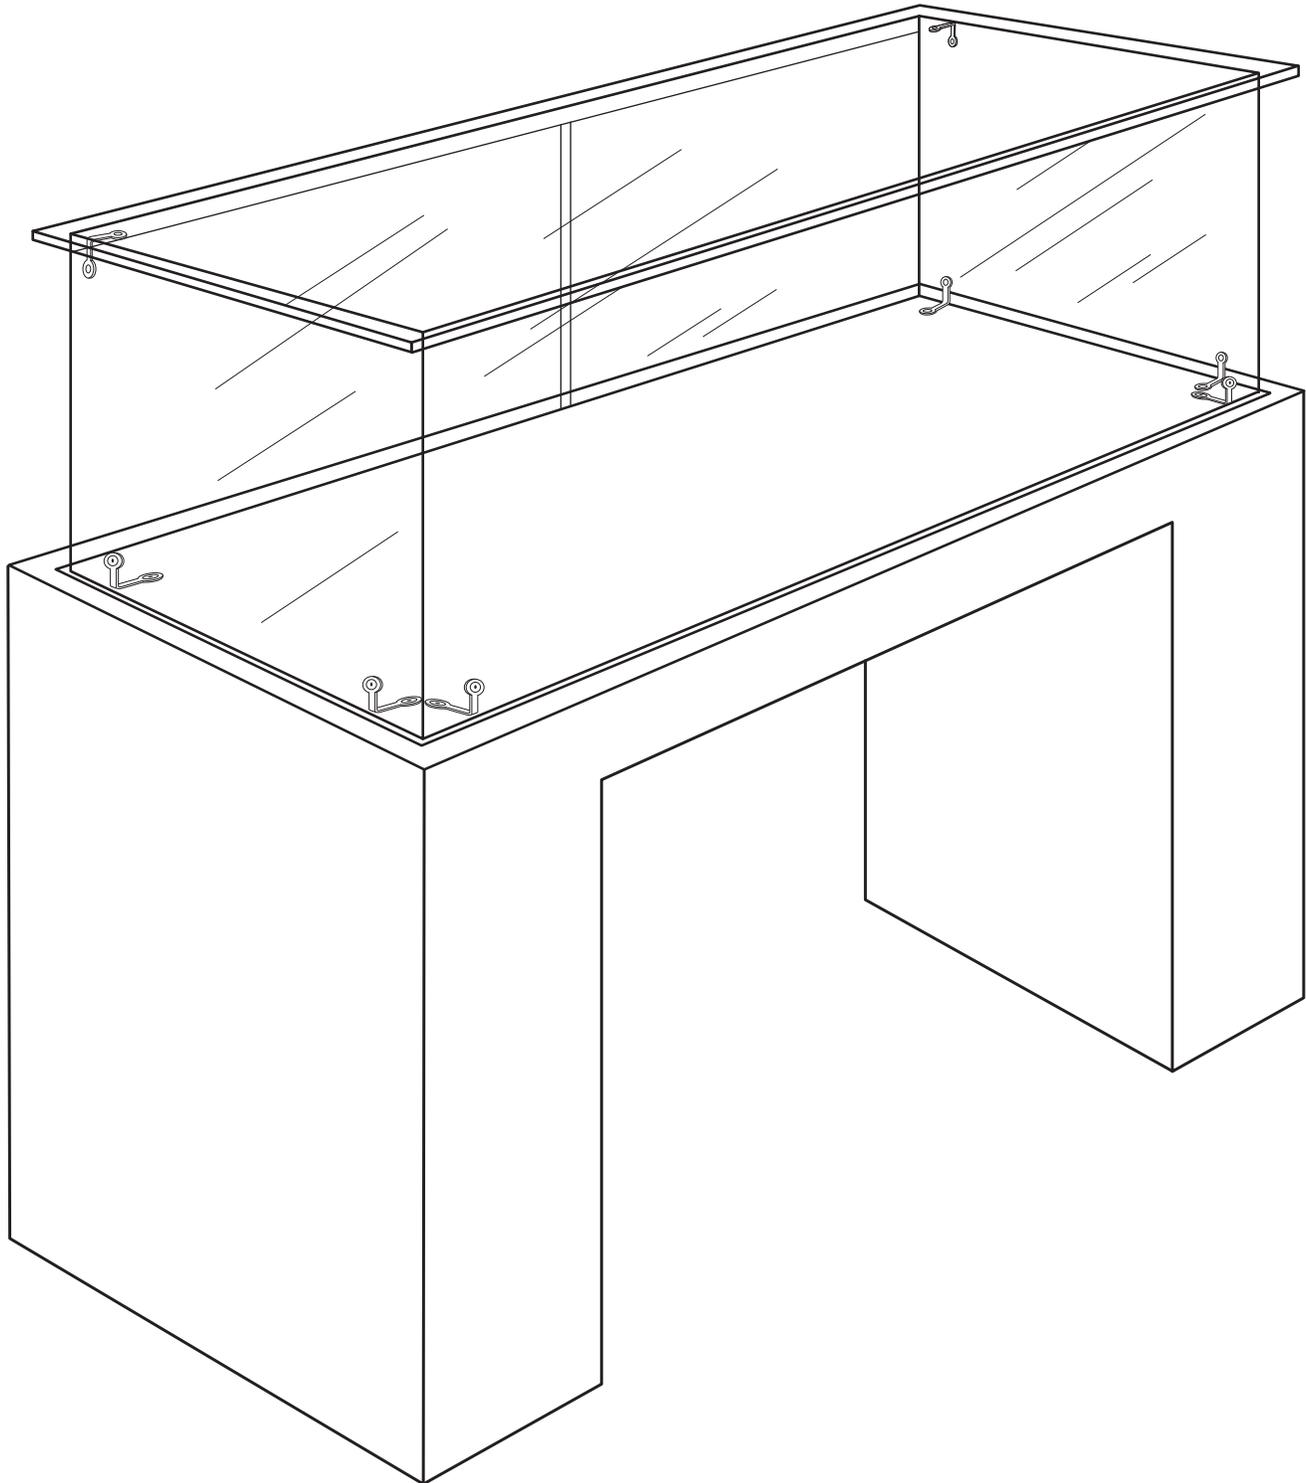







# ASSEMBLY INSTRUCTIONS MANUAL

## 65281 INFINITY JEWELRY PEDESTAL

### RECOMMENDED TOOLS FOR ASSEMBLY:

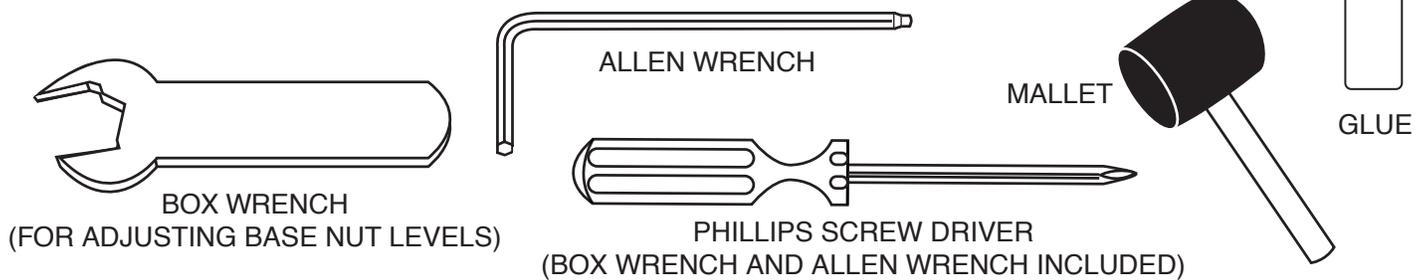

### PARTS IN CARTON:

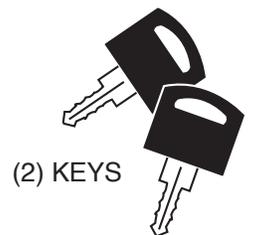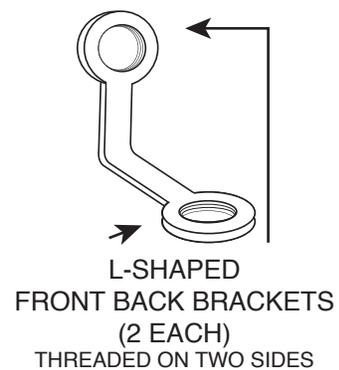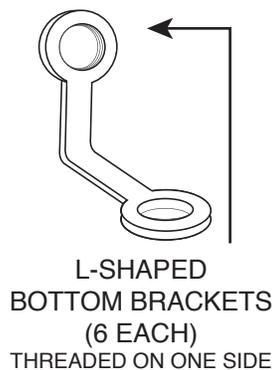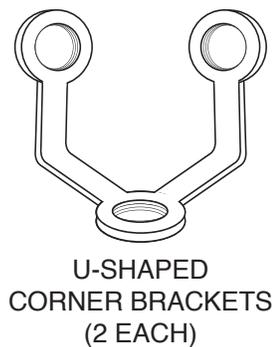



# ASSEMBLY INSTRUCTIONS MANUAL

## 65281 INFINITY JEWELRY PEDESTAL

### PARTS IN CARTON:


CAREFULLY REMOVE PEDESTAL PIECES FROM PACKING.  
CABINET SETUP INCLUDES:

- (2 EACH) SLIDING GLASS DOORS
- (2 EACH - LEFT & RIGHT) SIDE GLASS
- (2 EACH) PEDESTAL BASE WITH ROLLERS (PRE-ASSEMBLED)
- PEDESTAL TOP
- TOP GLASS
- FRONT GLASS

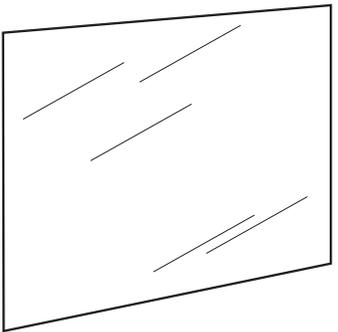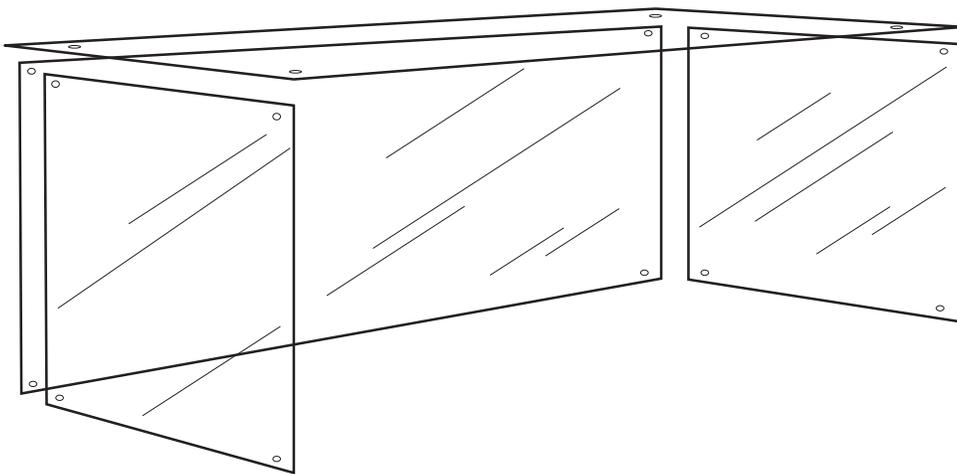


SLIDING GLASS DOORS


PEDESTAL BASE TOWER

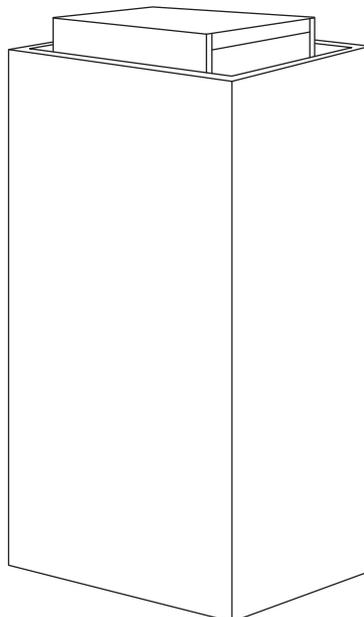

PEDESTAL TOP

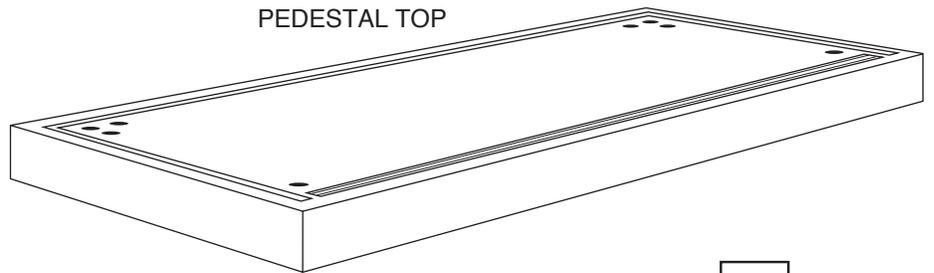

1" ALLEN WRENCH SCREWS  
(8 EACH) FOR BASE ASSEMBLY



(2) DOOR HANDLES  
(ADHESIVE-BACK)


# ASSEMBLY INSTRUCTIONS MANUAL

## #65281/287 INFINITY JEWELRY PEDESTAL W/LIGHTS

### ASSEMBLY OF THIS PRODUCT - 2 PEOPLE ARE RECOMMENDED

**STEP 1.** PLACE PARTS ON A SOFT CLOTH. PLACE PEDESTAL TOP ON IT'S SIDE LENGTHWISE (WITH TRACK ON TOP).

PLACE BOTH PEDESTAL TOWERS ON THEIR SIDES PARALLEL TO THE PEDESTAL TOP (WIRING HOLES SHOULD BE ON THE INSIDE).

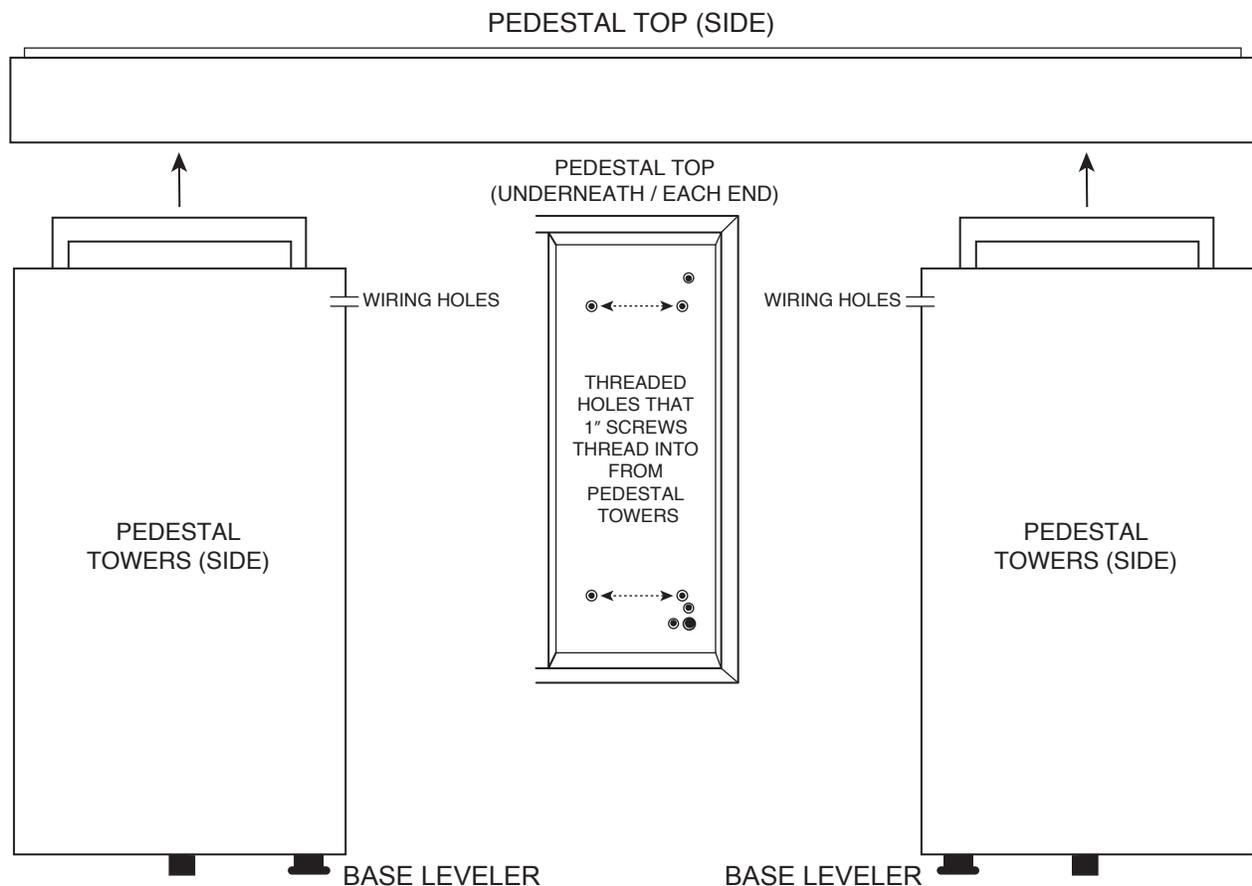

\*BE SURE THAT THE BASE LEVELER'S ARE ON THE INSIDE

**STEP 2.** INSERT EACH PEDESTAL BASE INTO THE RECESSED AREA ON EACH END OF THE PEDESTAL TOP UNTIL SECURE.


USING A PHILIPPS SCREWDRIVER (NOT PROVIDED), SCREW IN (4 EACH SIDE) 1" SCREWS UNTIL TIGHT.

# ASSEMBLY INSTRUCTIONS MANUAL

## 65281 INFINITY JEWELRY PEDESTAL

### IMPORTANT

BOTTOM OF FRONT BACK AND SIDE GLASS HAS A SLIGHTLY DIFFERENT HOLE PLACEMENT THAN THE TOP OF EACH PIECE OF GLASS

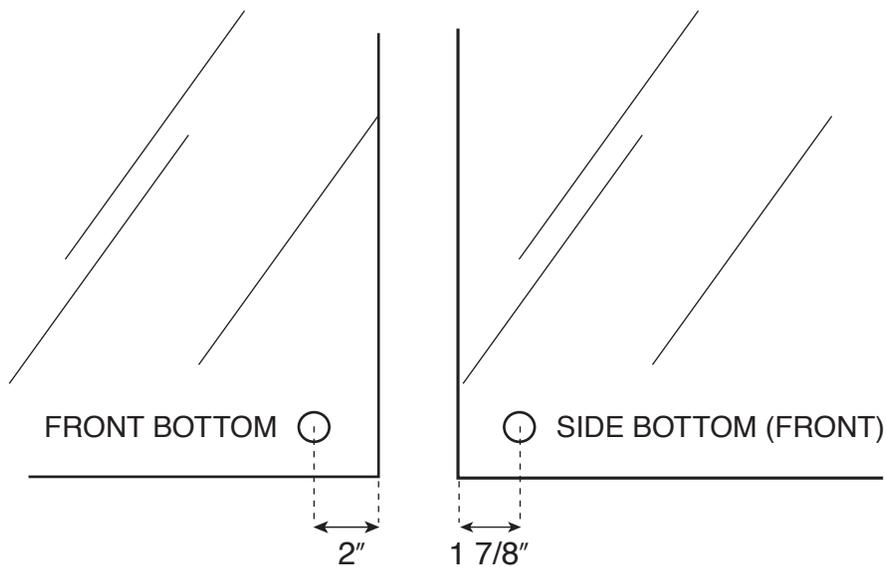

MEASURE THE GLASS SPACE BETWEEN EDGE OF GLASS AND CENTER OF HOLE.  
HOLE FURTHEST FROM EDGE GOES ON BOTTOM.

***GLASS CAN ONLY BE ASSEMBLED ONE WAY!***

# ASSEMBLY INSTRUCTIONS MANUAL

## 65281 INFINITY JEWELRY PEDESTAL


**STEP 6.** STAND PEDESTAL UPRIGHT. THE BOTTOM TRACK ON THE PEDESTAL TOP SHOULD BE TOWARDS YOU. (PLACE FRONT GLASS PANEL INTO FRONT GROOVE OF PEDESTAL TOP. MAKE SURE GLASS PRECISELY FITS FRONT BASE GROOVE IN ORDER TO ACCOMODATE THE SIDE PANELS NEXT. MAKE CERTAIN ON BOTH BACK AND SIDE PANELS THAT YOU RECOGNIZE THE BOTTOM OF EACH PANEL CORRECTLY. (SEE PAGE 5 FOR GLASS PLACEMENT)

**STEP 7.** PLACE LEFT SIDE GLASS INTO BASE GROOVE WHILE HOLDING FRONT GLASS TO LINE UP FIRST GLASS BRACKET. ATTACH U-BRACKET WITH ALLEN WRENCH SCREWS AND WASHERS.

**STEP 8.** REPEAT STEP 2 FOR RIGHT SIDE.

**STEP 9.** HAND SCREW IN BOTTOM BRACKETS. DO NOT TIGHTEN WITH ALLEN WRENCH YET. THIS ALLOWS FLEXIBILITY UNTIL ASSEMBLY IS NEARLY COMPLETE.

**STEP 10.** WHEN BOTH SIDE PANELS ARE COMPLETE, USE ALLEN WRENCH TO TIGHTEN. (DO NOT OVER TIGHTEN)

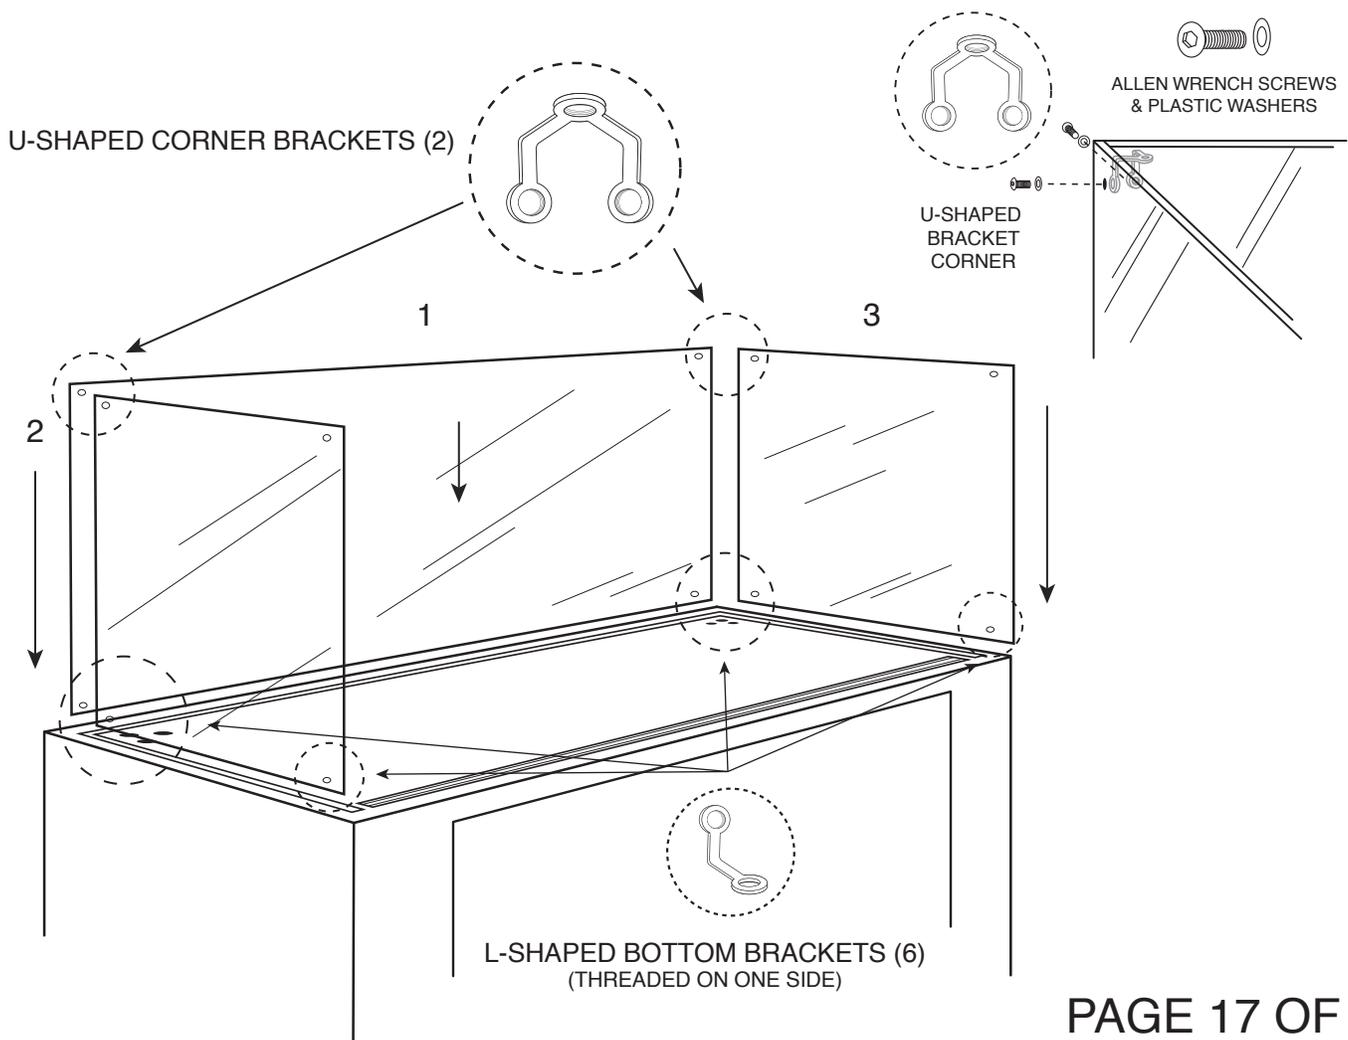


# ASSEMBLY INSTRUCTIONS MANUAL


## 65281 INFINITY JEWELRY PEDESTAL

**STEP 11.** CAREFULLY SLIDE TOP GLASS ONTO PEDESTAL MAKING SURE YOU HAVE AN OVER-LAP ON BOTH SIDES.

**STEP 12.** SCREW ALLEN SCREWS (WITH PLASTIC WASHERS) INTO BOTH U-BRACKETS AND L-BRACKETS ON TOP. **(DO NOT OVER TIGHTEN)**

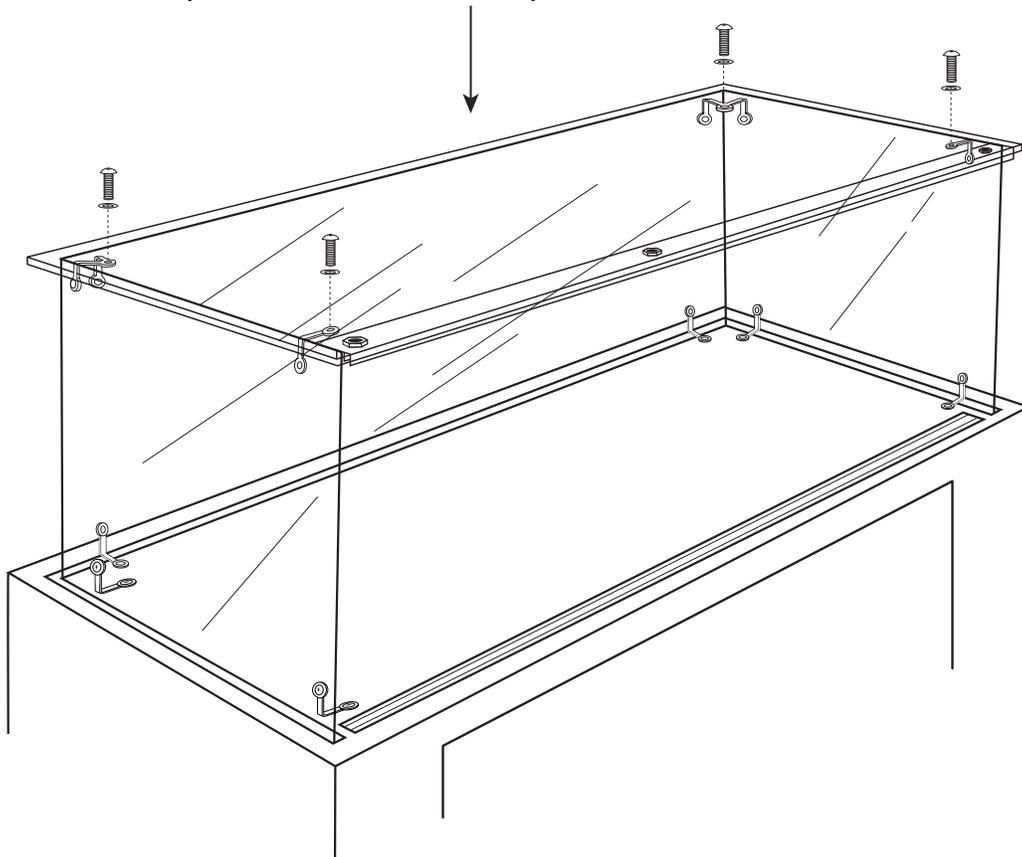

**STEP 13.** PLACE TOP GLASS DOOR ALUMINUM SLIDE GUIDE UNDER TOP GLASS.

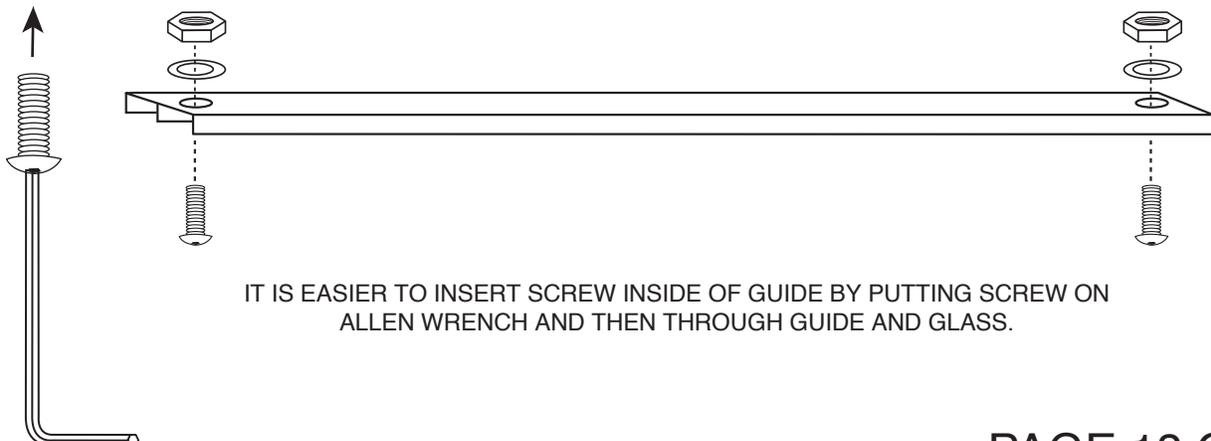


IT IS EASIER TO INSERT SCREW INSIDE OF GUIDE BY PUTTING SCREW ON ALLEN WRENCH AND THEN THROUGH GUIDE AND GLASS.

# ASSEMBLY INSTRUCTIONS MANUAL


## 65281 INFINITY JEWELRY PEDESTAL

**STEP 14. INSTALLING SLIDING GLASS DOORS. PLACE CLEAR PLASTIC SLEEVES ON TOP OF GLASS DOORS. TAP ON SLEEVES WITH RUBBER Mallet.**

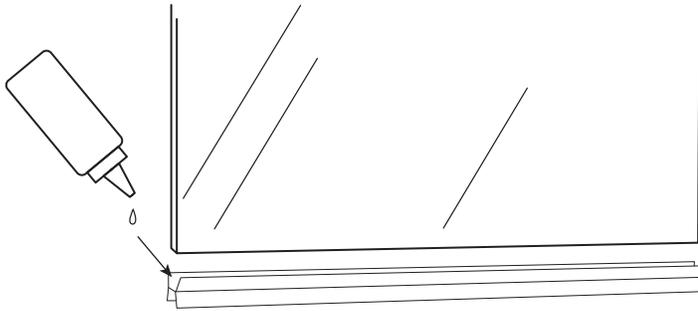


RUN BEAD OF ANY TYPE OF GLUE ON INSIDE (BOTTOM) OF TOP PLASTIC SLEEVE. THEN TAP SLEEVES ON TOP OF THE GLASS WITH A RUBBER Mallet.

*THIS PREVENTS THE SLEEVES FROM MOVING ONCE ASSEMBLY IS COMPLETE AND DOORS ARE MOVED.*

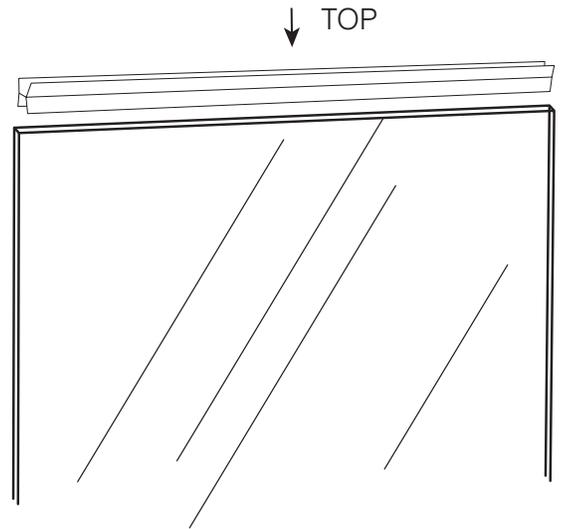


**PLACE METAL SLEEVES (WITH LOCK TO THE LEFT) ON BOTTOM OF GLASS DOORS. TAP ON SLEEVES WITH RUBBER Mallet.**

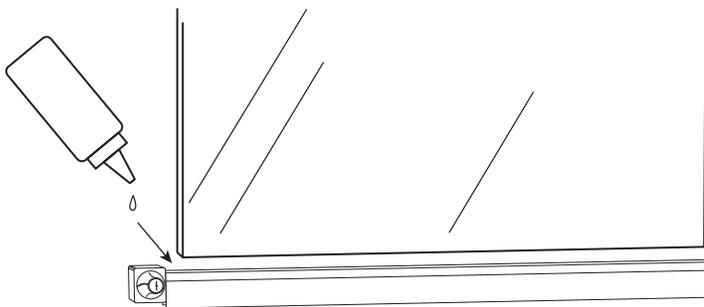

RUN BEAD OF ANY TYPE OF GLUE ON INSIDE (TOP) OF BOTTOM METAL SLEEVE. THEN TAP SLEEVES ON BOTTOM OF THE GLASS WITH A RUBBER Mallet.

*THIS PREVENTS THE SLEEVES FROM MOVING ONCE ASSEMBLY IS COMPLETE AND DOORS ARE MOVED.*

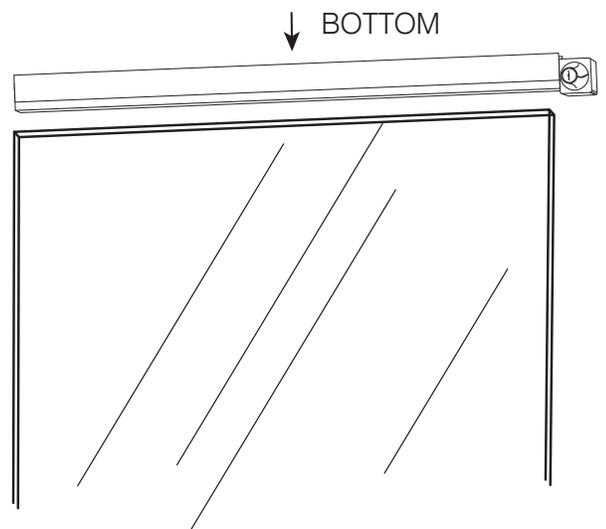


# ASSEMBLY INSTRUCTIONS MANUAL

## 65281 INFINITY JEWELRY PEDESTAL

**STEP 15.** INSERT LEFT DOOR (WITHOUT LOCK - MAKE SURE HOLE IN BOTTOM METAL SLEEVE IS FACING YOU / ON THE RIGHT) INTO TOP OF BACK TRACK, THEN LOWER INTO BOTTOM BACK TRACK AND SLIDE TO THE LEFT.

INSERT RIGHT DOOR (INSTALLED LOCK ASSEMBLY ON THE LEFT) INTO TOP OF FRONT TRACK, THEN LOWER INTO BOTTOM FRONT TRACK AND SLIDE TO THE RIGHT.

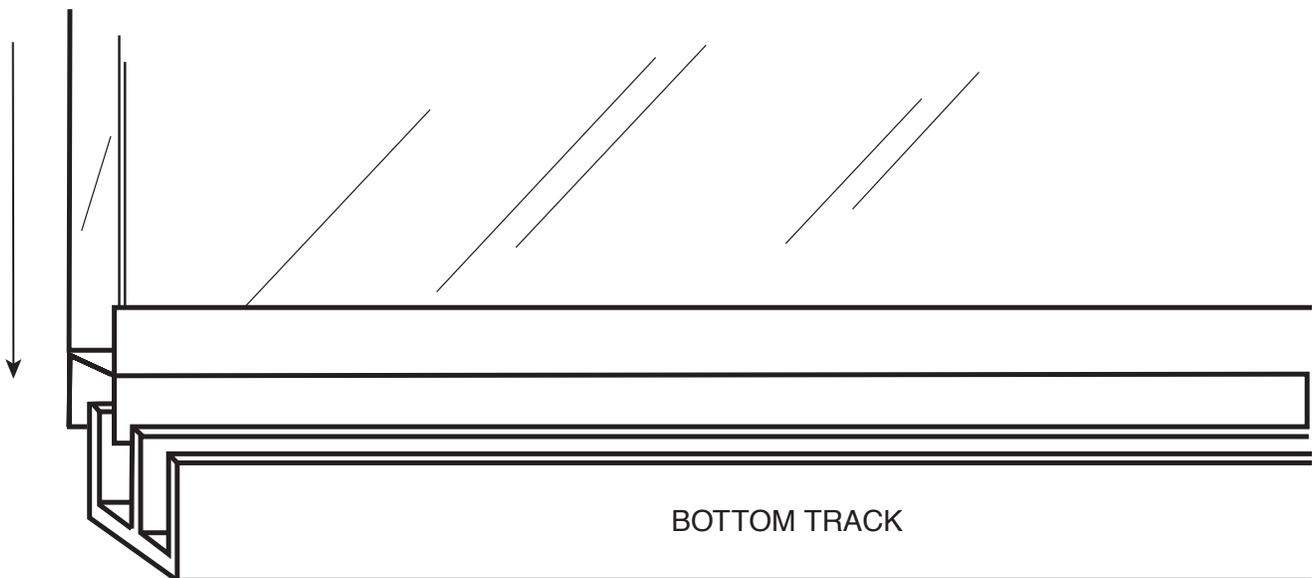

# ASSEMBLY INSTRUCTIONS MANUAL

## #65281/287 INFINITY JEWELRY PEDESTAL W/LIGHTS

**STEP 17.** STICK CLEAR BUMPER TABS ON EACH SIDE OF CABINET TO **STOP** GLASS DOORS FROM TOUCHING SIDES (3 EACH SIDE). →

**STEP 18.** CLOSE DOORS AND MEASURE FROM OUTSIDE EDGE ONE INCH IN - PEEL BACK OFF HANDLE PIECES AND STICK TO EACH DOOR.

THIS COMPLETES THE ASSEMBLY.

