


# ASSEMBLY INSTRUCTIONS MANUAL

65283 (48" W) INFINITY EXTRA VISION SHOWCASE

A. #65288 WITH LIGHTS (P. 1-11)


B. WITHOUT LIGHTS (P. 12-20)

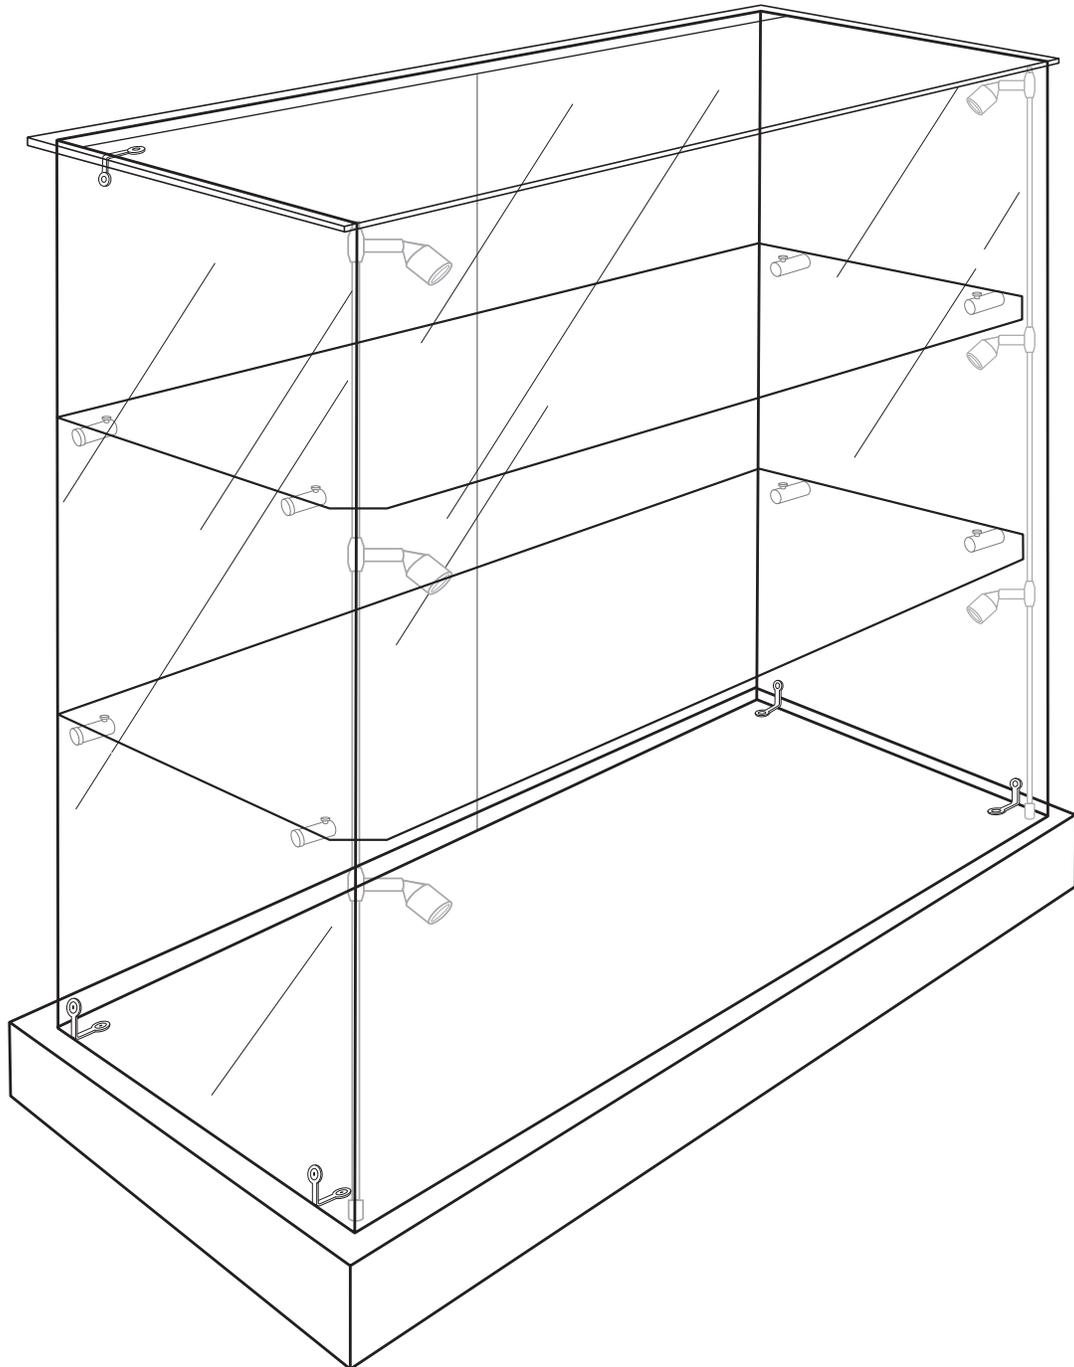


# ASSEMBLY INSTRUCTIONS MANUAL

#65283/288 (48" W) INFINITY EXTRA VISION SHOWCASE W/LIGHTS

## RECOMMENDED TOOLS FOR ASSEMBLY:

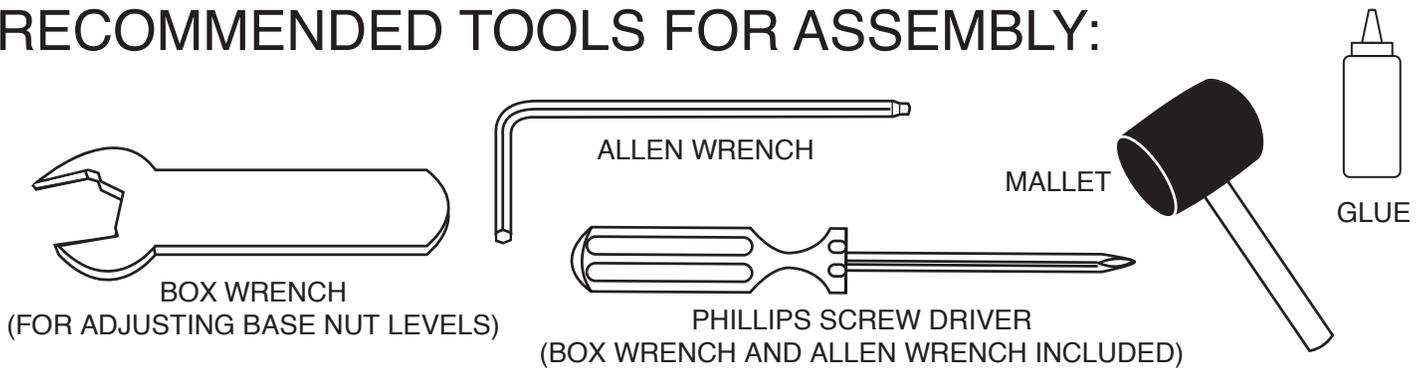

## PARTS IN CARTON:

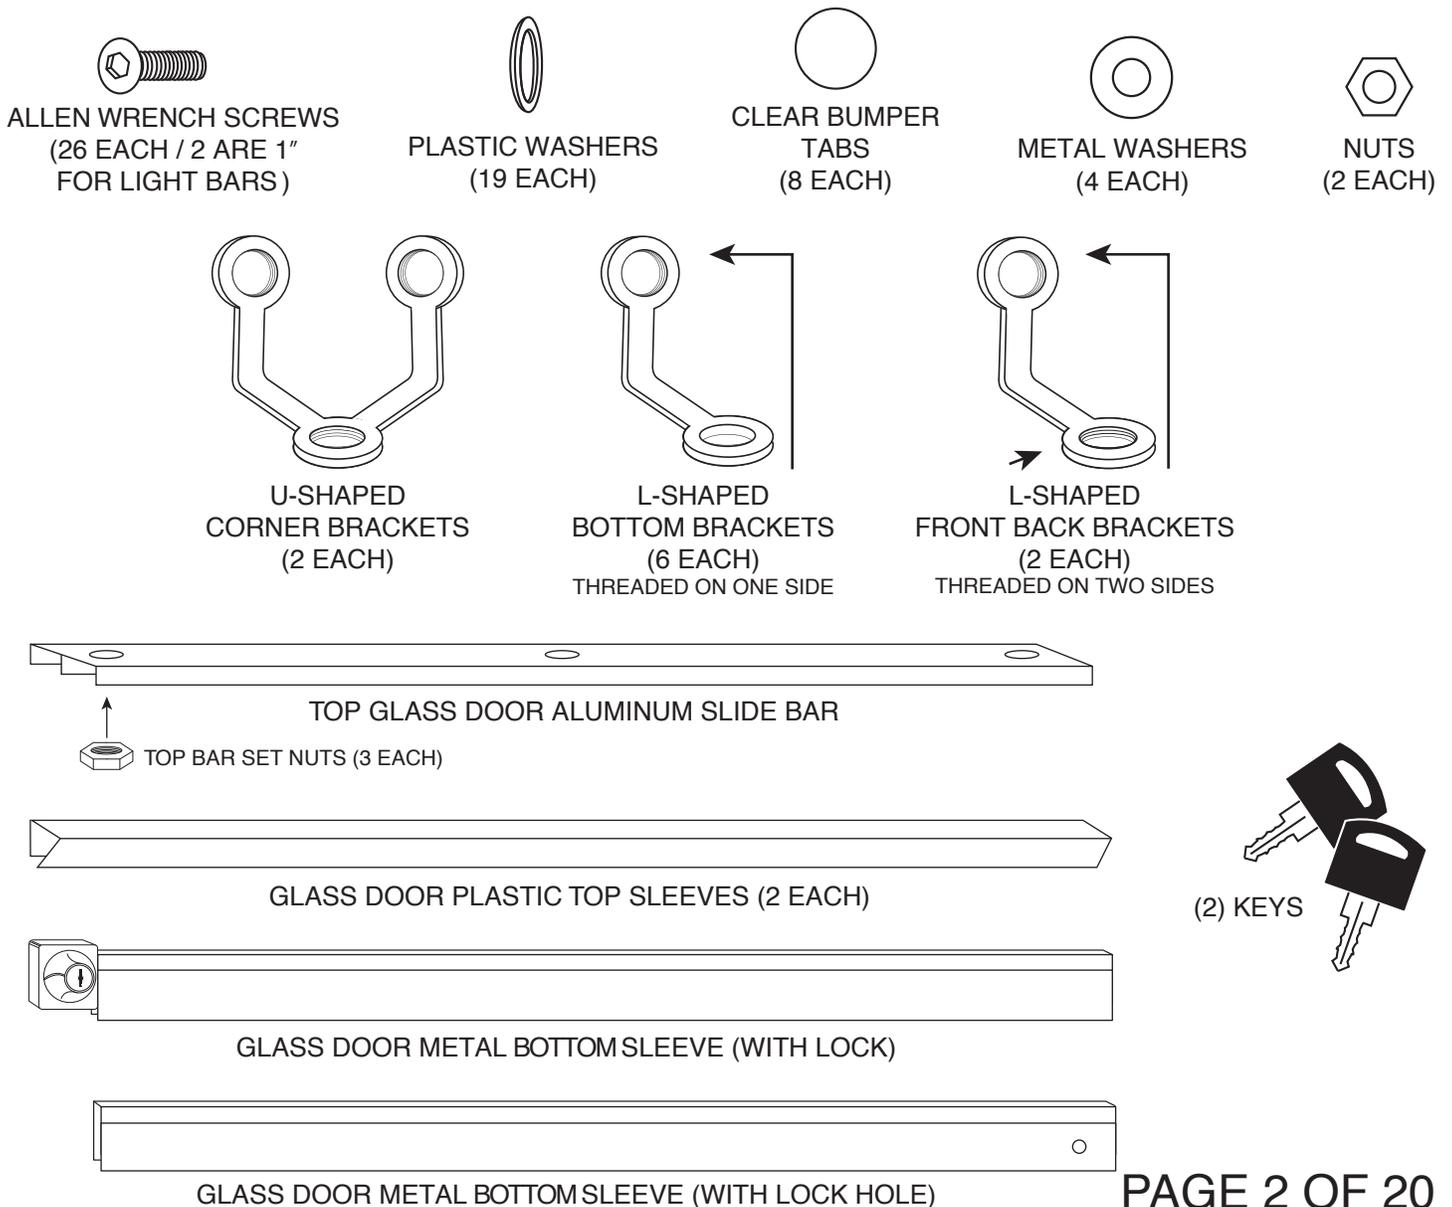






# ASSEMBLY INSTRUCTIONS MANUAL

#65283/288 (48" W) INFINITY EXTRA VISION SHOWCASE W/LIGHTS

## PARTS IN CARTON:

CAREFULLY REMOVE CABINET PIECES FROM PACKING. CABINET SETUP INCLUDES:

- BACK GLASS / TOP GLASS
- (2) SIDE GLASS (LEFT & RIGHT)
- (2) GLASS DOORS
- (2) GLASS SHELVES
- (2) LIGHT BARS
- LIGHT ADAPTOR & AC ADAPTOR / POWER CHORD
- CABINET BASE WITH ROLLERS (PRE-ASSEMBLED)

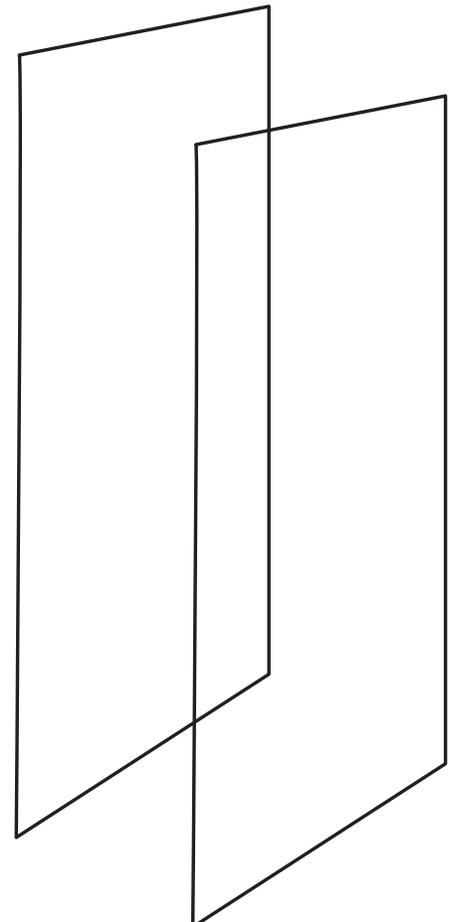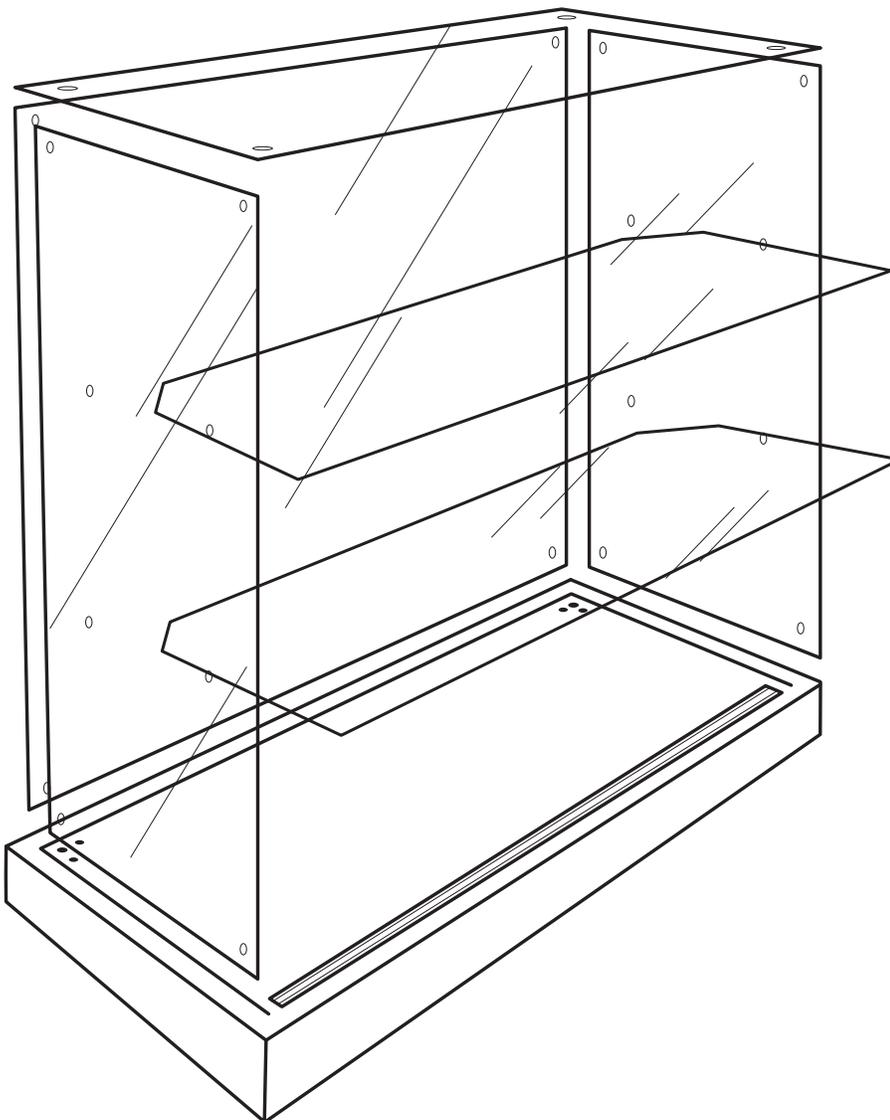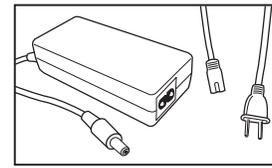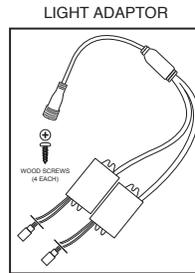


# ASSEMBLY INSTRUCTIONS MANUAL

#65283/288 (48" W) INFINITY EXTRA VISION SHOWCASE W/LIGHTS

**\* IN STEPS 1 THROUGH 8 OF THE ASSEMBLY - TWO PEOPLE ARE RECOMMENDED**

**STEP 1.** PLACE BASE ON IT'S SIDE (PREFERABLY LONG/FRONT SIDE FOR STABILITY). INSERT LIGHT BAR THROUGH THROUGH WASHERS, THEN LIGHT BAR HOLES AND SECURE WITH WASHER AND NUT ON BOTTOM SIDE OF BASE WITH BOX WRENCH (PROVIDED).

**\*NOTE - MAKE SURE LIGHT BARS ARE FACING INWARD - TOWARDS MIDDLE OF BASE.**

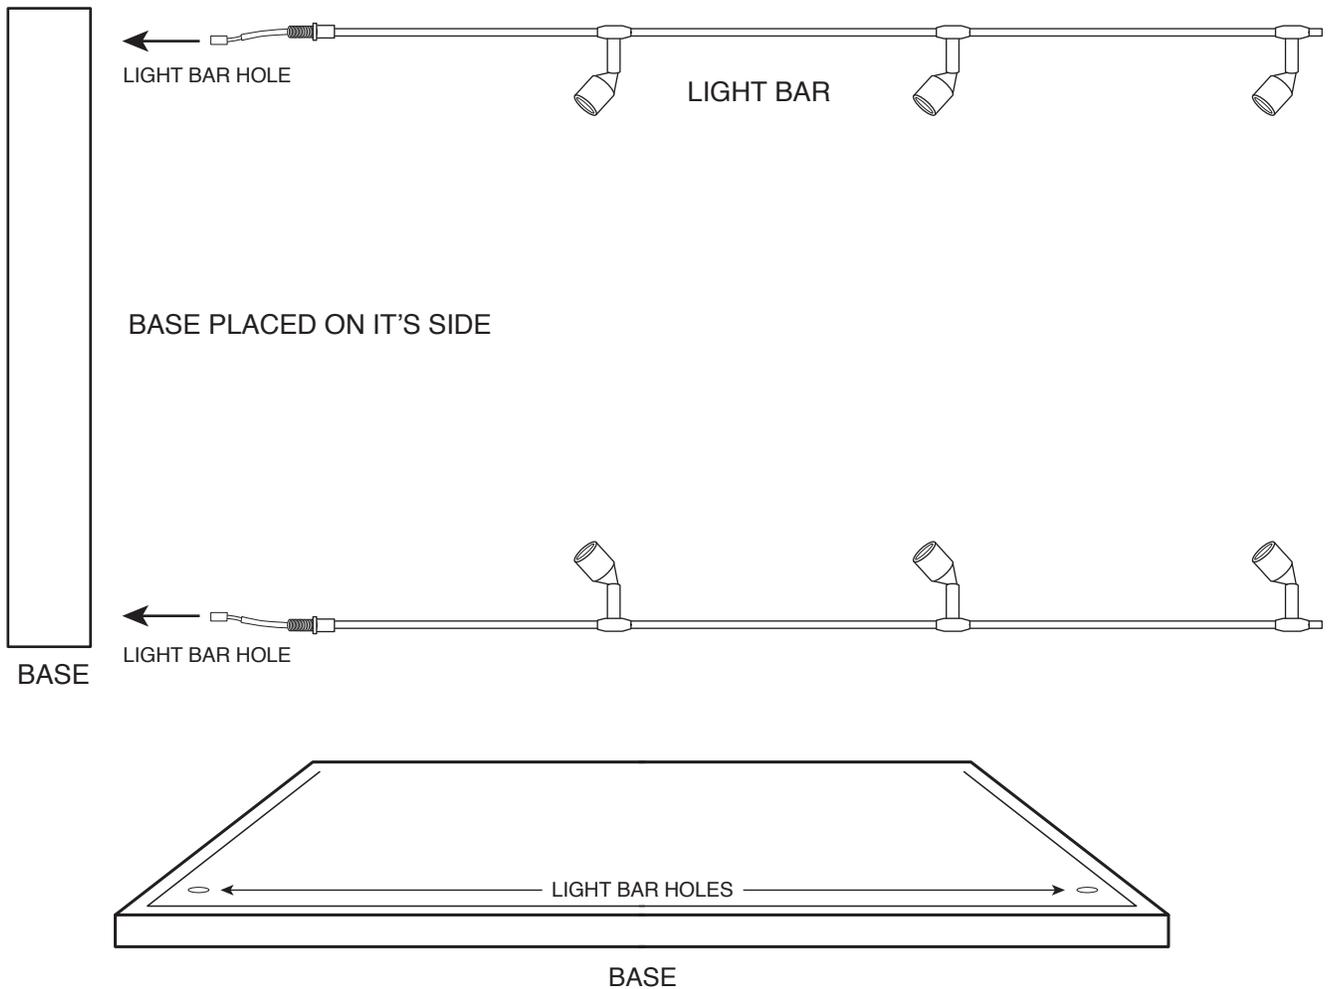


# ASSEMBLY INSTRUCTIONS MANUAL

## #65283/288 (48" W) INFINITY EXTRA VISION SHOWCASE W/LIGHTS

**STEP 2.** WITH BASE ON IT'S SIDE, ATTACH LIGHT ADAPTOR TO BASE WITH WOOD SCREWS USING A SCREWDRIVER. ATTACH LIGHT ADAPTOR END TO LIGHT BARS (2).

**STEP 3.** ATTACH LIGHT ADAPTOR TO AC ADAPTOR/POWER CHORD. WE RECOMMEND THAT YOU ATTACH IT TO THE BASE USING TWO WAY TAPE (NOT PROVIDED). OTHERWISE LET REST ON THE FLOOR.

### UNDERSIDE OF BASE

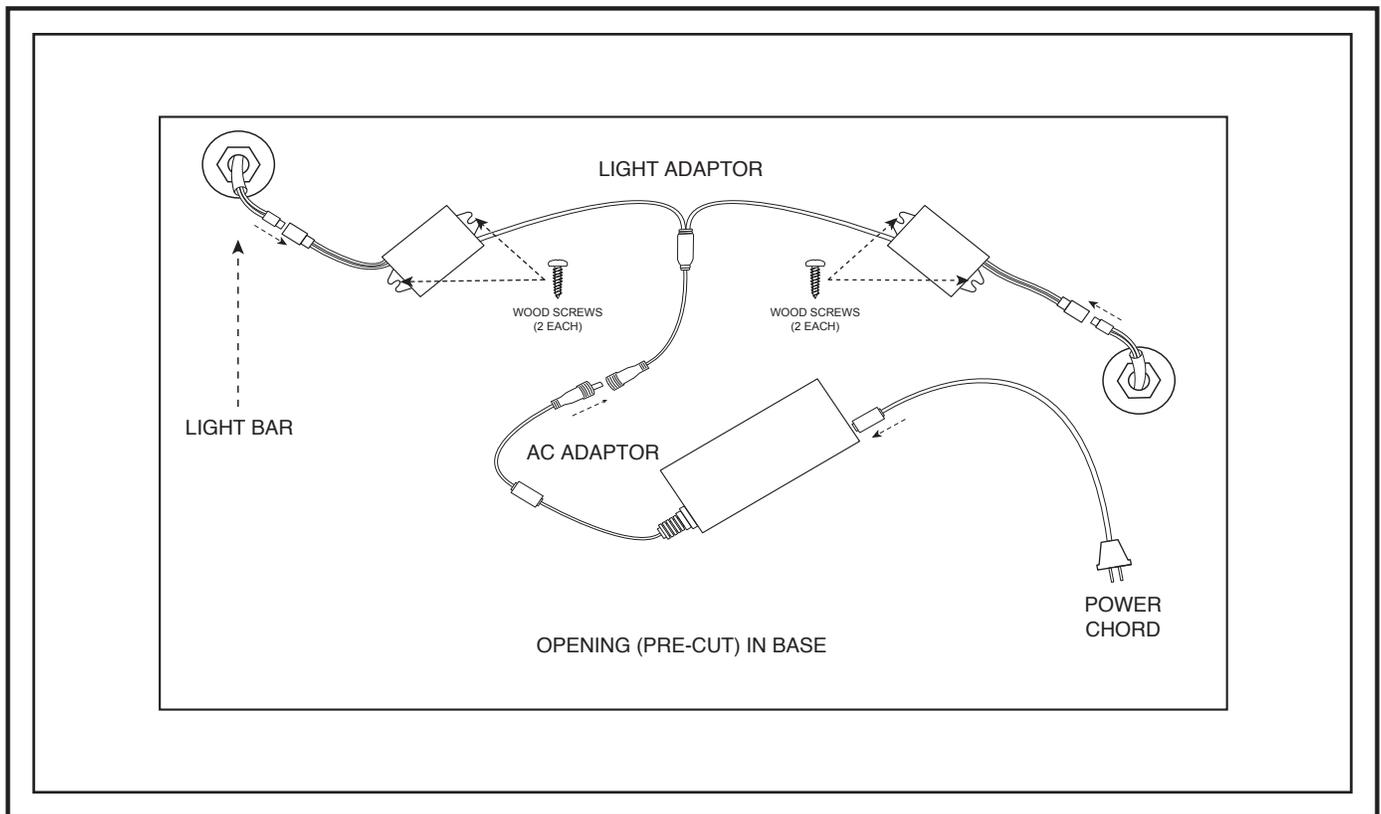


# ASSEMBLY INSTRUCTIONS MANUAL

#65283/288 (48" W) INFINITY EXTRA VISION SHOWCASE W/LIGHTS

## IMPORTANT

BOTTOM OF FRONT BACK AND SIDE GLASS HAS A SLIGHTLY DIFFERENT HOLE PLACEMENT THAN THE TOP OF EACH PIECE OF GLASS

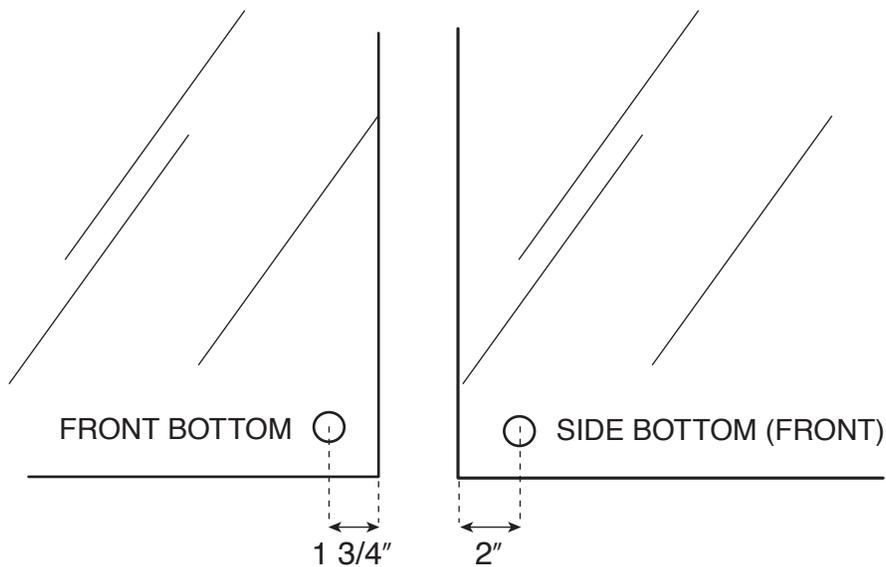

MEASURE THE GLASS SPACE BETWEEN EDGE OF GLASS AND CENTER OF HOLE.  
HOLE FURTHEST FROM EDGE GOES ON BOTTOM.

***GLASS CAN ONLY BE ASSEMBLED ONE WAY!***

# ASSEMBLY INSTRUCTIONS MANUAL


## #65283/288 (48" W) INFINITY EXTRA VISION SHOWCASE W/LIGHTS

**STEP 4.** PLACE FRONT GLASS PANEL INTO FRONT GROOVE OF CABINET BASE. MAKE SURE GLASS PRECISELY FITS FRONT BASE GROOVE IN ORDER TO ACCOMODATE THE SIDE PANELS NEXT. MAKE CERTAIN ON BOTH FRONT AND SIDE PANELS THAT YOU RECOGNIZE THE BOTTOM OF EACH PANEL CORRECTLY. (SEE PAGE 7)

**STEP 5.** PLACE LEFT SIDE GLASS INTO BASE GROOVE WHILE HOLDING FRONT GLASS TO LINE UP FIRST GLASS BRACKET. ATTACH U-BRACKET WITH ALLEN WRENCH SCREWS AND WASHERS.

**STEP 6.** REPEAT STEP 5 FOR RIGHT SIDE GLASS.

HAND SCREW IN ALL CORNER HARDWARE. DO NOT TIGHTEN WITH ALLEN WRENCH YET. THIS ALLOWS FLEXIBILITY UNTIL ASSEMBLY IS NEARLY COMPLETE.


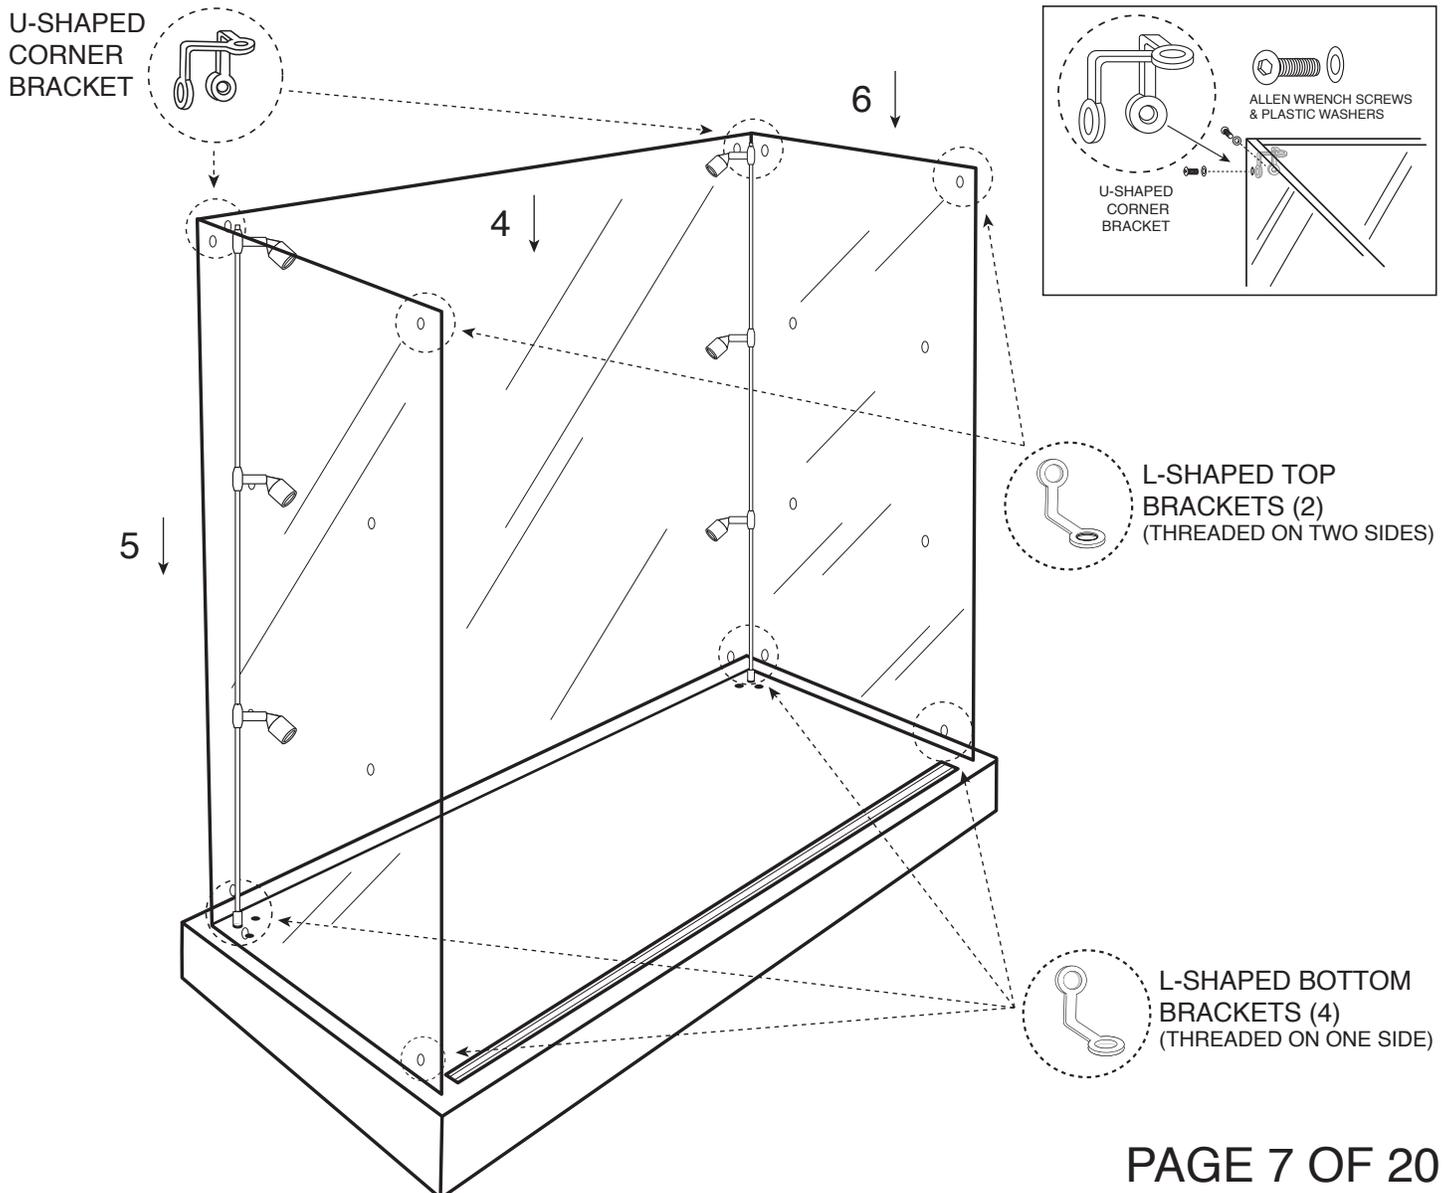


# ASSEMBLY INSTRUCTIONS MANUAL

#65283/288 (48" W) INFINITY EXTRA VISION SHOWCASE W/LIGHTS

**STEP 7. SCREW FLAT HEAD BOLTS INTO CHROME CYLINDERS - PLACE RUBBER GROMMETS INTO HOLES (THIS SUPPORTS GLASS SHELF). (8) CYLINDERS ALL TOGETHER (4 FOR EACH SHELF).**

**\*NOTE - MAKE SURE RUBBER GROMMETS ARE FACING UP TO SUPPORT GLASS SHELVES.**

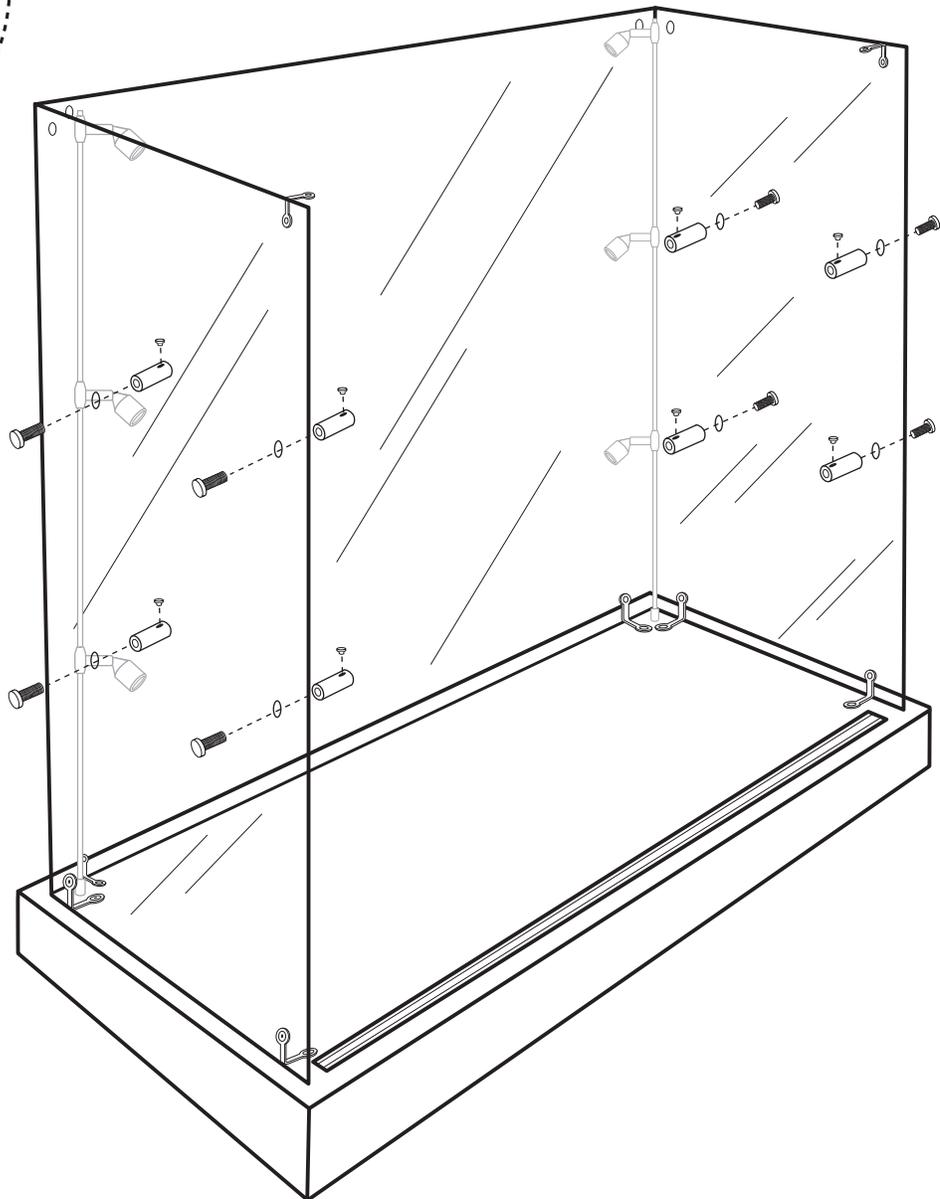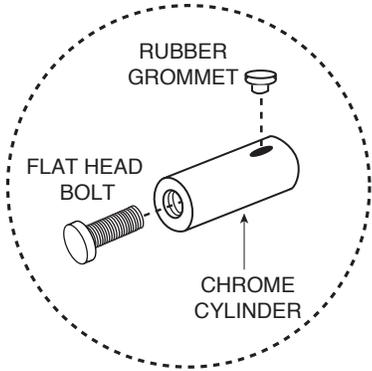


# ASSEMBLY INSTRUCTIONS MANUAL

#65283/288 (48" W) INFINITY EXTRA VISION SHOWCASE W/LIGHTS

## TWO PERSON ASSEMBLY


**STEP 8.** CAREFULLY SLIDE TOP GLASS ONTO CABINET MAKING SURE YOU HAVE AN OVERLAP ON BOTH SIDES.

**STEP 9.** SCREW ALLEN SCREWS INTO BOTH U-BRACKETS AND L-BRACKETS ON TOP. (TIGHTEN ALL SCREWS BEFORE ASSEMBLING SHELVES. DO NOT OVER TIGHTEN)

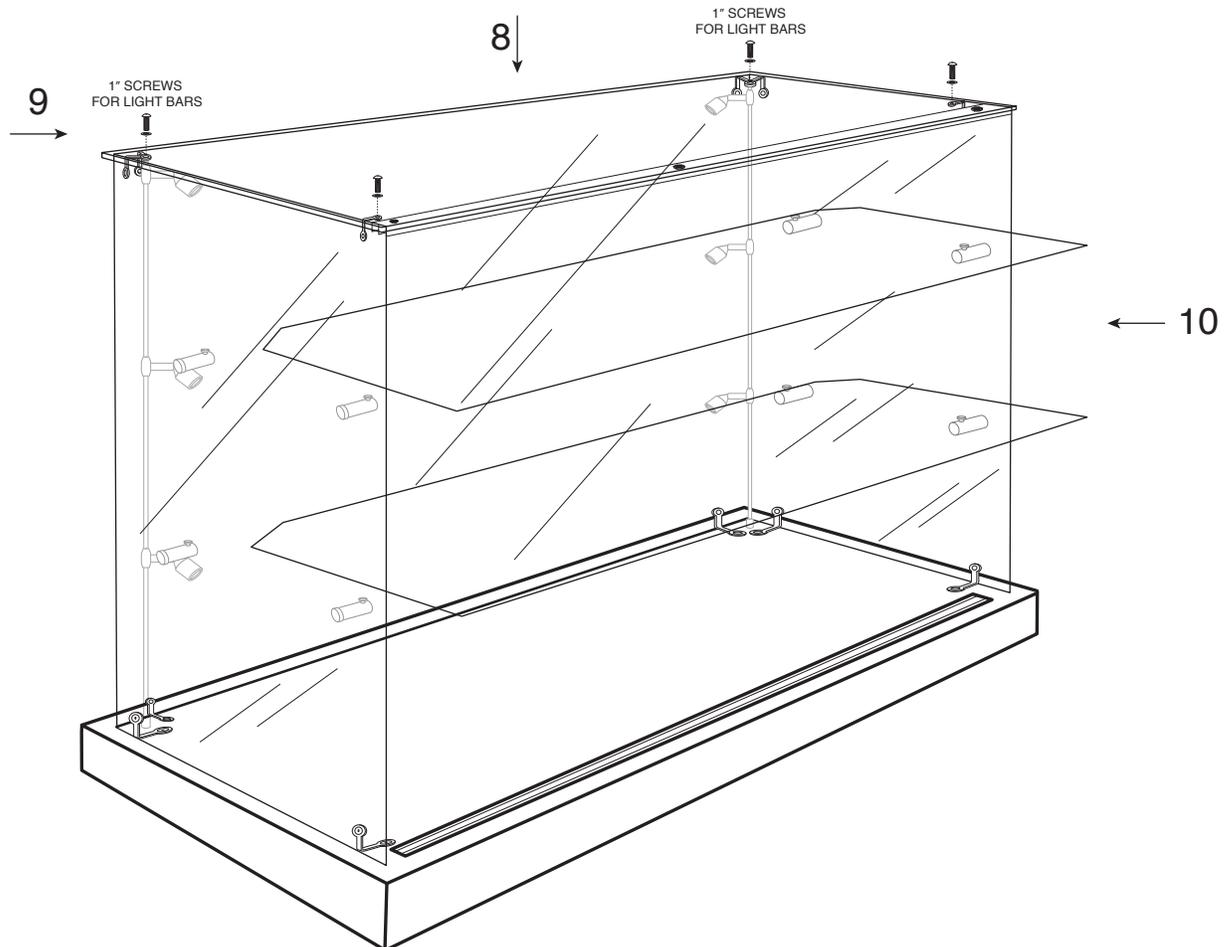

**STEP 10.** PLACE GLASS SHELVES INTO CABINET.

**STEP 11.** PLACE TOP GLASS DOOR ALUMINUM SLIDE GUIDE UNDER TOP GLASS. BEGIN WITH CENTER SCREW FIRST AND THEN EACH END.

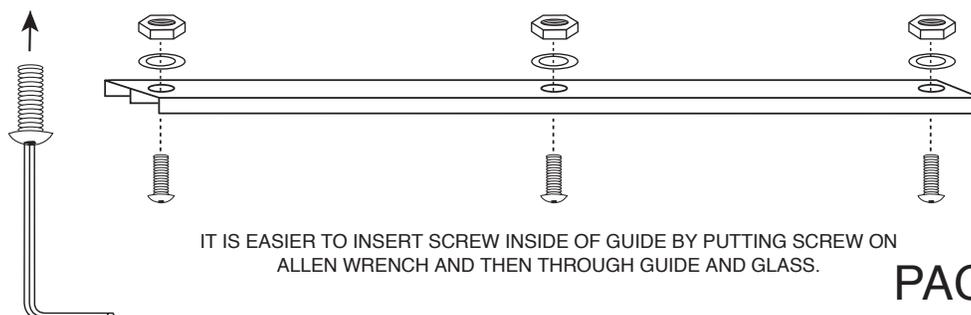


IT IS EASIER TO INSERT SCREW INSIDE OF GUIDE BY PUTTING SCREW ON ALLEN WRENCH AND THEN THROUGH GUIDE AND GLASS.

# ASSEMBLY INSTRUCTIONS MANUAL


## #65283/288 (48" W) INFINITY EXTRA VISION SHOWCASE W/LIGHTS

**STEP 12.** INSTALLING SLIDING GLASS DOORS. PLACE CLEAR PLASTIC SLEEVES ON TOP OF GLASS DOORS. TAP ON SLEEVES WITH RUBBER Mallet.

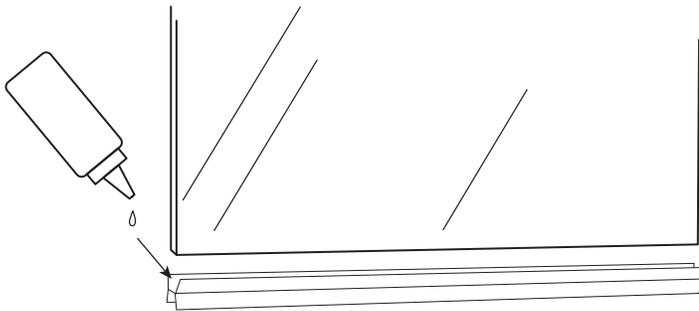


RUN BEAD OF ANY TYPE OF GLUE ON INSIDE (BOTTOM) OF TOP PLASTIC SLEEVE. THEN TAP SLEEVES ON TOP OF THE GLASS WITH A RUBBER Mallet.

*THIS PREVENTS THE SLEEVES FROM MOVING ONCE ASSEMBLY IS COMPLETE AND DOORS ARE MOVED.*

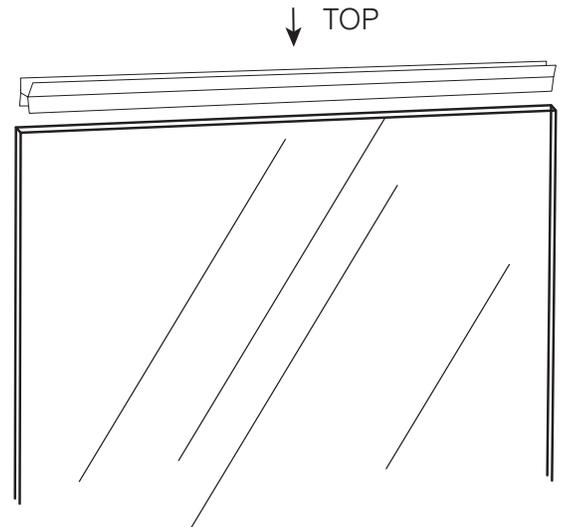


PLACE METAL SLEEVES (WITH LOCK TO THE LEFT) ON BOTTOM OF GLASS DOORS. TAP ON SLEEVES WITH RUBBER Mallet.

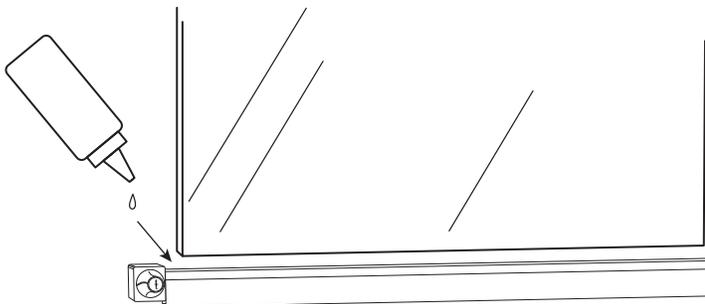

RUN BEAD OF ANY TYPE OF GLUE ON INSIDE (TOP) OF BOTTOM METAL SLEEVE. THEN TAP SLEEVES ON BOTTOM OF THE GLASS WITH A RUBBER Mallet.

*THIS PREVENTS THE SLEEVES FROM MOVING ONCE ASSEMBLY IS COMPLETE AND DOORS ARE MOVED.*

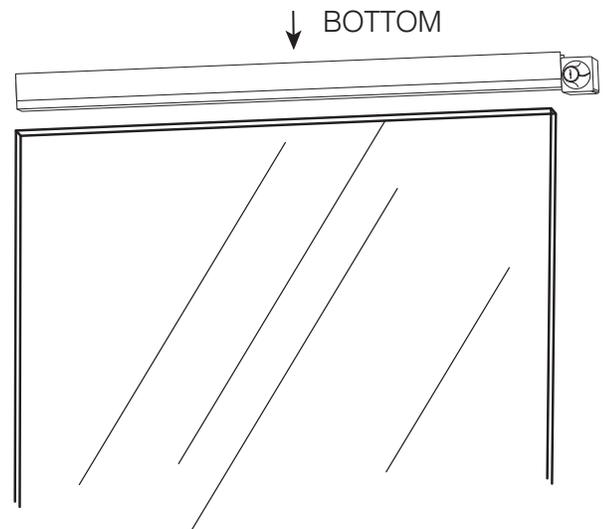


# ASSEMBLY INSTRUCTIONS MANUAL

#65283/288 (48" W) INFINITY EXTRA VISION SHOWCASE W/LIGHTS

**STEP 13.** INSERT LEFT DOOR (WITHOUT LOCK - MAKE SURE HOLE IN BOTTOM METAL SLEEVE IS FACING YOU / ON THE RIGHT) INTO TOP OF BACK TRACK, THEN LOWER INTO BOTTOM BACK TRACK AND SLIDE TO THE LEFT.


INSERT RIGHT DOOR (INSTALLED LOCK ASSEMBLY ON THE LEFT) INTO TOP OF FRONT TRACK, THEN LOWER INTO BOTTOM FRONT TRACK AND SLIDE TO THE RIGHT.

THIS COMPLETES THE ASSEMBLY.

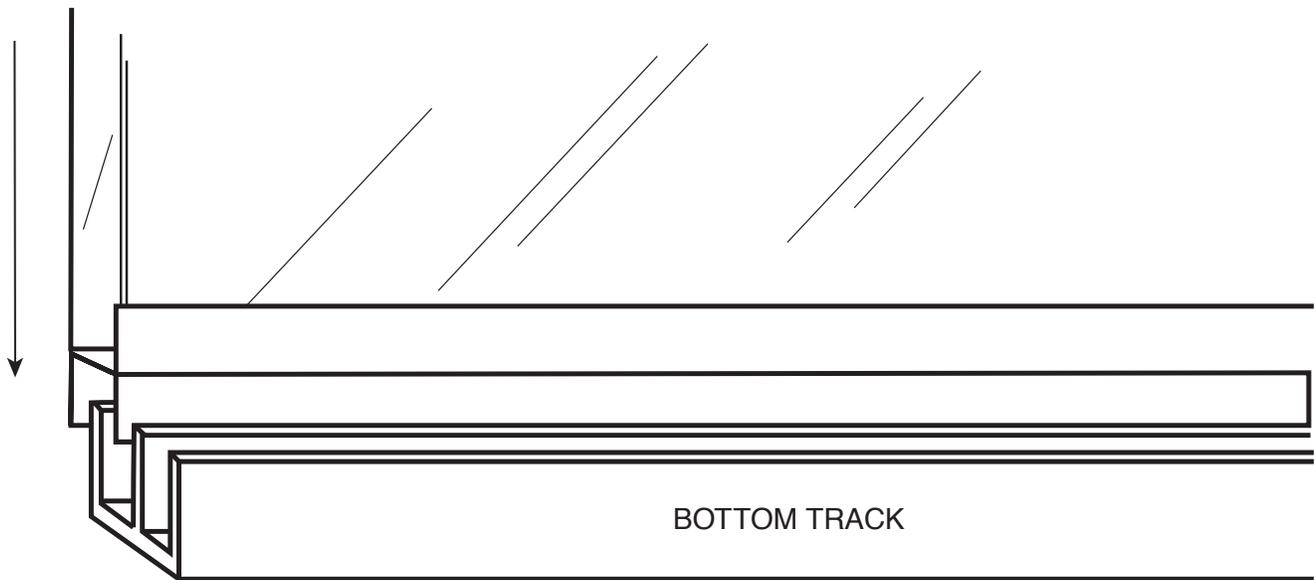

# ASSEMBLY INSTRUCTIONS MANUAL


## #65283 (48" W) INFINITY EXTRA VISION SHOWCASE

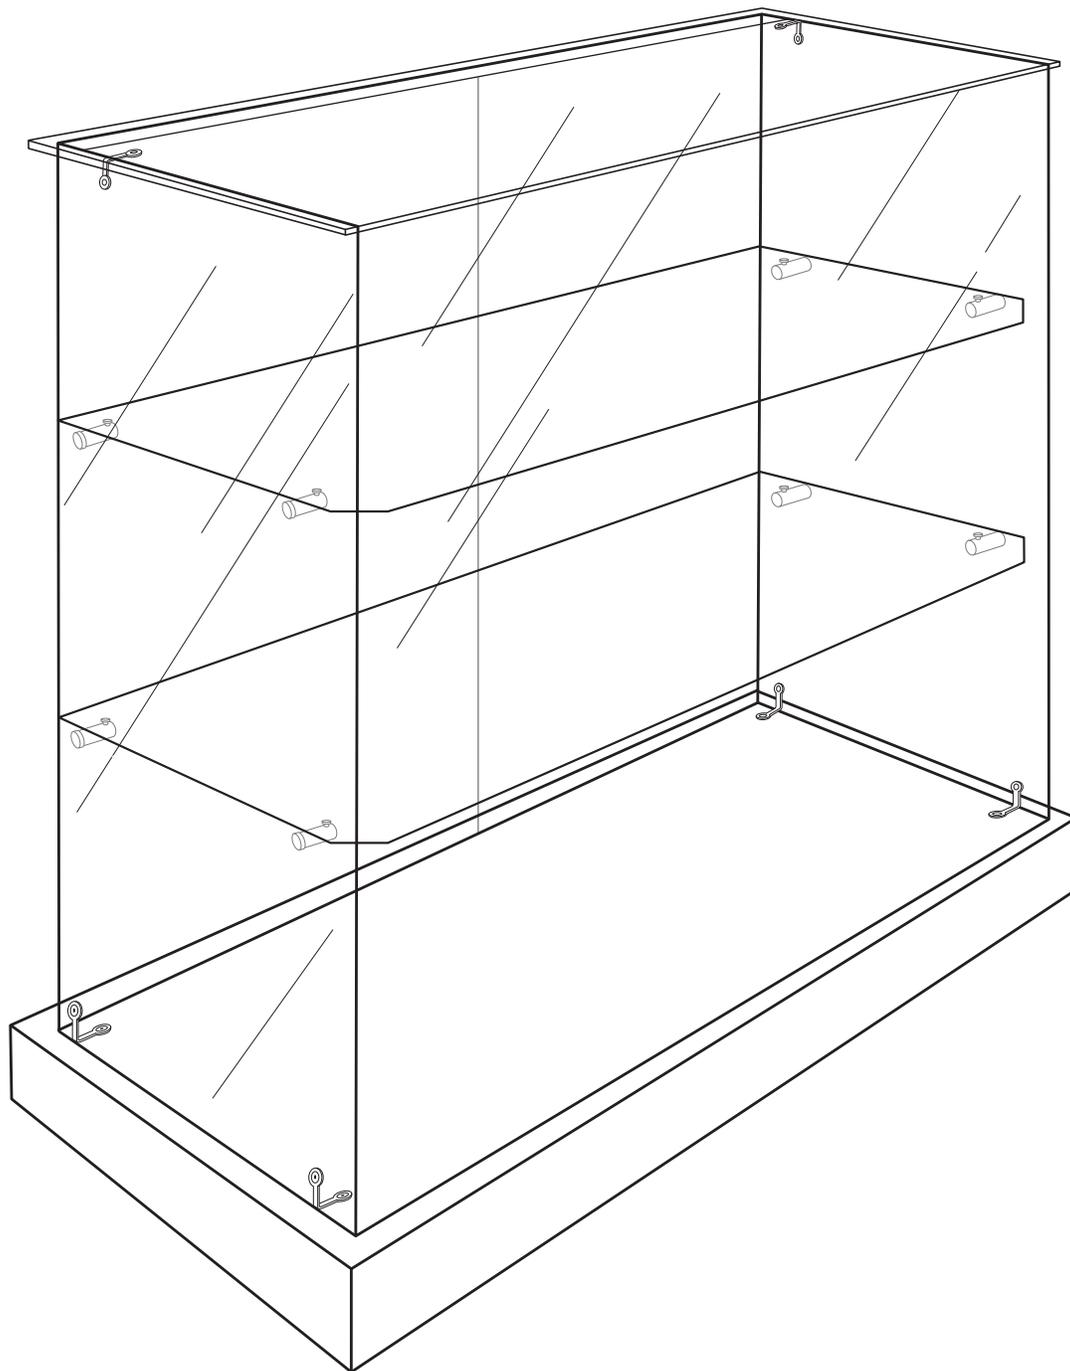


# ASSEMBLY INSTRUCTIONS MANUAL

## #65283 (48" W) INFINITY EXTRA VISION SHOWCASE

### RECOMMENDED TOOLS FOR ASSEMBLY:

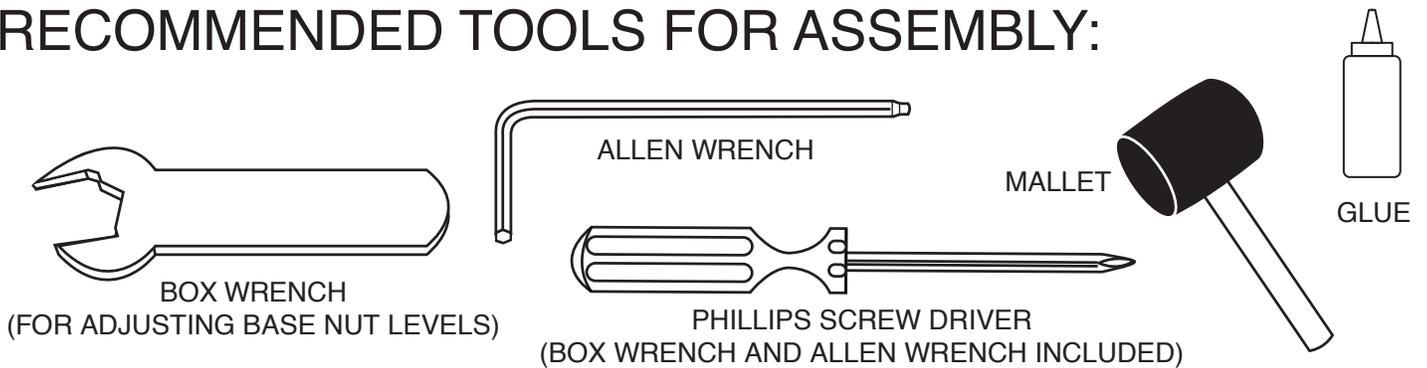

### PARTS IN CARTON:

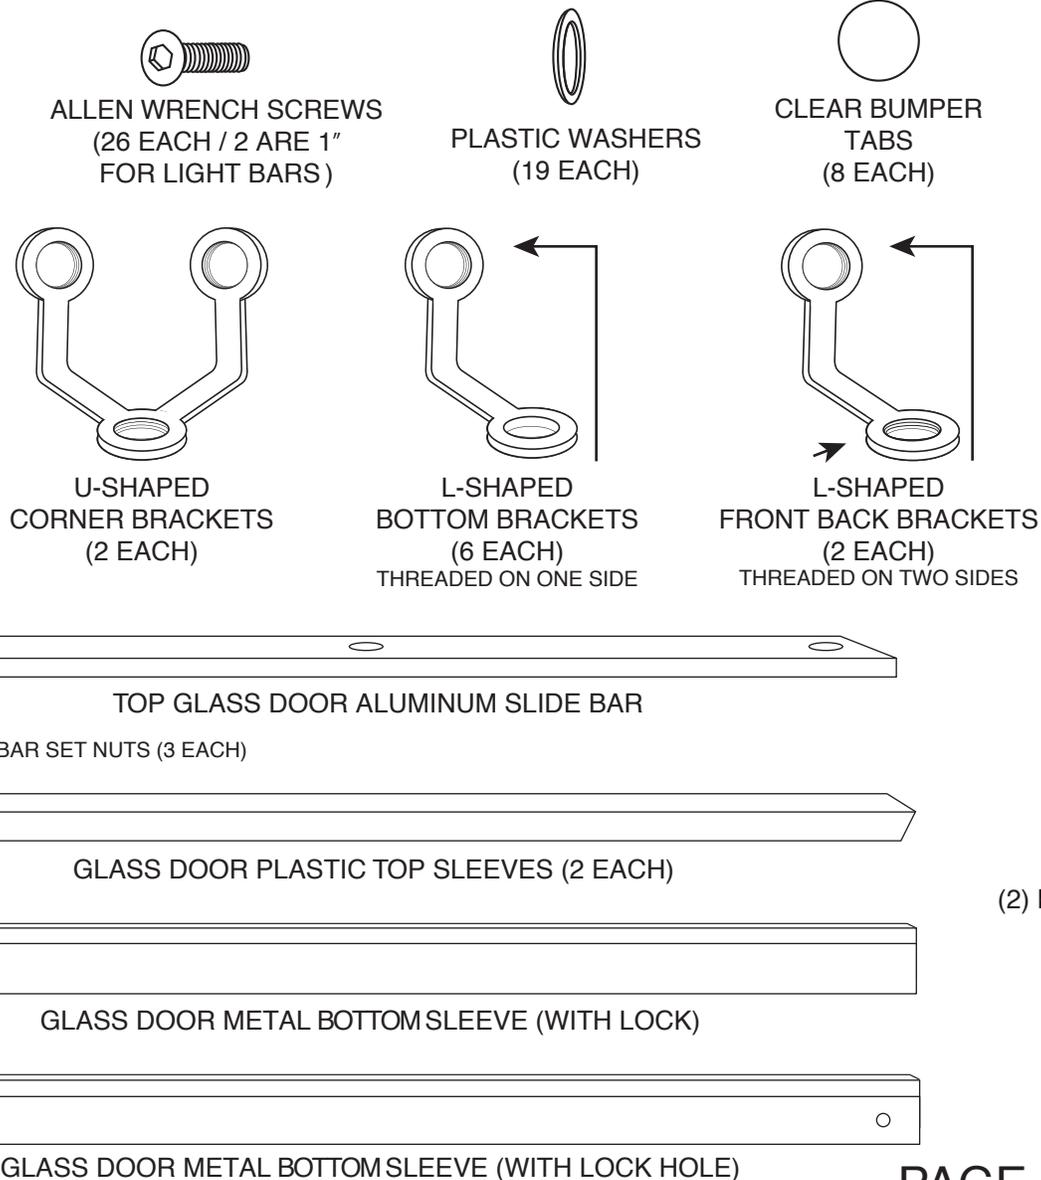


# ASSEMBLY INSTRUCTIONS MANUAL

#65283 (48" W) INFINITY EXTRA VISION SHOWCASE

## PARTS IN CARTON:

CAREFULLY REMOVE CABINET PIECES FROM PACKING. CABINET SETUP INCLUDES:

- BACK GLASS / TOP GLASS
- (2) SIDE GLASS (LEFT & RIGHT)
- (2) GLASS DOORS
- (2) GLASS SHELVES
- CABINET BASE WITH ROLLERS (PRE-ASSEMBLED)

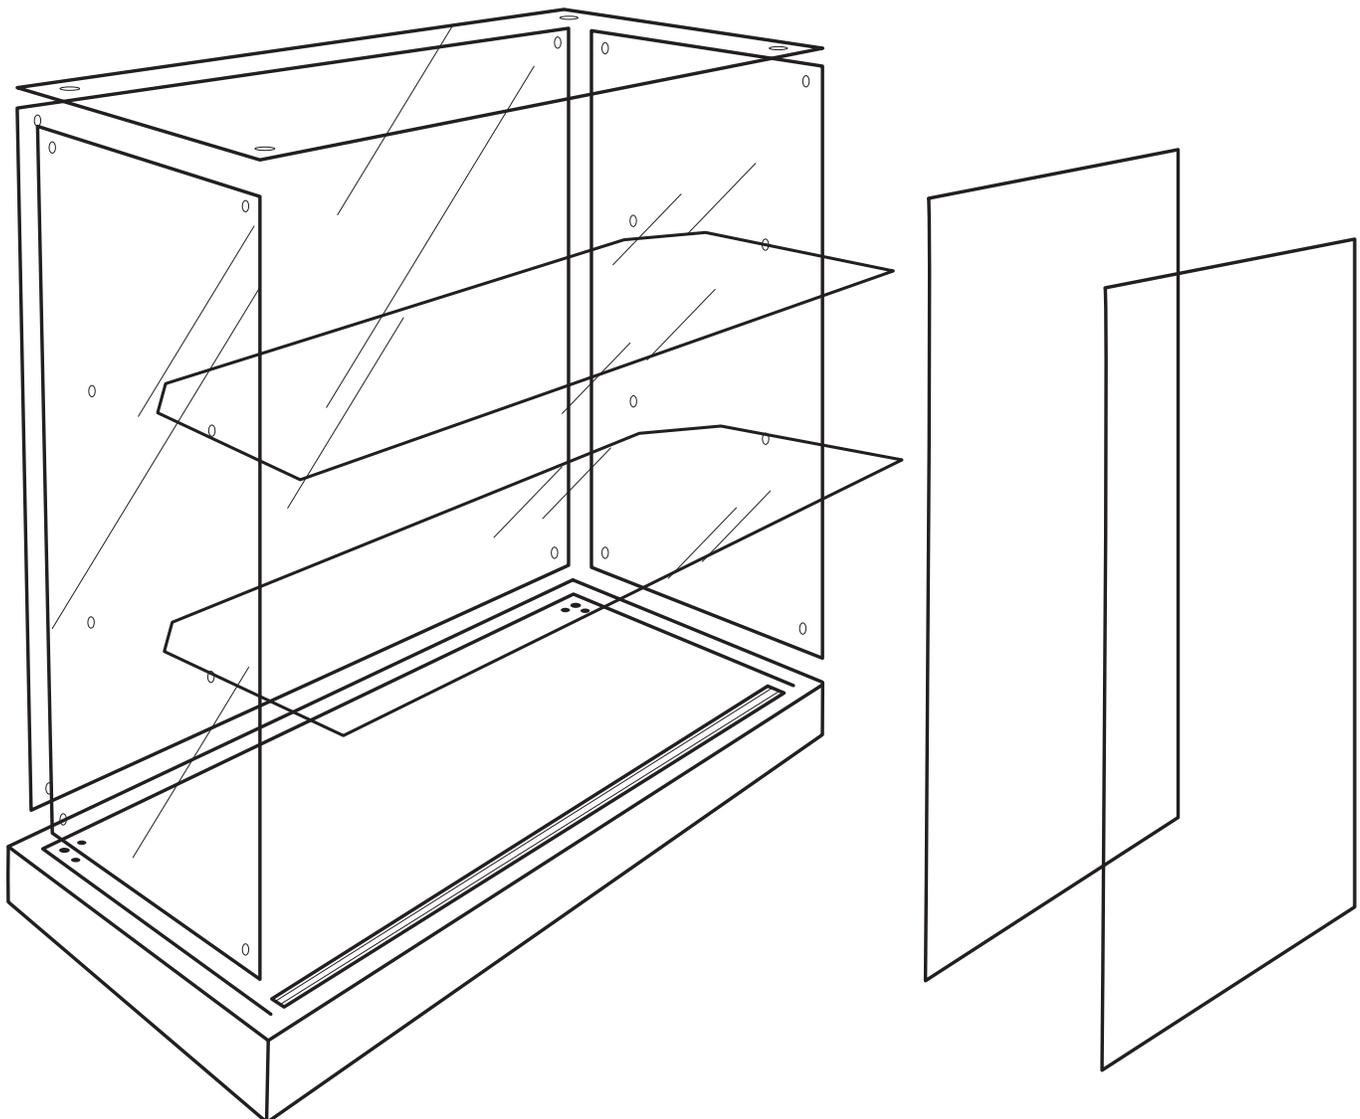


# ASSEMBLY INSTRUCTIONS MANUAL

#65283 (48" W) INFINITY EXTRA VISION SHOWCASE

## IMPORTANT

BOTTOM OF FRONT BACK AND SIDE GLASS HAS A SLIGHTLY DIFFERENT HOLE PLACEMENT THAN THE TOP OF EACH PIECE OF GLASS

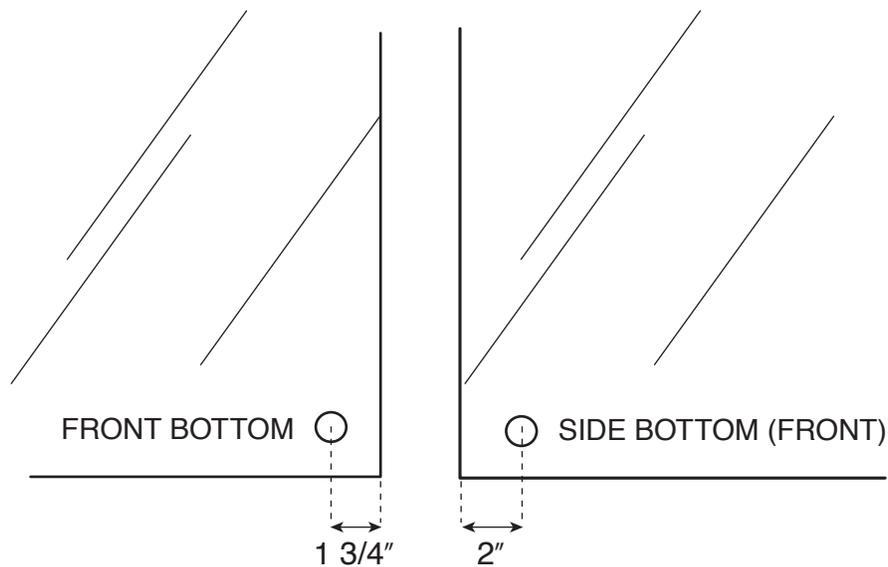

MEASURE THE GLASS SPACE BETWEEN EDGE OF GLASS AND CENTER OF HOLE.  
HOLE FURTHEST FROM EDGE GOES ON BOTTOM.

***GLASS CAN ONLY BE ASSEMBLED ONE WAY!***

# ASSEMBLY INSTRUCTIONS MANUAL

## #65283 (48" W) INFINITY EXTRA VISION SHOWCASE


**\* IN STEPS 1 THROUGH 8 OF THE ASSEMBLY - TWO PEOPLE ARE RECOMMENDED**

**STEP 1.** PLACE FRONT GLASS PANEL INTO FRONT GROOVE OF CABINET BASE. MAKE SURE GLASS PRECISELY FITS FRONT BASE GROOVE IN ORDER TO ACCOMODATE THE SIDE PANELS NEXT. MAKE CERTAIN ON BOTH FRONT AND SIDE PANELS THAT YOU RECOGNIZE THE BOTTOM OF EACH PANEL CORRECTLY. (SEE PAGE 7)

**STEP 1.** PLACE LEFT SIDE GLASS INTO BASE GROOVE WHILE HOLDING FRONT GLASS TO LINE UP FIRST GLASS BRACKET. ATTACH U-BRACKET WITH ALLEN WRENCH SCREWS AND WASHERS.

**STEP 3.** REPEAT STEP 5 FOR RIGHT SIDE GLASS.

HAND SCREW IN ALL CORNER HARDWARE. DO NOT TIGHTEN WITH ALLEN WRENCH YET. THIS ALLOWS FLEXIBILITY UNTIL ASSEMBLY IS NEARLY COMPLETE.


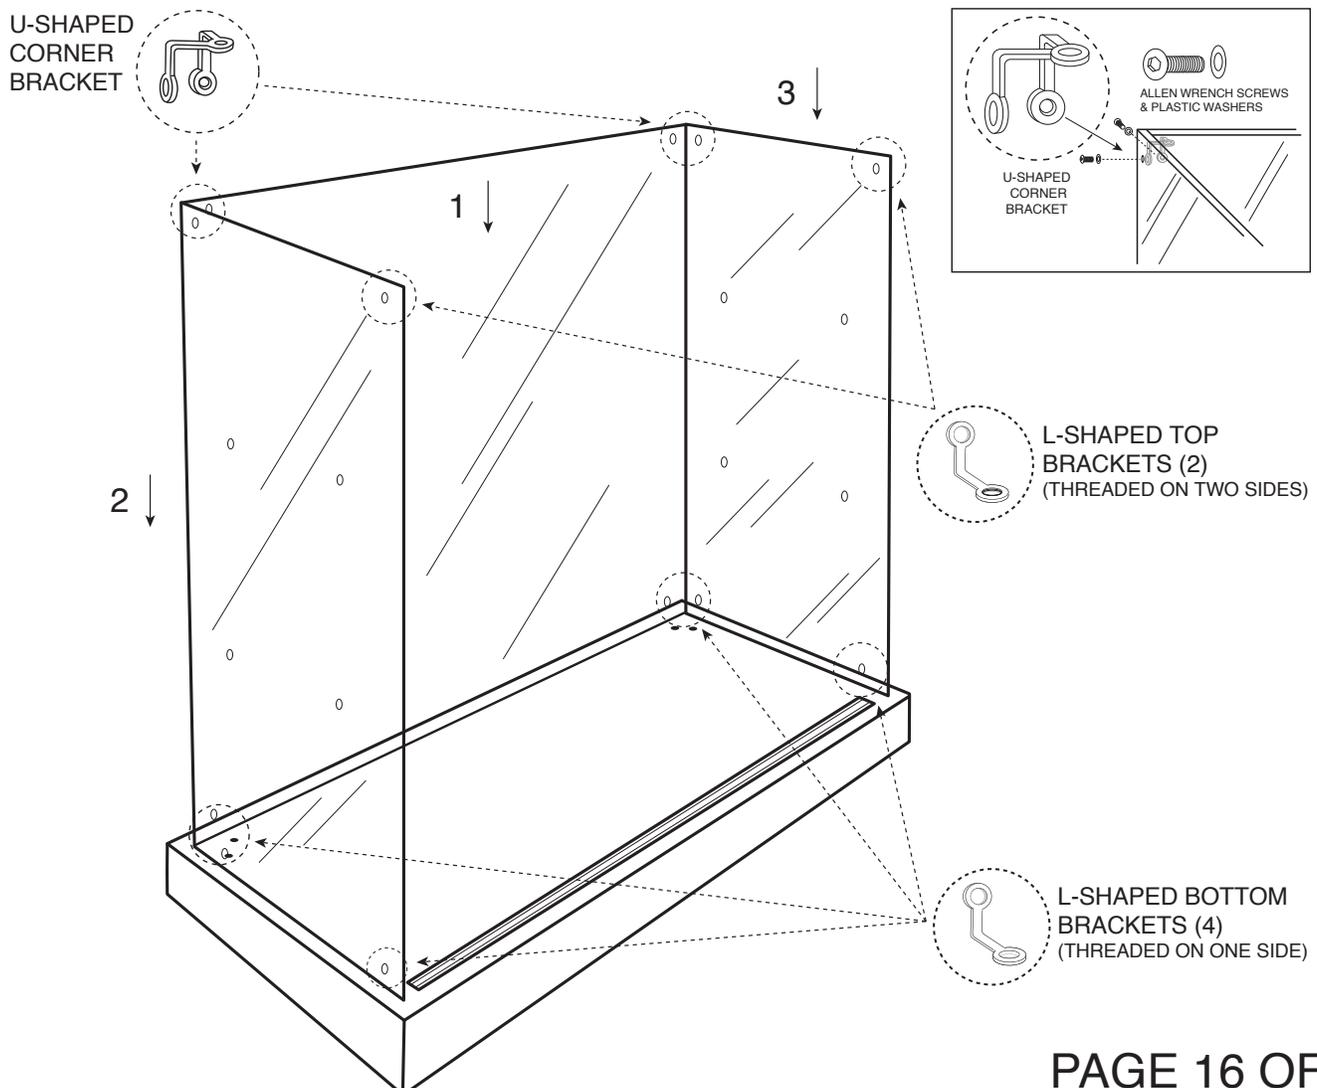


# ASSEMBLY INSTRUCTIONS MANUAL

## #65283 (48" W) INFINITY EXTRA VISION SHOWCASE

**STEP 4.** SCREW FLAT HEAD BOLTS INTO CHROME CYLINDERS - PLACE RUBBER GROMMETS INTO HOLES (THIS SUPPORTS GLASS SHELF). (8) CYLINDERS ALL TOGETHER (4 FOR EACH SHELF).

**\*NOTE - MAKE SURE RUBBER GROMMETS ARE FACING UP TO SUPPORT GLASS SHELVES.**

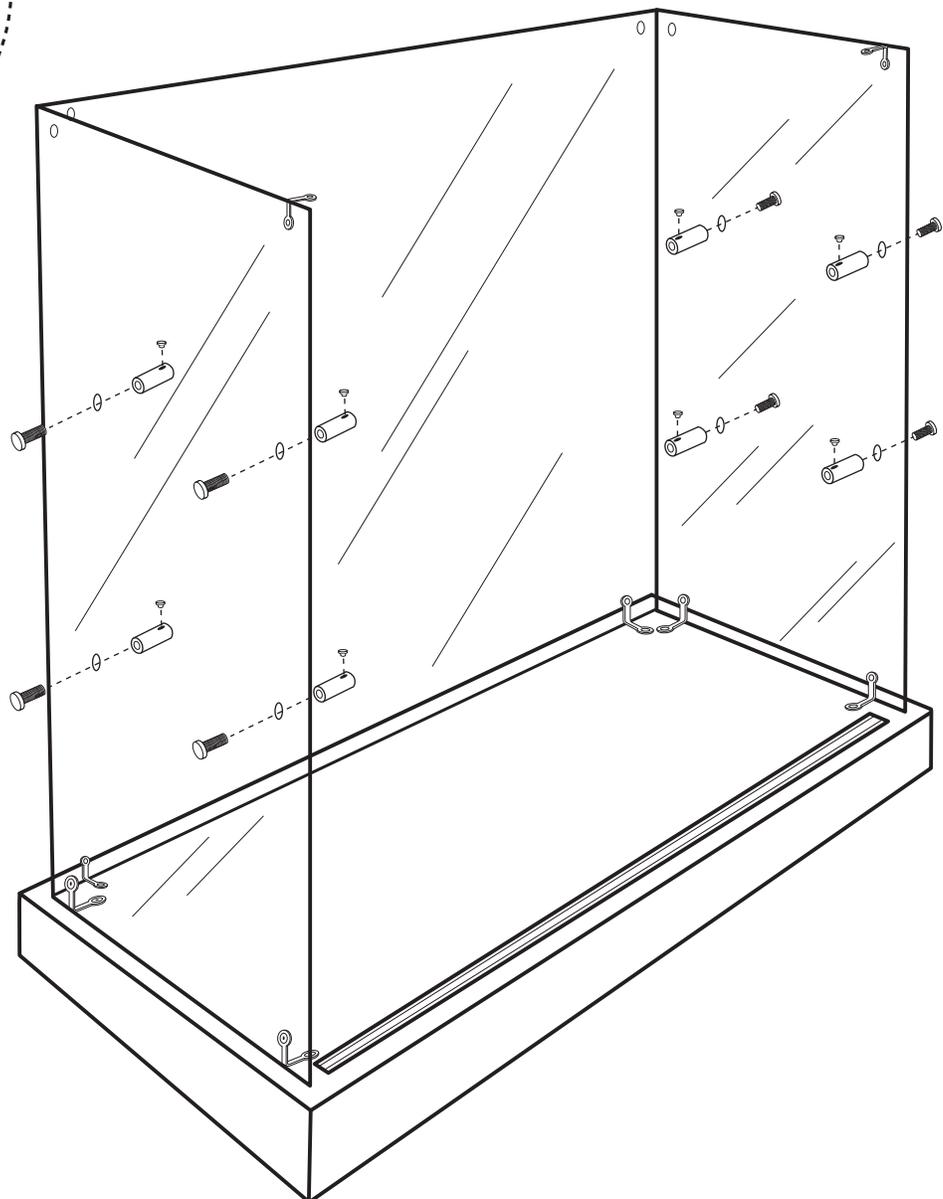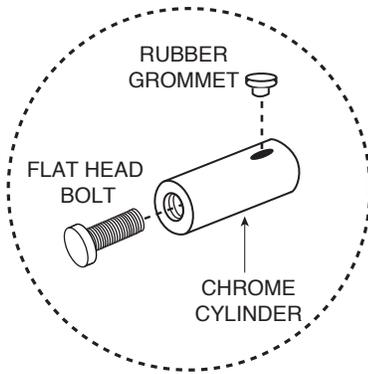


# ASSEMBLY INSTRUCTIONS MANUAL

## #65283 (48" W) INFINITY EXTRA VISION SHOWCASE

### TWO PERSON ASSEMBLY


**STEP 5.** CAREFULLY SLIDE TOP GLASS ONTO CABINET MAKING SURE YOU HAVE AN OVERLAP ON BOTH SIDES.

**STEP 6.** SCREW ALLEN SCREWS INTO BOTH U-BRACKETS AND L-BRACKETS ON TOP. (TIGHTEN ALL SCREWS BEFORE ASSEMBLING SHELVES. DO NOT OVER TIGHTEN)

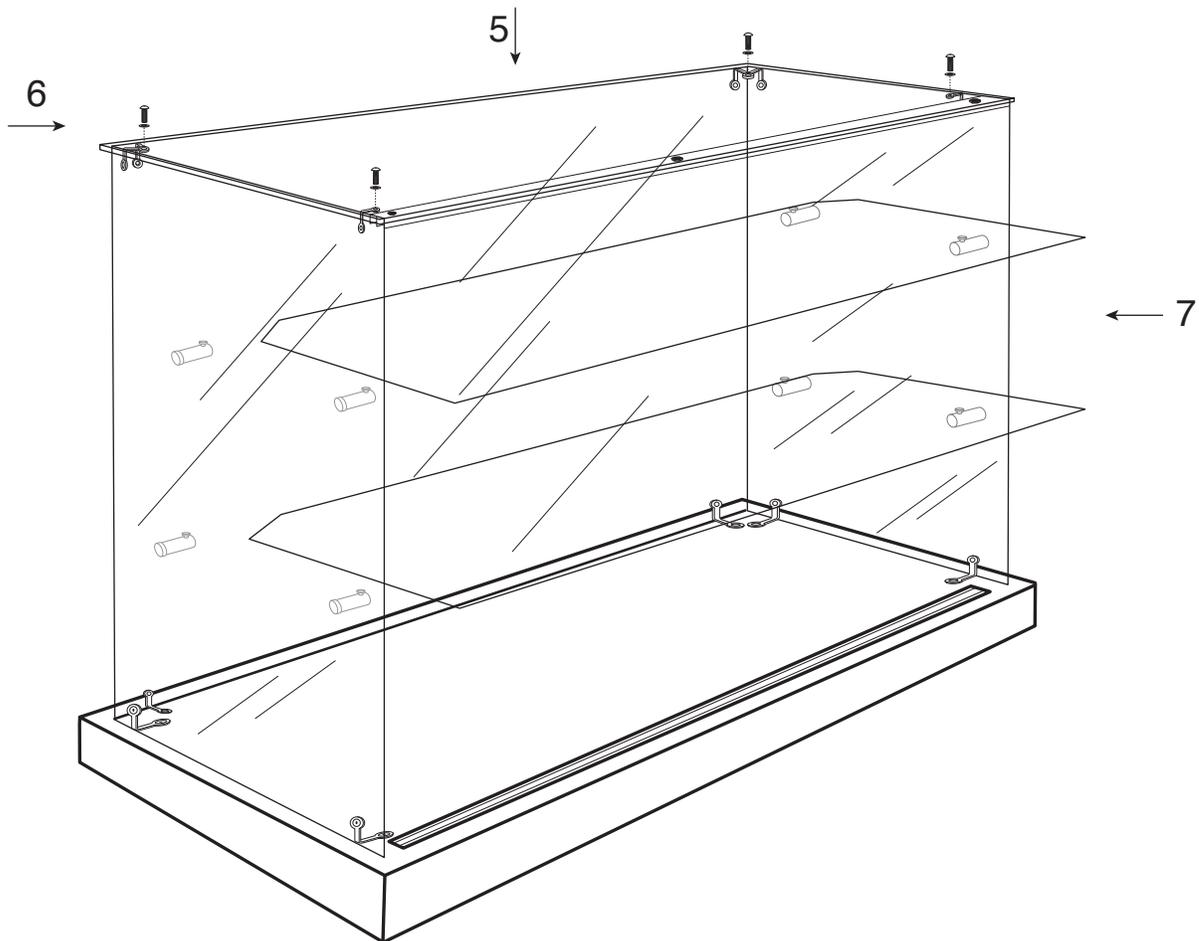

**STEP 7.** PLACE GLASS SHELVES INTO CABINET.

**STEP 8.** PLACE TOP GLASS DOOR ALUMINUM SLIDE GUIDE UNDER TOP GLASS. BEGIN WITH CENTER SCREW FIRST AND THEN EACH END.

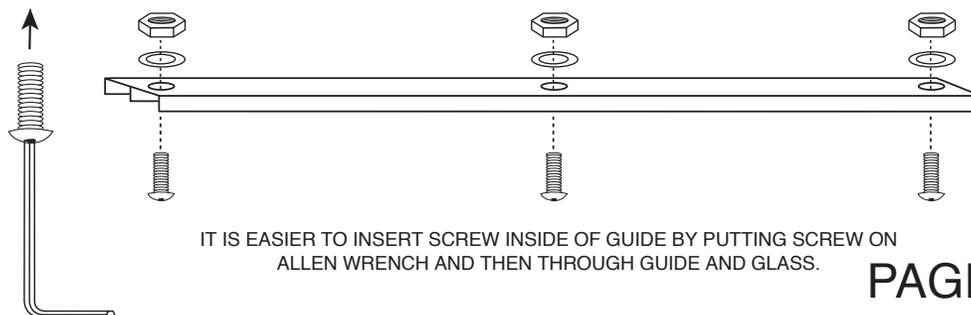


IT IS EASIER TO INSERT SCREW INSIDE OF GUIDE BY PUTTING SCREW ON ALLEN WRENCH AND THEN THROUGH GUIDE AND GLASS.

# ASSEMBLY INSTRUCTIONS MANUAL


## #65283 (48" W) INFINITY EXTRA VISION SHOWCASE

**STEP 9.** INSTALLING SLIDING GLASS DOORS. PLACE CLEAR PLASTIC SLEEVES ON TOP OF GLASS DOORS. TAP ON SLEEVES WITH RUBBER MALLET.

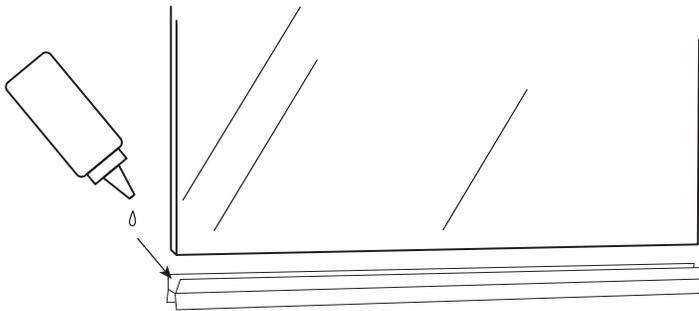


RUN BEAD OF ANY TYPE OF GLUE ON INSIDE (BOTTOM) OF TOP PLASTIC SLEEVE. THEN TAP SLEEVES ON TOP OF THE GLASS WITH A RUBBER MALLET.

*THIS PREVENTS THE SLEEVES FROM MOVING ONCE ASSEMBLY IS COMPLETE AND DOORS ARE MOVED.*

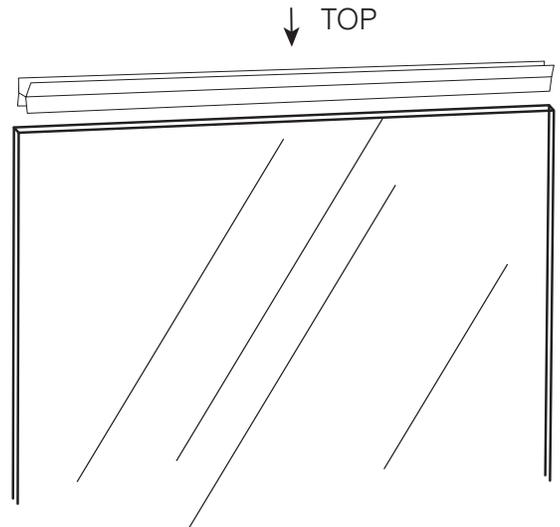


PLACE METAL SLEEVES (WITH LOCK TO THE LEFT) ON BOTTOM OF GLASS DOORS. TAP ON SLEEVES WITH RUBBER MALLET.

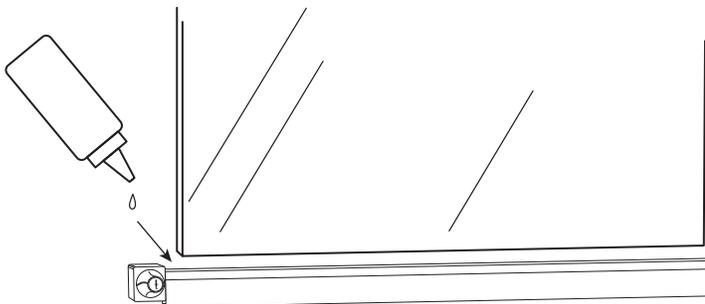

RUN BEAD OF ANY TYPE OF GLUE ON INSIDE (TOP) OF BOTTOM METAL SLEEVE. THEN TAP SLEEVES ON BOTTOM OF THE GLASS WITH A RUBBER MALLET.

*THIS PREVENTS THE SLEEVES FROM MOVING ONCE ASSEMBLY IS COMPLETE AND DOORS ARE MOVED.*

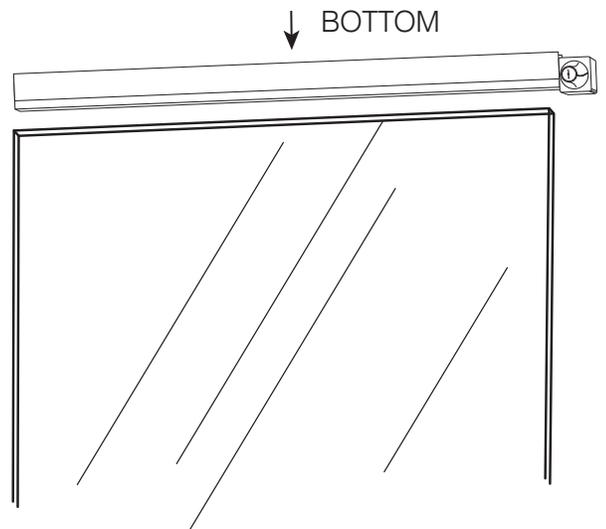

# ASSEMBLY INSTRUCTIONS MANUAL

## #65283 (48" W) INFINITY EXTRA VISION SHOWCASE

**STEP 10.** INSERT LEFT DOOR (WITHOUT LOCK - MAKE SURE HOLE IN BOTTOM METAL SLEEVE IS FACING YOU / ON THE RIGHT) INTO TOP OF BACK TRACK, THEN LOWER INTO BOTTOM BACK TRACK AND SLIDE TO THE LEFT.

INSERT RIGHT DOOR (INSTALLED LOCK ASSEMBLY ON THE LEFT) INTO TOP OF FRONT TRACK, THEN LOWER INTO BOTTOM FRONT TRACK AND SLIDE TO THE RIGHT.

THIS COMPLETES THE ASSEMBLY.

