


ASSEMBLY INSTRUCTIONS MANUAL

#65284 CORNER REAR ACCESS INFINITY SHOWCASE

A. #65287 WITH LIGHTS (P. 1-13)


B. WITHOUT LIGHTS (P. 14-23)

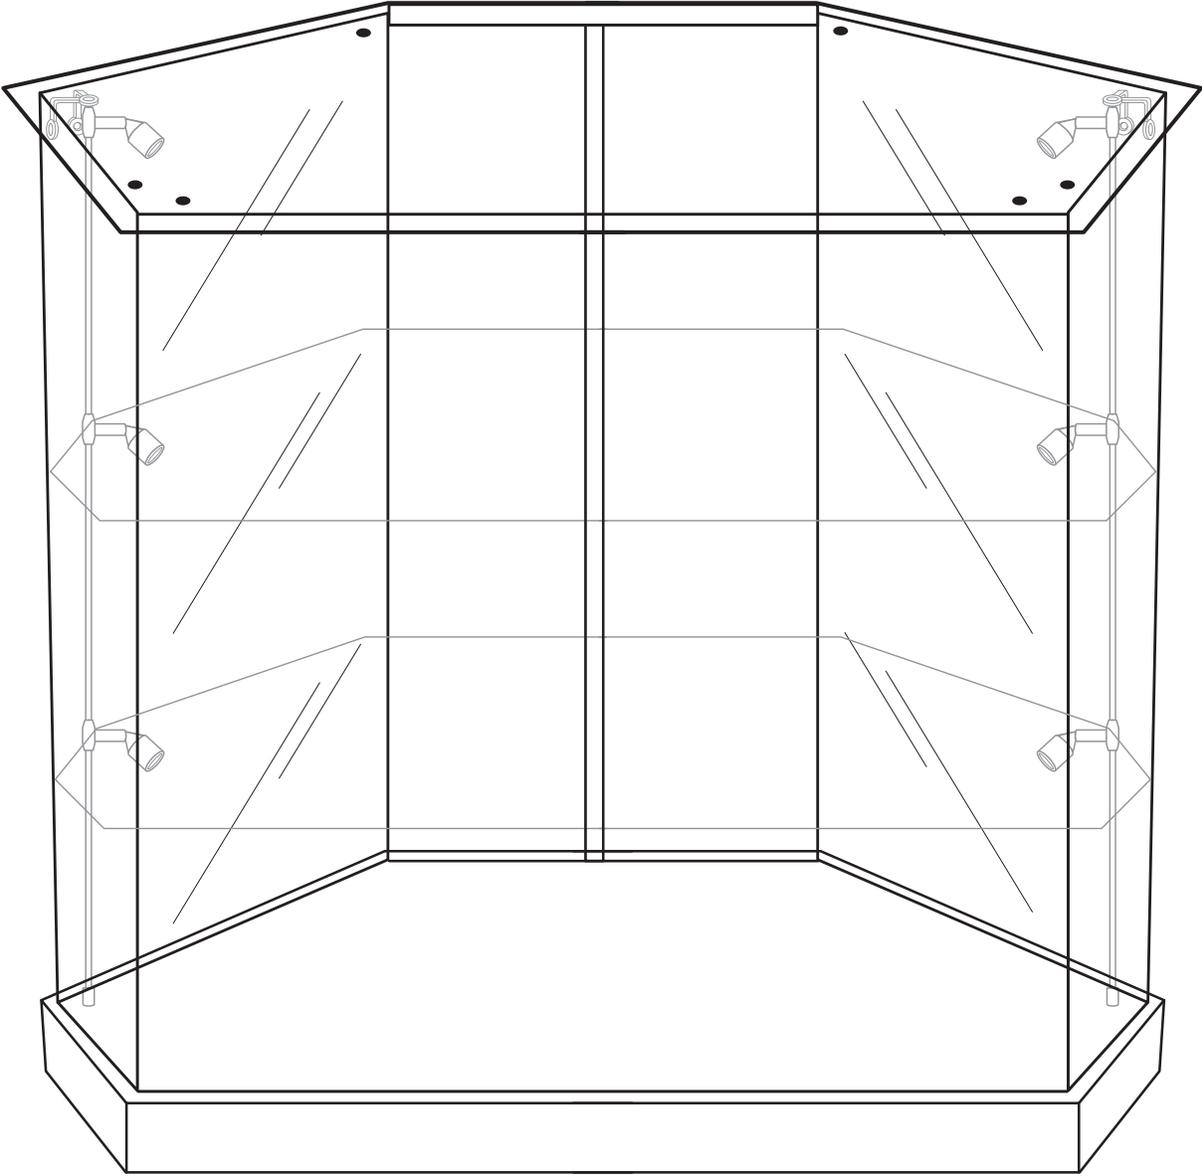


ASSEMBLY INSTRUCTIONS MANUAL

#65284/287 CORNER REAR ACCESS INFINITY SHOWCASE W/LIGHTS

RECOMMENDED TOOLS FOR ASSEMBLY:

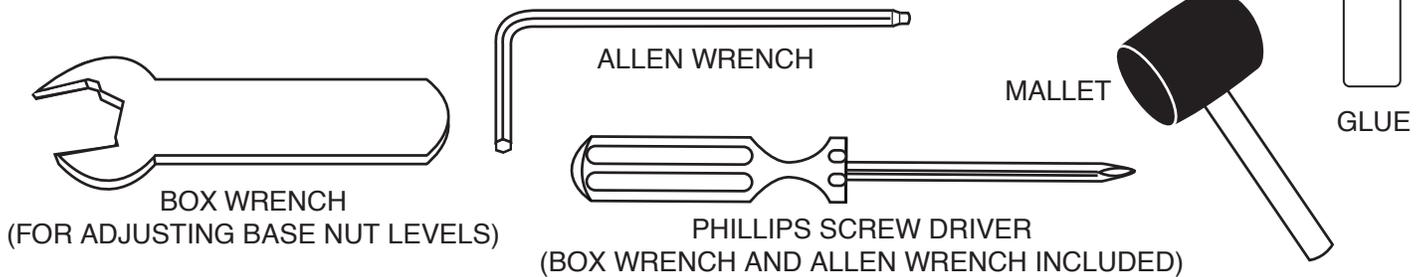

PARTS IN CARTON:

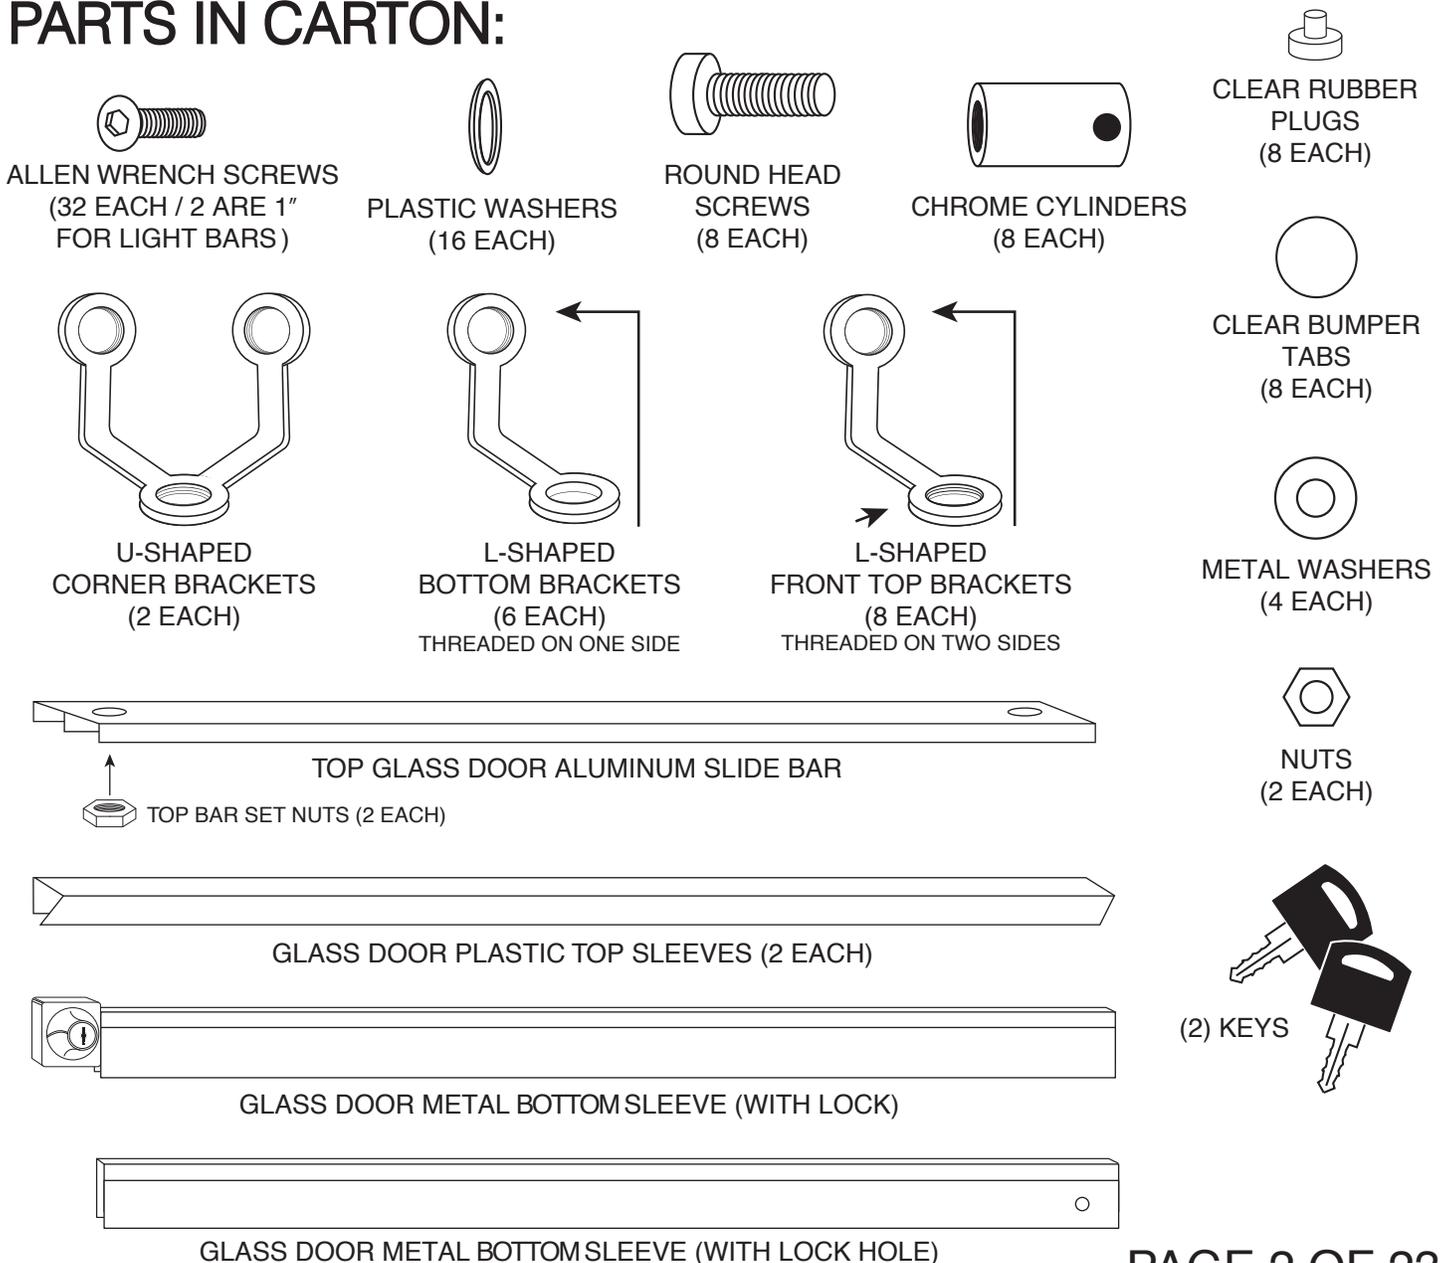





ASSEMBLY INSTRUCTIONS MANUAL

#65284/287 CORNER REAR ACCESS INFINITY SHOWCASE W/LIGHTS

PARTS IN CARTON:

CAREFULLY REMOVE CABINET PIECES FROM PACKING. CABINET SETUP INCLUDES:

- (2 EACH) LIGHT BARS
- (2 EACH - LEFT & RIGHT) BACK GLASS
- (2 EACH - LEFT & RIGHT) FRONT GLASS
- (2 EACH) SHELF GLASS
- (2 EACH) SLIDING GLASS DOORS
- GLASS TOP
- FRONT GLASS
- AC ADAPTOR & POWER CHORD
- CABINET BASE WITH ROLLERS (PRE-ASSEMBLED)

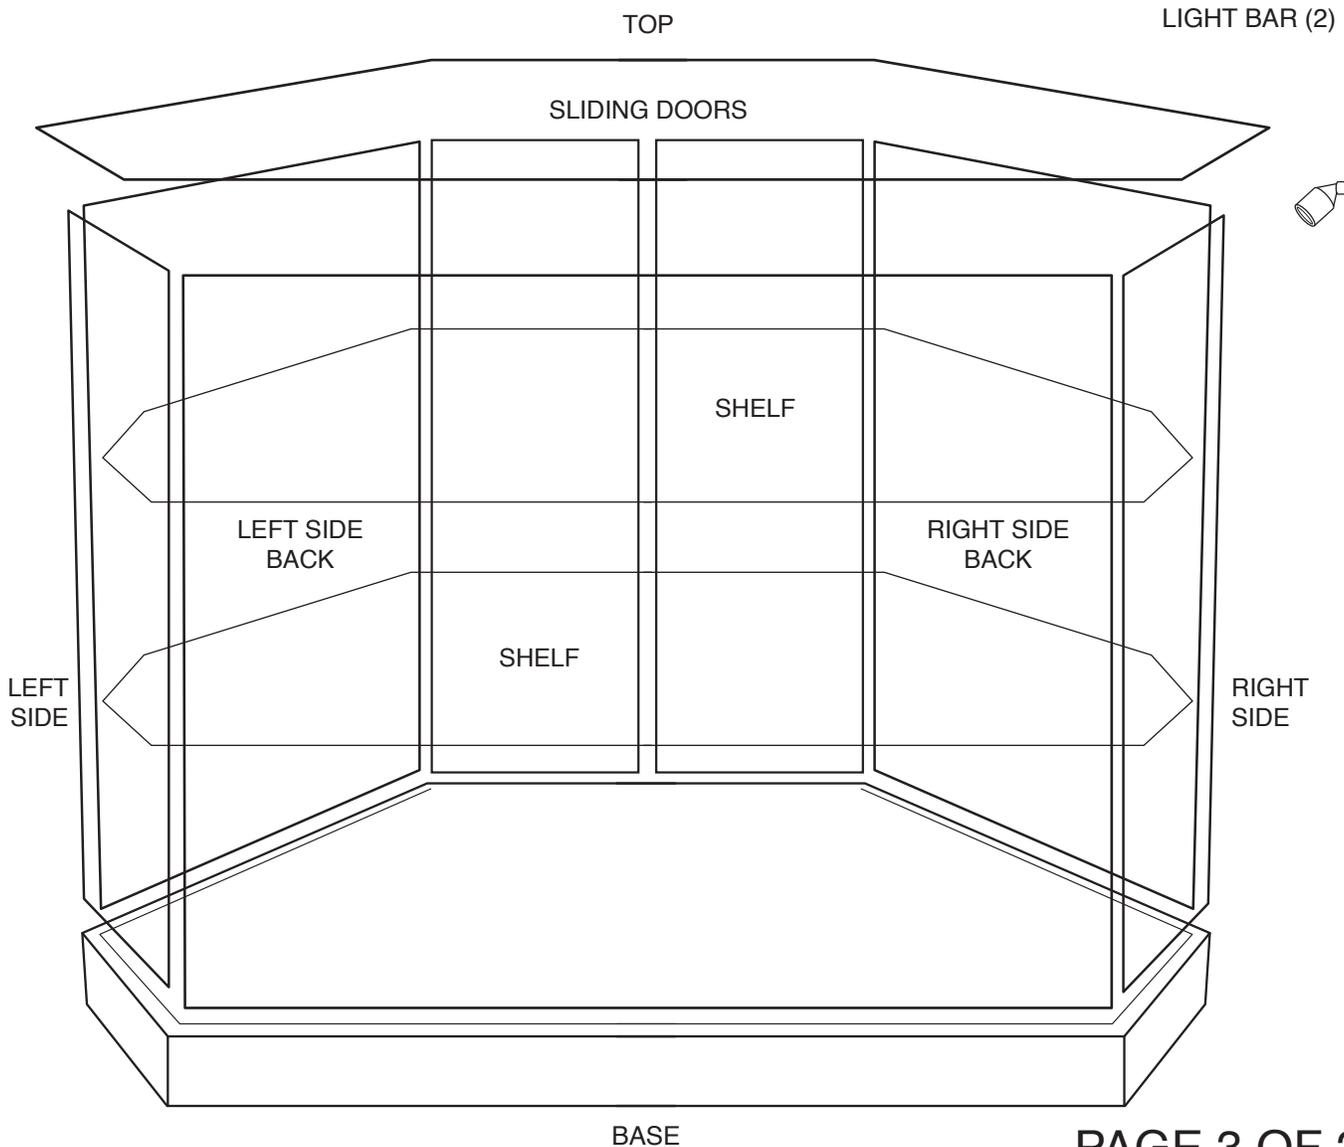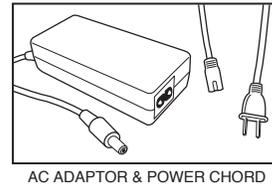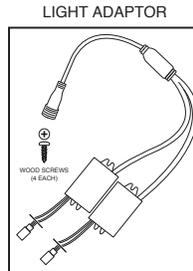


ASSEMBLY INSTRUCTIONS MANUAL

#65284/287 CORNER REAR ACCESS INFINITY SHOWCASE W/LIGHTS

* IN STEPS 1 THROUGH 8 OF THE ASSEMBLY - TWO PEOPLE ARE RECOMMENDED

STEP 1. PLACE BASE ON IT'S SIDE (PREFERABLY LONG/FRONT SIDE FOR STABILITY). INSERT LIGHT BAR THROUGH LIGHT BAR HOLES AND SECURE WITH WASHER AND NUT ON BOTTOM SIDE OF BASE WITH BOX WRENCH (PROVIDED). *NOTE - MAKE SURE LIGHT BARS ARE FACING INWARD - TOWARDS MIDDLE OF BASE.

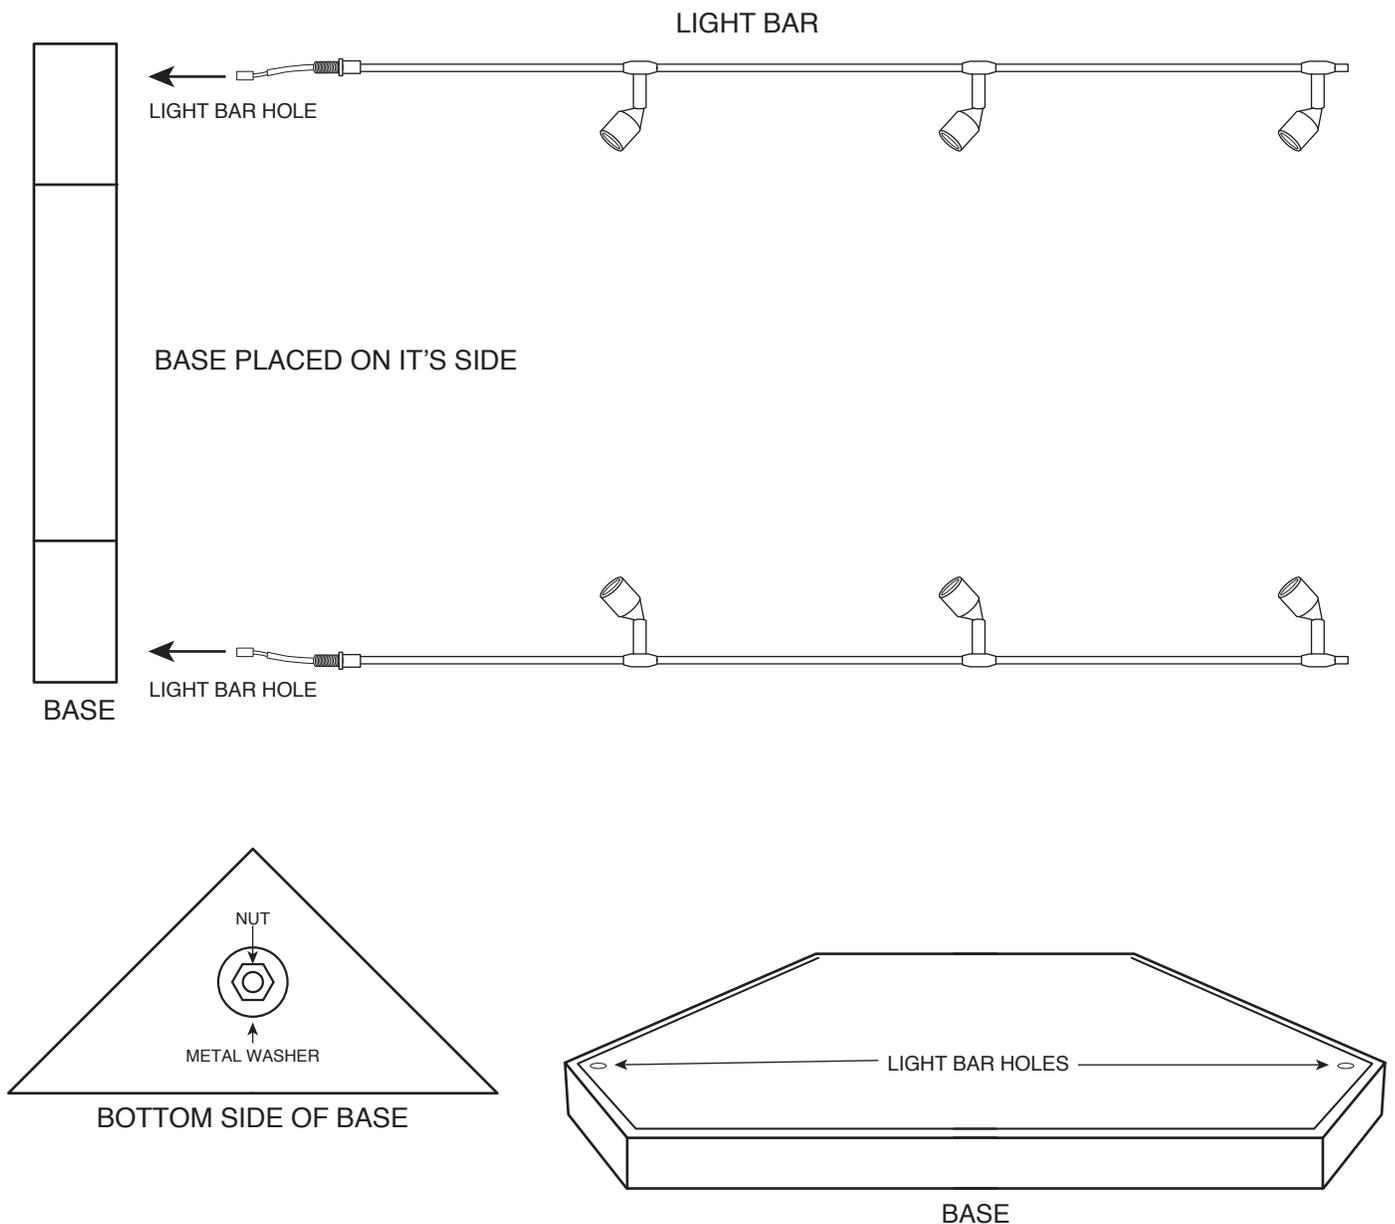


ASSEMBLY INSTRUCTIONS MANUAL

#65284/287 CORNER REAR ACCESS INFINITY SHOWCASE W/LIGHTS

STEP 2. WITH BASE ON IT'S SIDE, ATTACH LIGHT ADAPTOR TO BASE WITH WOOD SCREWS USING A SCREWDRIVER. ATTACH LIGHT ADAPTOR END TO LIGHT BARS (2).

STEP 3. ATTACH LIGHT ADAPTOR TO AC ADAPTOR/POWER CHORD. WE RECOMMEND THAT YOU ATTACH IT TO THE BASE USING TWO WAY TAPE (NOT PROVIDED). OTHERWISE LET REST ON THE FLOOR.

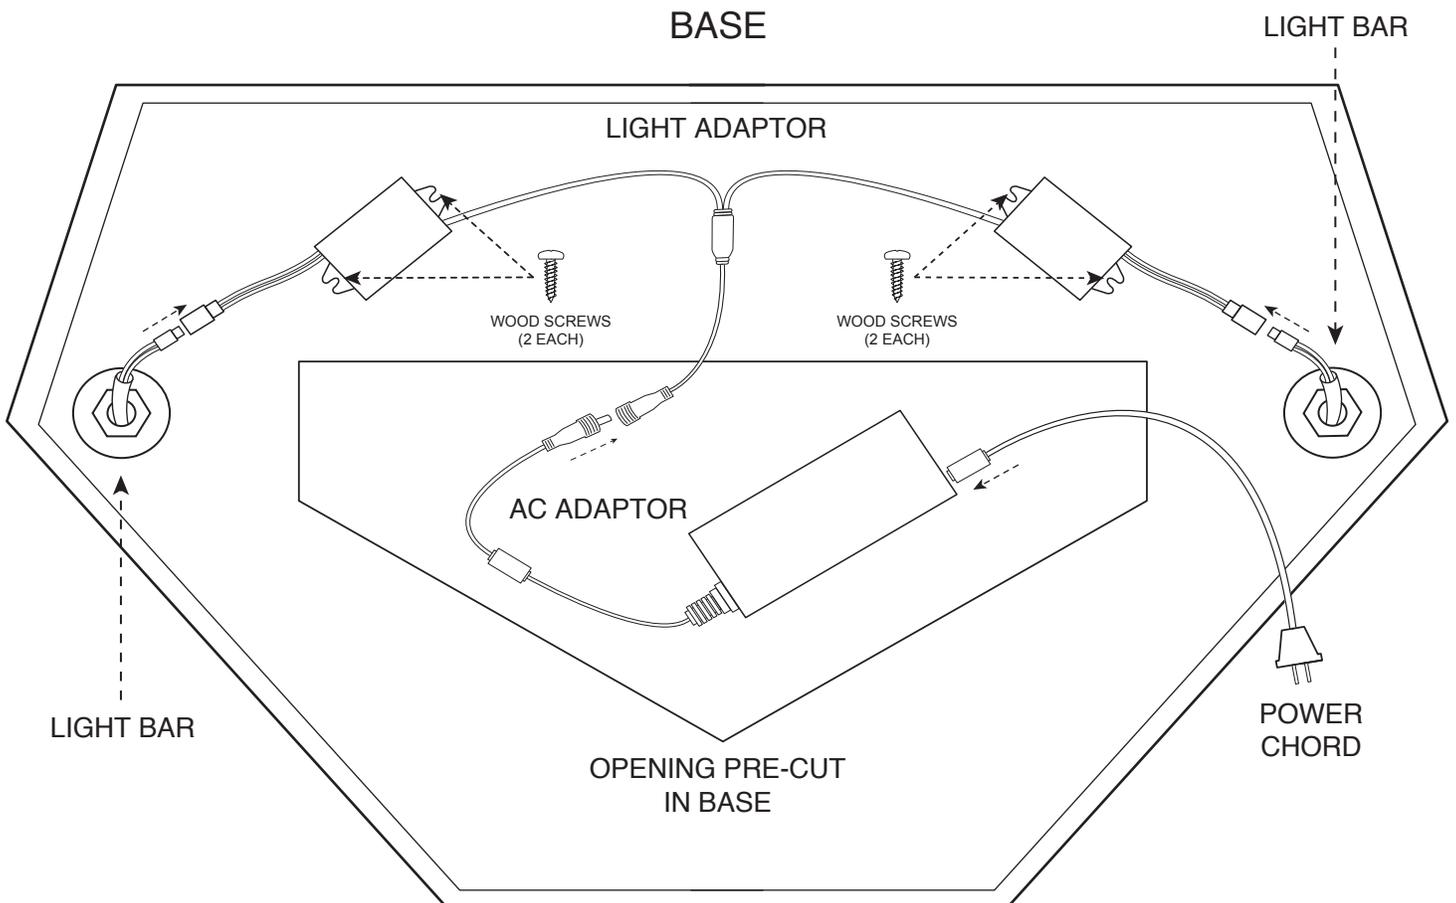


ASSEMBLY INSTRUCTIONS MANUAL

#65284/287 CORNER REAR ACCESS INFINITY SHOWCASE W/LIGHTS

IMPORTANT

BOTTOM OF BOTH BACK AND SIDE GLASS HAS A SLIGHTLY DIFFERENT HOLE PLACEMENT THAN THE TOP OF EACH PIECE OF GLASS

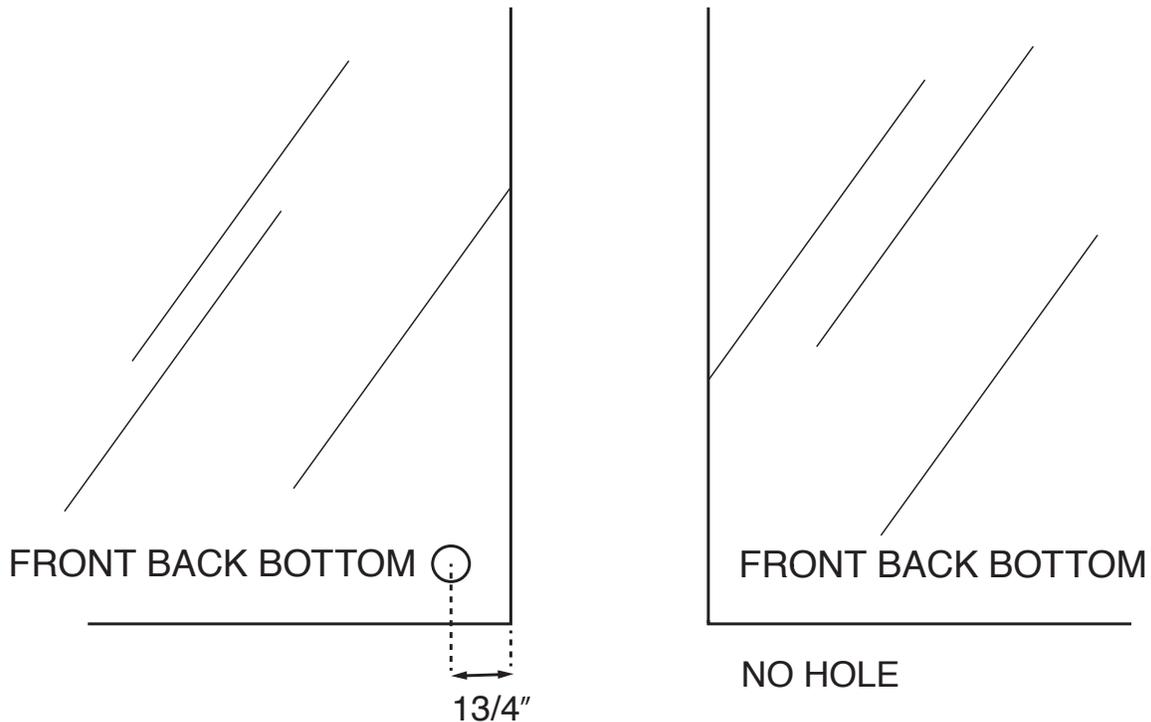

MEASURE THE GLASS SPACE BETWEEN EDGE OF GLASS AND CENTER OF HOLE. HOLE FURTHEST FROM EDGE GOES ON BOTTOM

GLASS CAN ONLY BE ASSEMBLED ONE WAY!



ASSEMBLY INSTRUCTIONS MANUAL

#65284/287 CORNER REAR ACCESS INFINITY SHOWCASE W/LIGHTS

STEP 4. PLACE LEFT SIDE BACK PANEL INTO BACK GROOVE OF CABINET BASE. MAKE SURE GLASS PRECISELY FITS BACK BASE GROOVE IN ORDER TO ACCOMODATE THE LEFT SIDE FRONT PANEL NEXT. MAKE CERTAIN ON BOTH BACK AND SIDE PANELS THAT YOU RECOGNIZE THE BOTTOM OF EACH PANEL CORRECTLY. **(SEE PREVIOUS PAGE FOR DETAILS)**

STEP 5. PLACE LEFT SIDE FRONT PANEL INTO FRONT BASE GROOVE. ATTACH U-BRACKET (TOP ONLY) WITH ALLEN WRENCH SCREWS AND WASHERS. ***HAND SCREW IN ALL HARDWARE. DO NOT TIGHTEN WITH ALLEN WRENCH YET. THIS ALLOWS FLEXIBILITY UNTIL ASSEMBLY IS NEARLY COMPLETE.**

STEPS 6 & 7. REPEAT STEPS 4 & 5 FOR RIGHT SIDE BACK & FRONT.

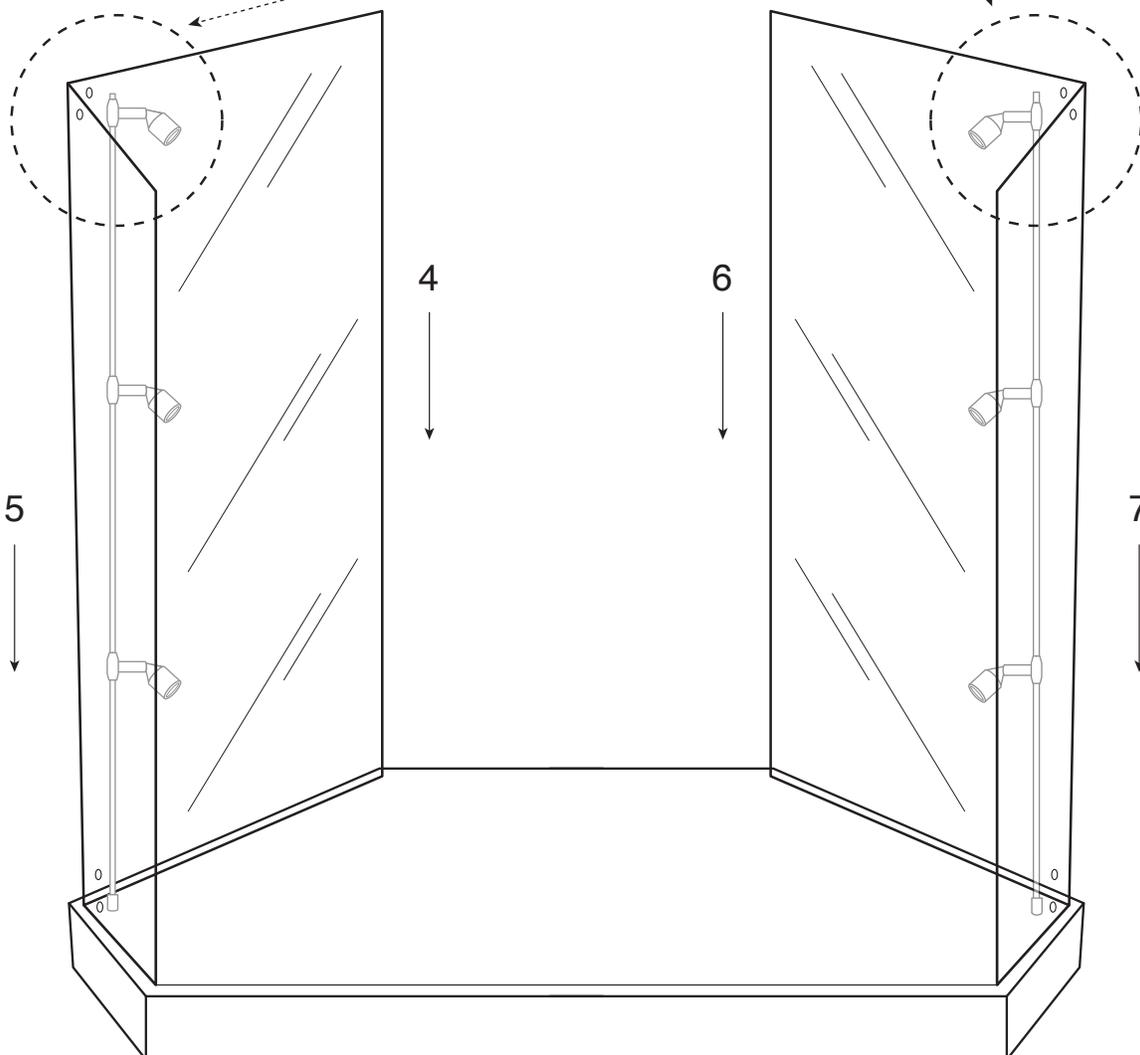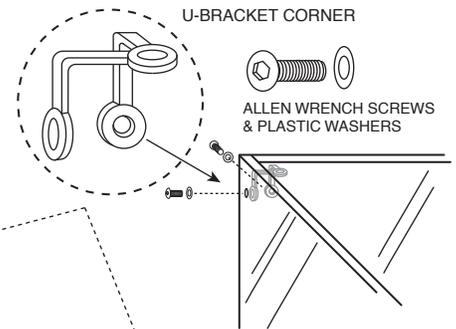


ASSEMBLY INSTRUCTIONS MANUAL

#65284/287 CORNER REAR ACCESS INFINITY SHOWCASE W/LIGHTS

STEP 8. PLACE FRONT PANEL INTO FRONT BASE GROOVE OF CABINET BASE. HAND SCREW IN ALL **BOTTOM** L-SHAPED BRACKETS (6).

STEP 9. HAND SCREW IN ALL **TOP** L-SHAPED BRACKETS (8).

L-SHAPED TOP BRACKETS (8)
(THREADED ON TWO SIDES)

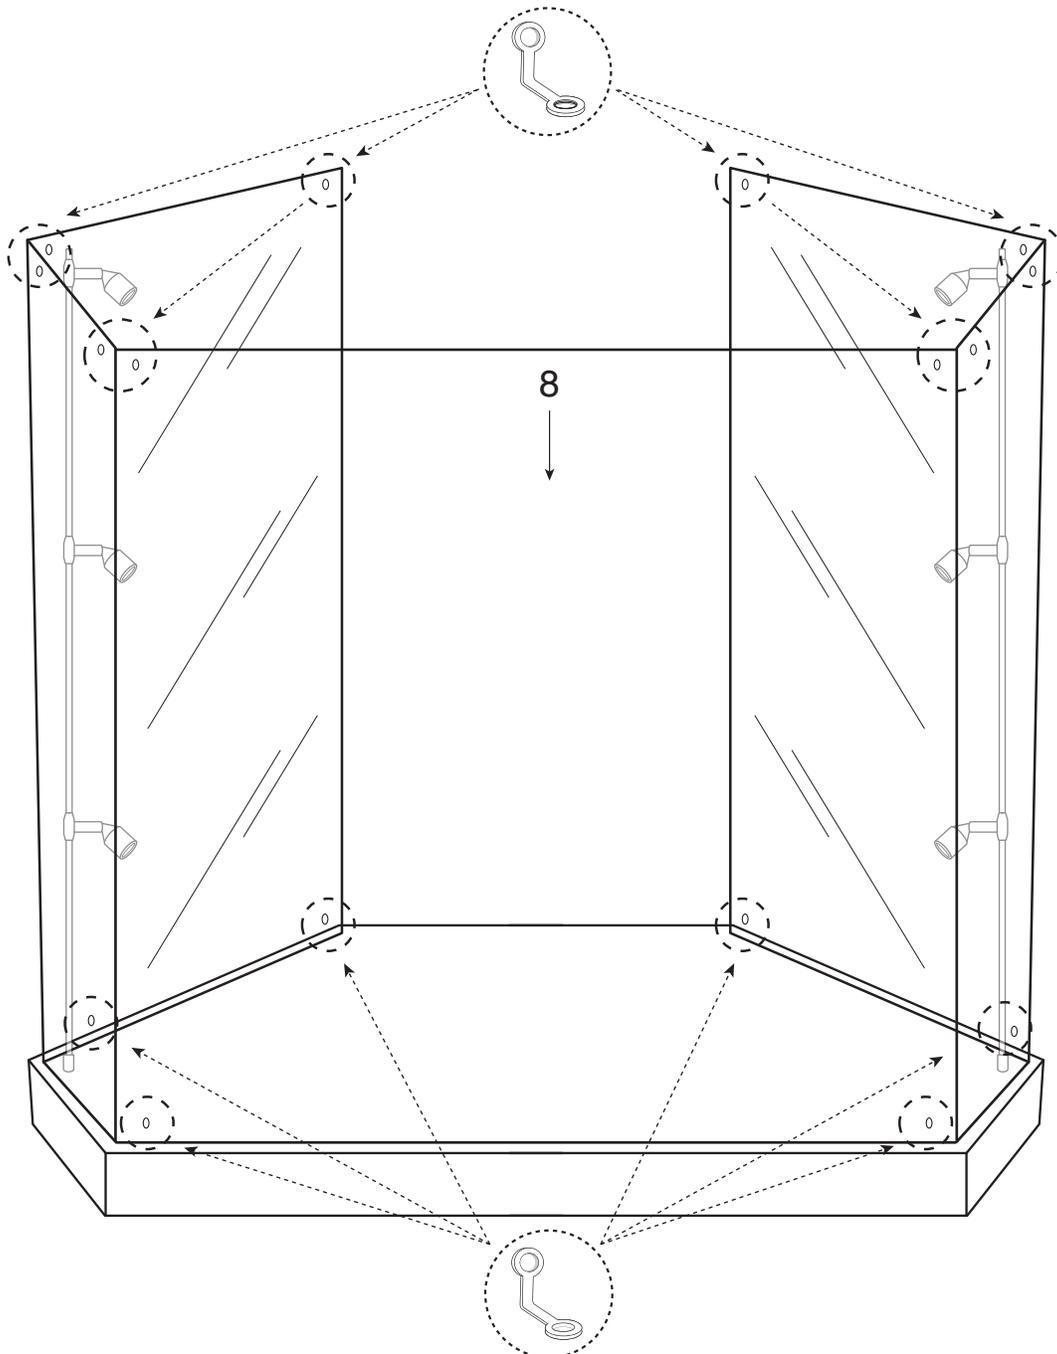


L-SHAPED BOTTOM BRACKETS (6)
(THREADED ON ONE SIDE)

ASSEMBLY INSTRUCTIONS MANUAL

#65284/287 CORNER REAR ACCESS INFINITY SHOWCASE W/LIGHTS

STEP 10. SCREW FLAT HEAD BOLTS INTO CHROME CYLINDERS - PLACE RUBBER GROMMETS INTO HOLES (THIS SUPPORTS GLASS SHELF). (8) CYLINDERS ALL TOGETHER (4 FOR EACH SHELF). (4) IN FRONT PANEL - (2) IN BOTH LEFT & RIGHT BACK PANEL

***NOTE** - MAKE SURE RUBBER GROMMETS ARE FACING UP TO SUPPORT GLASS SHELVES.

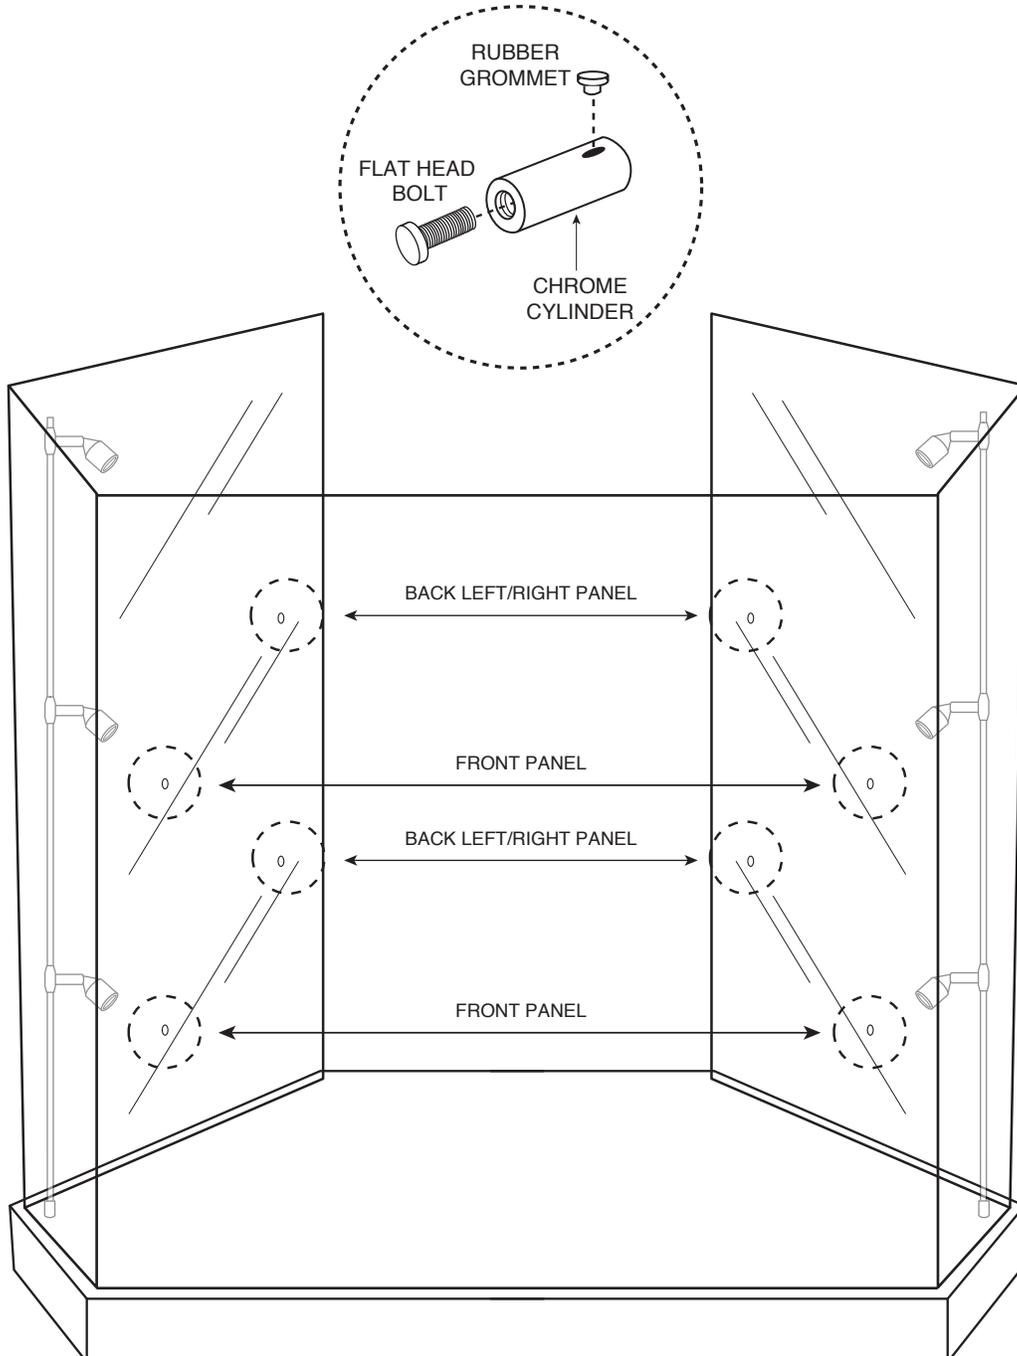


ASSEMBLY INSTRUCTIONS MANUAL


#65284/287 CORNER REAR ACCESS INFINITY SHOWCASE W/LIGHTS

STEP 9. CAREFULLY SLIDE TOP GLASS ONTO CABINET MAKING SURE YOU HAVE AN OVERLAP ON ALL SIDES.

STEP 10. SCREW ALLEN SCREWS (WITH PLASTIC WASHERS) INTO U-BRACKETS (2) AND L-BRACKETS (6) ON TOP. **(DO NOT OVER TIGHTEN)**

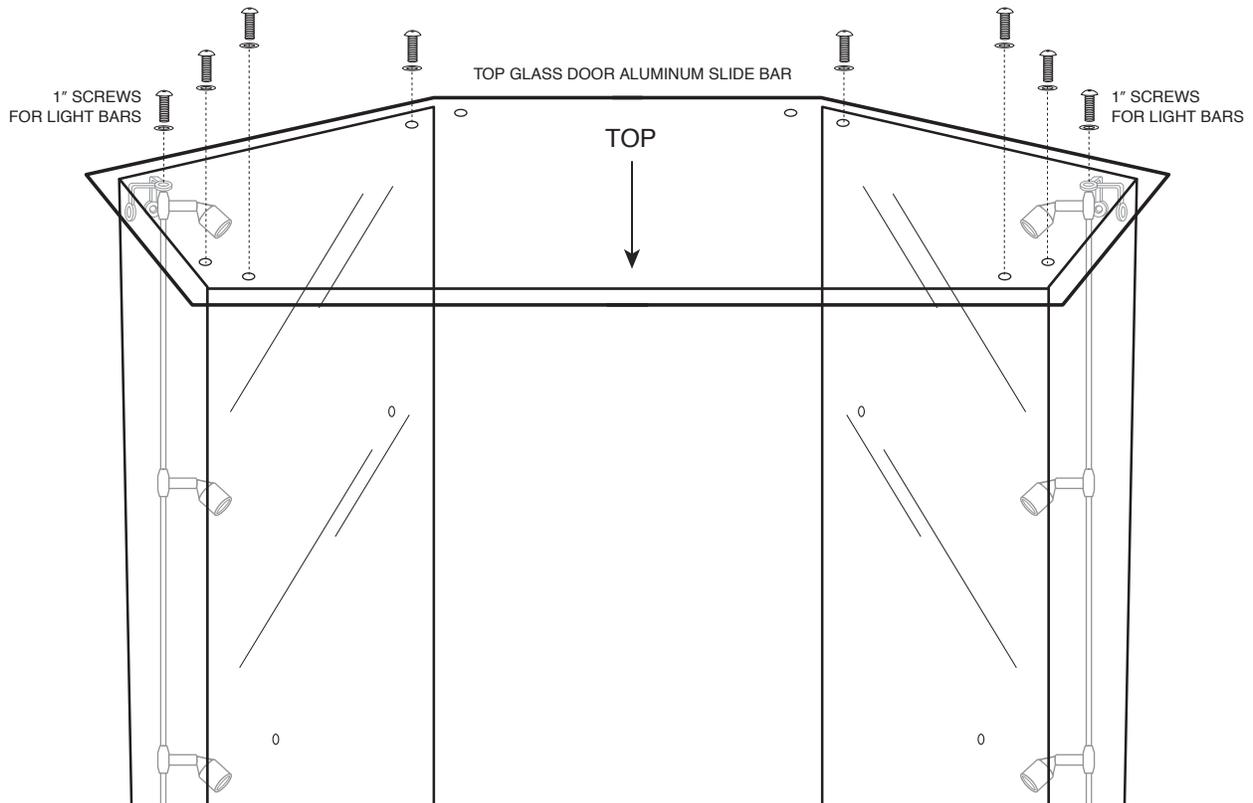

STEP 11. PLACE TOP GLASS DOOR ALUMINUM SLIDE GUIDE UNDER TOP GLASS.

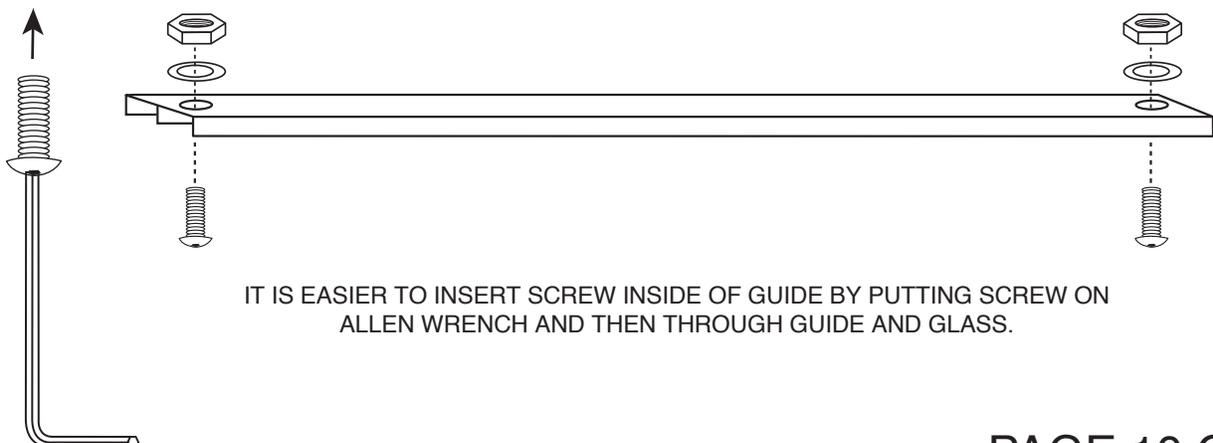


IT IS EASIER TO INSERT SCREW INSIDE OF GUIDE BY PUTTING SCREW ON ALLEN WRENCH AND THEN THROUGH GUIDE AND GLASS.

ASSEMBLY INSTRUCTIONS MANUAL

#65284/287 CORNER REAR ACCESS INFINITY SHOWCASE W/LIGHTS


STEP 12. INSTALL SHELVES. (YOU WILL HAVE TO INSERT THEM THROUGH THE OPENING LONG WAYS, THEN ROTATE INTO PLACE (INSERT EACH SHELF AT THE LEVEL OF THE CYLINDERS TO AVOID CONTACT WITH LIGHT BARS). GENTLY LOWER ONTO RUBBER GROMETS OF SUPPORTING CYLINDERS.

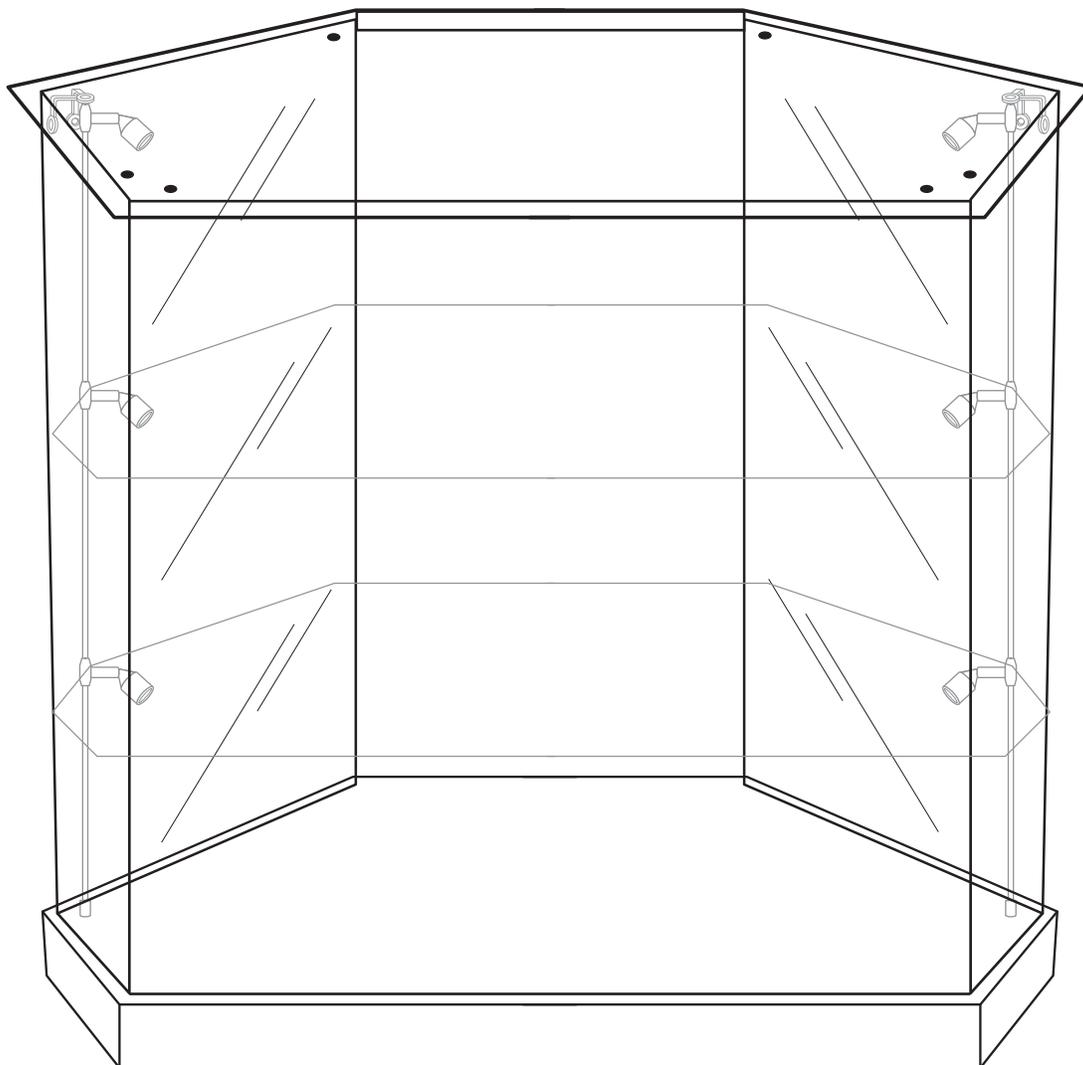

ASSEMBLY INSTRUCTIONS MANUAL


#65284/287 CORNER REAR ACCESS INFINITY SHOWCASE W/LIGHTS

STEP 12. INSTALLING SLIDING GLASS DOORS. PLACE CLEAR PLASTIC SLEEVES ON TOP OF GLASS DOORS. TAP ON SLEEVES WITH RUBBER Mallet.

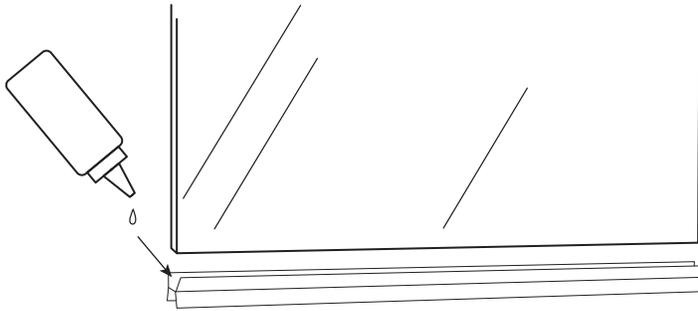


RUN BEAD OF ANY TYPE OF GLUE ON INSIDE (BOTTOM) OF TOP PLASTIC SLEEVE. THEN TAP SLEEVES ON TOP OF THE GLASS WITH A RUBBER Mallet.

THIS PREVENTS THE SLEEVES FROM MOVING ONCE ASSEMBLY IS COMPLETE AND DOORS ARE MOVED.

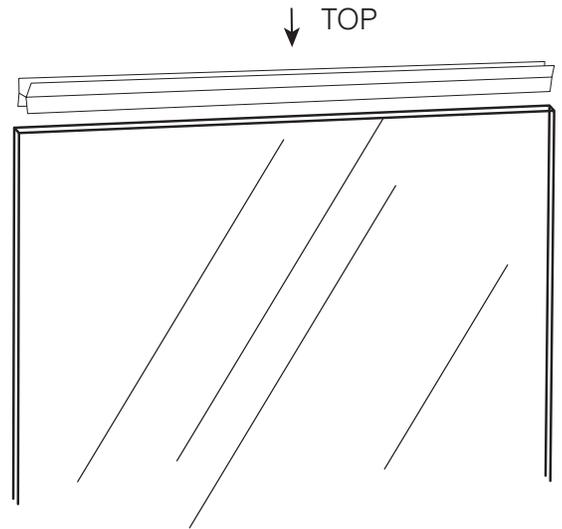


PLACE METAL SLEEVES (WITH LOCK TO THE LEFT) ON BOTTOM OF GLASS DOORS. TAP ON SLEEVES WITH RUBBER Mallet.

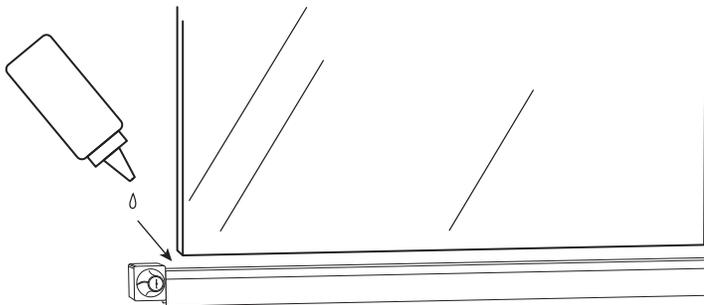

RUN BEAD OF ANY TYPE OF GLUE ON INSIDE (TOP) OF BOTTOM METAL SLEEVE. THEN TAP SLEEVES ON BOTTOM OF THE GLASS WITH A RUBBER Mallet.

THIS PREVENTS THE SLEEVES FROM MOVING ONCE ASSEMBLY IS COMPLETE AND DOORS ARE MOVED.

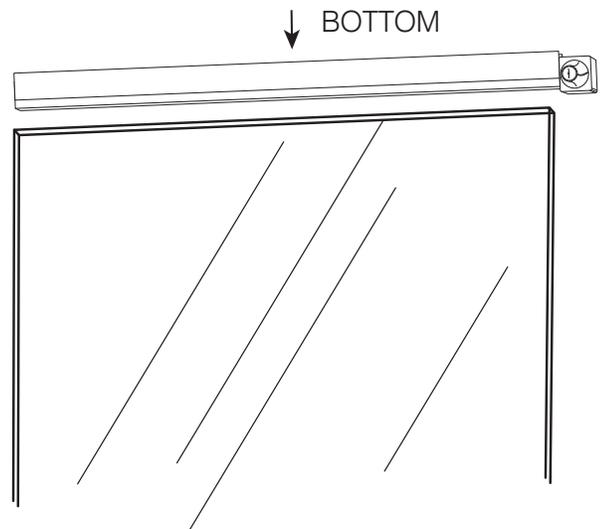


ASSEMBLY INSTRUCTIONS MANUAL

#65284/287 CORNER REAR ACCESS INFINITY SHOWCASE W/LIGHTS

STEP 13. INSERT LEFT DOOR (WITHOUT LOCK - MAKE SURE HOLE IN BOTTOM METAL SLEEVE IS FACING YOU / ON THE RIGHT) INTO TOP OF BACK TRACK, THEN LOWER INTO BOTTOM BACK TRACK AND SLIDE TO THE LEFT.


INSERT RIGHT DOOR (INSTALLED LOCK ASSEMBLY ON THE LEFT) INTO TOP OF FRONT TRACK, THEN LOWER INTO BOTTOM FRONT TRACK AND SLIDE TO THE RIGHT.

THIS COMPLETES THE ASSEMBLY.

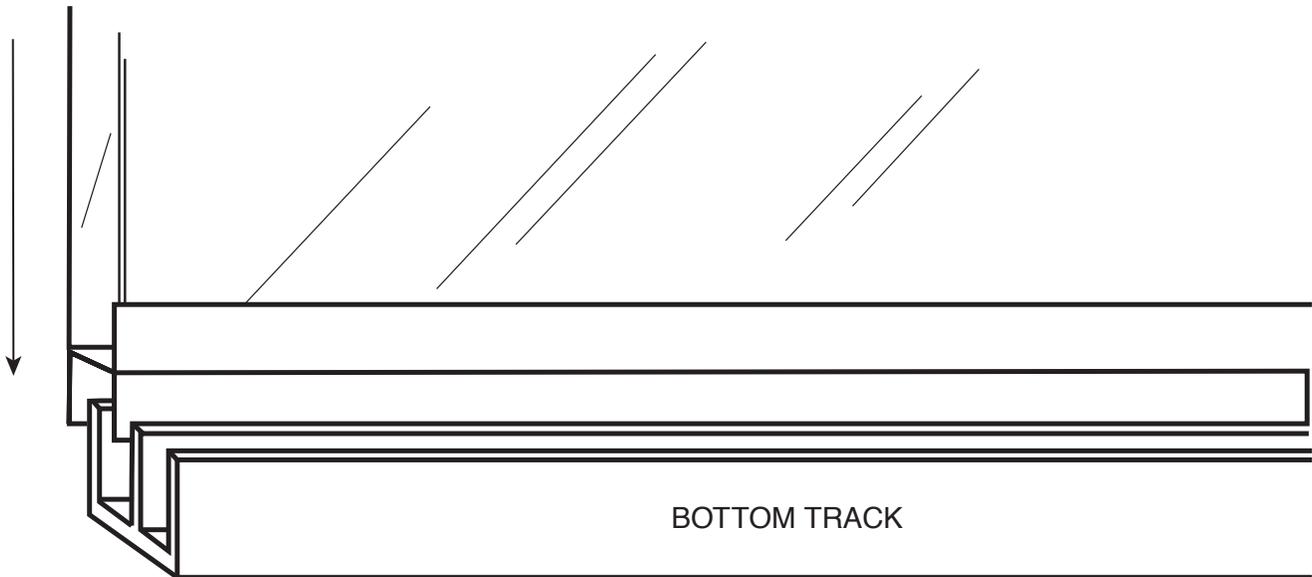

ASSEMBLY INSTRUCTIONS MANUAL


#65284 CORNER REAR ACCESS INFINITY SHOWCASE

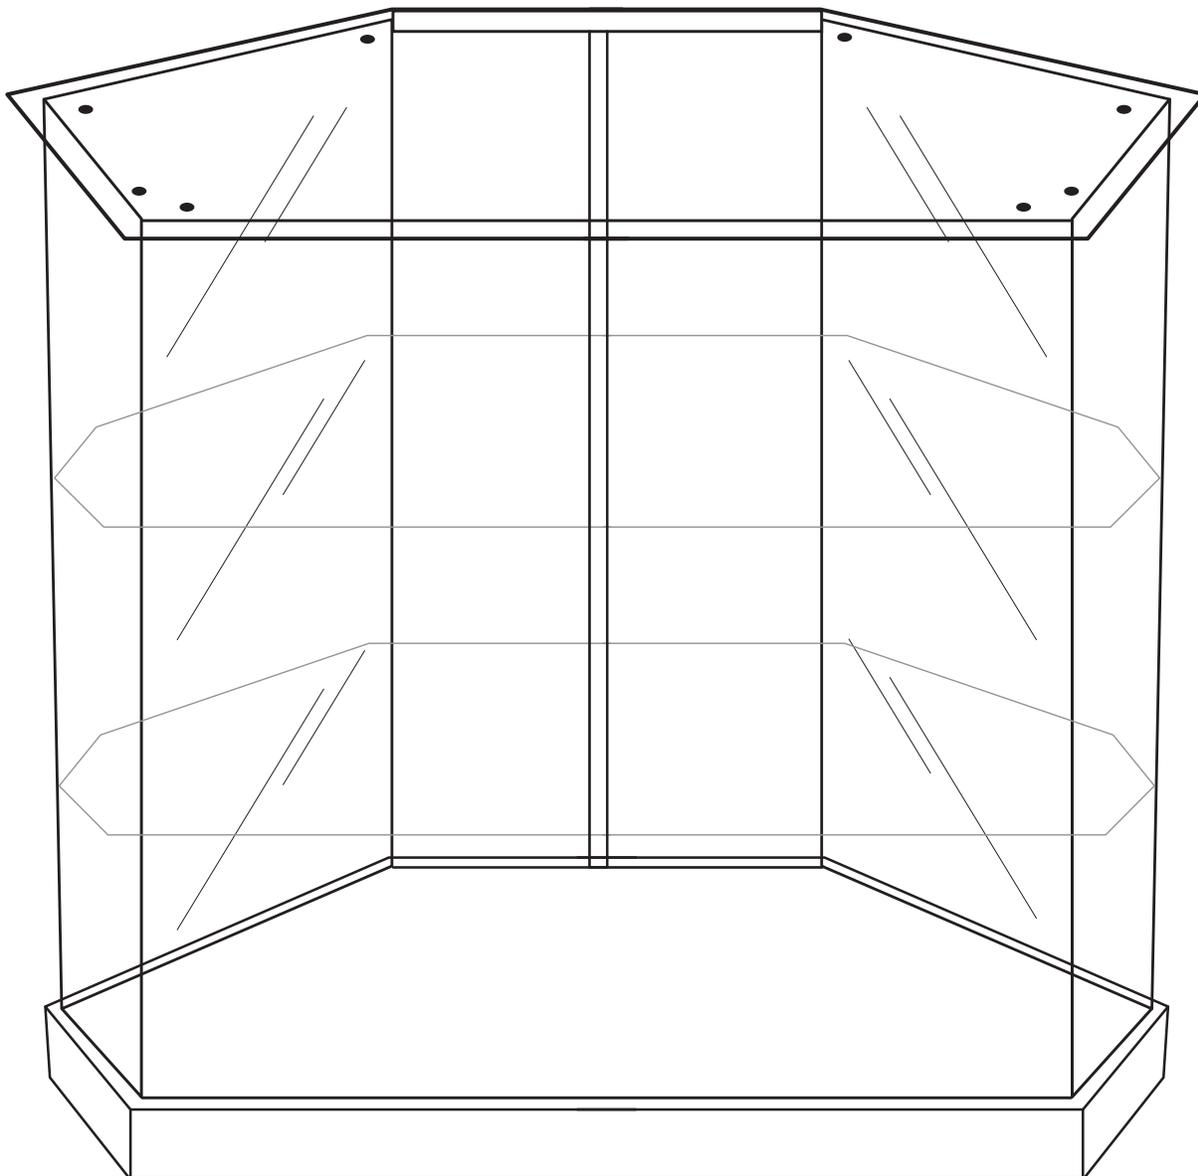


ASSEMBLY INSTRUCTIONS MANUAL

#65284 CORNER REAR ACCESS INFINITY SHOWCASE

RECOMMENDED TOOLS FOR ASSEMBLY:

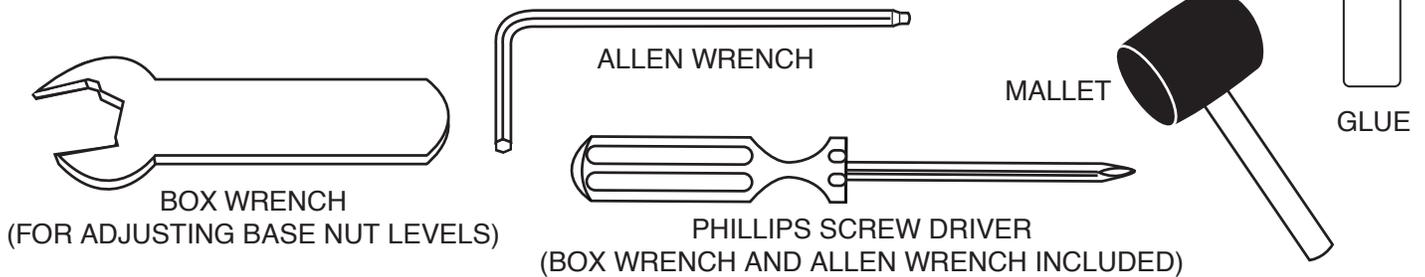

PARTS IN CARTON:

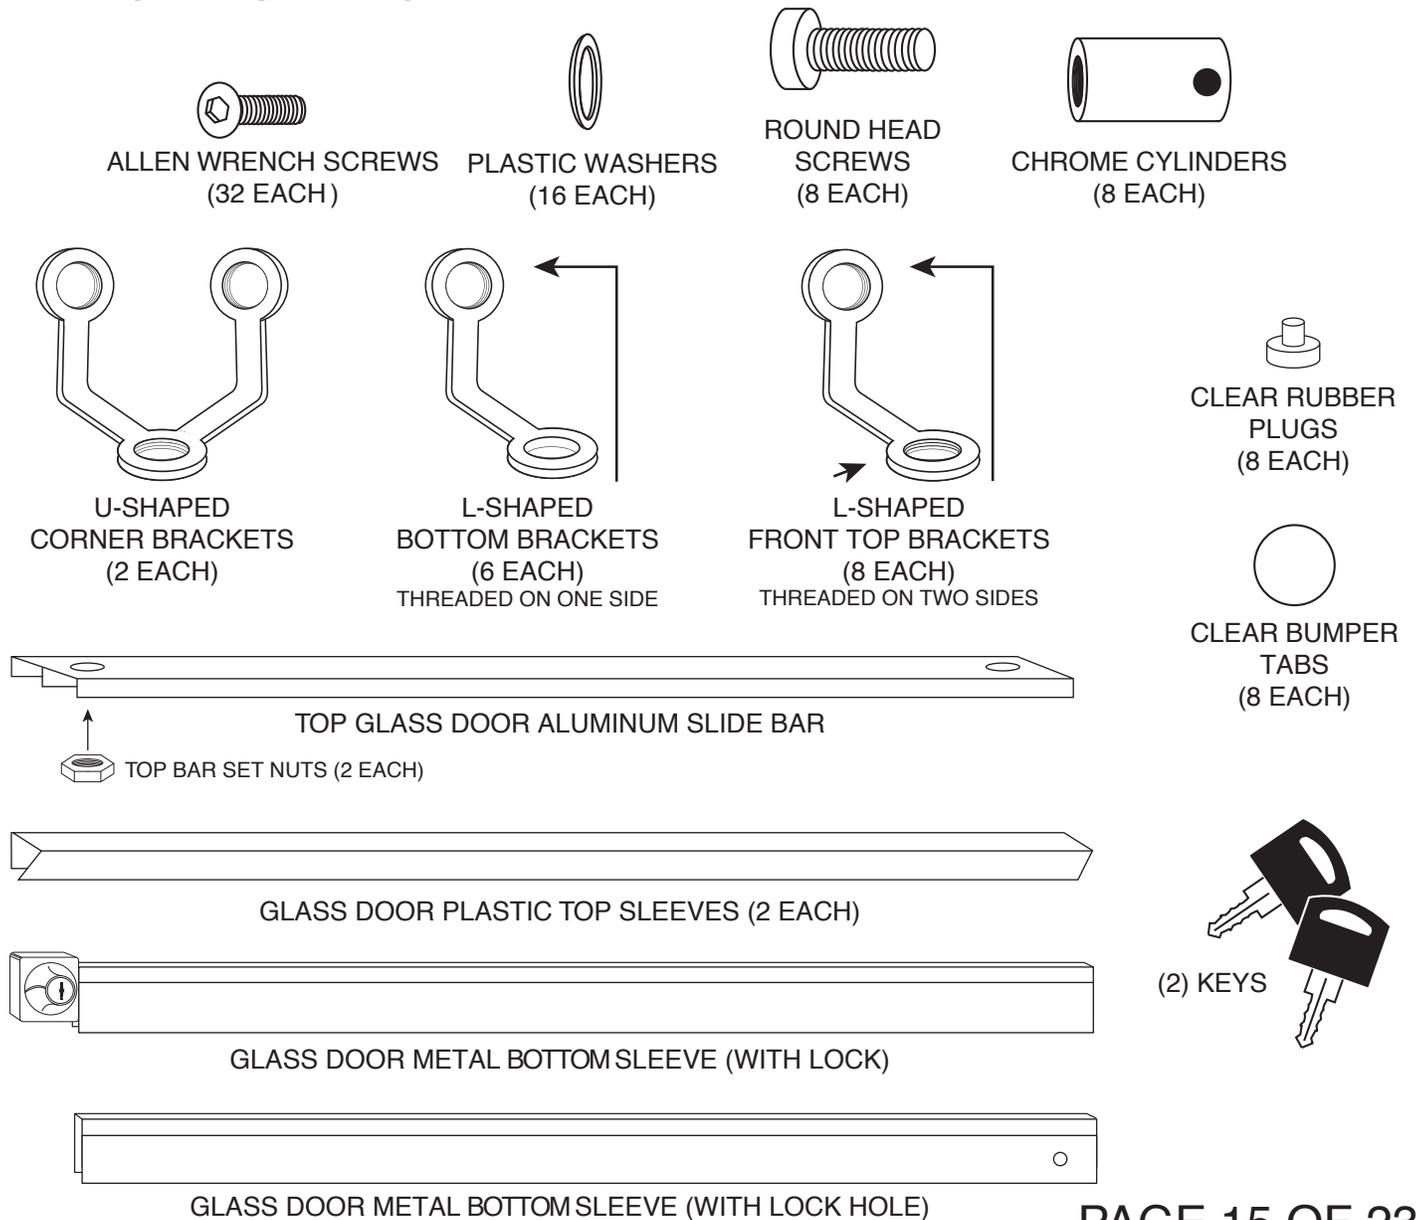


ASSEMBLY INSTRUCTIONS MANUAL

#65284 CORNER REAR ACCESS INFINITY SHOWCASE

PARTS IN CARTON:

CAREFULLY REMOVE CABINET PIECES FROM PACKING. CABINET SETUP INCLUDES:

- (2 EACH - LEFT & RIGHT) BACK GLASS
- (2 EACH - LEFT & RIGHT) FRONT GLASS
- (2 EACH) SHELF GLASS
- (2 EACH) SLIDING GLASS DOORS
- GLASS TOP
- FRONT GLASS

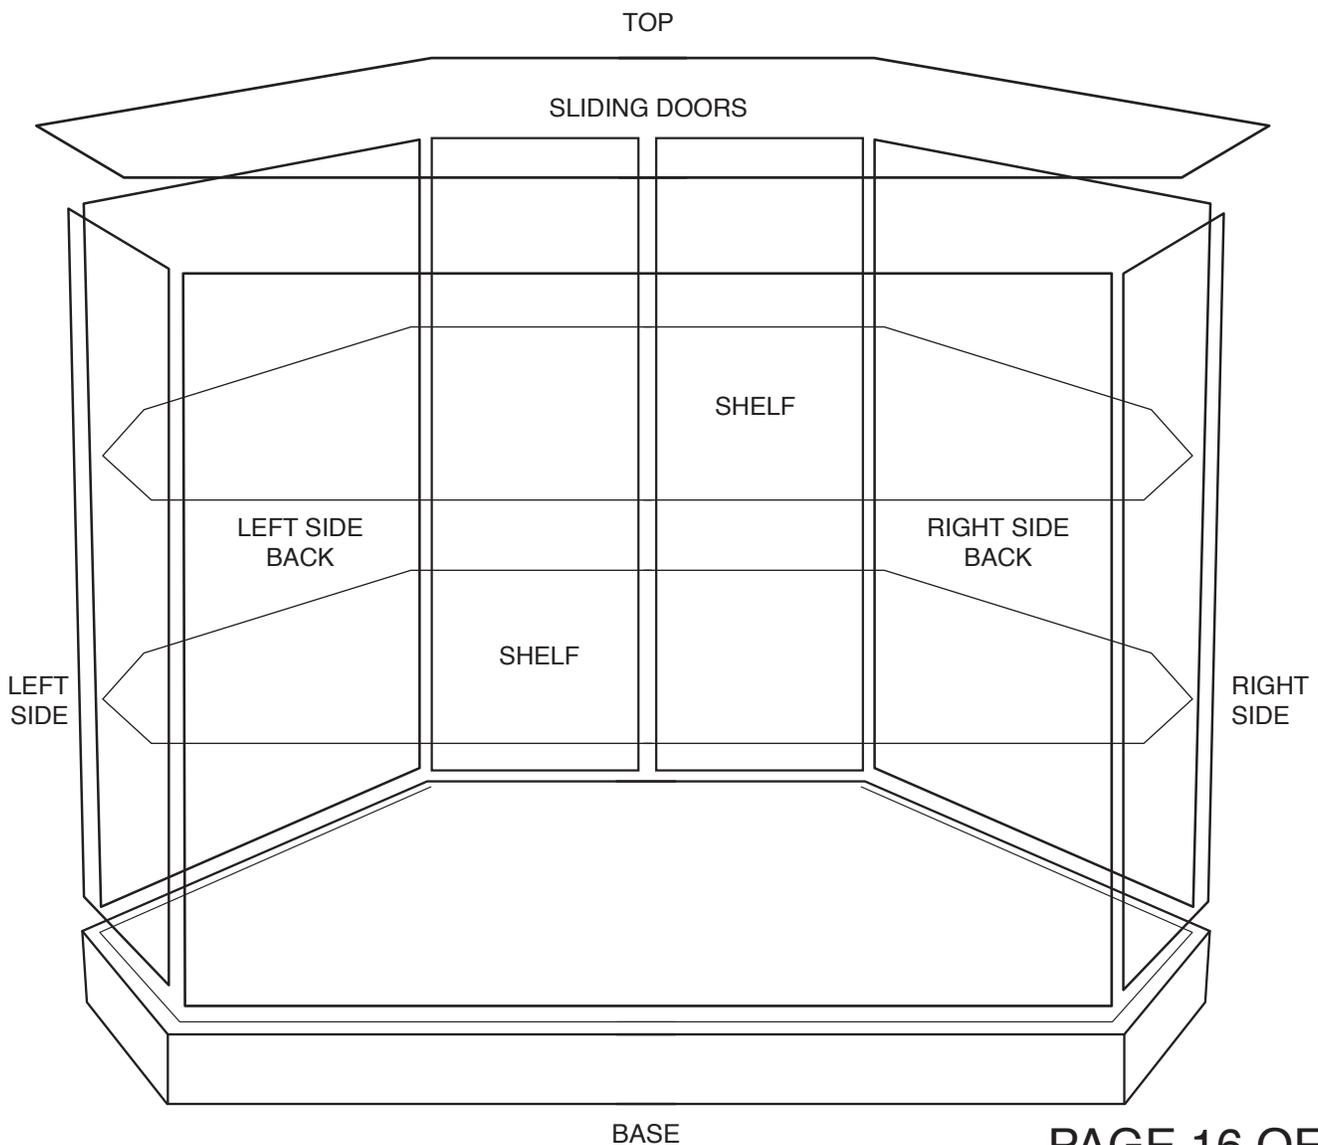


ASSEMBLY INSTRUCTIONS MANUAL

#65284 CORNER REAR ACCESS INFINITY SHOWCASE

IMPORTANT

BOTTOM OF BOTH BACK AND SIDE GLASS HAS A SLIGHTLY DIFFERENT HOLE PLACEMENT THAN THE TOP OF EACH PIECE OF GLASS

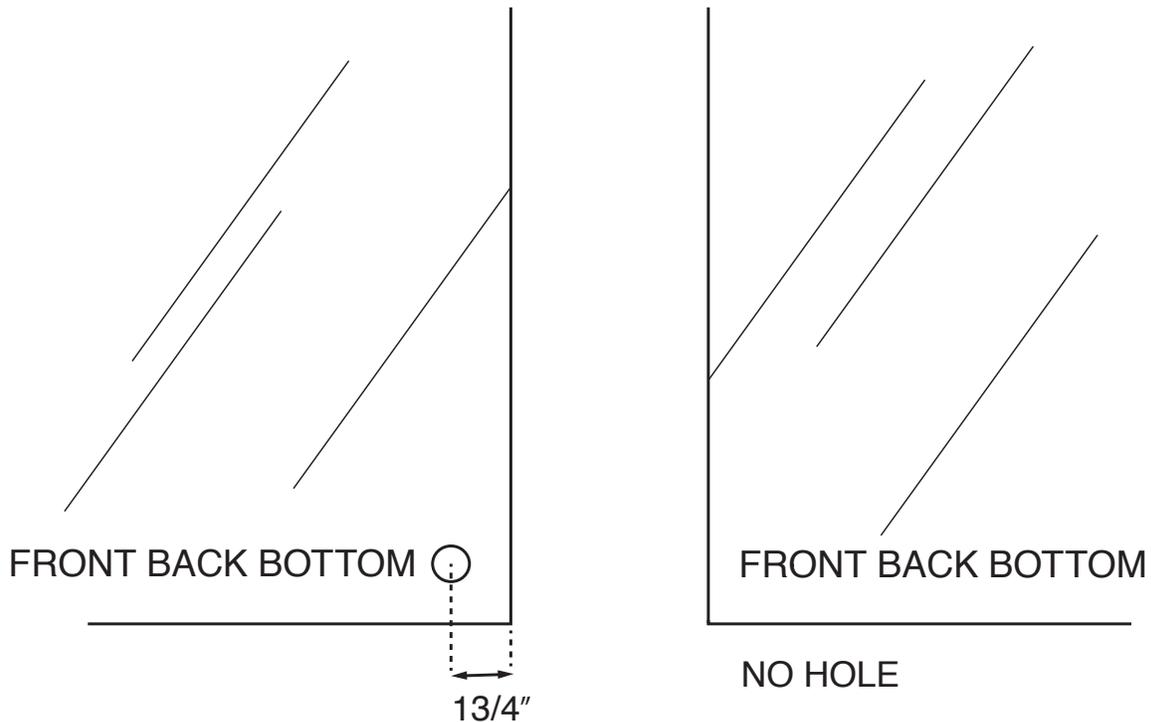

MEASURE THE GLASS SPACE BETWEEN EDGE OF GLASS AND CENTER OF HOLE. HOLE FURTHEST FROM EDGE GOES ON BOTTOM

GLASS CAN ONLY BE ASSEMBLED ONE WAY!

ASSEMBLY INSTRUCTIONS MANUAL



#65284 CORNER REAR ACCESS INFINITY SHOWCASE

* IN STEPS 1 THROUGH 6 OF THE ASSEMBLY - TWO PEOPLE ARE RECOMMENDED

STEP 1. PLACE LEFT SIDE BACK PANEL INTO BACK GROOVE OF CABINET BASE. MAKE SURE GLASS PRECISELY FITS BACK BASE GROOVE IN ORDER TO ACCOMODATE THE LEFT SIDE FRONT PANEL NEXT. MAKE CERTAIN ON BOTH BACK AND SIDE PANELS THAT YOU RECOGNIZE THE BOTTOM OF EACH PANEL CORRECTLY. **(SEE PREVIOUS PAGE FOR DETAILS)**

STEP 2. PLACE LEFT SIDE FRONT PANEL INTO FRONT BASE GROOVE. ATTACH U-BRACKET (TOP ONLY) WITH ALLEN WRENCH SCREWS AND WASHERS. ***HAND SCREW IN ALL HARDWARE. DO NOT TIGHTEN WITH ALLEN WRENCH YET. THIS ALLOWS FLEXIBILITY UNTIL ASSEMBLY IS NEARLY COMPLETE.**

STEPS 3 & 4. REPEAT STEPS 4 & 5 FOR RIGHT SIDE BACK & FRONT.

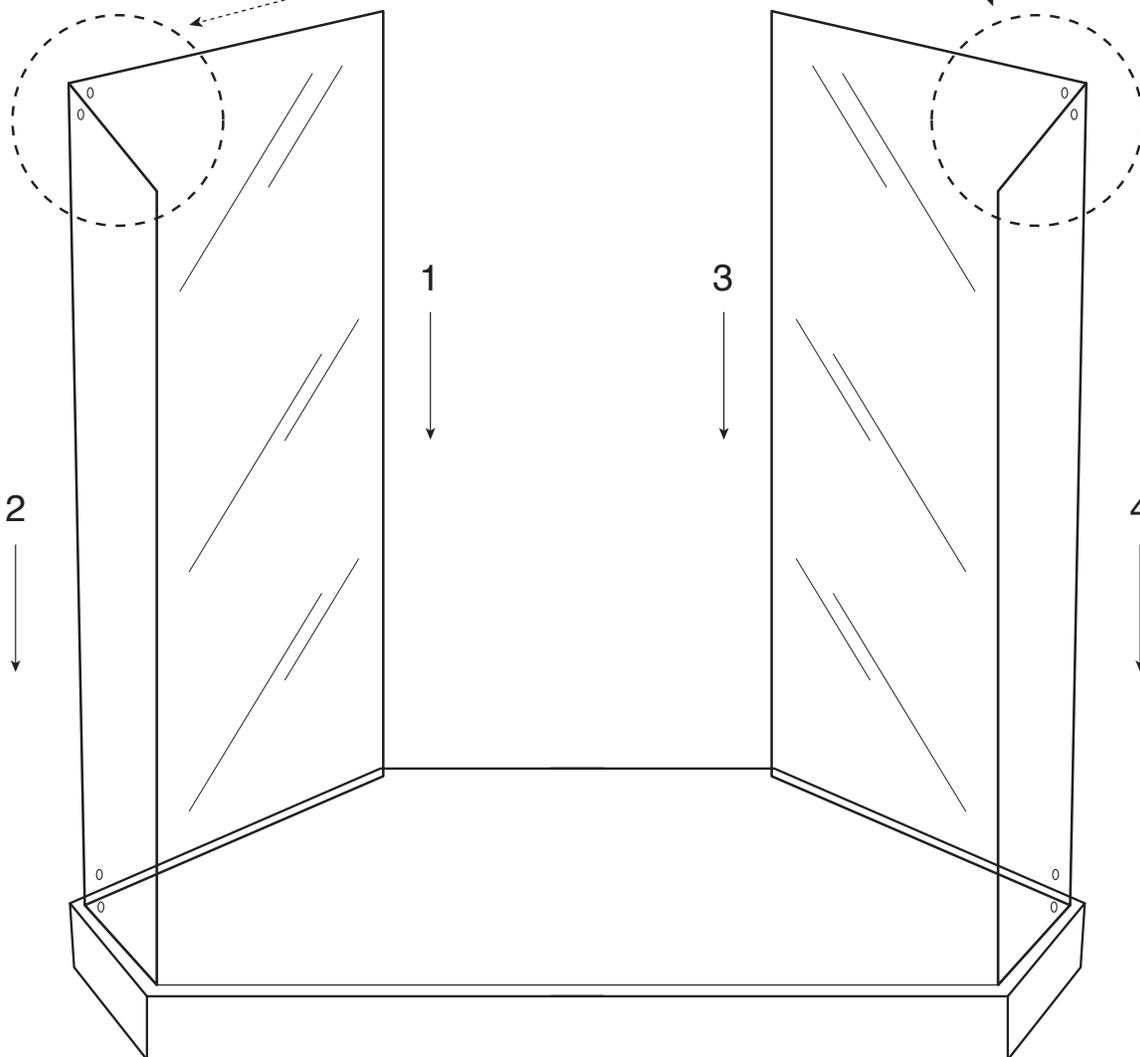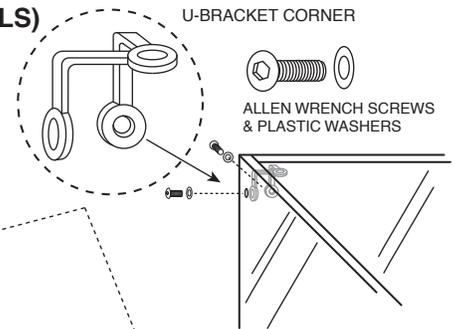


ASSEMBLY INSTRUCTIONS MANUAL

#65284 CORNER REAR ACCESS INFINITY SHOWCASE

STEP 5. PLACE FRONT PANEL INTO FRONT BASE GROOVE OF CABINET BASE. HAND SCREW IN ALL **BOTTOM** L-SHAPED BRACKETS (6).

STEP 6. HAND SCREW IN ALL **TOP** L-SHAPED BRACKETS (8).

L-SHAPED TOP BRACKETS (8)
(THREADED ON TWO SIDES)

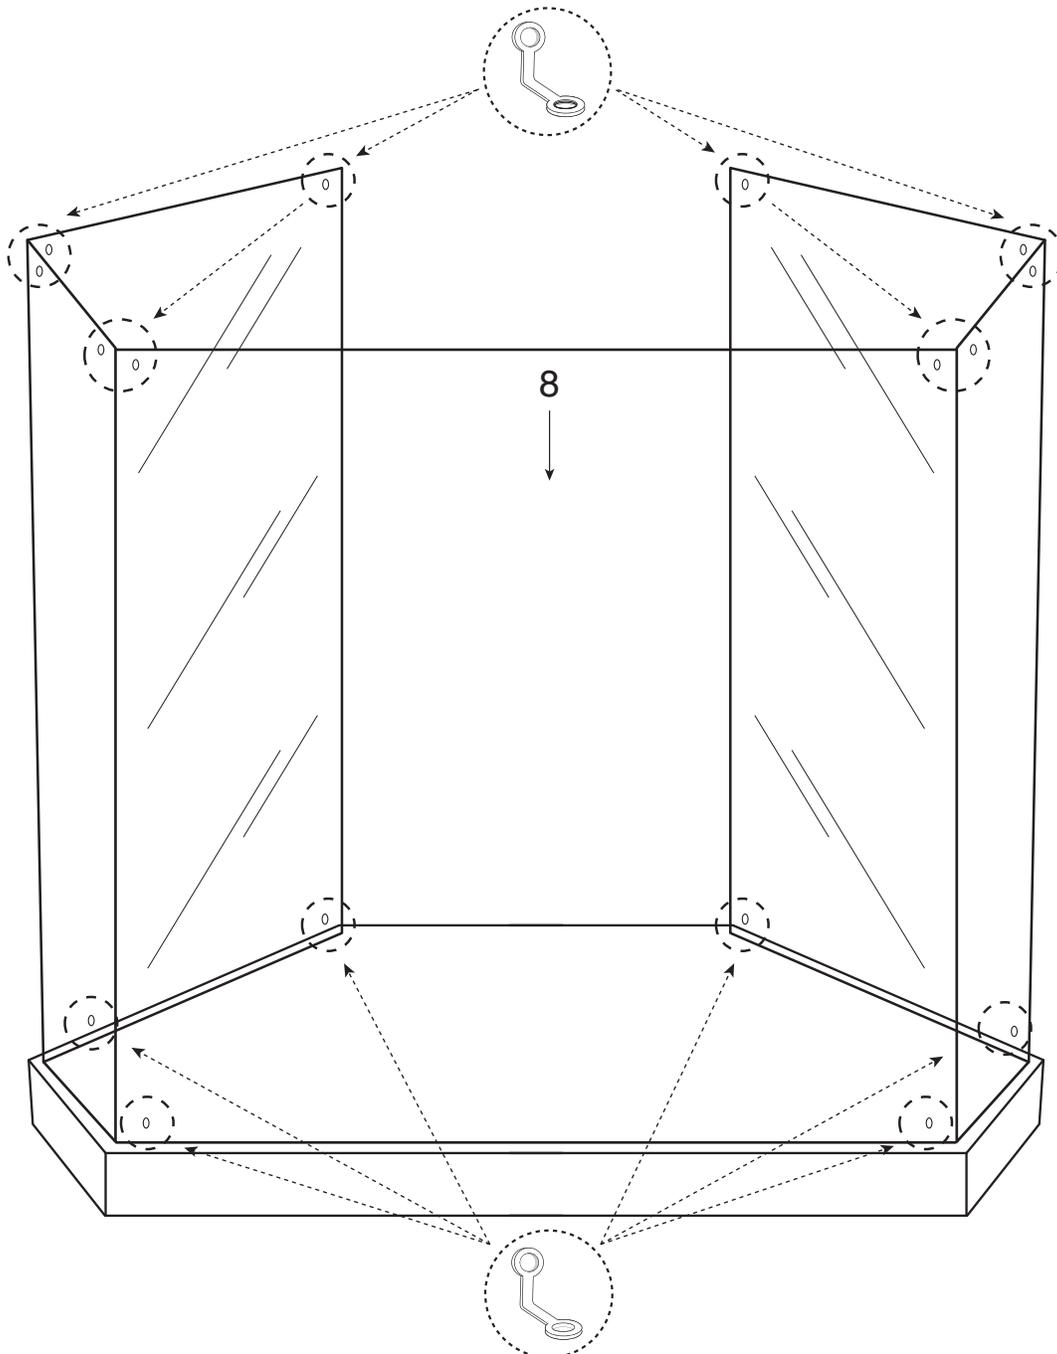


L-SHAPED BOTTOM BRACKETS (6)
(THREADED ON ONE SIDE)

ASSEMBLY INSTRUCTIONS MANUAL


#65284 CORNER REAR ACCESS INFINITY SHOWCASE

STEP 9. CAREFULLY SLIDE TOP GLASS ONTO CABINET MAKING SURE YOU HAVE AN OVERLAP ON ALL SIDES.

STEP 10. SCREW ALLEN SCREWS (WITH PLASTIC WASHERS) INTO U-BRACKETS (2) AND L-BRACKETS (6) ON TOP. **(DO NOT OVER TIGHTEN)**

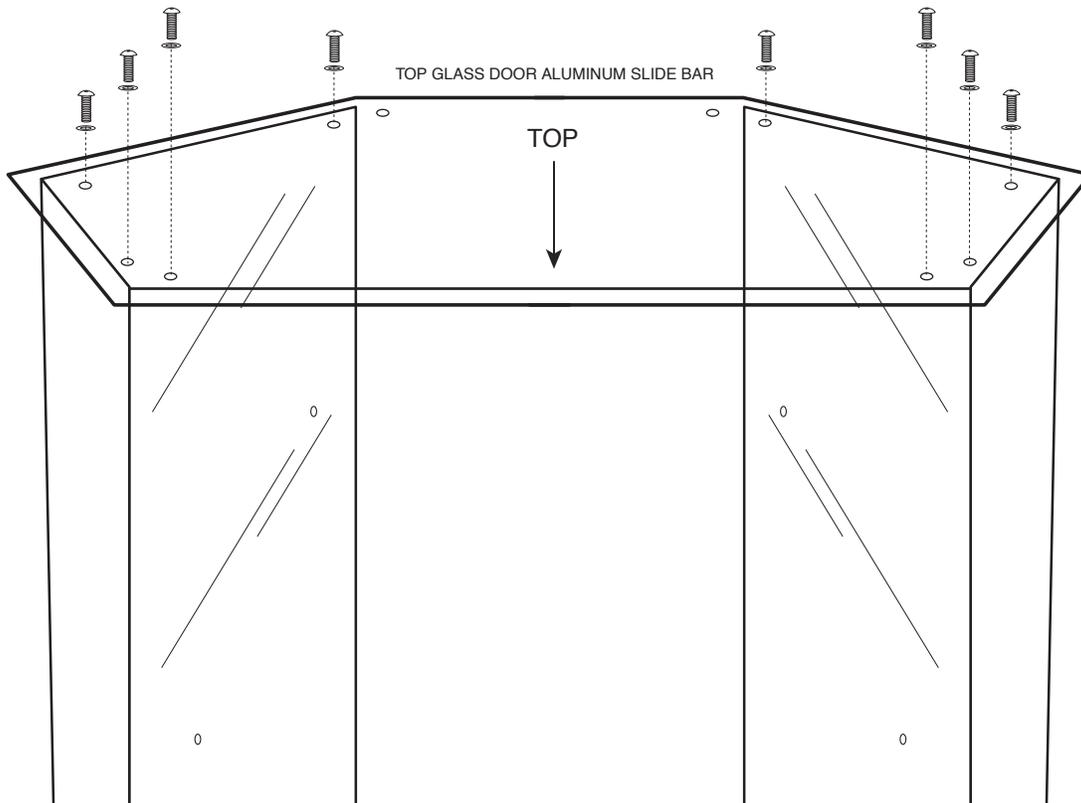


STEP 11. PLACE TOP GLASS DOOR ALUMINUM SLIDE GUIDE UNDER TOP GLASS.

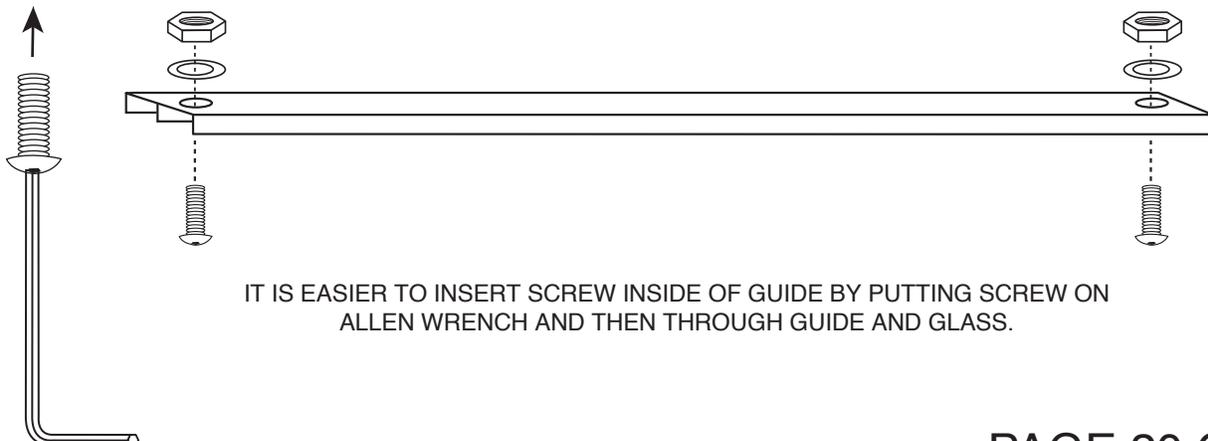

ASSEMBLY INSTRUCTIONS MANUAL

#65284 CORNER REAR ACCESS INFINITY SHOWCASE


STEP 12. INSTALL SHELVES. (YOU WILL HAVE TO INSERT THEM THROUGH THE OPENING LONG WAYS, THEN ROTATE INTO PLACE (INSERT EACH SHELF AT THE LEVEL OF THE CYLINDERS. GENTLY LOWER ONTO RUBBER GROMETS OF SUPPORTING CYLINDERS.

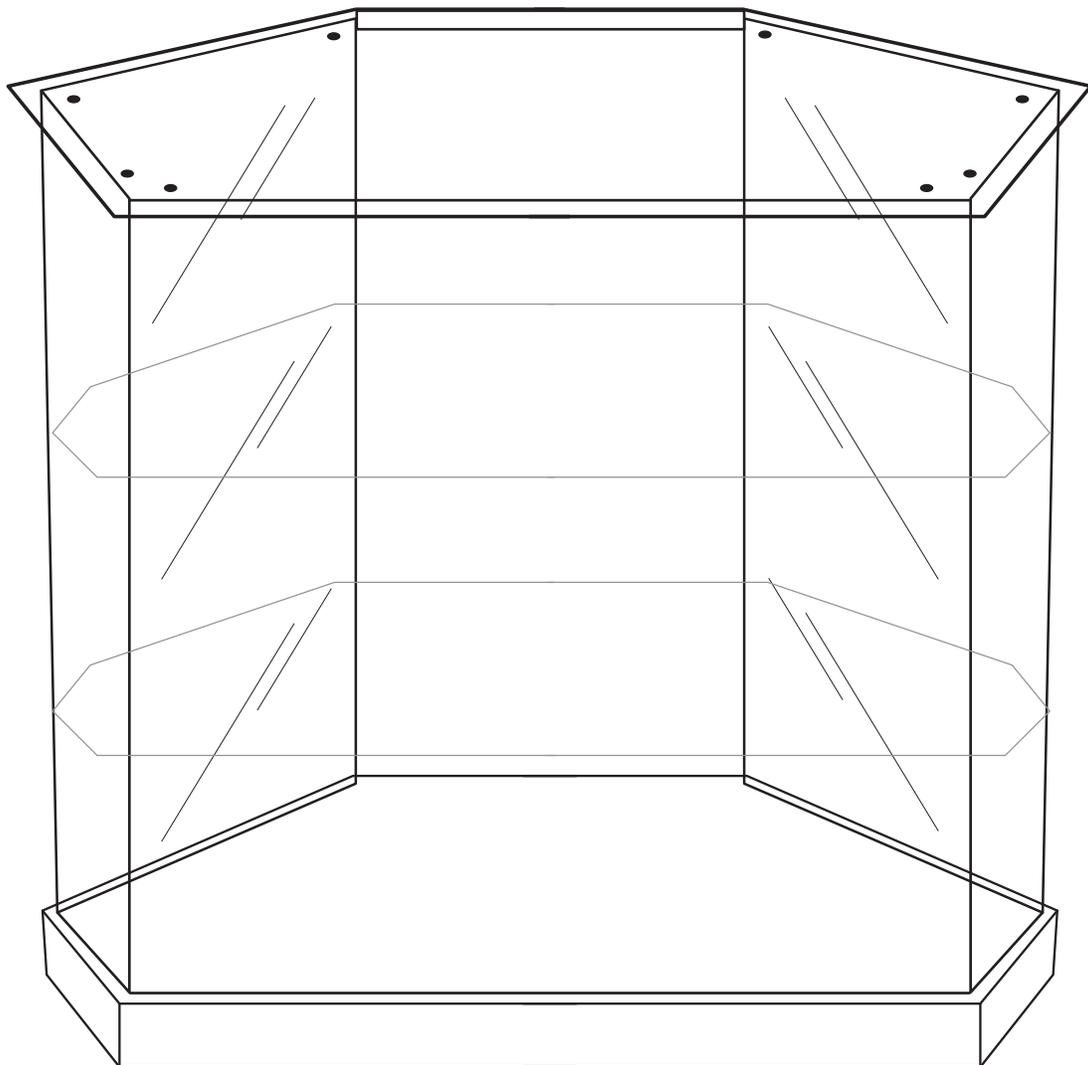

ASSEMBLY INSTRUCTIONS MANUAL


#65284 CORNER REAR ACCESS INFINITY SHOWCASE

STEP 12. INSTALLING SLIDING GLASS DOORS. PLACE CLEAR PLASTIC SLEEVES ON TOP OF GLASS DOORS. TAP ON SLEEVES WITH RUBBER Mallet.

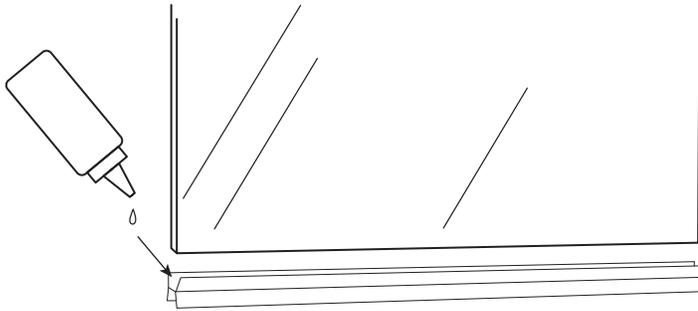


RUN BEAD OF ANY TYPE OF GLUE ON INSIDE (BOTTOM) OF TOP PLASTIC SLEEVE. THEN TAP SLEEVES ON TOP OF THE GLASS WITH A RUBBER Mallet.

THIS PREVENTS THE SLEEVES FROM MOVING ONCE ASSEMBLY IS COMPLETE AND DOORS ARE MOVED.

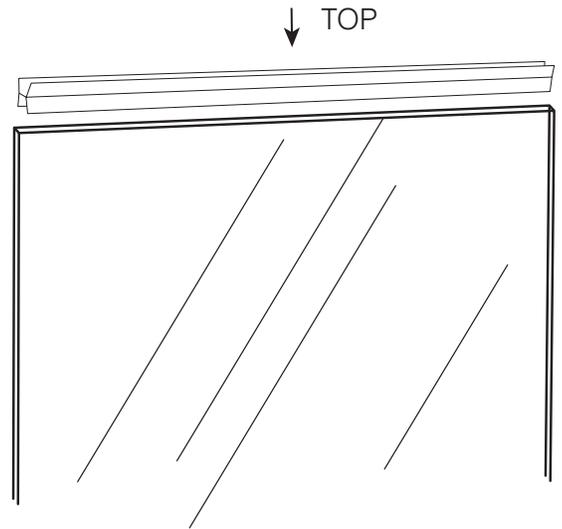


PLACE METAL SLEEVES (WITH LOCK TO THE LEFT) ON BOTTOM OF GLASS DOORS. TAP ON SLEEVES WITH RUBBER Mallet.

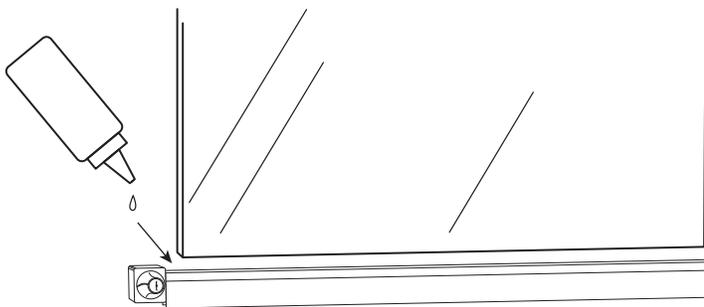

RUN BEAD OF ANY TYPE OF GLUE ON INSIDE (TOP) OF BOTTOM METAL SLEEVE. THEN TAP SLEEVES ON BOTTOM OF THE GLASS WITH A RUBBER Mallet.

THIS PREVENTS THE SLEEVES FROM MOVING ONCE ASSEMBLY IS COMPLETE AND DOORS ARE MOVED.

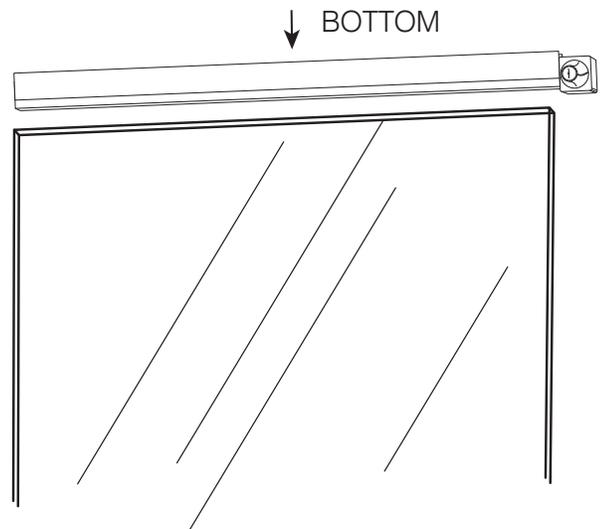

ASSEMBLY INSTRUCTIONS MANUAL

#65284 CORNER REAR ACCESS INFINITY SHOWCASE

STEP 13. INSERT LEFT DOOR (WITHOUT LOCK - MAKE SURE HOLE IN BOTTOM METAL SLEEVE IS FACING YOU / ON THE RIGHT) INTO TOP OF BACK TRACK, THEN LOWER INTO BOTTOM BACK TRACK AND SLIDE TO THE LEFT.

INSERT RIGHT DOOR (INSTALLED LOCK ASSEMBLY ON THE LEFT) INTO TOP OF FRONT TRACK, THEN LOWER INTO BOTTOM FRONT TRACK AND SLIDE TO THE RIGHT.

THIS COMPLETES THE ASSEMBLY.

