


ASSEMBLY INSTRUCTIONS MANUAL

#65285 CORNER FILLER INFINITY SHOWCASE


A. #65288 WITH LIGHTS (P. 1-13)
B. WITHOUT LIGHTS (P. 14-24)

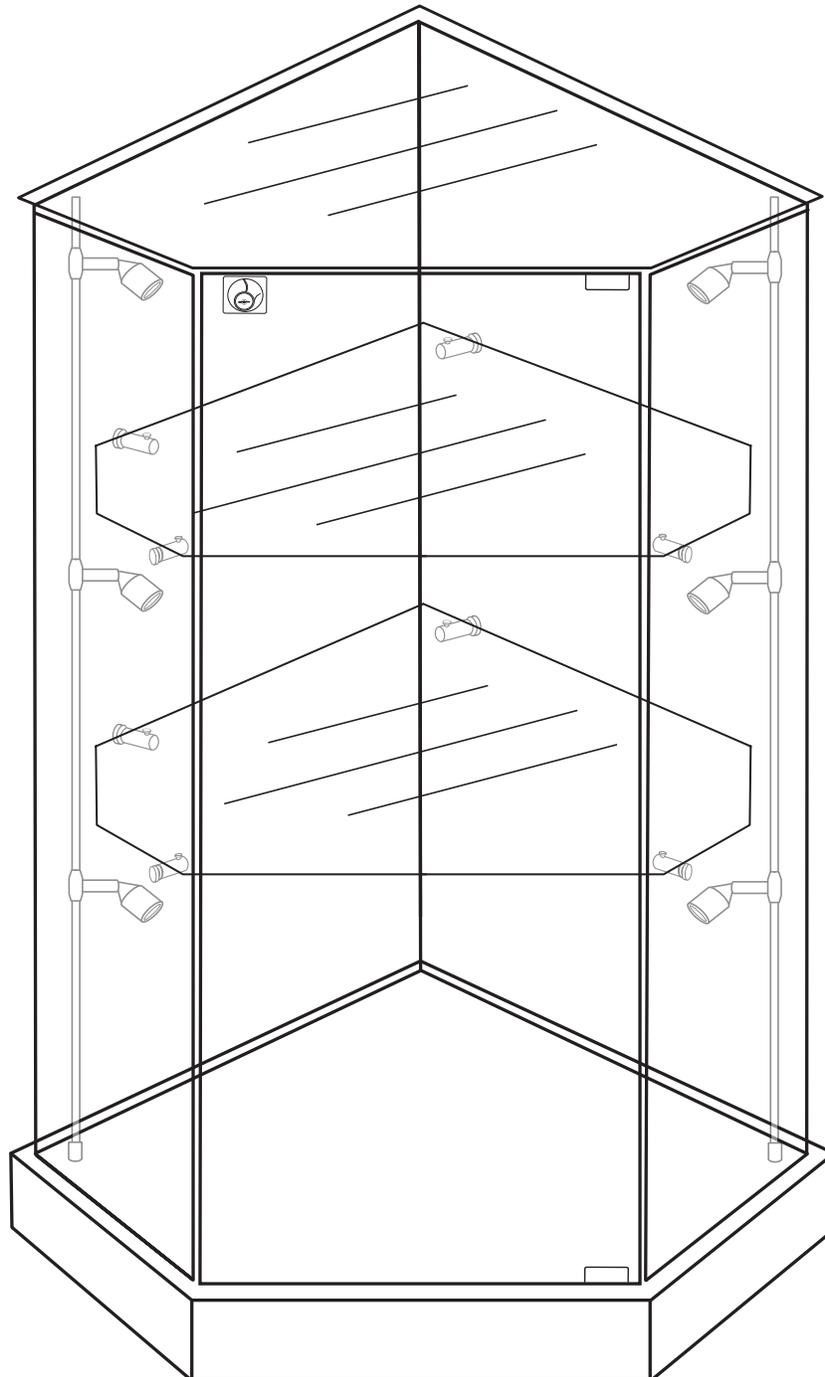

ASSEMBLY INSTRUCTIONS MANUAL

#65285/288 CORNER FILLER INFINITY SHOWCASE W/LIGHTS


RECOMMENDED TOOLS FOR ASSEMBLY:

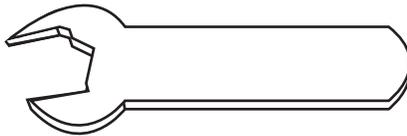

BOX WRENCH
(INCLUDED)



ALLEN WRENCH
(INCLUDED)



PHILLIPS SCREW DRIVER
(NOT INCLUDED)


PARTS IN CARTON:




ALLEN WRENCH SCREWS
(28 EACH / 2 ARE 1" FOR LIGHT BARS)




PLASTIC WASHERS
(21 EACH)




ROUND HEAD SCREWS
(8 EACH)




CHROME CYLINDERS
(8 EACH)

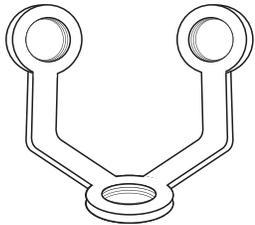

U-SHAPED CORNER BRACKETS
(4 EACH)

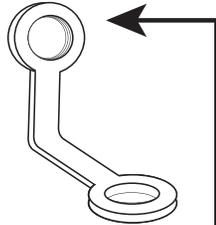

L-SHAPED BOTTOM BRACKETS
(4 EACH)
THREADED ON ONE SIDE

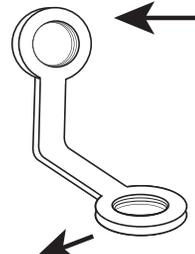


L-SHAPED FRONT TOP BRACKETS
(2 EACH)
THREADED ON TWO SIDES



CLEAR RUBBER PLUGS
(8 EACH)




METAL WASHERS
(4 EACH)

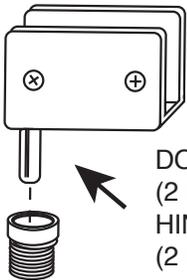

DOOR HINGES
(2 EACH)
HINGE SLEEVES
(2 EACH)

BLACK FOAM SHIM TABS
(4 EACH)

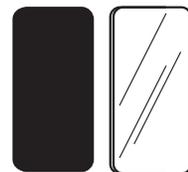

FOR DOOR HINGES


CLEAR PLASTIC SHIM TABS
(4 EACH)




NUTS
(2 EACH)

(2) SET SCREWS

CABINET LOCK
(LOCK MUST GO ON LEFT FRONT DOOR)

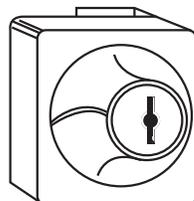


FRONT

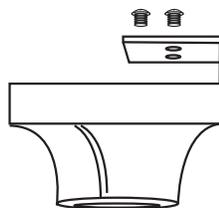

SIDE

(2) KEYS

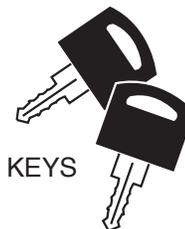

ASSEMBLY INSTRUCTIONS MANUAL

#65285/288 CORNER FILLER INFINITY SHOWCASE W/LIGHTS




PARTS IN CARTON:

CAREFULLY REMOVE CABINET PIECES FROM PACKING. CABINET SETUP INCLUDES:

- (2 EACH) LIGHT BARS
- (2 EACH - LEFT & RIGHT) BACK GLASS
- (2 EACH - LEFT & RIGHT) SIDE GLASS
- (2 EACH) SHELF GLASS
- GLASS DOOR / GLASS TOP
- FRONT STABILIZING BAR
- AC ADAPTOR & POWER CHORD
- CABINET BASE WITH ROLLERS AND DOOR STOP (PRE-ASSEMBLED)




LIGHT BAR

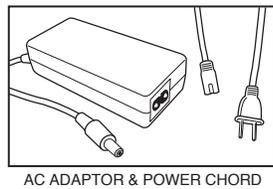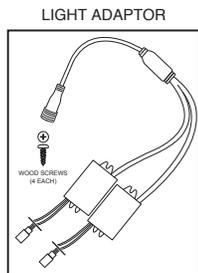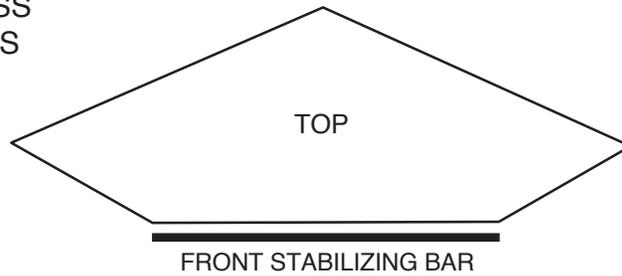

DOOR



LEFT SIDE

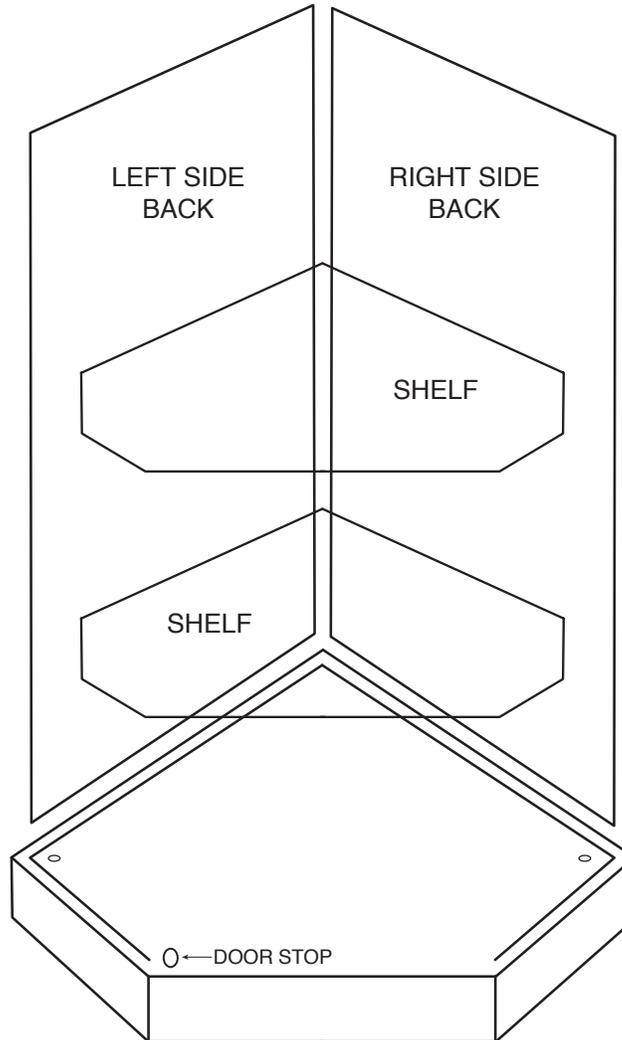

BASE




ASSEMBLY INSTRUCTIONS MANUAL

#65285/288 CORNER FILLER INFINITY SHOWCASE W/LIGHTS

* IN STEPS 1 THROUGH 7 OF THE ASSEMBLY - TWO PEOPLE ARE RECOMMENDED

STEP 1. PLACE BASE ON IT'S SIDE (PREFERABLY LONG BACK SIDE FOR STABILITY). INSERT LIGHT BARS THROUGH WASHERS, THEN LIGHT BAR HOLES AND SECURE WITH WASHER AND NUT ON BOTTOM SIDE OF BASE WITH BOX WRENCH (PROVIDED).

***NOTE -** MAKE SURE LIGHT BARS ARE FACING INWARD - TOWARDS MIDDLE OF BASE.

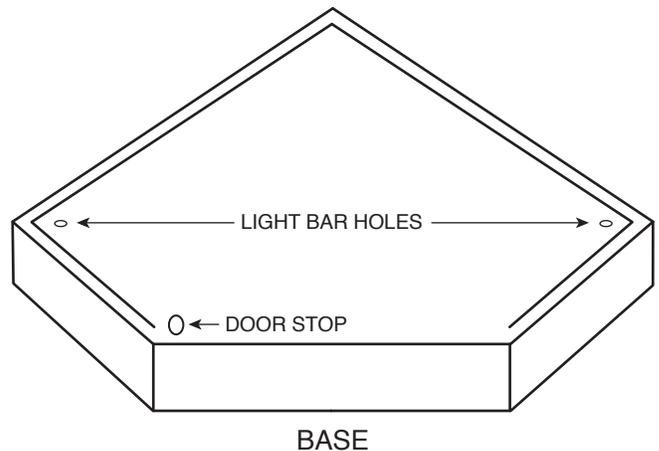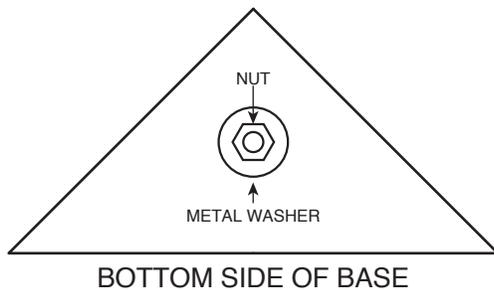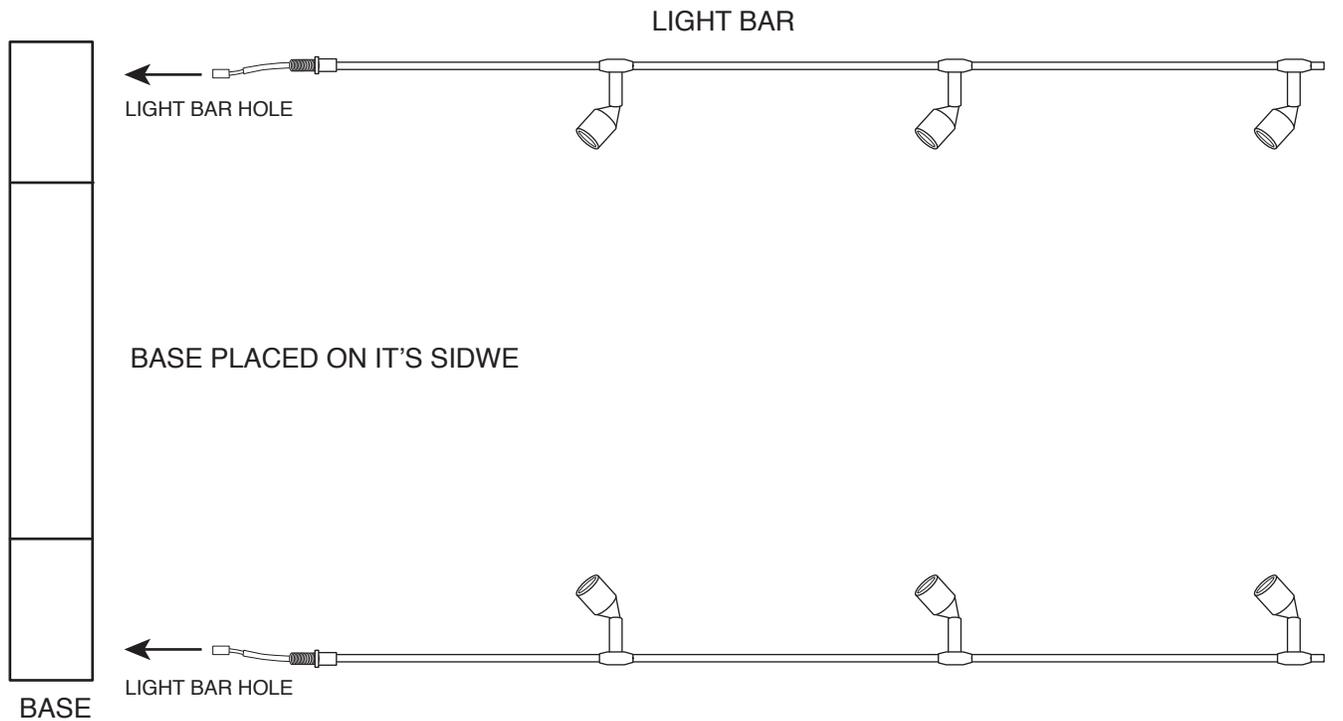


ASSEMBLY INSTRUCTIONS MANUAL

#65285/288 CORNER FILLER INFINITY SHOWCASE W/LIGHTS

STEP 2. WITH BASE ON IT'S SIDE, ATTACH LIGHT ADAPTOR TO BASE WITH WOOD SCREWS USING A SCREWDRIVER. ATTACH LIGHT ADAPTOR END TO LIGHT BARS (2).

STEP 3. ATTACH LIGHT ADAPTOR TO AC ADAPTOR/POWER CHORD. WE RECOMMEND THAT YOU ATTACH IT TO THE BASE USING TWO WAY TAPE (NOT PROVIDED). OTHERWISE LET REST ON THE FLOOR.

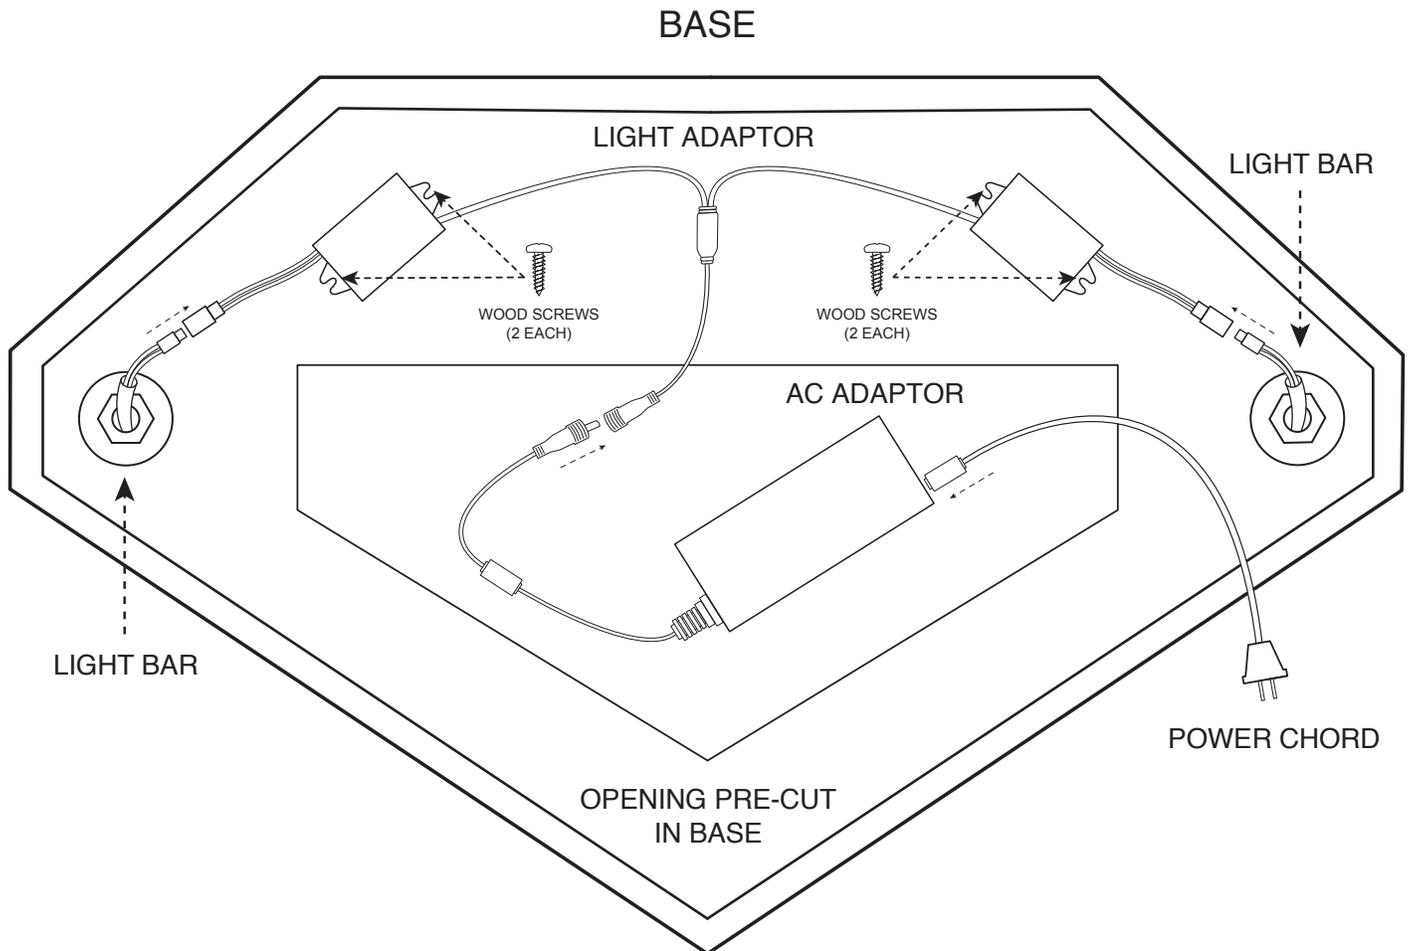


ASSEMBLY INSTRUCTIONS MANUAL

#65285/288 CORNER FILLER INFINITY SHOWCASE W/LIGHTS

IMPORTANT

BOTTOM OF BOTH BACK AND SIDE GLASS HAS A SLIGHTLY DIFFERENT HOLE PLACEMENT THAN THE TOP OF EACH PIECE OF GLASS

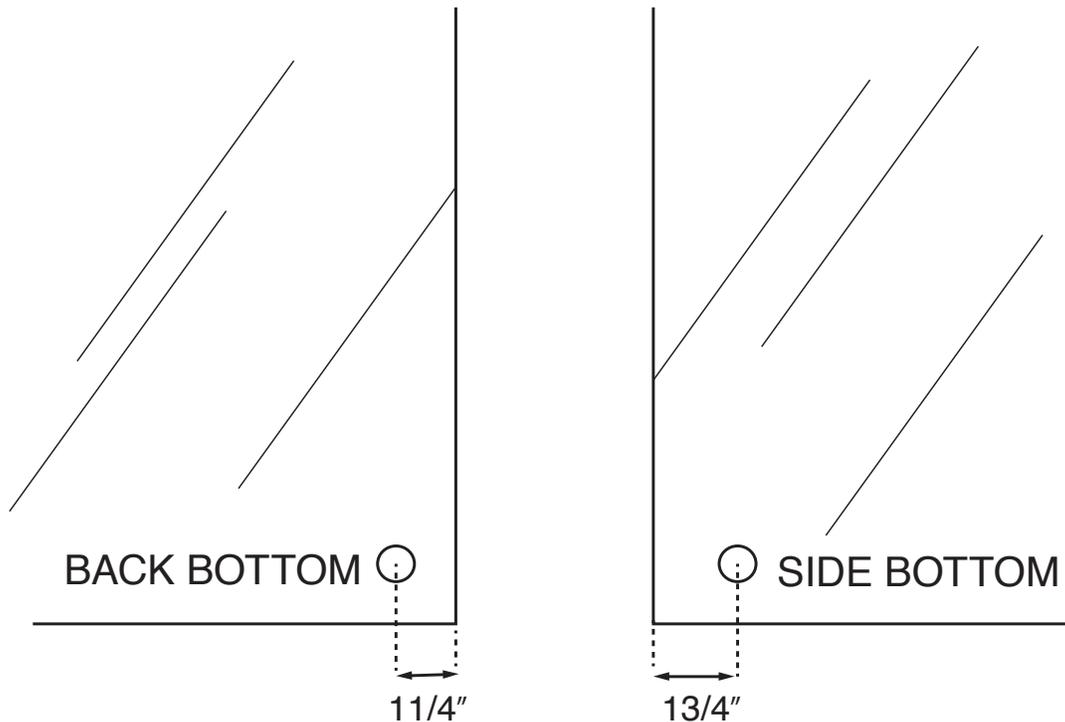

MEASURE THE GLASS SPACE BETWEEN EDGE OF GLASS AND CENTER OF HOLE. HOLE FURTHEST FROM EDGE GOES ON BOTTOM



GLASS CAN ONLY BE ASSEMBLED ONE WAY!

ASSEMBLY INSTRUCTIONS MANUAL

#65285/288 CORNER FILLER INFINITY SHOWCASE W/LIGHTS

STEP 4. PLACE LEFT SIDE BACK GLASS INTO BACK BASE GROOVE OF CABINET BASE. MAKE SURE GLASS PRECISELY FITS BACK BASE GROOVE IN ORDER TO ACCOMODATE THE RIGHT SIDE BACK PANEL NEXT. MAKE CERTAIN ON BOTH BACK AND SIDE PANELS THAT YOU RECOGNIZE THE BOTTOM OF EACH PANEL CORRECTLY.
(SEE PREVIOUS PAGE FOR DETAILS)

STEP 5. PLACE RIGHT SIDE BACK GLASS INTO BACK BASE GROOVE. ATTACH U-BRACKET (TOP & BOTTOM) WITH ALLEN WRENCH SCREWS AND WASHERS.

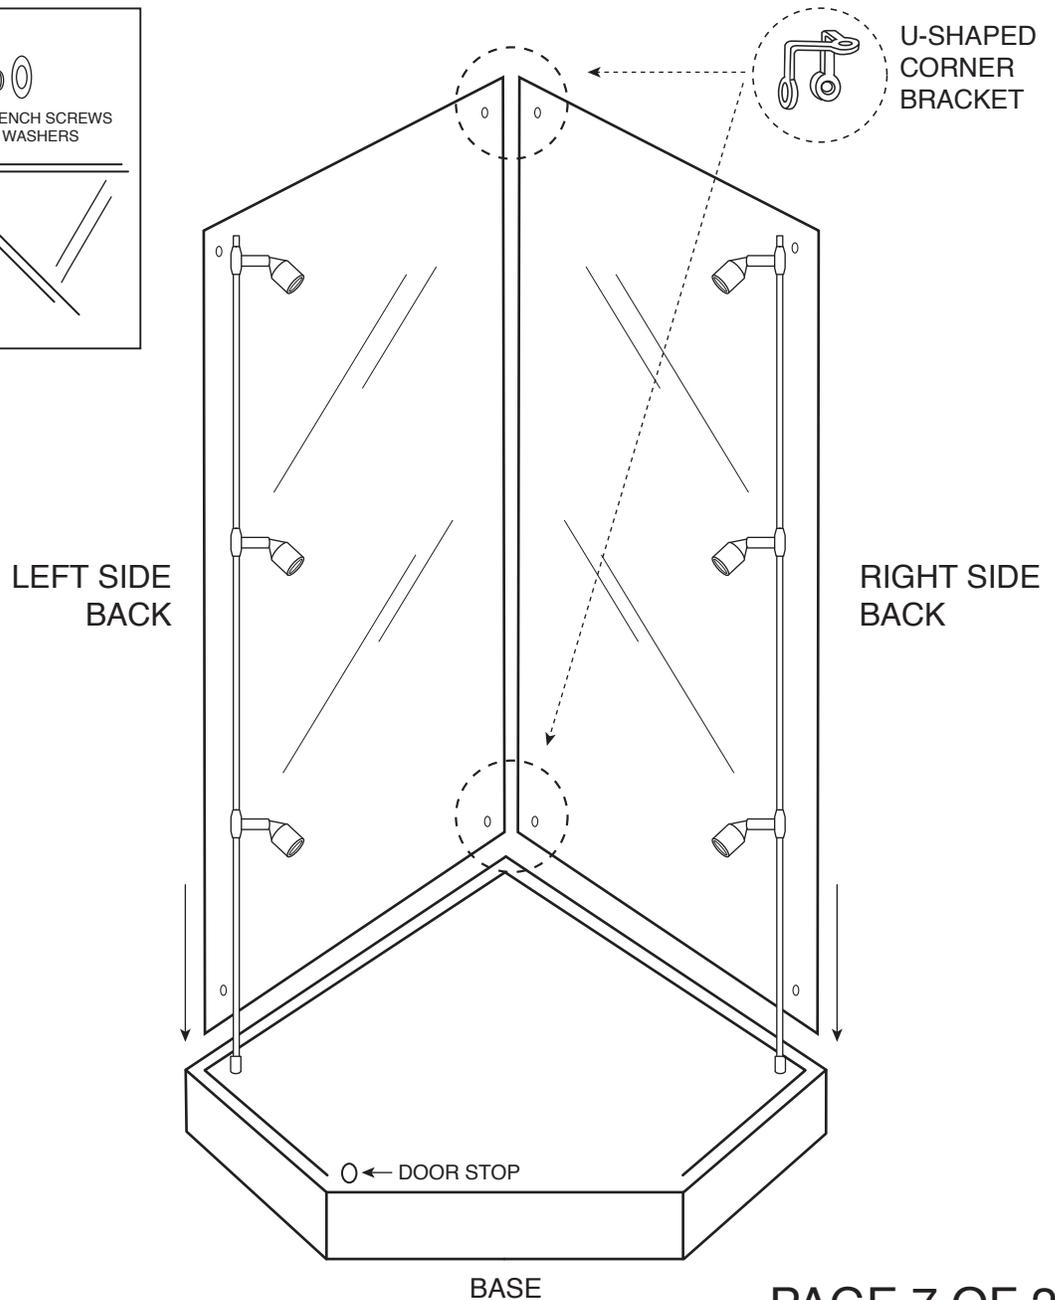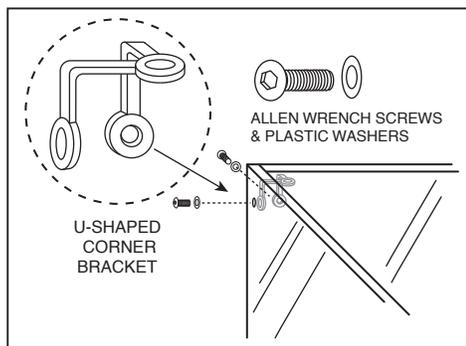


ASSEMBLY INSTRUCTIONS MANUAL

#65285/288 CORNER FILLER INFINITY SHOWCASE W/LIGHTS

STEP 6. PLACE LEFT SIDE FRONT INTO SIDE BASE GROOVE OF CABINET BASE. MAKE CERTAIN ON BOTH BACK AND SIDE PANELS THAT YOU RECOGNIZE THE BOTTOM OF EACH PANEL CORRECTLY. (SEE PAGE 6).

ATTACH U-BRACKET (TOP ONLY) WITH ALLEN WRENCH SCREWS AND WASHERS. REPEAT FOR RIGHT SIDE FRONT.

STEP 7. HAND SCREW IN ALL CORNER HARDWARE. DO NOT TIGHTEN WITH ALLEN WRENCH YET. THIS ALLOWS FLEXIBILITY UNTIL ASSEMBLY IS NEARLY COMPLETE.


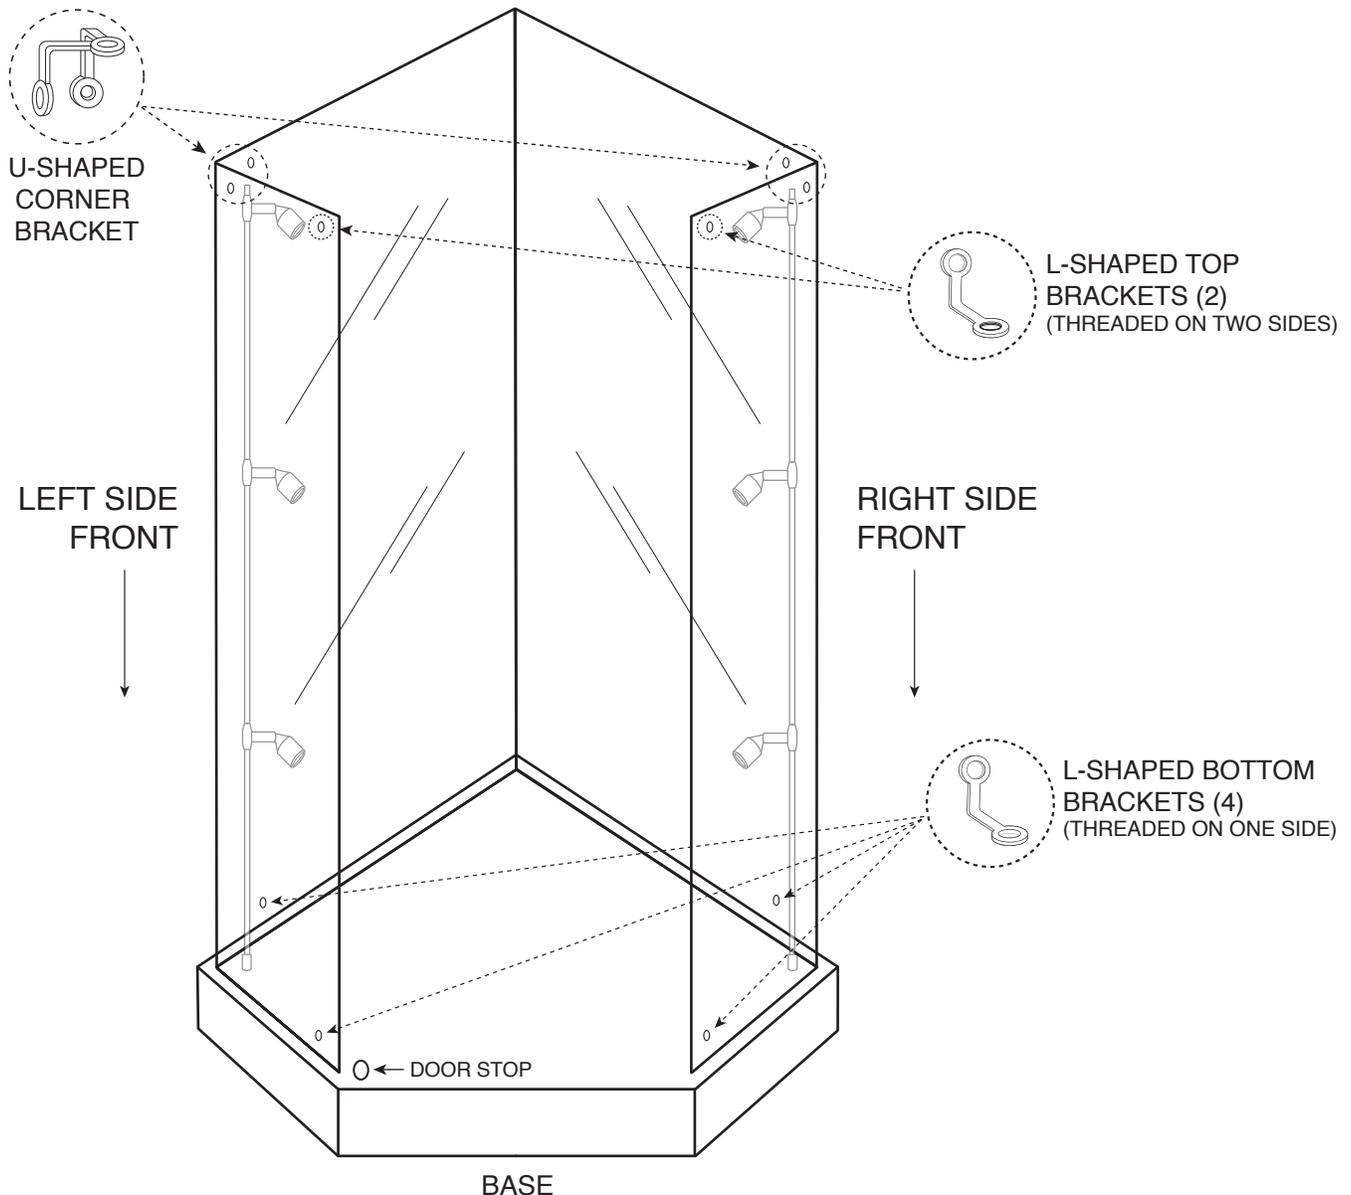


ASSEMBLY INSTRUCTIONS MANUAL

#65285/288 CORNER FILLER INFINITY SHOWCASE W/LIGHTS

STEP 8. SCREW FLAT HEAD BOLTS INTO CHROME CYLINDERS - PLACE RUBBER GROMMETS INTO HOLES (THIS SUPPORTS GLASS SHELF). (8) CYLINDERS ALL TOGETHER (4 FOR EACH SHELF).

***NOTE -** MAKE SURE RUBBER GROMMETS ARE FACING UP TO SUPPORT GLASS SHELVES.

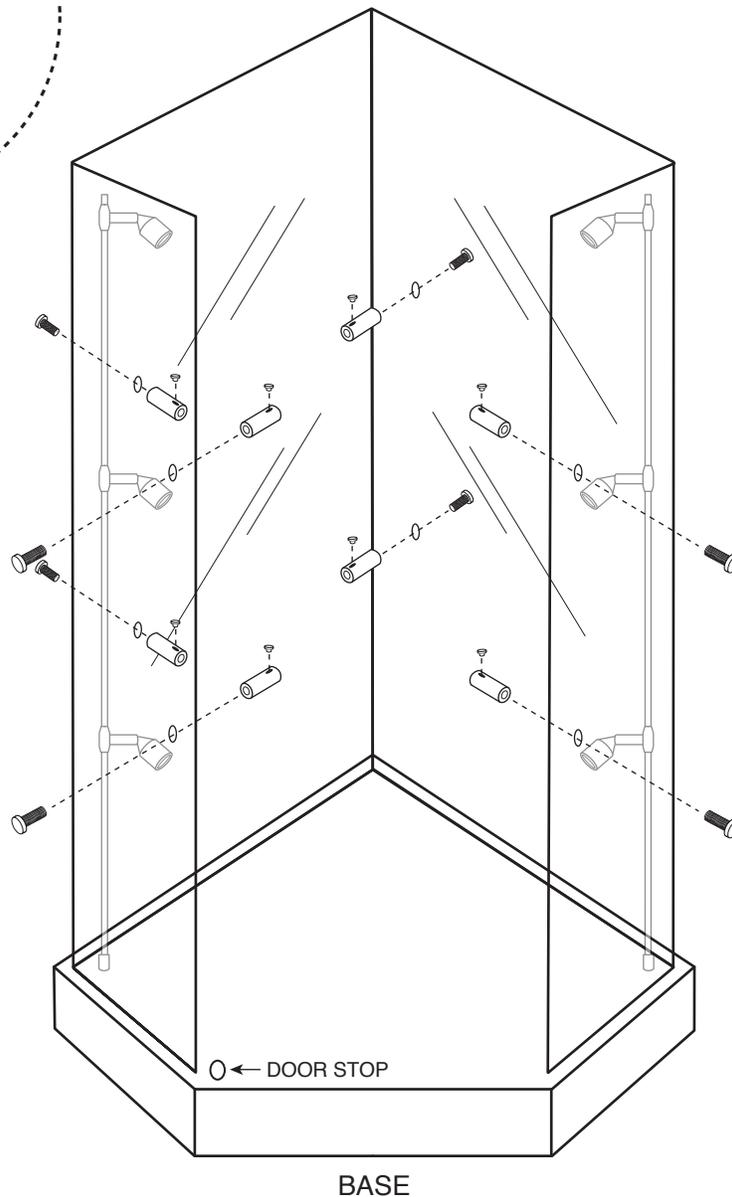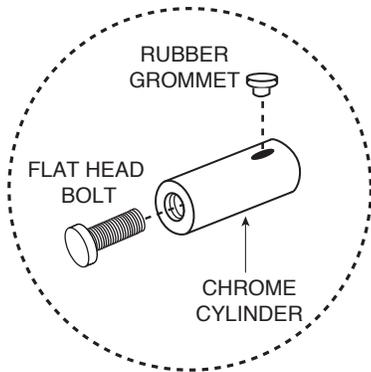


ASSEMBLY INSTRUCTIONS MANUAL

#65285/288 CORNER FILLER INFINITY SHOWCASE W/LIGHTS

STEP 9. SCREW FRONT STABILIZING BAR TO TOP GLASS TOP USING (2) ALLEN WRENCH SCREWS AND WASHERS (FLAT SIDE UP - STAINLESS STEEL GROOVE GOES TO THE FRONT WITH THE RECESSED PORTION ON THE LEFT SIDE TO ACCOMODATE THE LOCK LEVER).

STEP 10. SCREW ON TOP INTO U-BRACKETS AND L-BRACKETS.

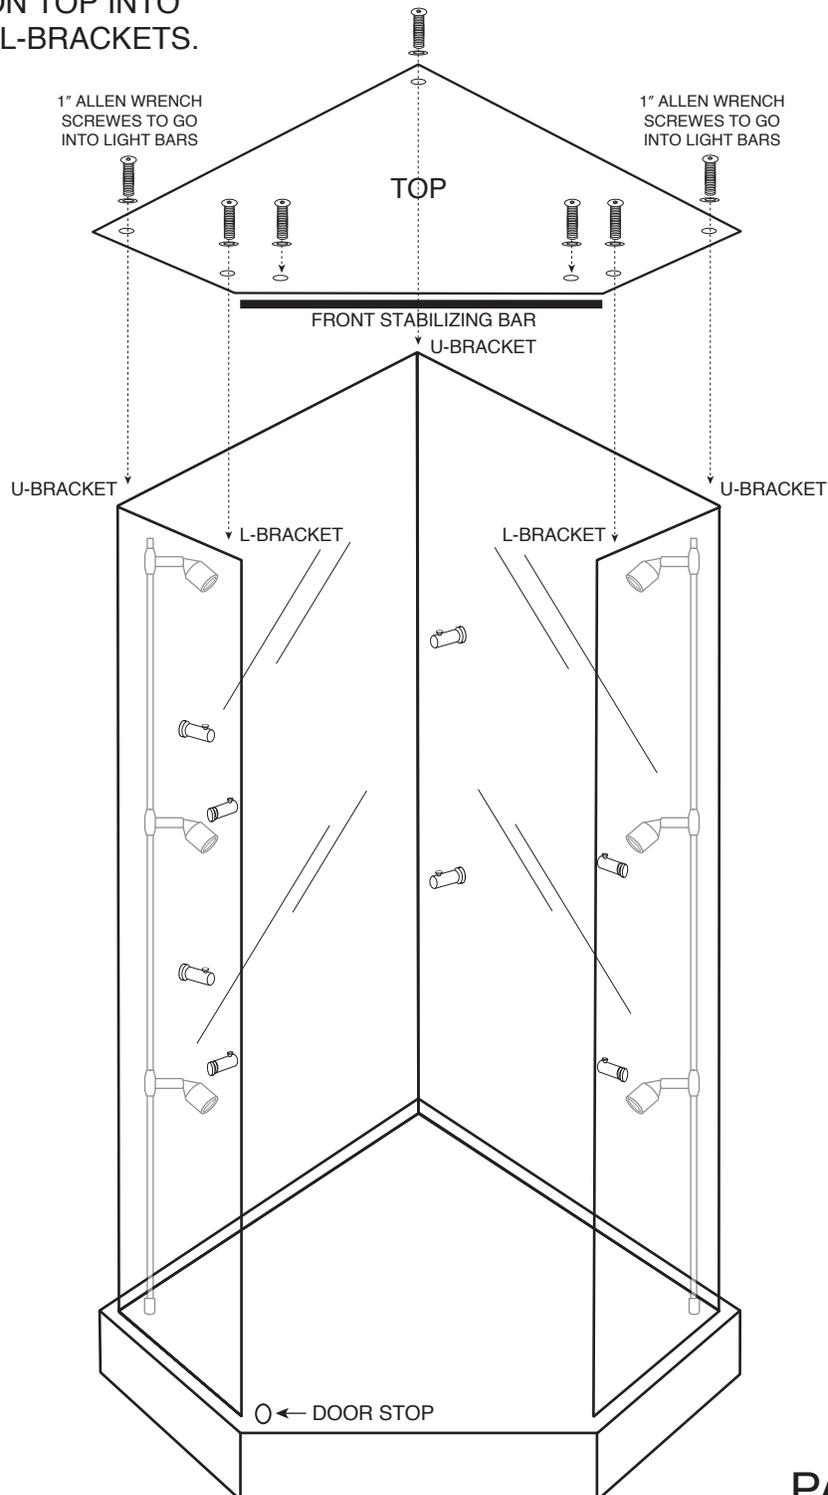


ASSEMBLY INSTRUCTIONS MANUAL


#65285/288 CORNER FILLER INFINITY SHOWCASE W/LIGHTS

STEP 11. WHEN INSERTING HINGE DOOR PIN INTO ASSEMBLY - INSERT SLEEVE INTO BASE AND THEN INTO STABILIZING BAR (TOP) - SLIDE DOOR PIN INTO SLEEVE TO STABILIZE DOOR. INSERT TOP DOOR PIN INTO GLASS TOP.


ATTACH DOOR SLEEVES APPROXIMATELY 1/16" FROM EDGE OF GLASS.

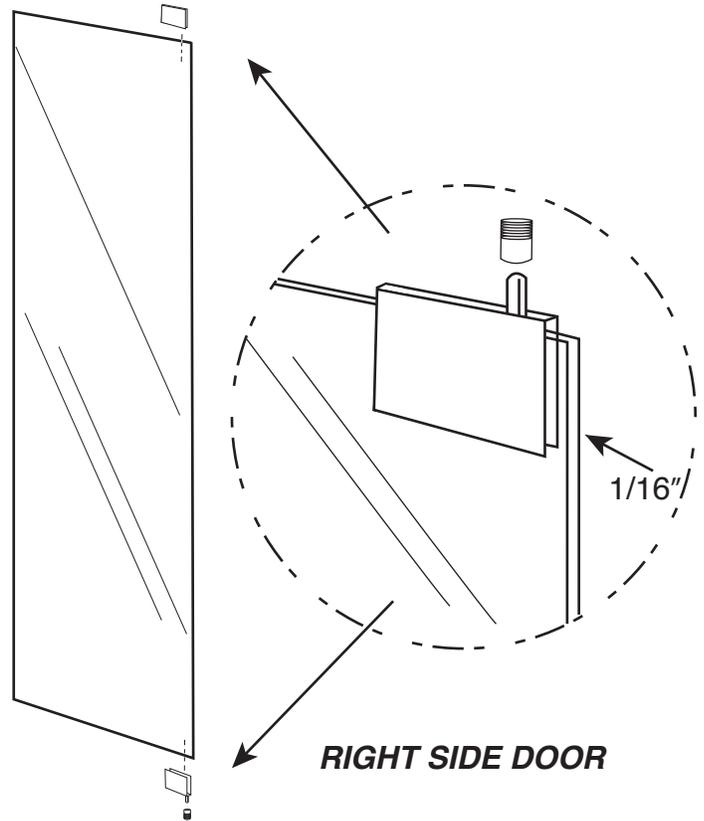

TOP RIGHT CORNER

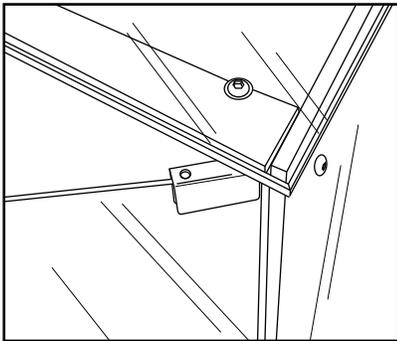

BOTTOM RIGHT CORNER

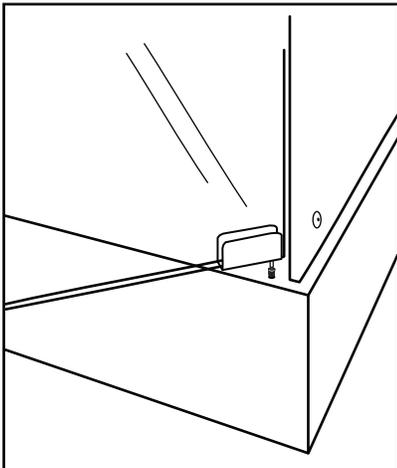


ATTACH **TOP RIGHT** OF FRONT DOOR (APPROXIMATELY 1/16" FROM EDGE OF GLASS) - **REPEAT** HINGE ASSEMBLY ON **BOTTOM**

(PLACE DROP OF GLUE ON PLASTIC TO HOLD IN PLACE)

INSERT **CLEAR PLASTIC SHIM** INSIDE HINGE TO BACK OF GLASS SIDE (AGAINST SCREWS)

SCREWS ON BACK

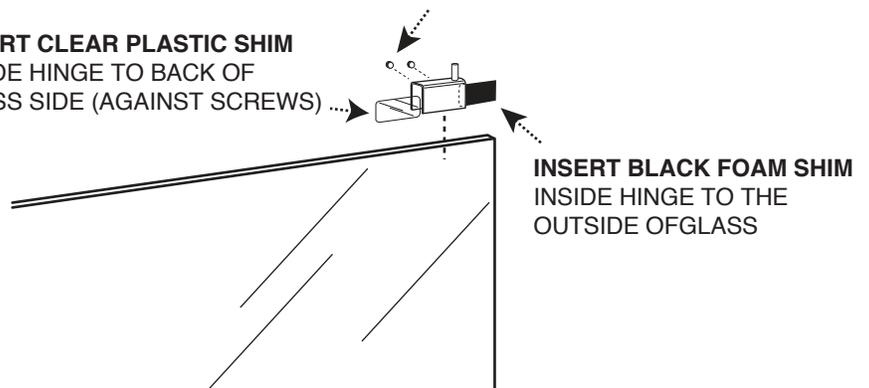


INSERT **BLACK FOAM SHIM** INSIDE HINGE TO THE OUTSIDE OF GLASS

ASSEMBLY INSTRUCTIONS MANUAL


#65285/288 CORNER FILLER INFINITY SHOWCASE W/LIGHTS

STEP 12. ATTACH THE DOOR LOCK. LOCK CAN ONLY BE ATTACHED TO THE LEFT OF DOOR

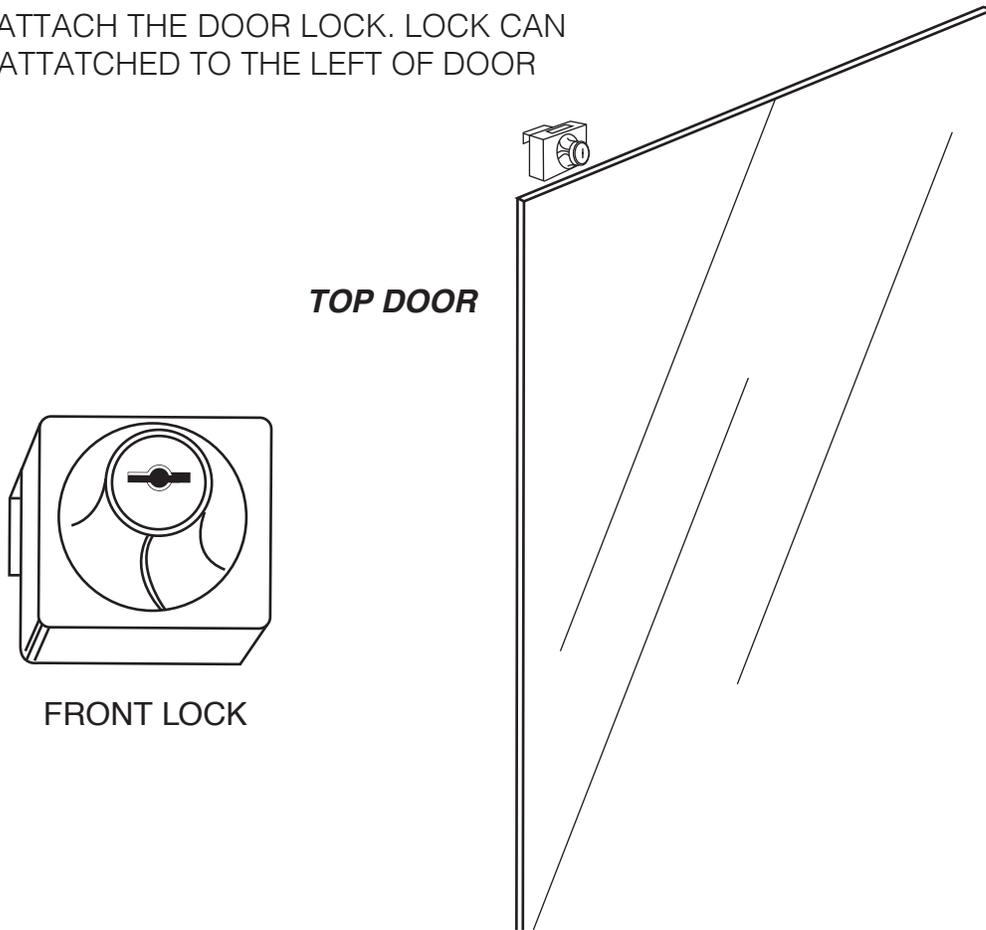

ADJUST DOOR BEFORE ATTACHING THE LOCK.
LEVEL DOOR TO SIDE GLASS BY ADJUSTING
DOOR HINGE SCREWS.

ADJUST LOCK ON DOOR SO WHEN LOCKED
THAT THE LEVER FITS INTO RECESSED
PART OF STABILIZING BAR.

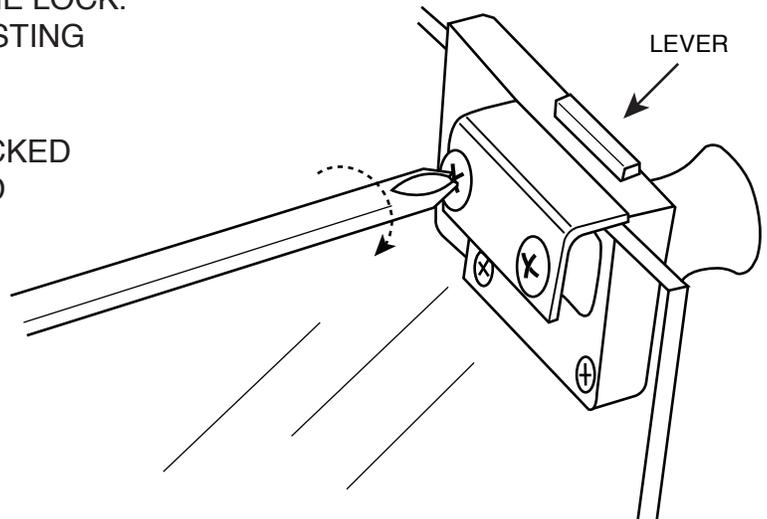


ASSEMBLY INSTRUCTIONS MANUAL

#65285/288 CORNER FILLER INFINITY SHOWCASE W/LIGHTS

STEP 13. TIGHTEN ALL ALLEN WRENCH SCREWS ONCE THE DOOR HAS BEEN INSTALLED AND OPENS AND CLOSES PROPERLY (LEVEL DOOR TO LEFT & RIDGE SIDE PANELS).


STEP 14. INSTALL SHELVES. (YOU WILL HAVE TO INSERT THEM THROUGH THE DOOR ON A ANGLE, THEN GENTLY LOWER ONTO RUBBER GROMETS OF SUPPORTING CYLINDERS.

THIS COMPLETES THE ASSEMBLY.

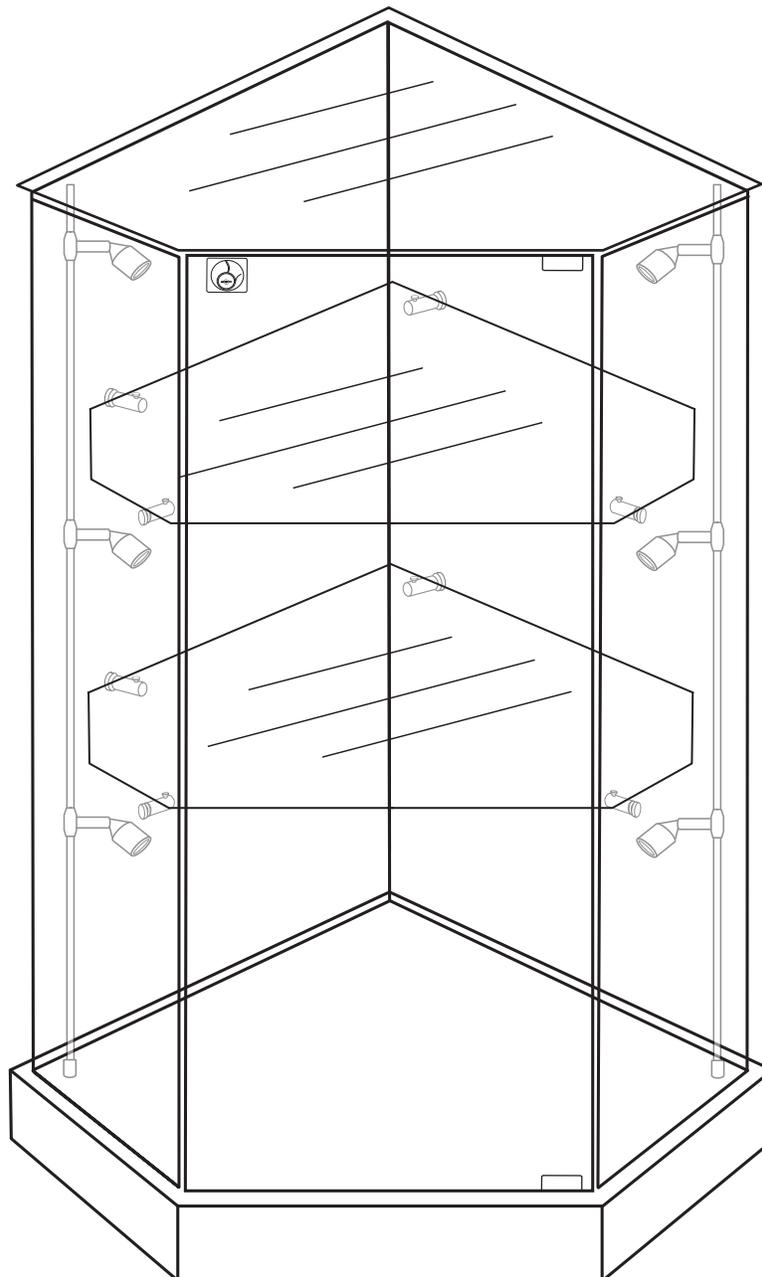

ASSEMBLY INSTRUCTIONS MANUAL


#65285 CORNER FILLER INFINITY SHOWCASE

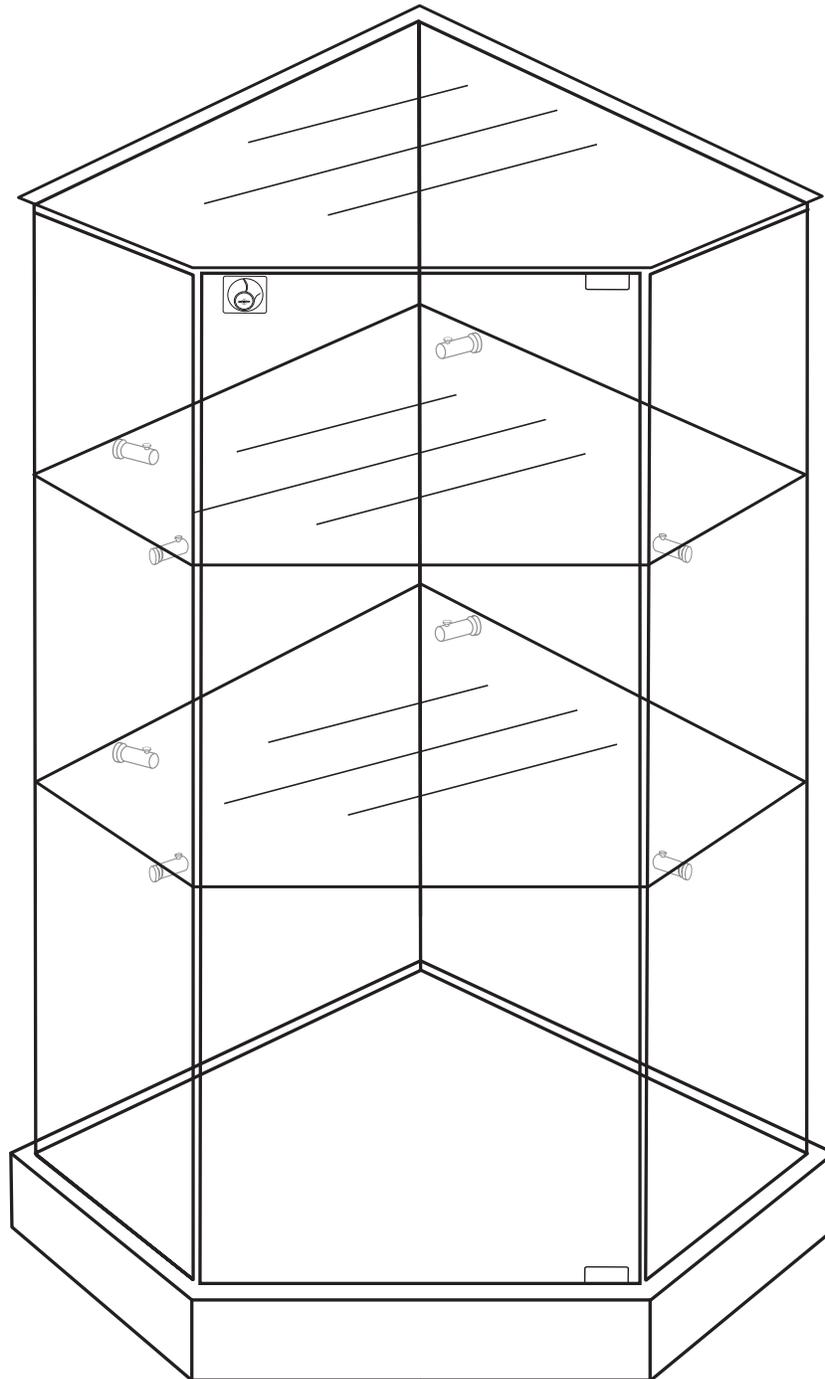

ASSEMBLY INSTRUCTIONS MANUAL

#65285 CORNER FILLER INFINITY SHOWCASE


RECOMMENDED TOOLS FOR ASSEMBLY:

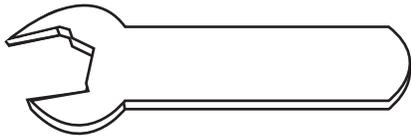

BOX WRENCH
(INCLUDED)




ALLEN WRENCH
(INCLUDED)



PHILLIPS SCREW DRIVER
(NOT INCLUDED)


PARTS IN CARTON:



ALLEN WRENCH
SCREWS
(26 EACH)



PLASTIC WASHERS
(21 EACH)




ROUND HEAD
SCREWS
(8 EACH)




CHROME CYLINDERS
(8 EACH)




CLEAR RUBBER
PLUGS
(8 EACH)

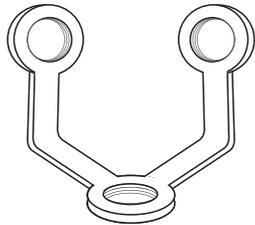


U-SHAPED
CORNER BRACKETS
(4 EACH)

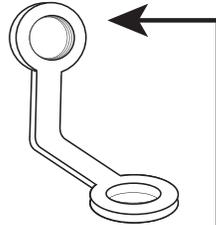

L-SHAPED
BOTTOM BRACKETS
(4 EACH)
THREADED ON ONE SIDE

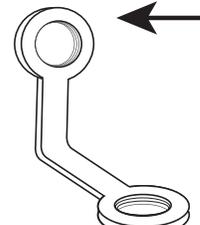


L-SHAPED
FRONT TOP BRACKETS
(2 EACH)
THREADED ON TWO SIDES

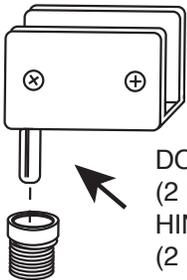

DOOR HINGES
(2 EACH)
HINGE SLEEVES
(2 EACH)

BLACK FOAM
SHIM TABS
(4 EACH)

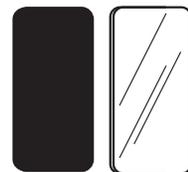


FOR DOOR HINGES

CLEAR PLASTIC
SHIM TABS
(4 EACH)




(2) SET SCREWS


CABINET LOCK
(LOCK MUST GO ON
LEFT FRONT DOOR)

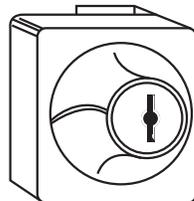

FRONT

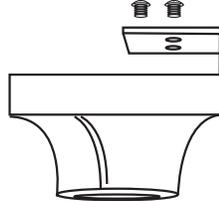

SIDE

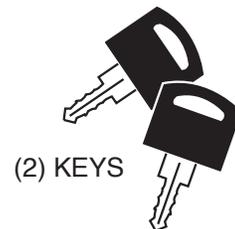

(2) KEYS


ASSEMBLY INSTRUCTIONS MANUAL

#65285 CORNER FILLER INFINITY SHOWCASE

PARTS IN CARTON:

CAREFULLY REMOVE CABINET PIECES FROM PACKING. CABINET SETUP INCLUDES:

- (2 EACH - LEFT & RIGHT) BACK GLASS
- (2 EACH - LEFT & RIGHT) SIDE GLASS
- (2 EACH) SHELF GLASS
- GLASS DOOR / GLASS TOP
- FRONT STABILIZING BAR
- CABINET BASE WITH ROLLERS AND DOOR STOP (PRE-ASSEMBLED)

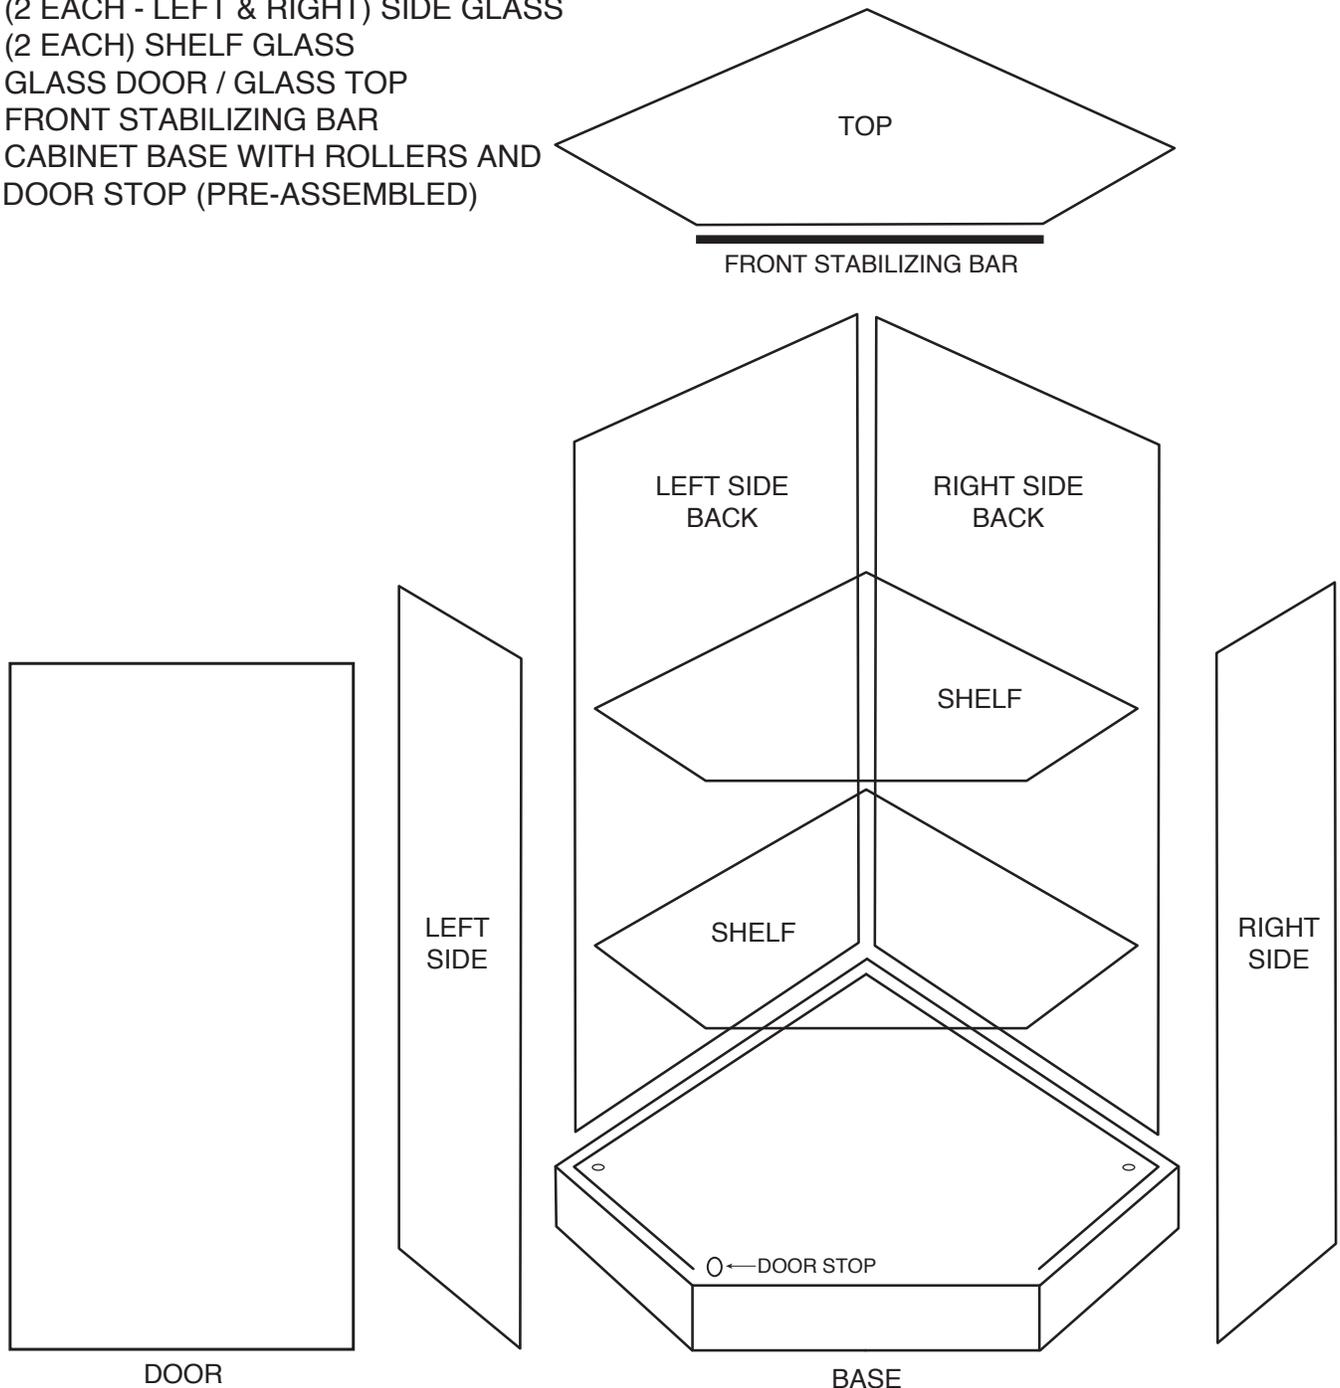


ASSEMBLY INSTRUCTIONS MANUAL

#65285 CORNER FILLER INFINITY SHOWCASE

IMPORTANT

BOTTOM OF BOTH BACK AND SIDE GLASS HAS A SLIGHTLY DIFFERENT HOLE PLACEMENT THAN THE TOP OF EACH PIECE OF GLASS

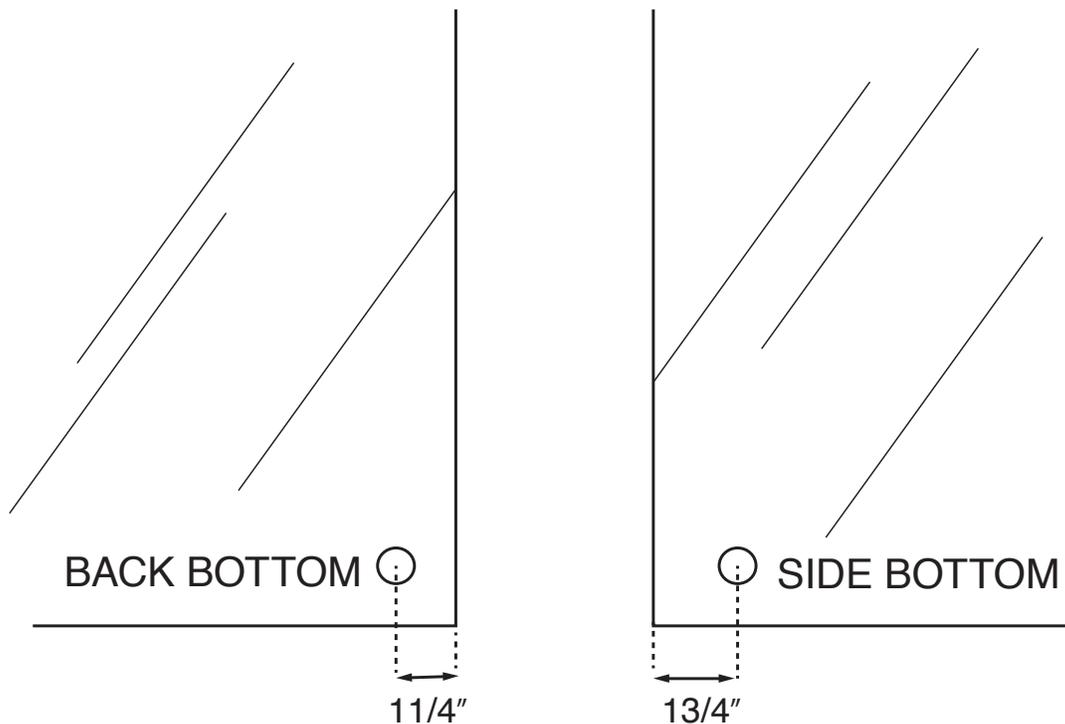

MEASURE THE GLASS SPACE BETWEEN EDGE OF GLASS AND CENTER OF HOLE. HOLE FURTHEST FROM EDGE GOES ON BOTTOM

GLASS CAN ONLY BE ASSEMBLED ONE WAY!



ASSEMBLY INSTRUCTIONS MANUAL

#65285 CORNER FILLER INFINITY SHOWCASE

*** IN STEPS 1 THROUGH 3 OF THE ASSEMBLY - TWO PEOPLE ARE RECOMMENDED**

STEP 1. PLACE LEFT SIDE BACK GLASS INTO BACK BASE GROOVE OF CABINET BASE. MAKE SURE GLASS PRECISELY FITS BACK BASE GROOVE IN ORDER TO ACCOMODATE THE RIGHT SIDE BACK PANEL NEXT. MAKE CERTAIN ON BOTH BACK AND SIDE PANELS THAT YOU RECOGNIZE THE BOTTOM OF EACH PANEL CORRECTLY. **(SEE PREVIOUS PAGE FOR DETAILS)**

STEP 2. PLACE RIGHT SIDE BACK GLASS INTO BACK BASE GROOVE. ATTACH U-BRACKET (TOP & BOTTOM) WITH ALLEN WRENCH SCREWS AND WASHERS.

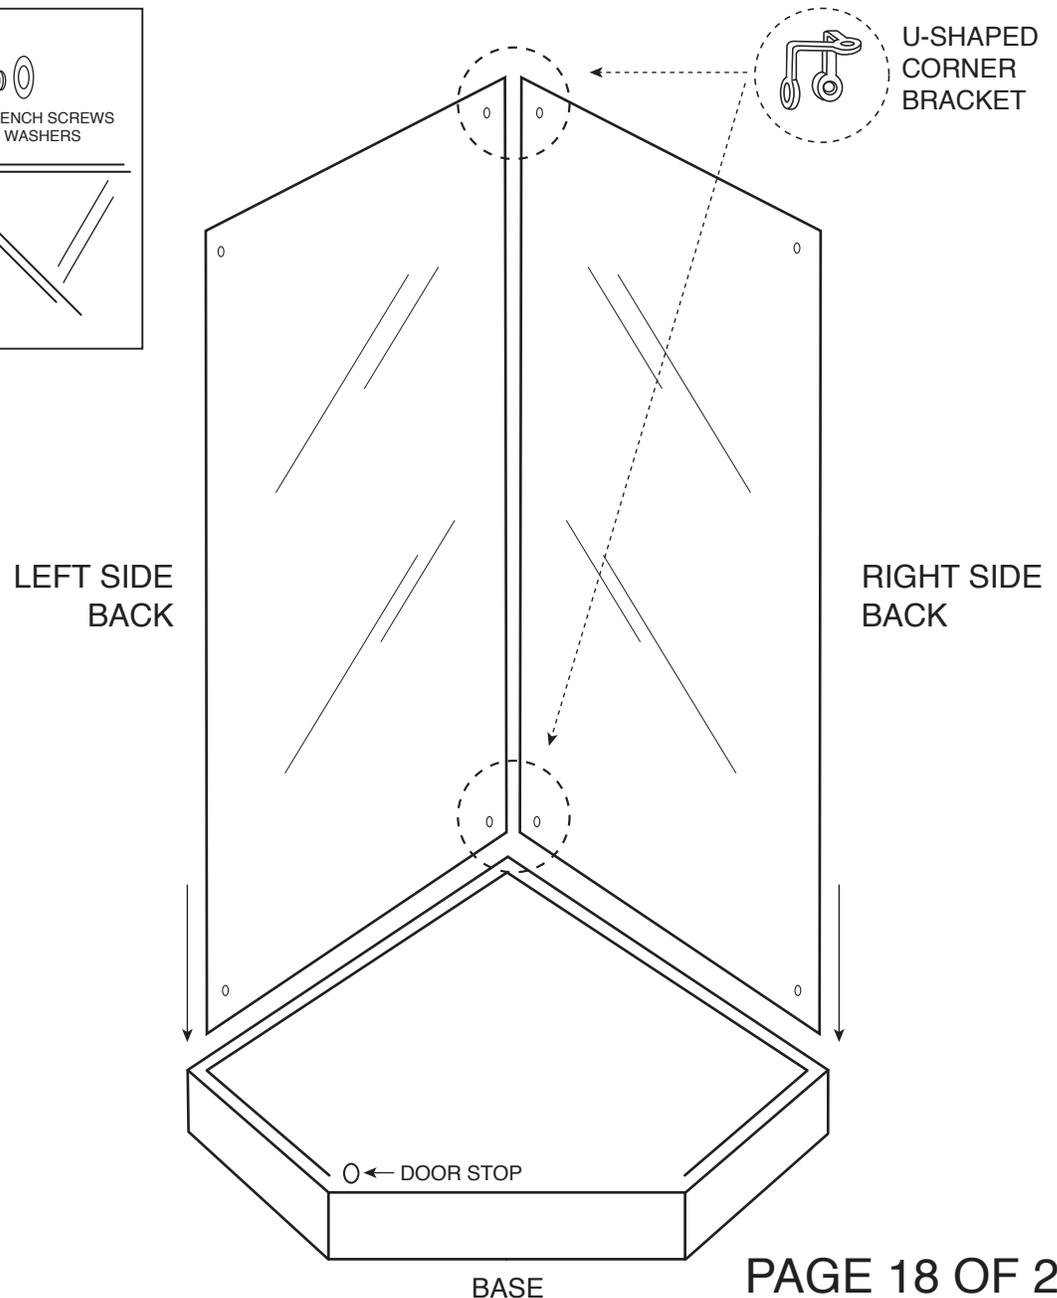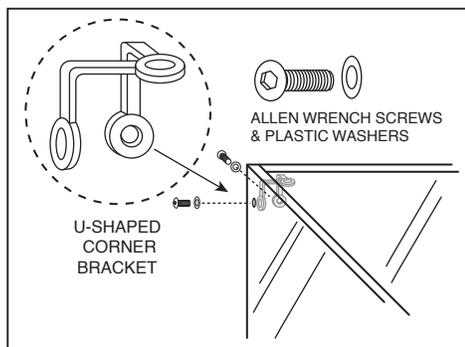


ASSEMBLY INSTRUCTIONS MANUAL

#65285 CORNER FILLER INFINITY SHOWCASE

STEP 3. PLACE LEFT SIDE FRONT INTO SIDE BASE GROOVE OF CABINET BASE. MAKE CERTAIN ON BOTH BACK AND SIDE PANELS THAT YOU RECOGNIZE THE BOTTOM OF EACH PANEL CORRECTLY. (SEE PAGE 6).

ATTACH U-BRACKET (TOP ONLY) WITH ALLEN WRENCH SCREWS AND WASHERS. REPEAT FOR RIGHT SIDE FRONT.

STEP 4. HAND SCREW IN ALL CORNER HARDWARE. DO NOT TIGHTEN WITH ALLEN WRENCH YET. THIS ALLOWS FLEXIBILITY UNTIL ASSEMBLY IS NEARLY COMPLETE.


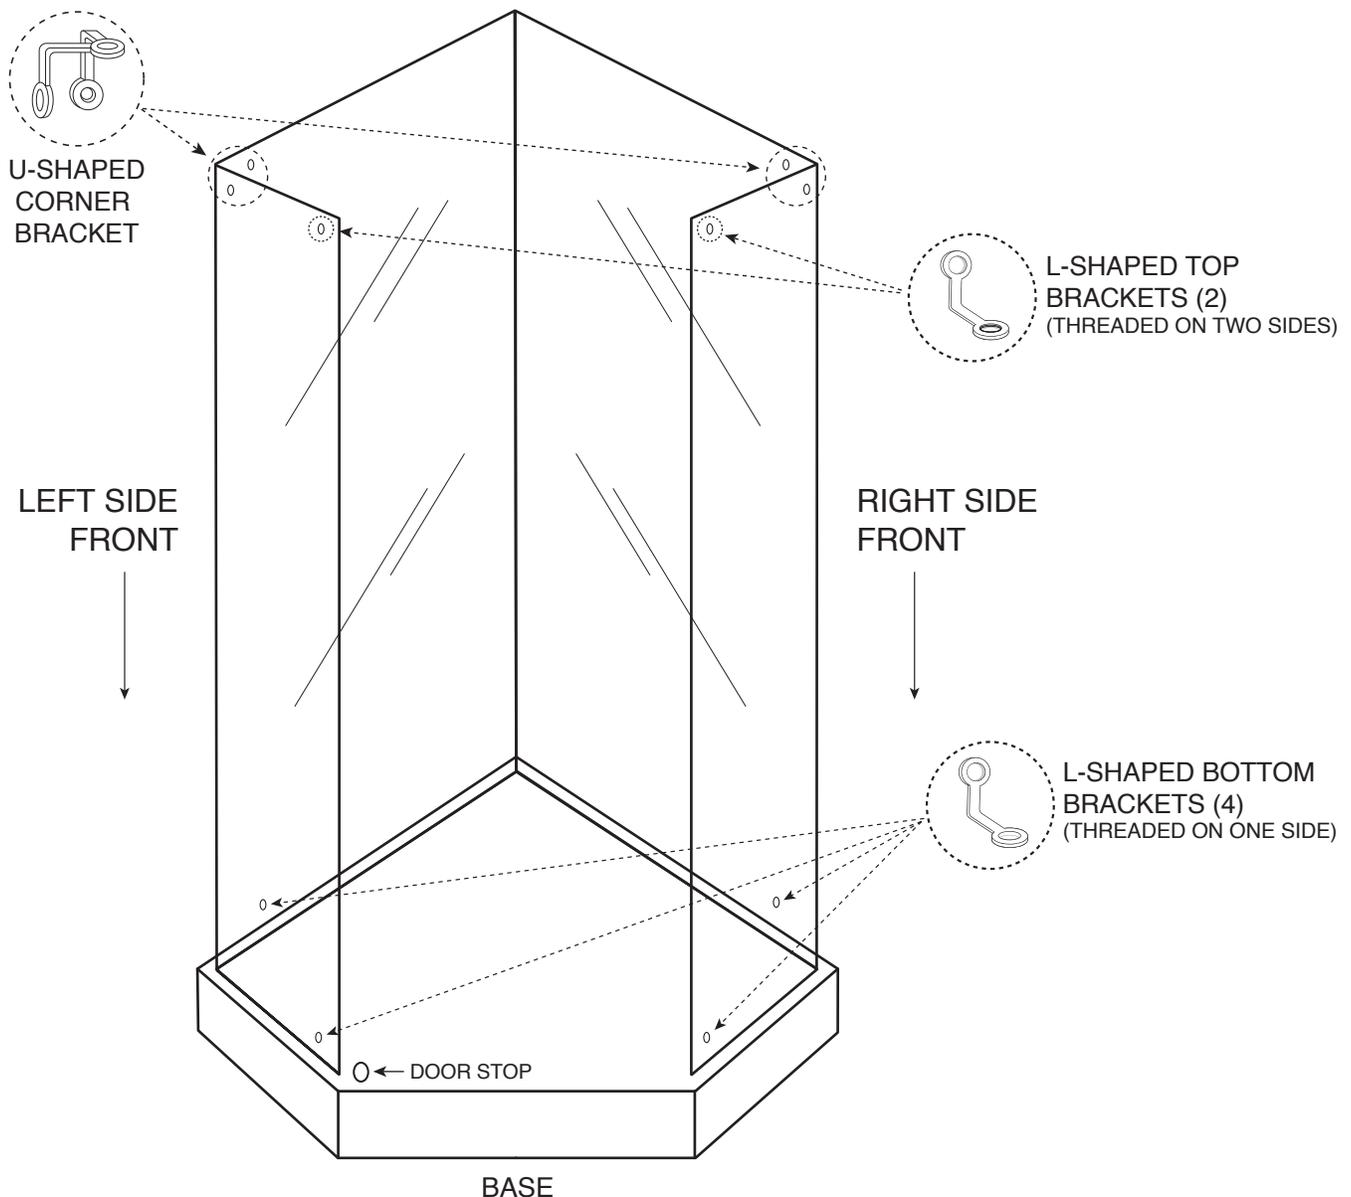


ASSEMBLY INSTRUCTIONS MANUAL

#65285 CORNER FILLER INFINITY SHOWCASE

STEP 5. SCREW FLAT HEAD BOLTS INTO CHROME CYLINDERS - PLACE RUBBER GROMMETS INTO HOLES (THIS SUPPORTS GLASS SHELF). (8) CYLINDERS ALL TOGETHER (4 FOR EACH SHELF).

***NOTE -** MAKE SURE RUBBER GROMMETS ARE FACING UP TO SUPPORT GLASS SHELVES.

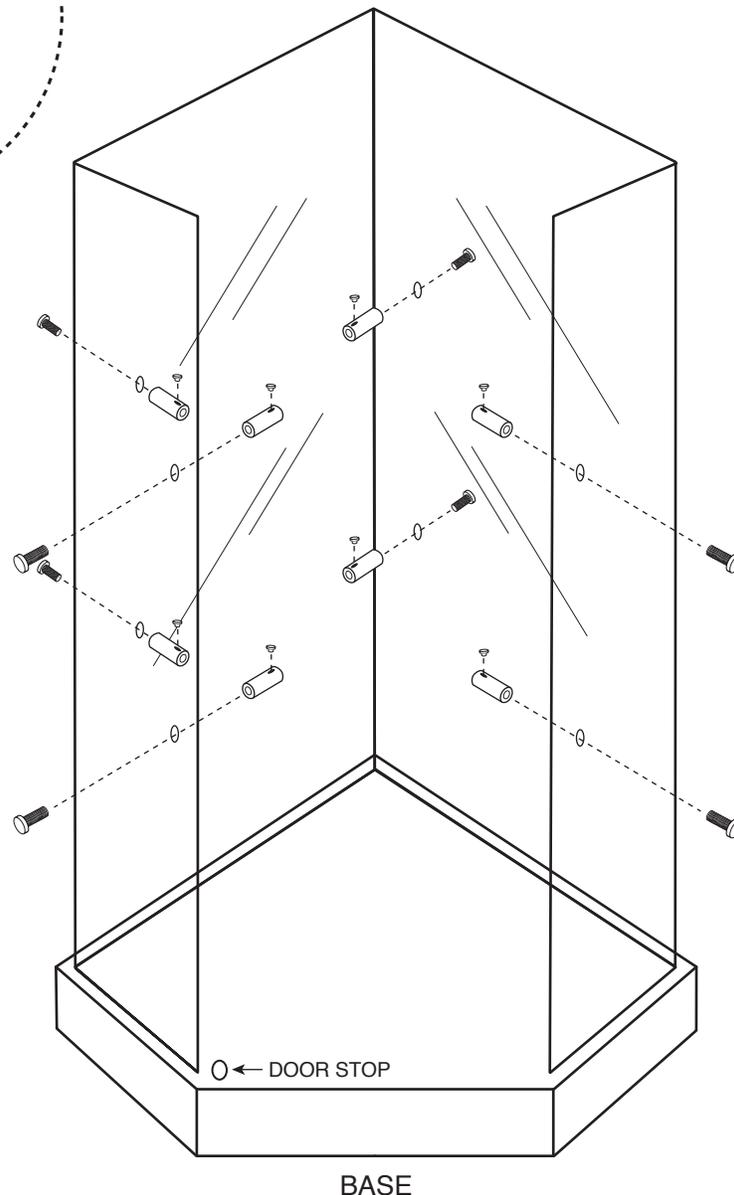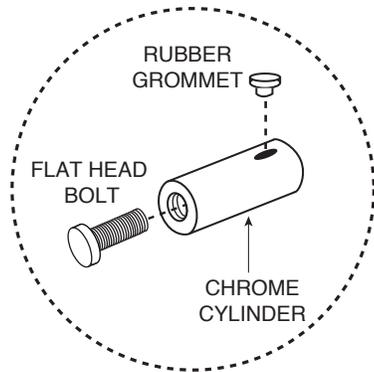


ASSEMBLY INSTRUCTIONS MANUAL

#65285 CORNER FILLER INFINITY SHOWCASE

STEP 6. SCREW FRONT STABILIZING BAR TO TOP GLASS TOP USING (2) ALLEN WRENCH SCREWS AND WASHERS (FLAT SIDE UP - STAINLESS STEEL GROOVE GOES TO THE FRONT WITH THE RECESSED PORTION ON THE LEFT SIDE TO ACCOMODATE THE LOCK LEVER).

STEP 7. SCREW ON TOP INTO U-BRACKETS AND L-BRACKETS.

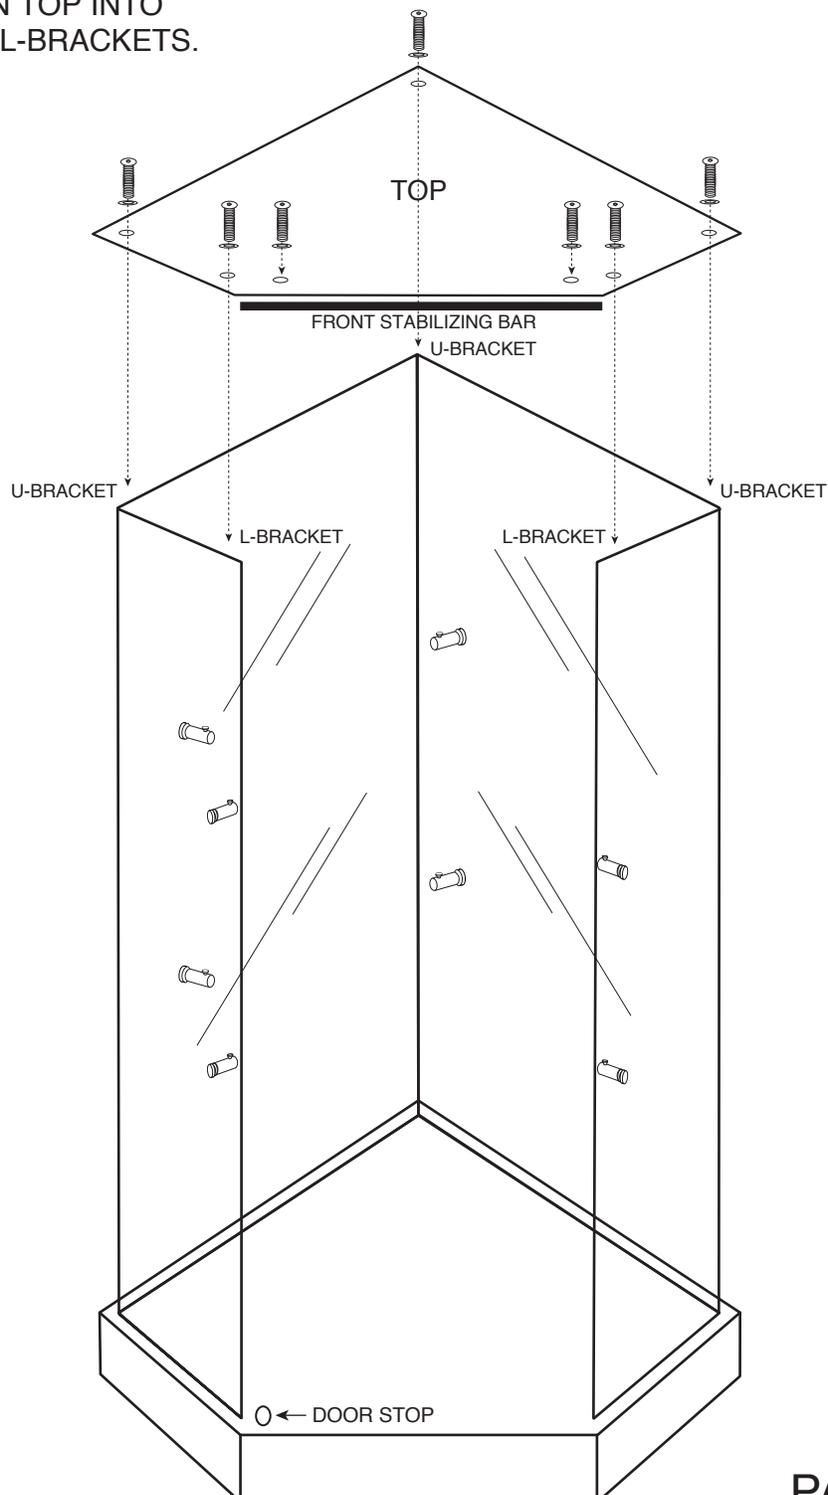


ASSEMBLY INSTRUCTIONS MANUAL


#65285 CORNER FILLER INFINITY SHOWCASE

STEP 8. WHEN INSERTING HINGE DOOR PIN INTO ASSEMBLY - INSERT SLEEVE INTO BASE AND THEN INTO STABILIZING BAR (TOP) - SLIDE DOOR PIN INTO SLEEVE TO STABILIZE DOOR. INSERT TOP DOOR PIN INTO GLASS TOP.


ATTACH DOOR SLEEVES APPROXIMATELY 1/16" FROM EDGE OF GLASS.

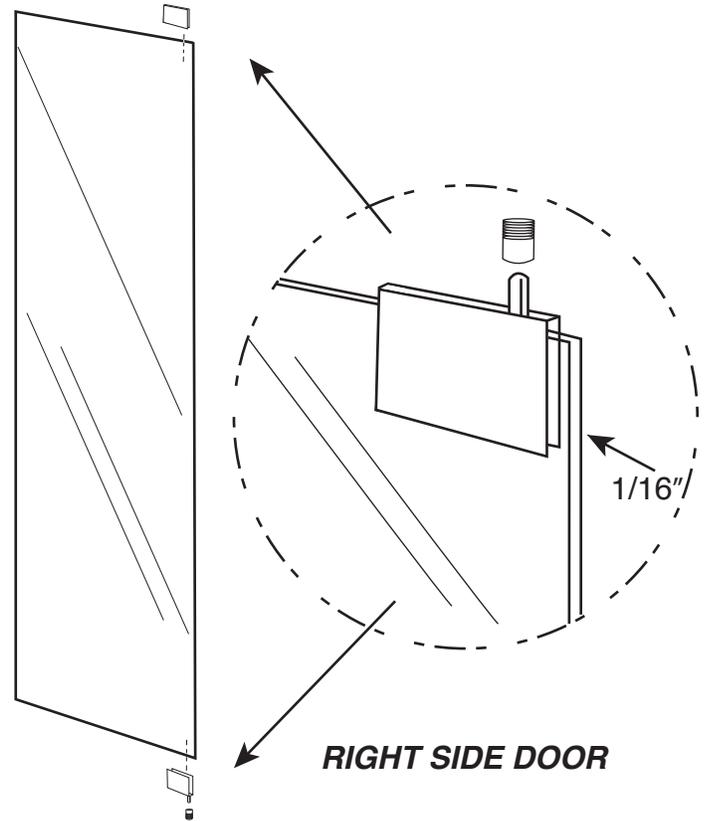

TOP RIGHT CORNER

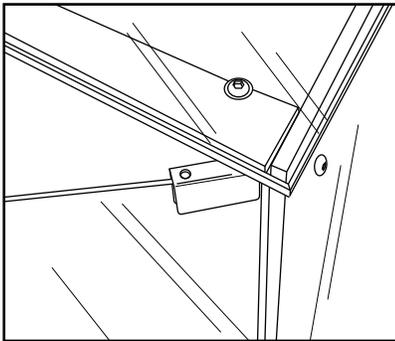


BOTTOM RIGHT CORNER

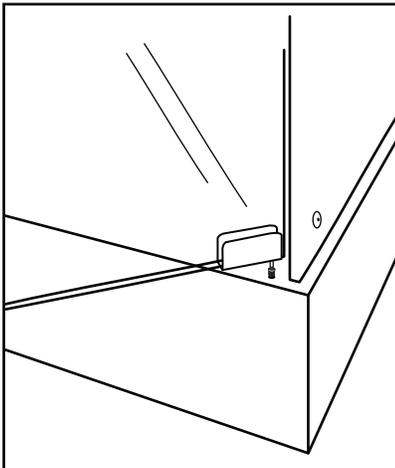

ATTACH **TOP RIGHT** OF FRONT DOOR (APPROXIMATELY 1/16" FROM EDGE OF GLASS) - **REPEAT** HINGE ASSEMBLY ON **BOTTOM**

(PLACE DROP OF GLUE ON PLASTIC TO HOLD IN PLACE)

INSERT **CLEAR PLASTIC SHIM** INSIDE HINGE TO **BACK OF GLASS SIDE** (AGAINST **SCREWS**)

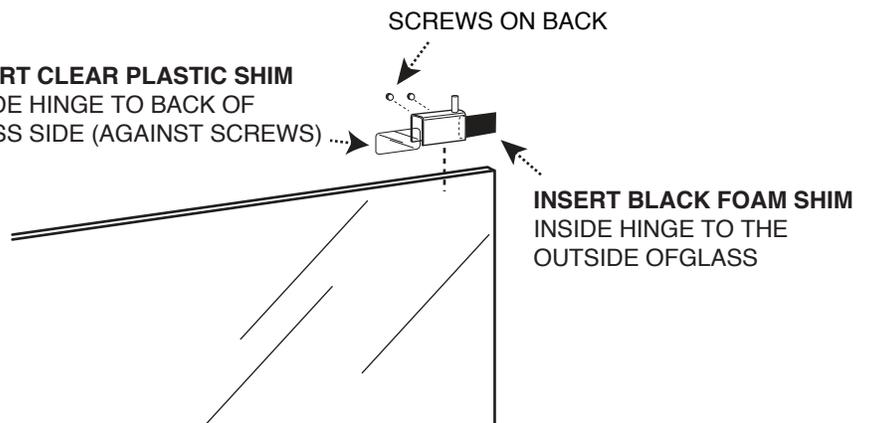


SCREWS ON **BACK**

INSERT **BLACK FOAM SHIM** INSIDE HINGE TO THE **OUTSIDE OF GLASS**

ASSEMBLY INSTRUCTIONS MANUAL


#65285 CORNER FILLER INFINITY SHOWCASE

STEP 9. ATTACH THE DOOR LOCK. LOCK CAN ONLY BE ATTACHED TO THE LEFT OF DOOR

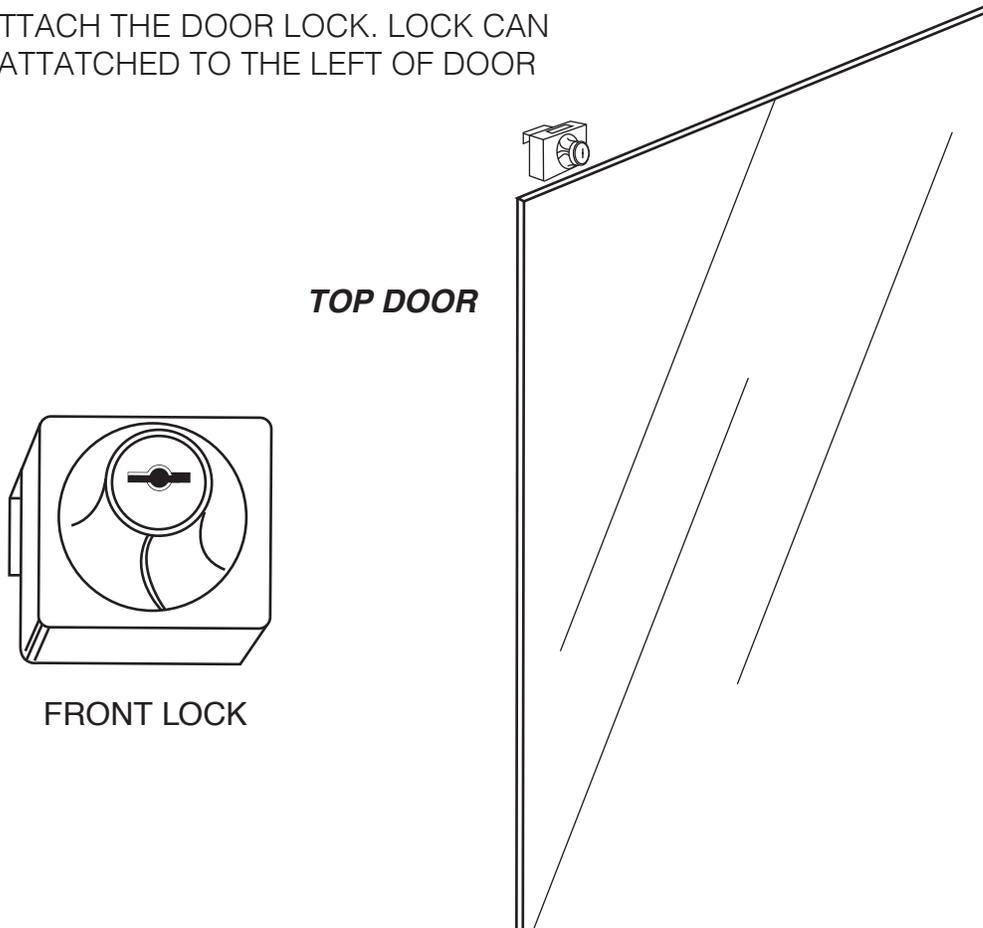

ADJUST DOOR BEFORE ATTACHING THE LOCK.
LEVEL DOOR TO SIDE GLASS BY ADJUSTING
DOOR HINGE SCREWS.

ADJUST LOCK ON DOOR SO WHEN LOCKED
THAT THE LEVER FITS INTO RECESSED
PART OF STABILIZING BAR.

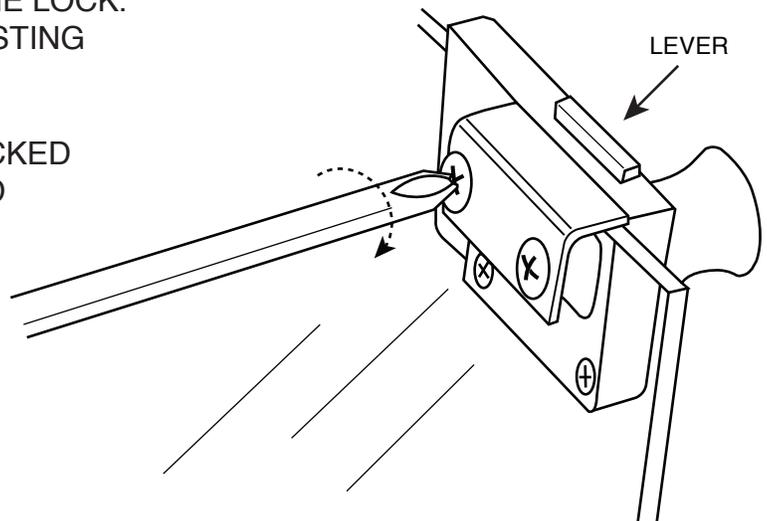

ASSEMBLY INSTRUCTIONS MANUAL

#65285 CORNER FILLER INFINITY SHOWCASE

STEP 10. TIGHTEN ALL ALLEN WRENCH SCREWS ONCE THE DOOR HAS BEEN INSTALLED AND OPENS AND CLOSES PROPERLY (LEVEL DOOR TO LEFT & RIDGE SIDE PANELS).

STEP 11. INSTALL SHELVES. (YOU WILL HAVE TO INSERT THEM THROUGH THE DOOR ON AN ANGLE, THEN GENTLY LOWER ONTO RUBBER GROMETS OF SUPPORTING CYLINDERS).

THIS COMPLETES THE ASSEMBLY.

