



REGISTER STAND ASSEMBLY INSTRUCTION MANUAL

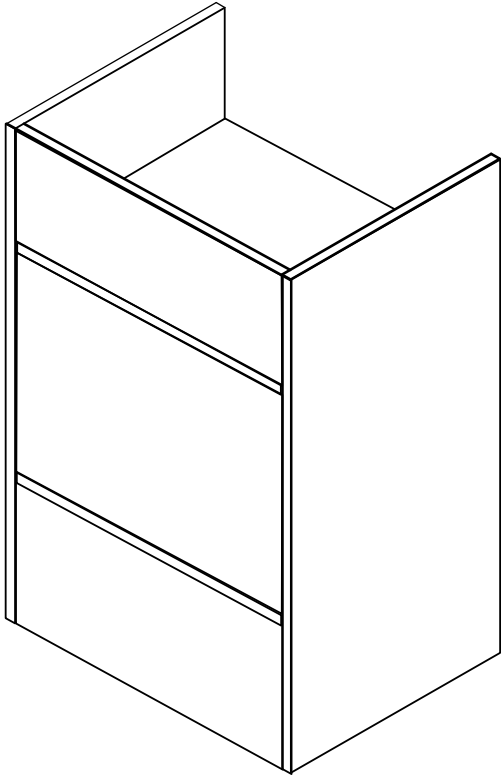

FRONT OF REGISTER STAND

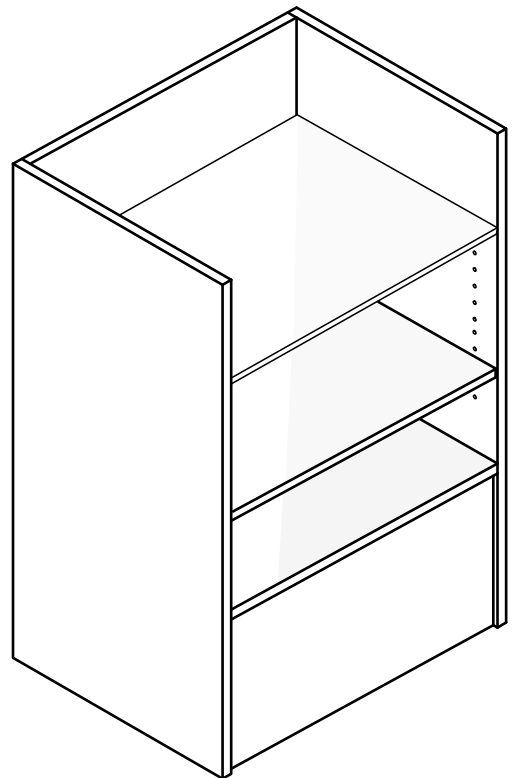


REAR OF REGISTER STAND




STORE SUPPLY WAREHOUSE, LLC
PHONE : 1-800-823-8887
FAX : 1-800-823-0004

REGISTER STAND ASSEMBLY INSTRUCTION MANUAL

RECOMMENDED TOOLS FOR ASSEMBLY




PHILLIPS SCREW DRIVER

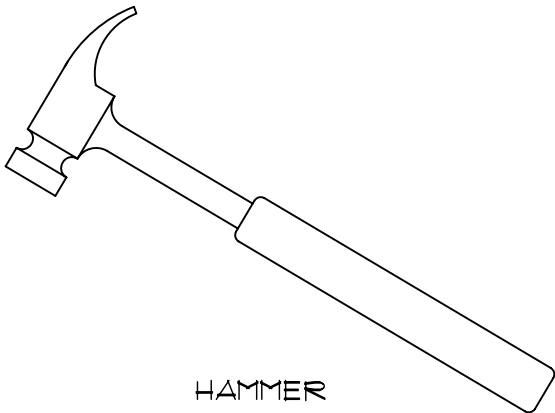

HAMMER


EITHER/OR

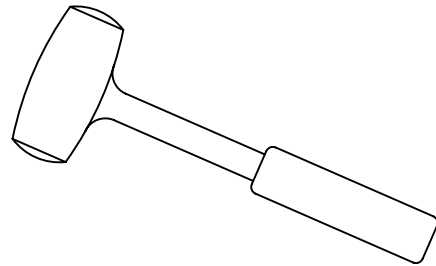

RUBBER Mallet
(PREFERRED)


HARDWARE AND MISC. INCLUDED: (PACKAGED IN A BAG)

NOTE: ALL ITEMS ARE SHOWN ACTUAL SIZE: IF YOU ARE NOT SURE WHICH PART IS CORRECT, THEN PLACE ON TOP OF ITEM BELOW FOR HELP DURING ASSEMBLY.



20 EA. - MINIFIX POST - 1 3/4" L

NOTE:
THIS ARROW TIP
MUST POINT TO
THE HOLE FOR
MINI-FIX POST






20 EA. - MINIFIX CAMS
(MINIFIX CAMS MAY ALREADY BE INSERTED INTO PANELS)



24 EA. - WOOD DOWELS - 1 1/8" L



4 EA. - SELF-STICKING
COVERS FOR
MINIFIX CAMS

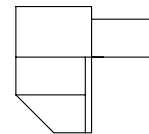


4 EA. - CLEAR PLASTIC SHELF REST
WITH CHROME METAL PIN



REGISTER STAND ASSEMBLY INSTRUCTION MANUAL


PARTS INCLUDED INSIDE CARTON:

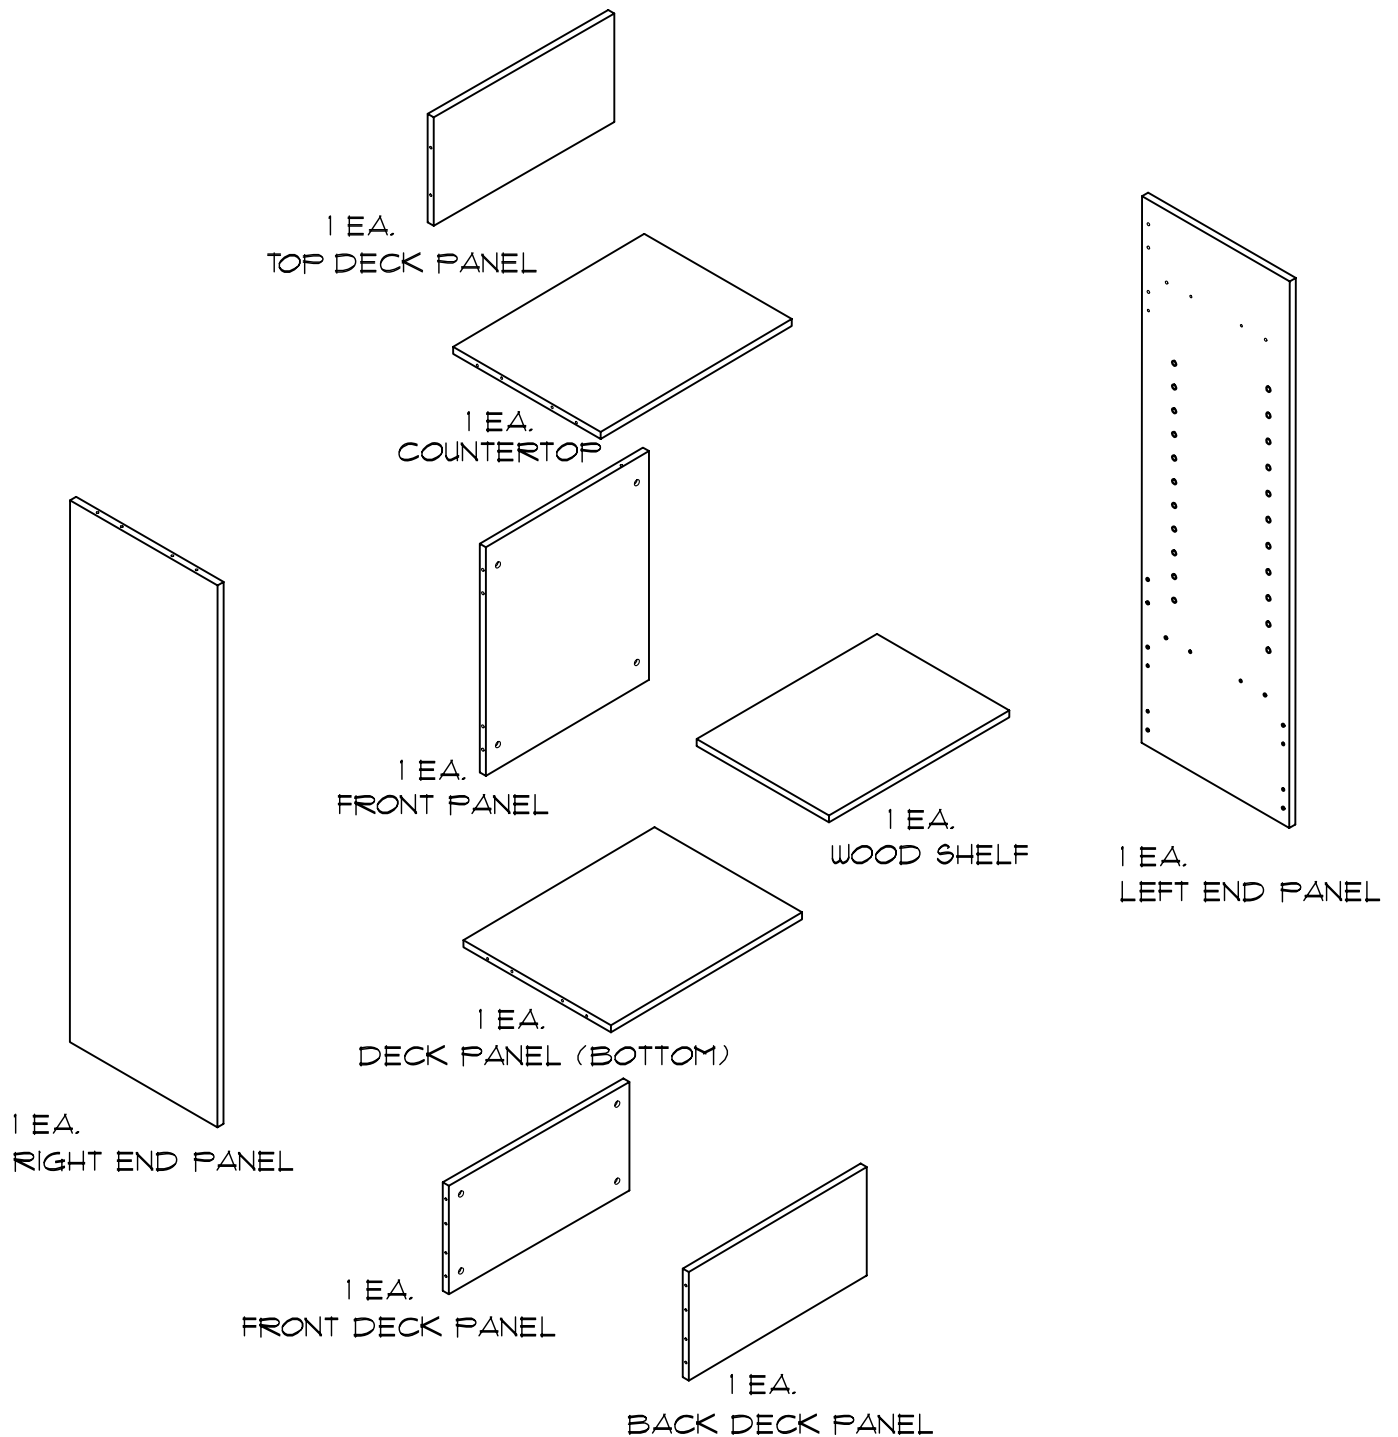

REGISTER STAND ASSEMBLY INSTRUCTION MANUAL

ILLUSTRATION OF ASSEMBLY

SCALE: NONE

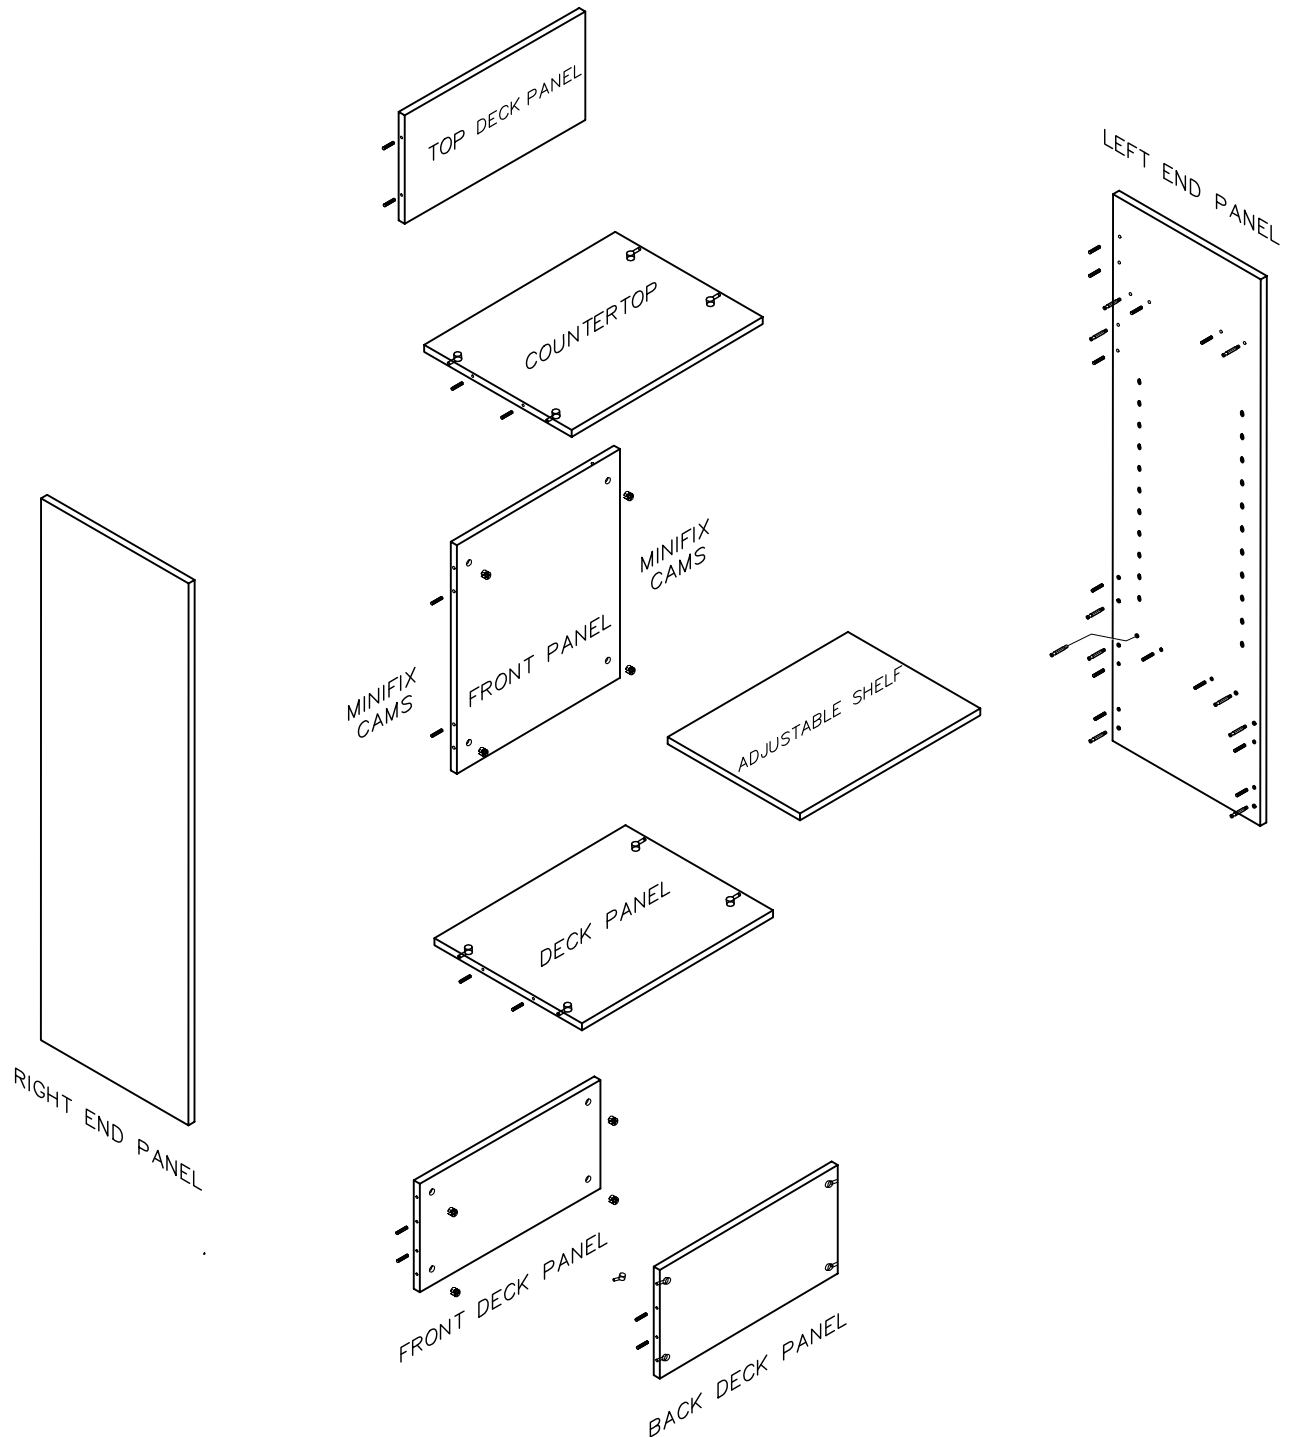



REGISTER STAND ASSEMBLY INSTRUCTION MANUAL

ASSEMBLY TIME APPROXIMATELY 1/2 HOUR


WITH A HELPER

STEP 1 :

PLACE THE RIGHT AND LEFT SIDE PANELS ON A FLAT SURFACE WITH THE INSIDE FACE UP AND SCREW ONE OF THE MINIFIX POSTS IN EACH OF THE TEN (10) HOLES INDICATED IN BOTH THE LEFT AND RIGHT SIDE PANELS. (SEE DIAGRAM "1A")

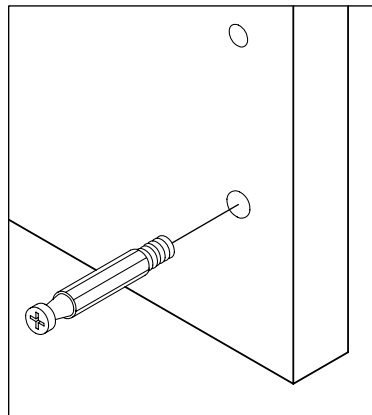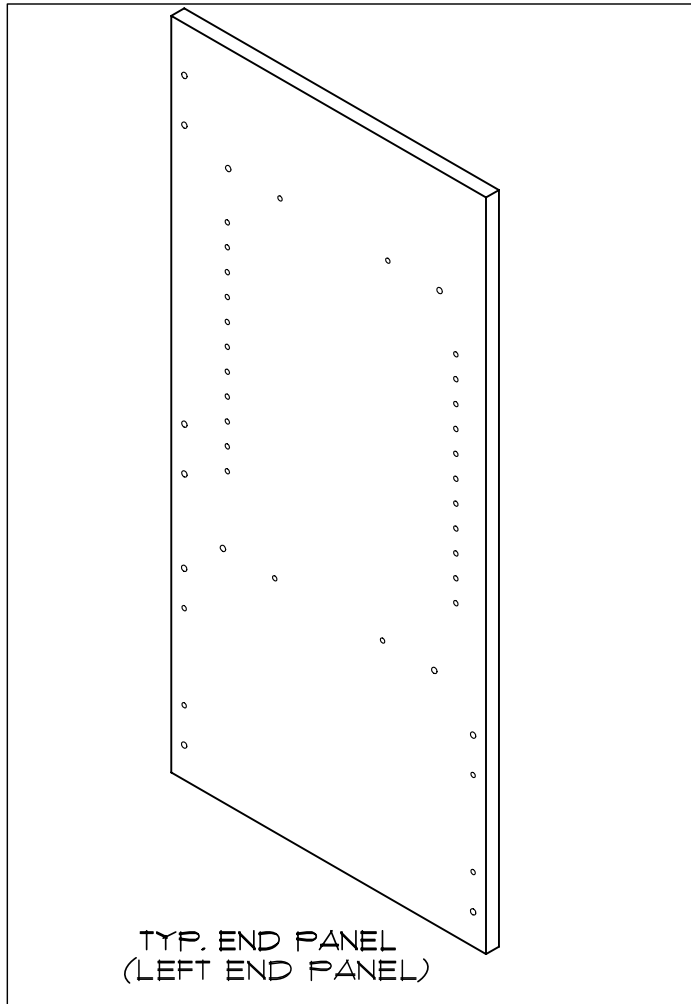


SEE DIAGRAM "1A" FOR
LOCATION OF HOLES

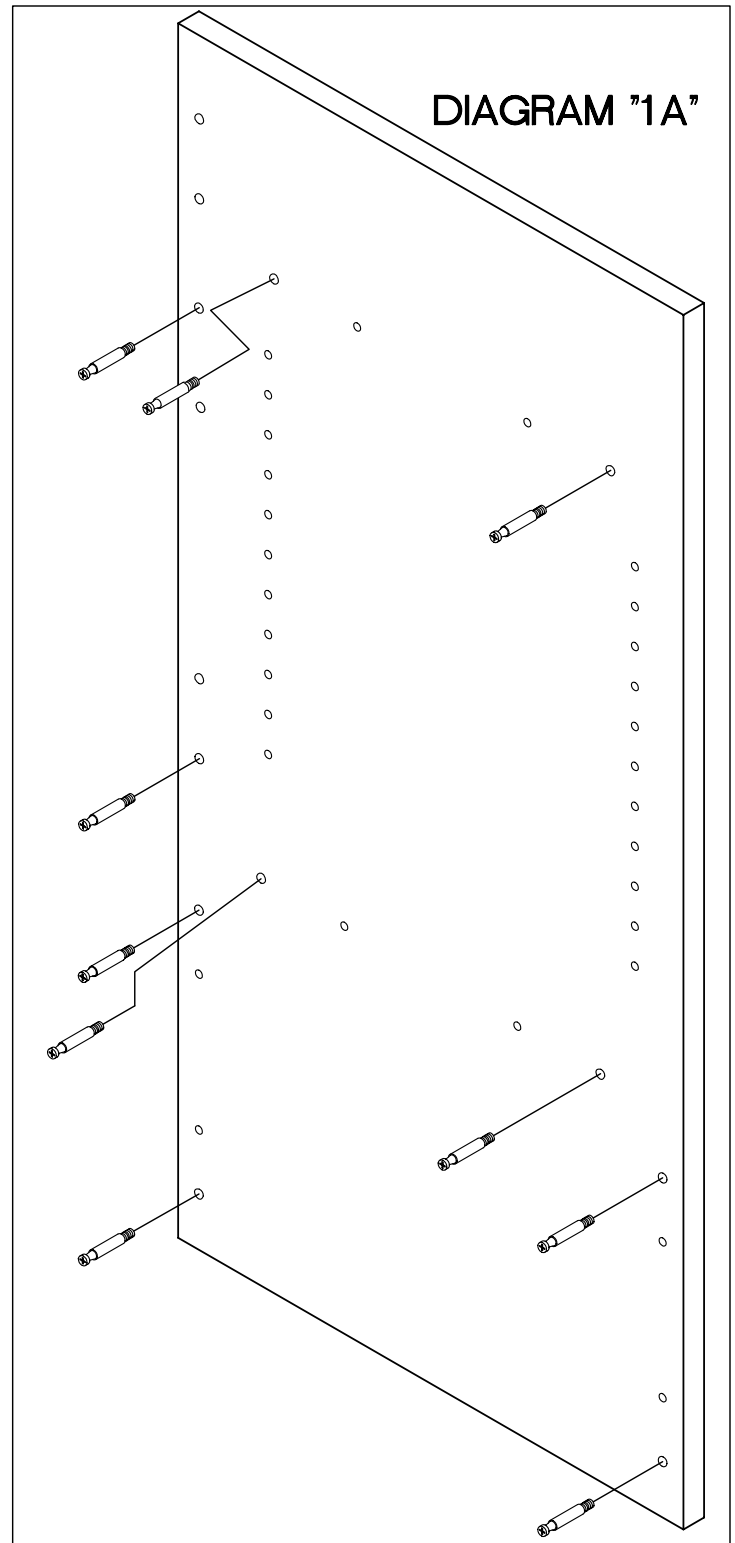

REGISTER STAND ASSEMBLY INSTRUCTION MANUAL

STEP 2 :


PLACE ONE WOODEN DOWEL INTO EACH OF THE TWELVE(12) HOLES INDICATED IN BOTH THE LEFT AND RIGHT END PANELS. GENTLY TAP EACH WOODEN DOWEL WITH A HAMMER OR RUBBER Mallet UNTIL SECURED (**SEE DIAGRAM "2A"**).

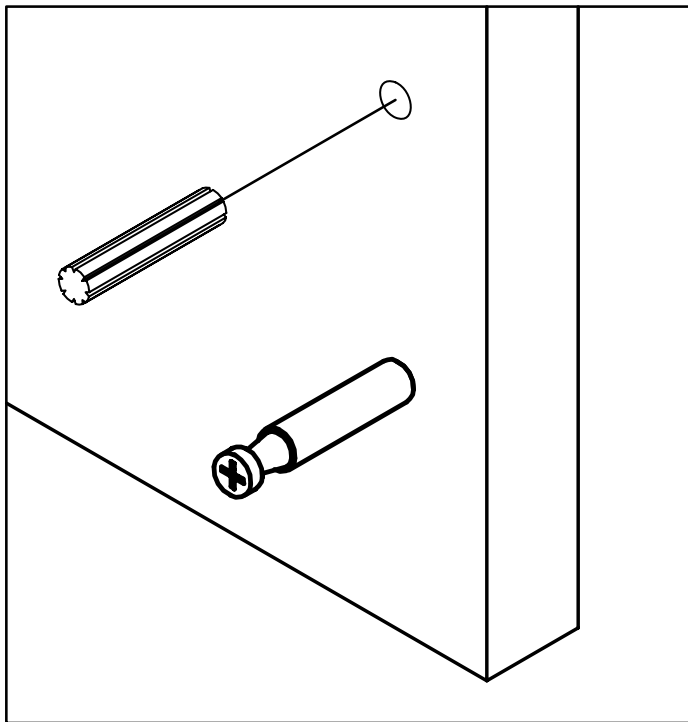

ENLARGEMENT DETAIL

SEE DIAGRAM "2A" FOR
LOCATION OF HOLES

DIAGRAM "2A"

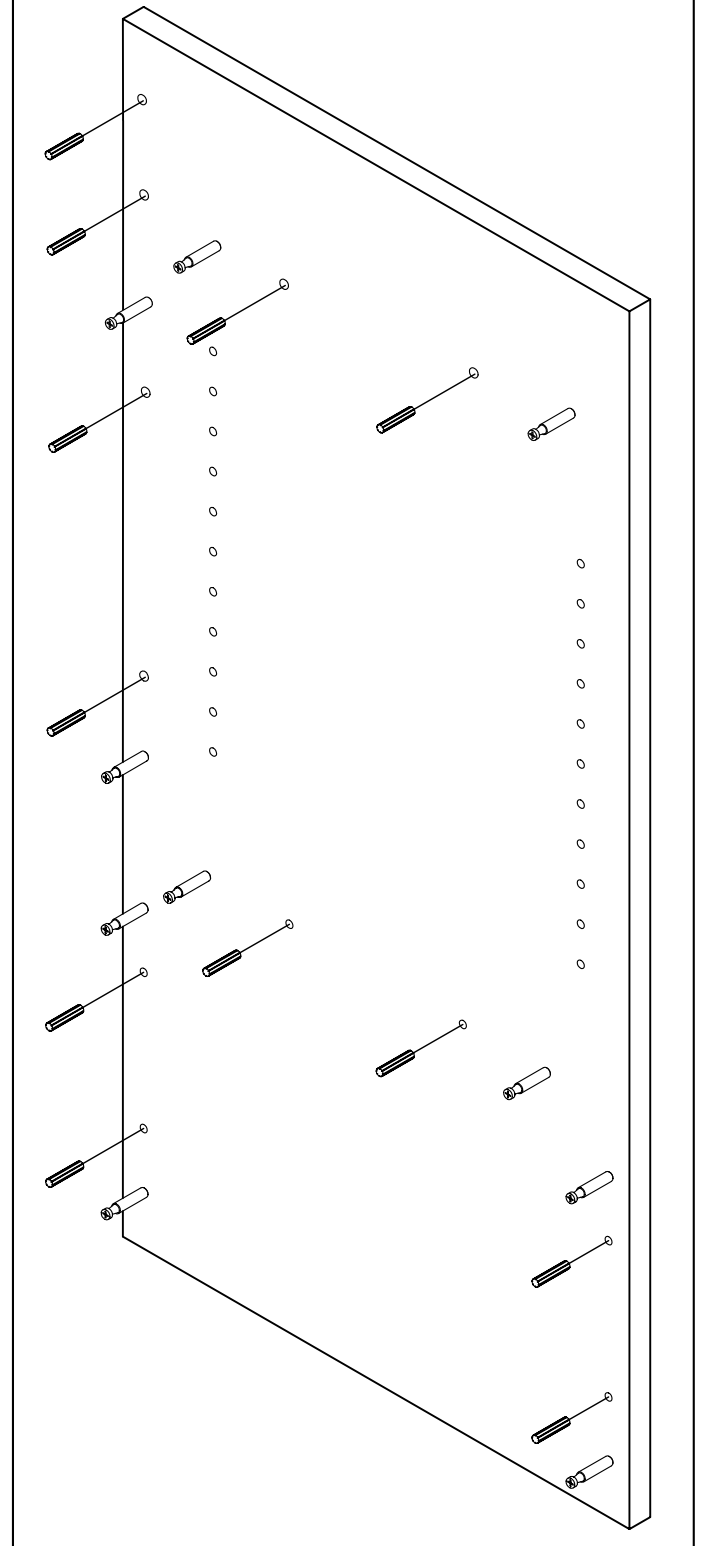


REGISTER STAND ASSEMBLY INSTRUCTION MANUAL

STEP 3:


LINE UP THE TWO HOLES ON THE LEFT SIDE OF THE TOP DECK PANEL WITH THE TWO WOODEN DOWELS INDICATED (**DIAGRAM "3A"**). GENTLY TAP THE PANEL INTO PLACE WITH A HAMMER OR RUBBER Mallet. PLACE ONE 3/4" MINIFIX CAM INTO EACH OF THE FOUR HOLES IN THE BOTTOM OF THE COUNTERTOP PANEL WITH THE ARROWS ON THE MINIFIX CAMS FACING OUTWARD. LINE UP THE FOUR HOLES ON THE LEFT SIDE OF THE COUNTERTOP PANEL WITH THE WOODEN DOWELS AND MINIFIX POSTS INDICATED (**DIAGRAM "3A"**). TAP THE PANEL INTO PLACE AND TIGHTEN THE MINIFIX CAMS CLOCKWISE UNTIL LOCKED INTO PLACE (**DIAGRAM "3C"**).

DIAGRAM "3A"

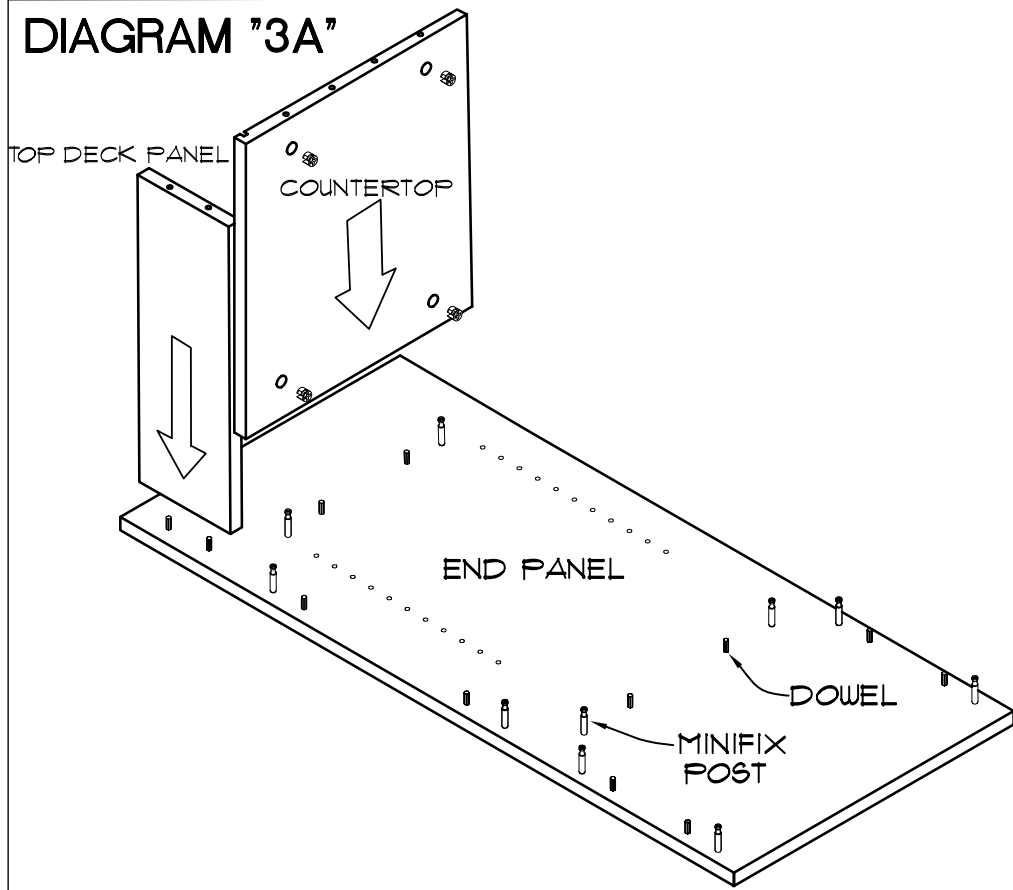

MAKE SURE THAT MINIFIX POST AND WOOD DOWELS ARE IN-LINE BEFORE PUSHING DECK PANEL ON END PANEL.

DIAGRAM "3B"

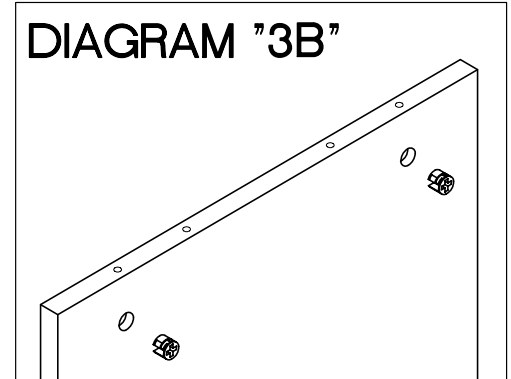

PLEASE NOTE
THE MINIFIX CAMS MUST BE
POINTING OUT WITH THE
ARROW TIP TOWARD THE
HOLE ON THE END
SEE BELOW

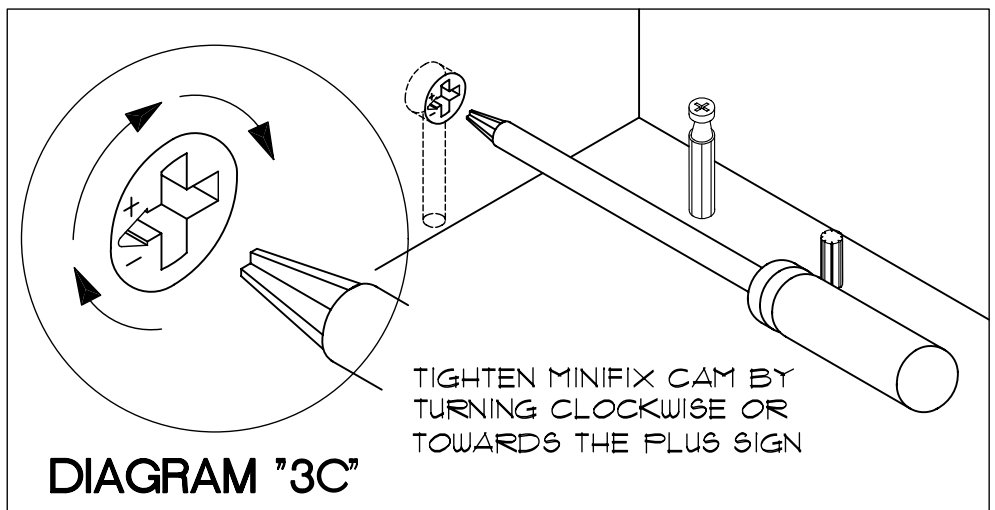
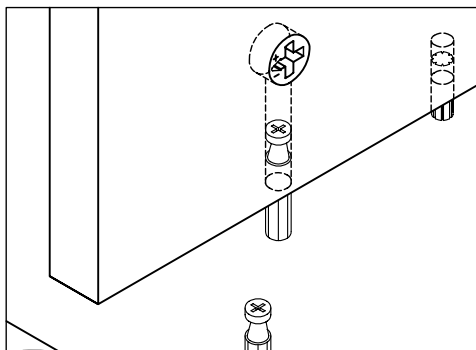
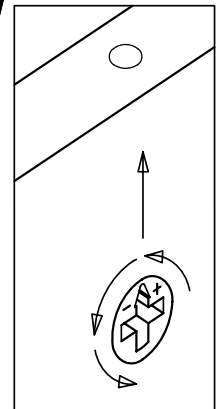





DIAGRAM "3C"

REGISTER STAND ASSEMBLY INSTRUCTION MANUAL

STEP 4:

PLACE ONE 3/4" MINIFIX CAM INTO EACH OF THE FOUR HOLES ON THE INSIDE OF THE FRONT PANEL AND THE BOTTOM OF THE BOTTOM DECK PANEL. LINE UP THE FOUR HOLES ON THE LEFT SIDE OF THE FRONT PANEL WITH THE TWO WOODEN DOWELS AND TWO MINIFIX POSTS INDICATED IN **DIAGRAM "4A"**. TAP THE PANEL INTO PLACE AND TIGHTEN MINIFIX CAMS WITH A CLOCKWISE TURN TO SECURE. REPEAT FOR THE BOTTOM DECK PANEL MAKING SURE THE MINIFIX CAMS FACE DOWNWARD AS INDICATED IN **DIAGRAM "4A"**.

DIAGRAM "4A"

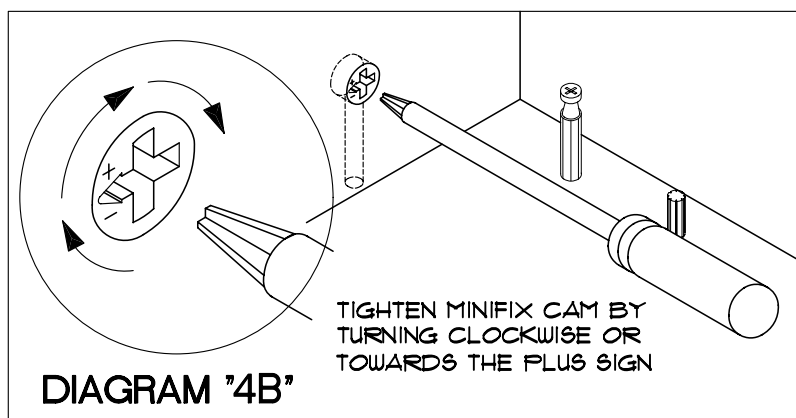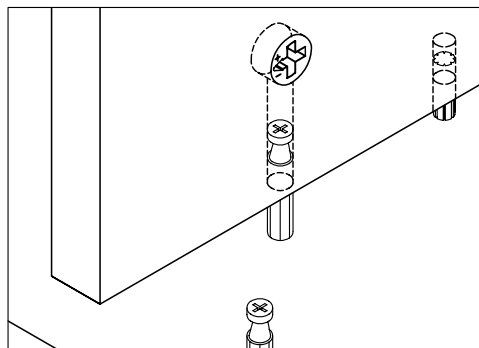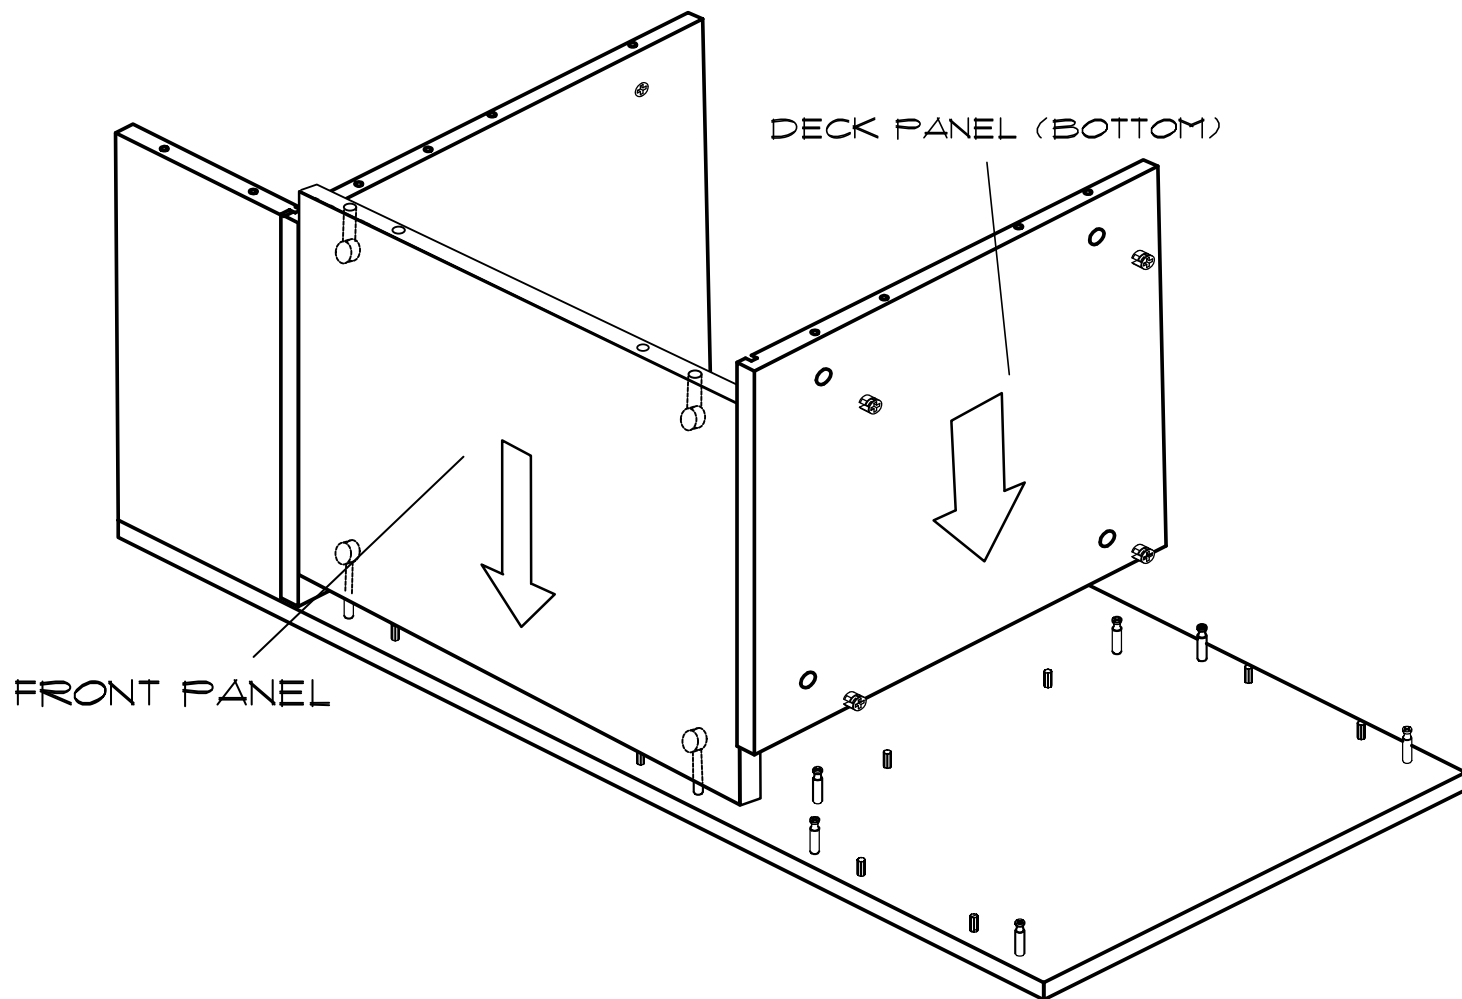

REGISTER STAND ASSEMBLY INSTRUCTION MANUAL

STEP 5:

PLACE ONE 3/4" MINIFIX CAM INTO EACH OF THE FOUR HOLES ON THE INSIDE OF THE FRONT DECK PANEL AND THE INSIDE OF THE BACK DECK PANEL. LINE UP THE FOUR HOLES ON THE LEFT SIDE OF THE FRONT DECK PANEL WITH THE TWO WOODEN DOWELS AND TWO MINIFIX POSTS INDICATED IN **DIAGRAM "5A"**. TAP THE PANEL INTO PLACE AND TIGHTEN MINIFIX CAMS WITH A CLOCKWISE TURN TO SECURE. REPEAT FOR THE BACK DECK PANEL MAKING SURE THE MINIFIX CAMS FACE DOWNWARD AS INDICATED IN **DIAGRAM "5B"**.

DIAGRAM "5A"

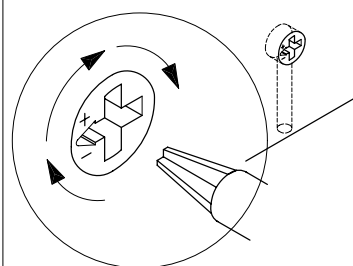
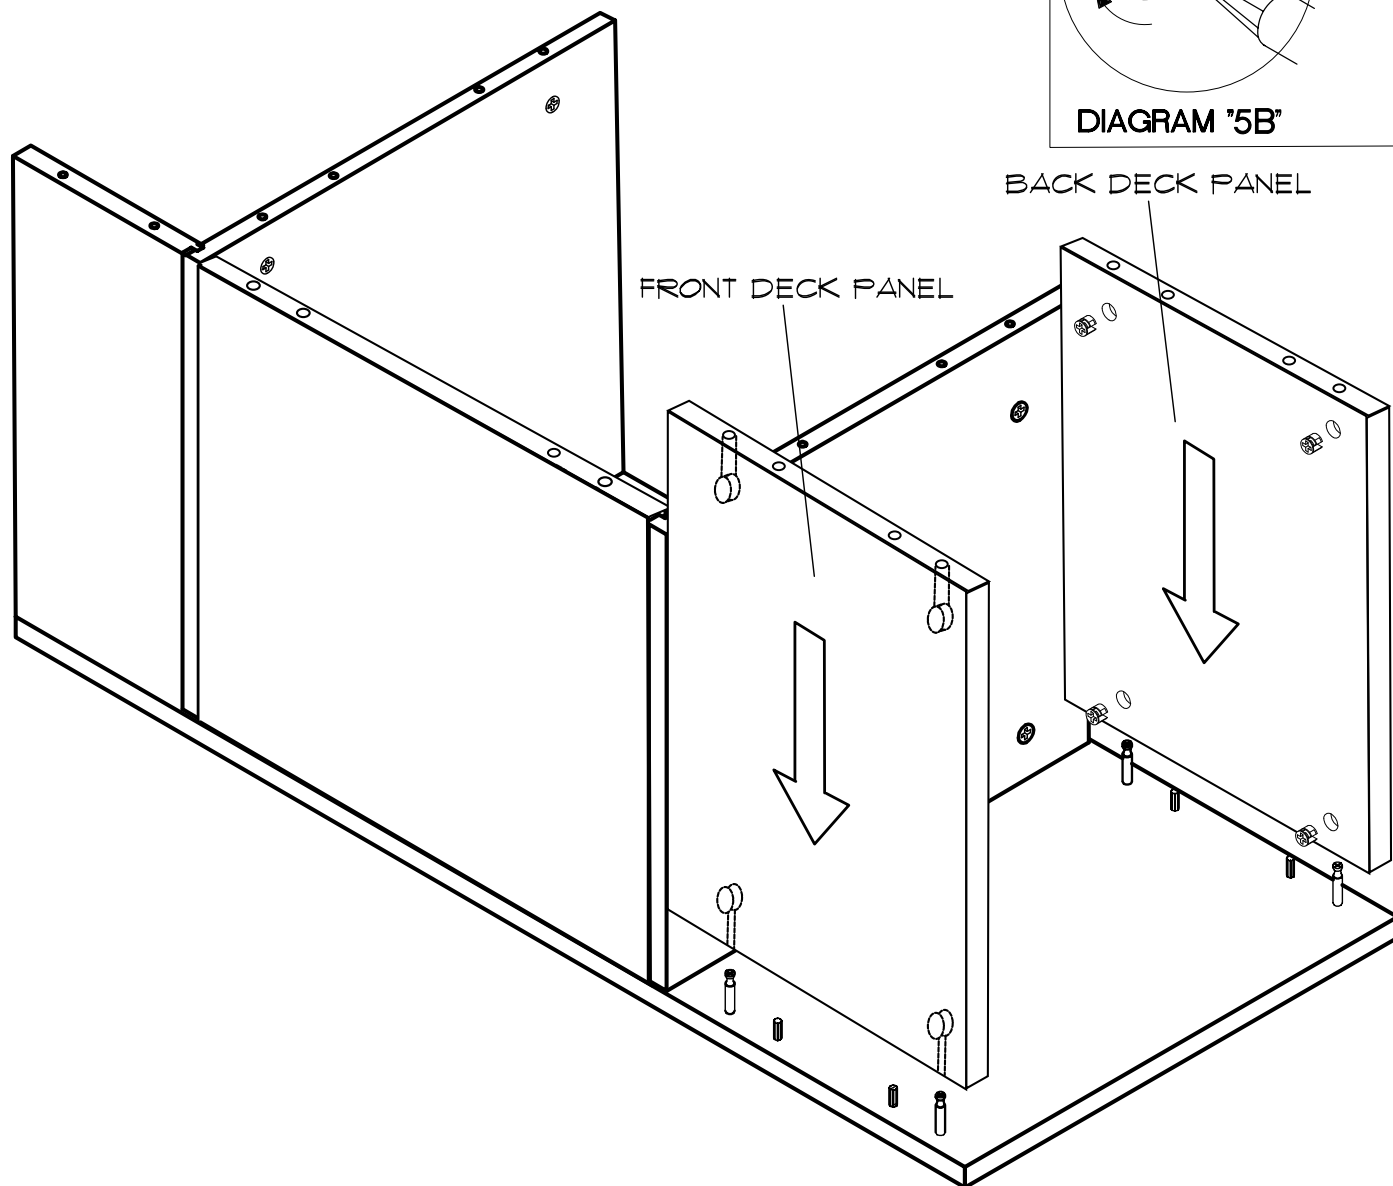


DIAGRAM "5B"

REGISTER STAND ASSEMBLY INSTRUCTION MANUAL

STEP 6:

LOWER THE RIGHT END PANEL WITH ALL MINIFIX POSTS AND WOODEN DOWELS INSERTED(**SEE STEP 1**) ON TO THE ASSEMBLED PANELS MAKING SURE TO LINE UP ALL POSTS AND DOWELS WITH THE HOLES INDICATED IN **DIAGRAM "6B"**. GENTLY TAP THE PANEL INTO PLACE. TIGHTEN THE TEN REMAINING 3/4" MINIFIX CAMS WITH A CLOCKWISE TURN UNTIL THE RIGHT SIDE PANEL IS SECURED.

DIAGRAM "6A"



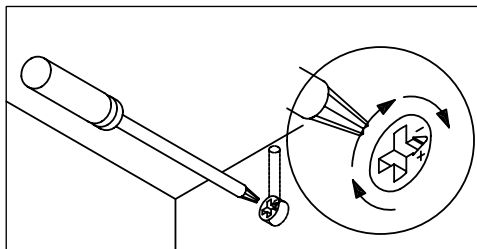


DIAGRAM "6B"

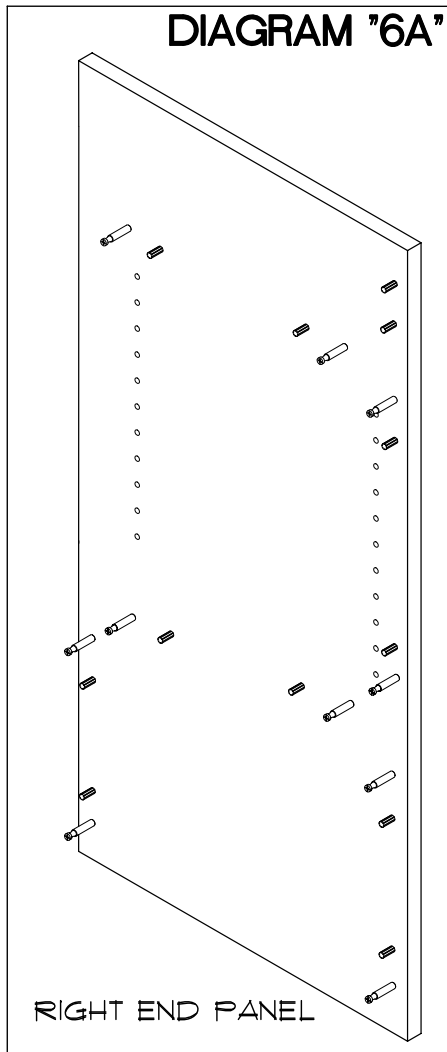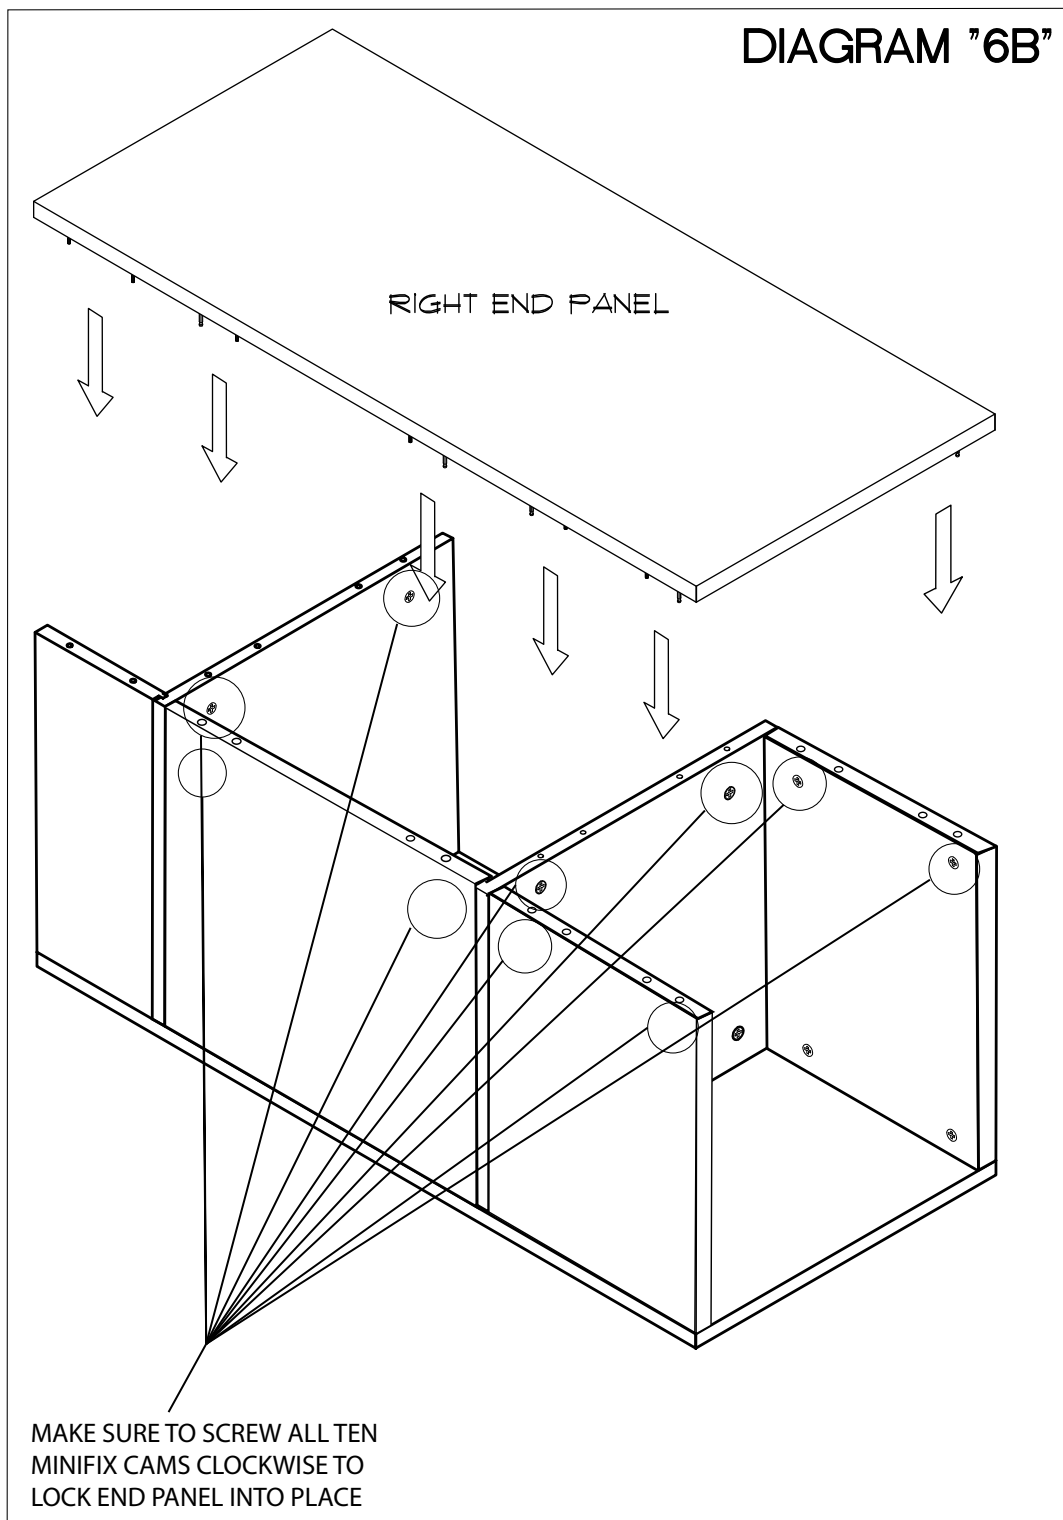

REGISTER STAND ASSEMBLY INSTRUCTION MANUAL

STEP 7:

TURN THE UNIT UPRIGHT AS INDICATED IN **DIAGRAM "7A"**. PLACE ONE SELF-STICKING COVER OVER EACH OF THE FOUR MINIFIX CAMS THAT ARE STILL VISIBLE FROM THE BACK OF THE UNIT AS IN **DIAGRAM "7B"**. PLACE THE FOUR CLEAR PLASTIC SHELF RESTS AT THE DESIRED HEIGHT AS INDICATED IN **DIAGRAM "7C"**. SLIDE THE WOODEN SHELF INTO PLACE AS IN **DIAGRAM "7D"** AND YOUR UNIT IS COMPLETE.

DIAGRAM "7A"


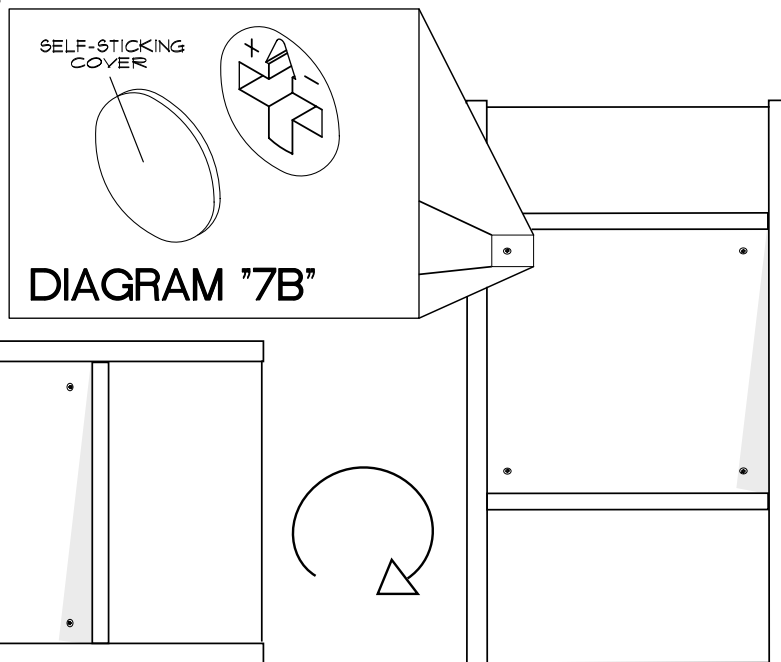


DIAGRAM "7D"

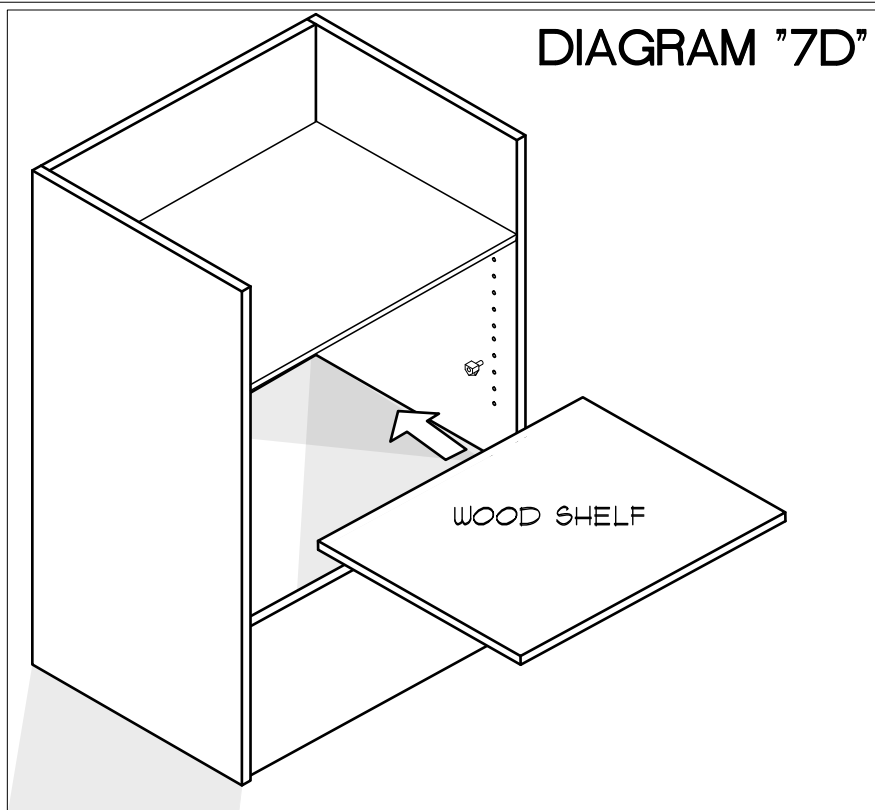

CLEAR PLASTIC SHELF REST

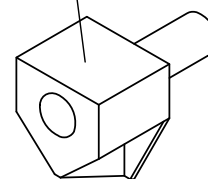


DIAGRAM "7C"

