
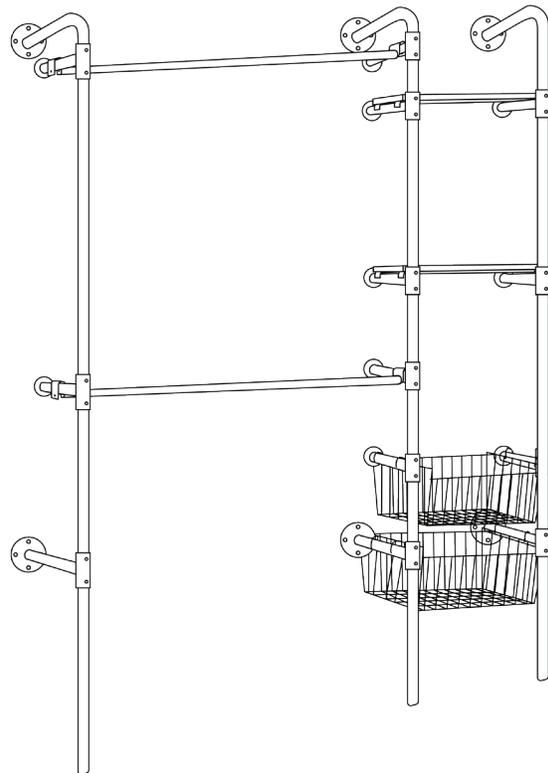
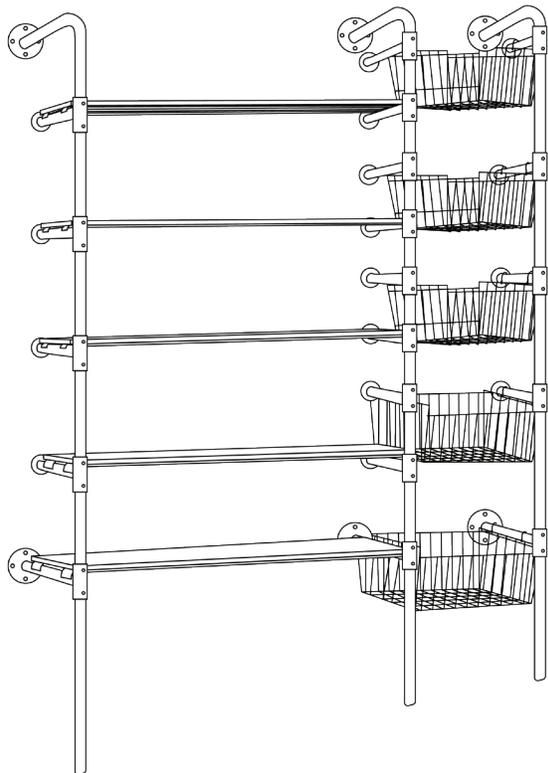
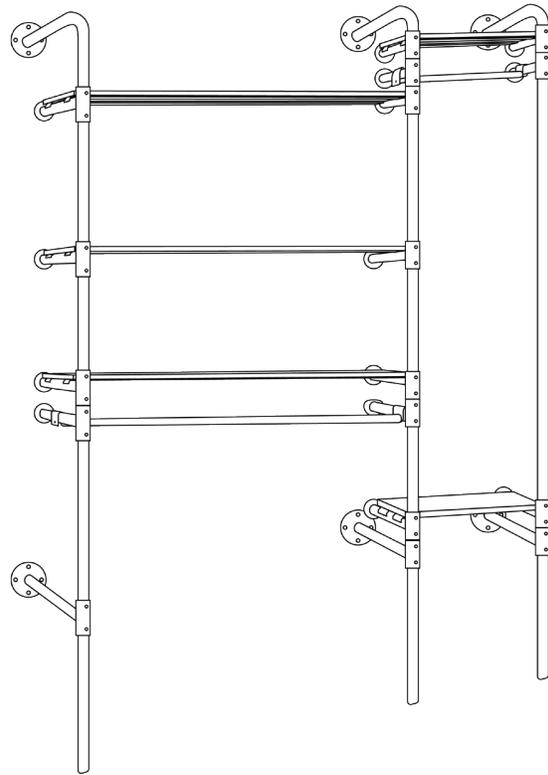


ASSEMBLY INSTRUCTIONS MANUAL


#60860 #60864 #60865 #60866

BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 1-4

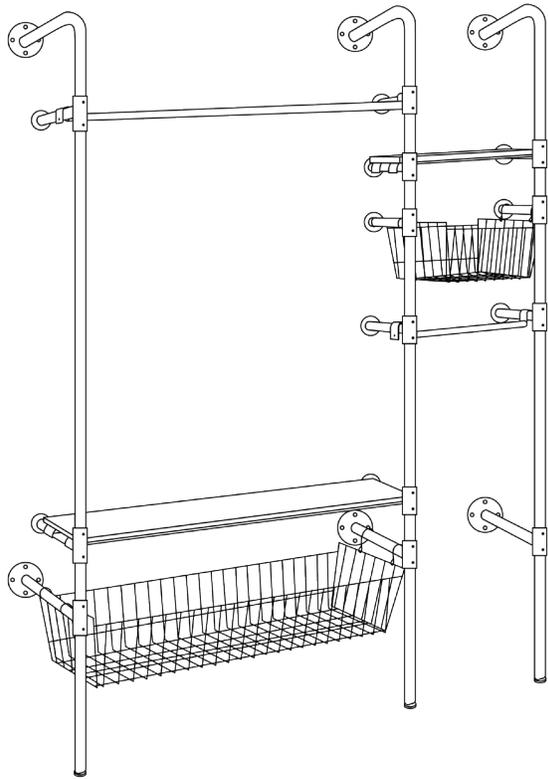

ASSEMBLY INSTRUCTIONS MANUAL


#60860 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 1

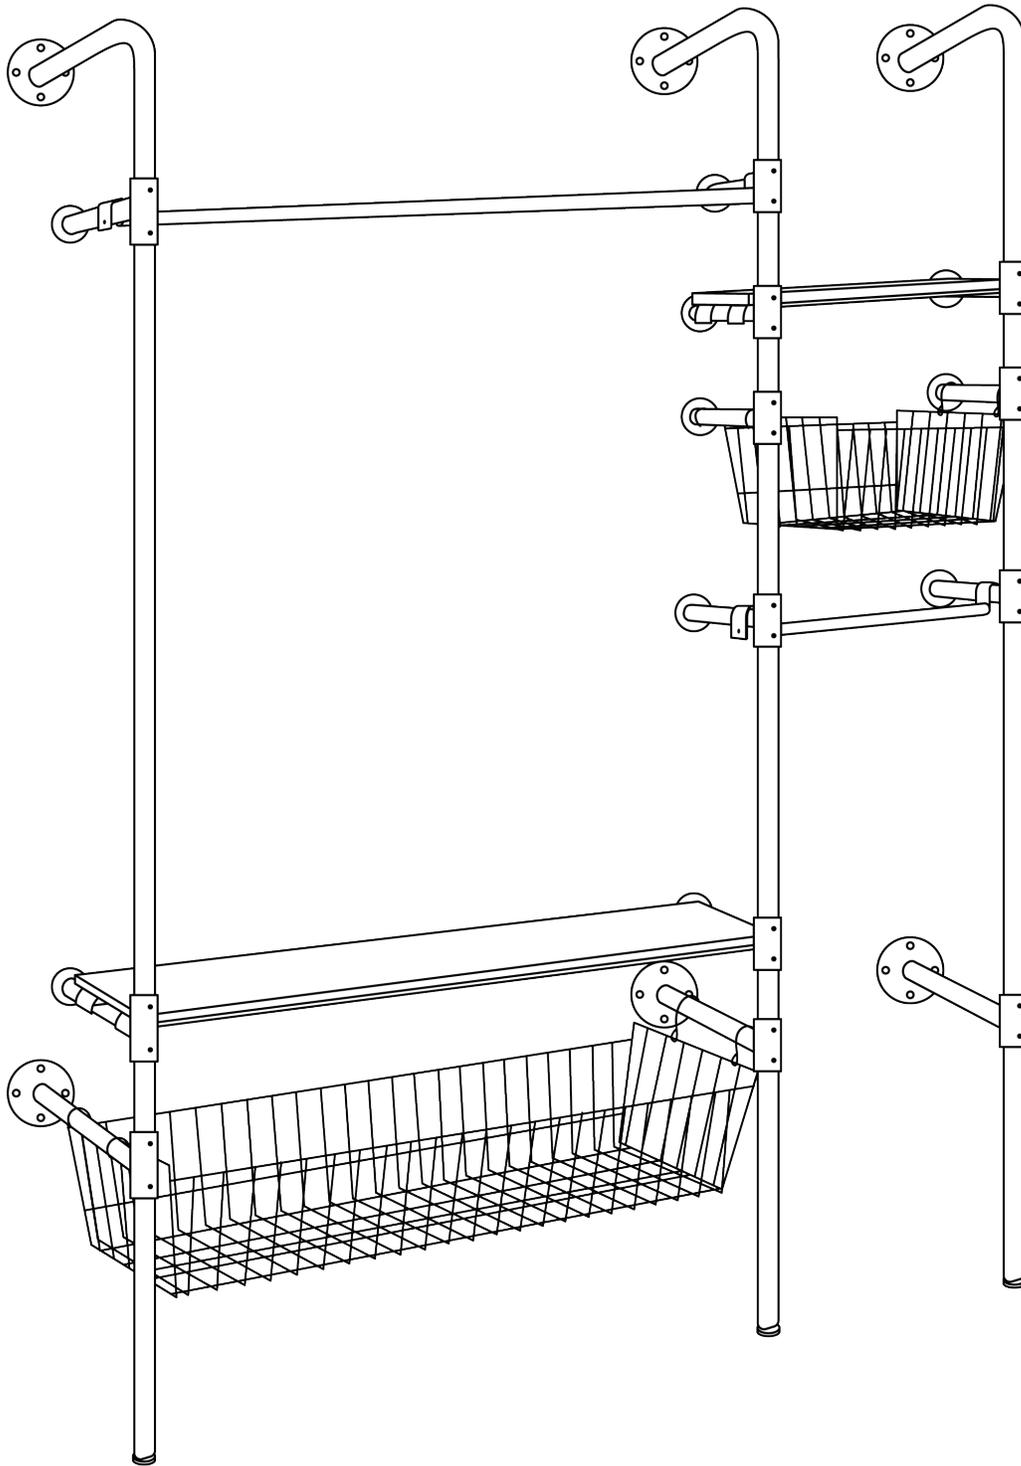


ASSEMBLY INSTRUCTIONS MANUAL

#60860 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 1

PARTS IN CARTON:

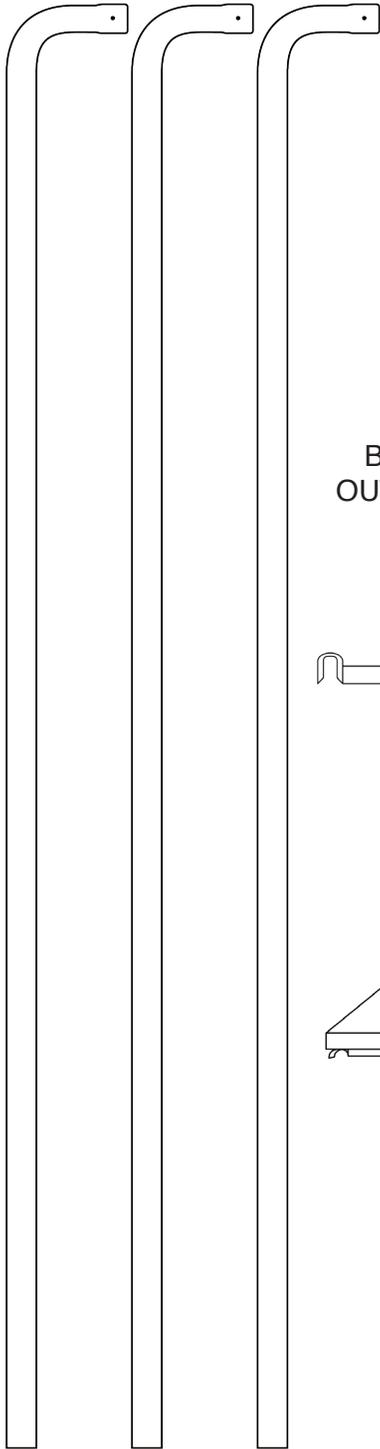

BOUTIQUE VINTAGE
OUTRIGGER UPRIGHTS
(3 EACH)

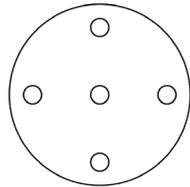

BOUTIQUE VINTAGE
OUTRIGGER MOUNTING
PLATE (6 EACH)




BOUTIQUE VINTAGE OUTRIGGER
BAR BRACKETS (3 EACH)




BOUTIQUE VINTAGE STRAIGHT
BAR BRACKETS (10 EACH)




BOUTIQUE VINTAGE OUTRIGGER
STRAIGHT BAR (3 EACH)




BOUTIQUE VINTAGE 48"
HANGRAIL (1 EACH)




BOUTIQUE VINTAGE 24"
HANGRAIL (1 EACH)




BOUTIQUE VINTAGE 48"
MELAMINE SHELF (1 EACH)



BOUTIQUE VINTAGE 24"
HANGRAIL (1 EACH)

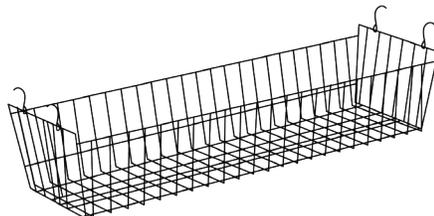

BOUTIQUE VINTAGE 48"
BASKET (1 EACH)

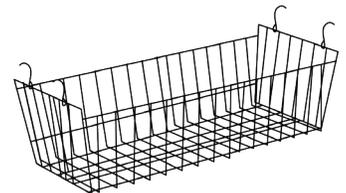


BOUTIQUE VINTAGE 24"
BASKET (1 EACH)

ASSEMBLY INSTRUCTIONS MANUAL

#60860 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 1

PARTS IN CARTON:

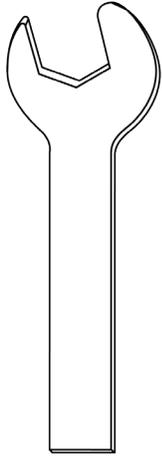


WRENCH
(1 EACH)




HEX KEY
(1 EACH - 6mm)




HEX KEY
(1 EACH - 4mm)




HEX KEY
(1 EACH - 3mm)

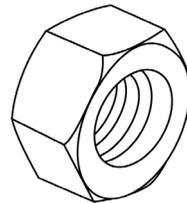


1/4 NUT
(3 EACH)

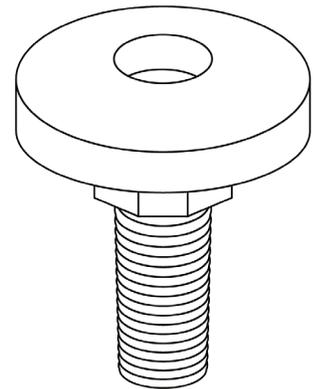


OUTRIGGER FOOT
(3 EACH)

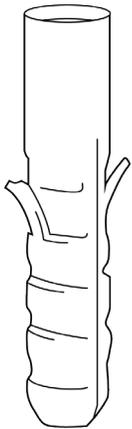


DRYWALL ANCHOR
(24 EACH)




SET SCREWS
(28 EACH)

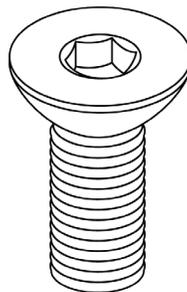

1" FLAT BOLT
(6 EACH)

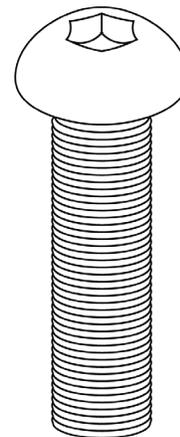

1 5/8" LONG BOLT
(3 EACH)

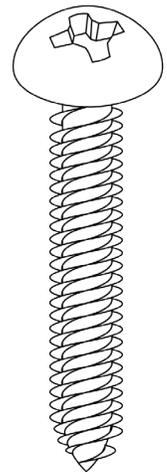

1 3/4" COUNTERSINK
SCREW
(24 EACH)

YOU WILL NEED TO SUPPLY YOUR OWN TAPE MEASURE, LEVEL, DRILL OR SCREWDRIVER FOR INSTALLATION.


ASSEMBLY INSTRUCTIONS MANUAL

#60860 #60864 #60865 #60866

BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 1-4

STEP 1

ASSEMBLE THE OUTRIGGER PLATE AND STRAIGHT BAR WITH THE FLAT BOLT. REPEAT FOR EACH OUTRIGGER. THEN JOIN THE STRAIGHT BAR AND OUTRIGGER WITH THE LONG BOLT. (SEE FIGURE 1)

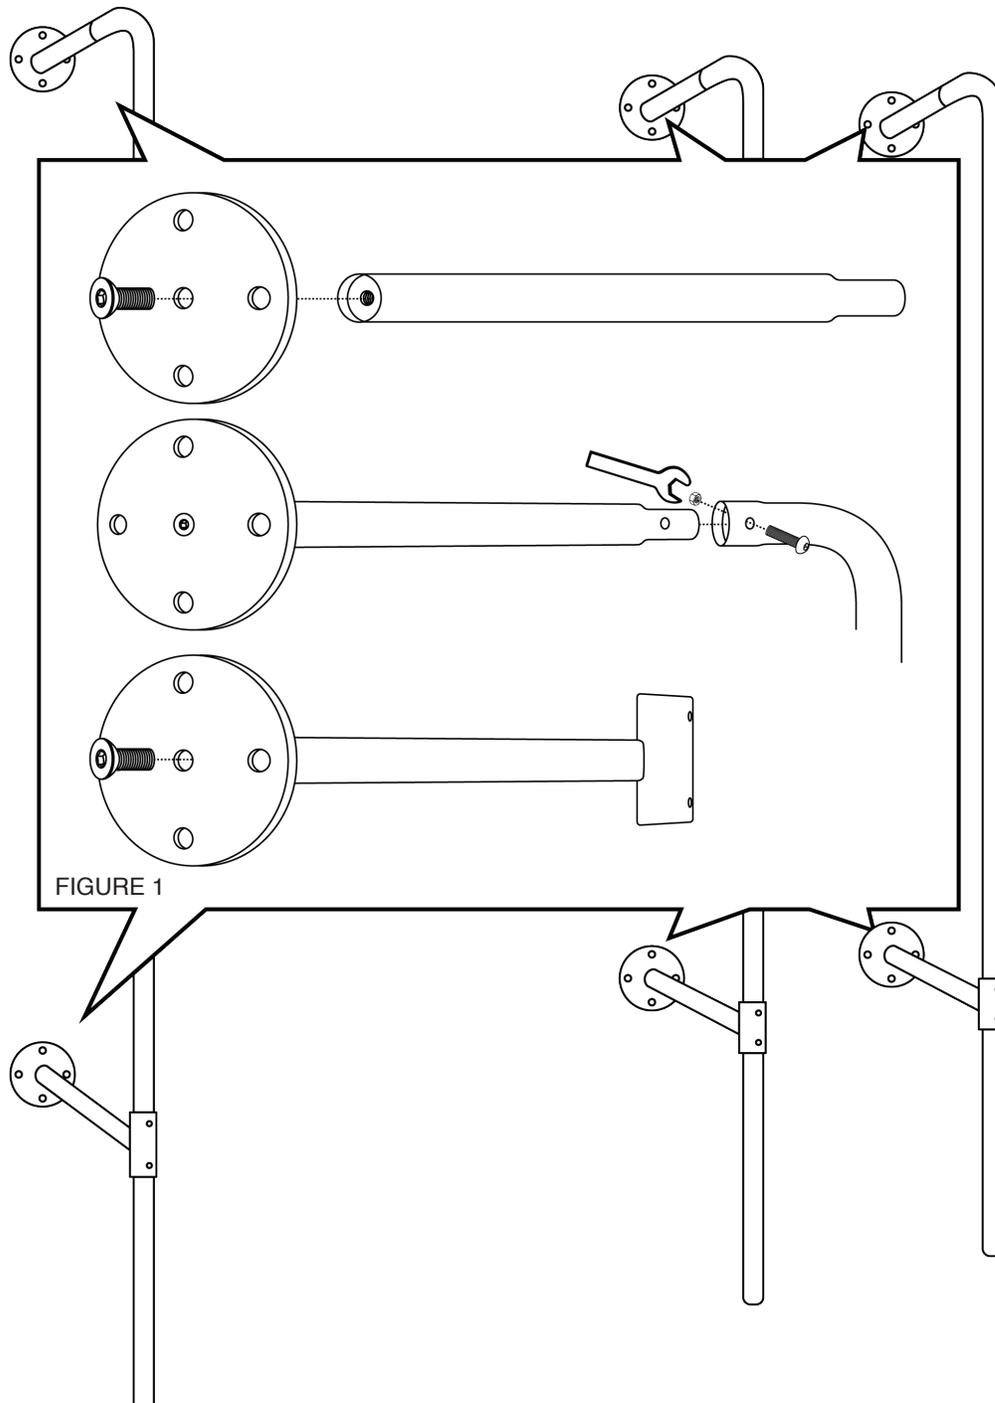


ASSEMBLY INSTRUCTIONS MANUAL

#60860 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 1

STEP 2

NEXT SLIDE THE STRAIGHT BAR BRACKETS ON TO EACH OUTRIGGER. ADJUST TO SPECIFIED HEIGHTS OR ADJUST ACCORDINGLY. THEN INSERT AND LIGHTLY TIGHTEN EACH SET SCREW. (SEE FIGURE 2) **NOTE: THE BRACKETS WILL NEED TO BE ADJUSTED TO ENSURE A LEVEL SURFACE.**

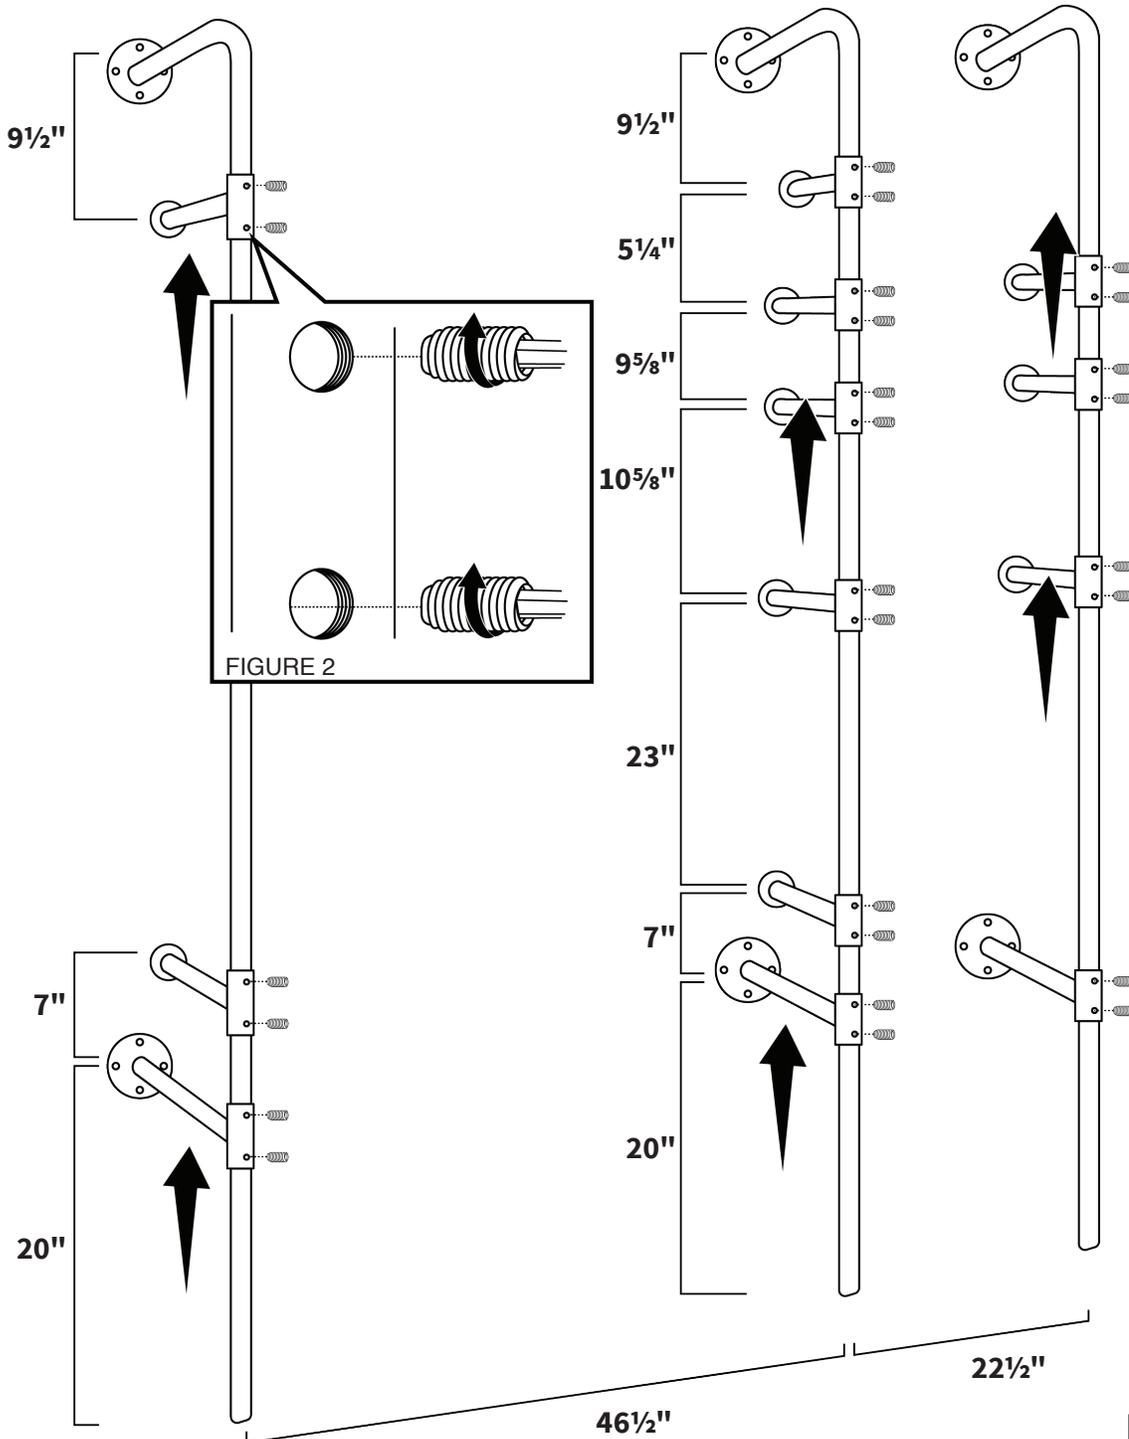

IMPORTANT

NOTE: THESE MEASUREMENTS ARE A SUGGESTED GUIDELINE AND CAN / SHOULD BE ADJUSTED TO MEET THE NEEDS OF THE MERCHANDISE THAT IS BEING DISPLAYED.

THE STRAIGHT BAR BRACKETS **DO NOT** TOUCH THE WALL, THERE SHOULD BE A 4" GAP BETWEEN THE WALL AND STRAIGHT BAR BRACKETS.


ASSEMBLY INSTRUCTIONS MANUAL

#60860 #60864 #60865 #60866

BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 1-4

STEP 3


INSTALL THE OUTRIGGER FEET ONTO EACH OUTRIGGER. (SEE FIGURE 3)

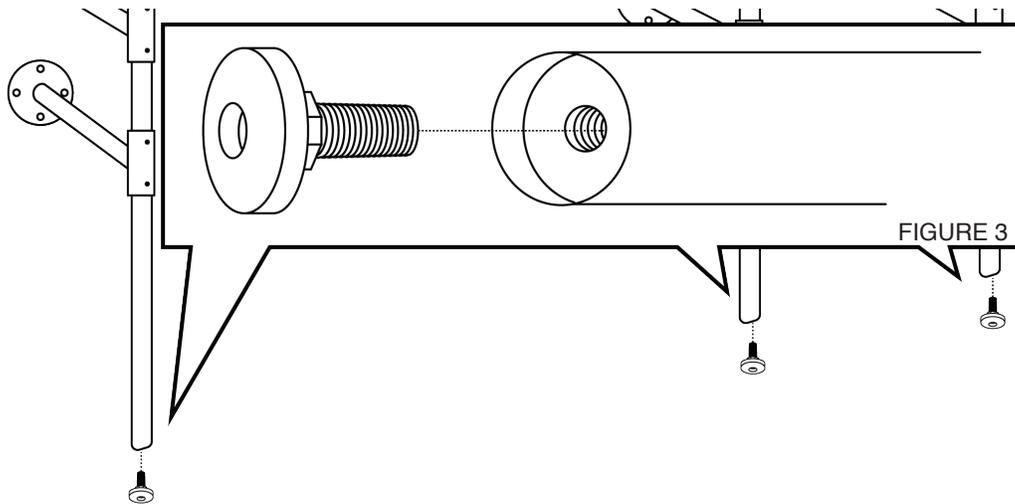

STEP 4

PLACE THE OUTRIGGER ASSEMBLY **LEVEL** AND **VERTICAL** AGAINST THE WALL. MARK EACH MOUNTING PLATE HOLE LOCATION. (SEE FIGURE 4)

NOTE: REFERENCE THE DIMENSIONS ON THE PREVIOUS PAGE FOR SPACING

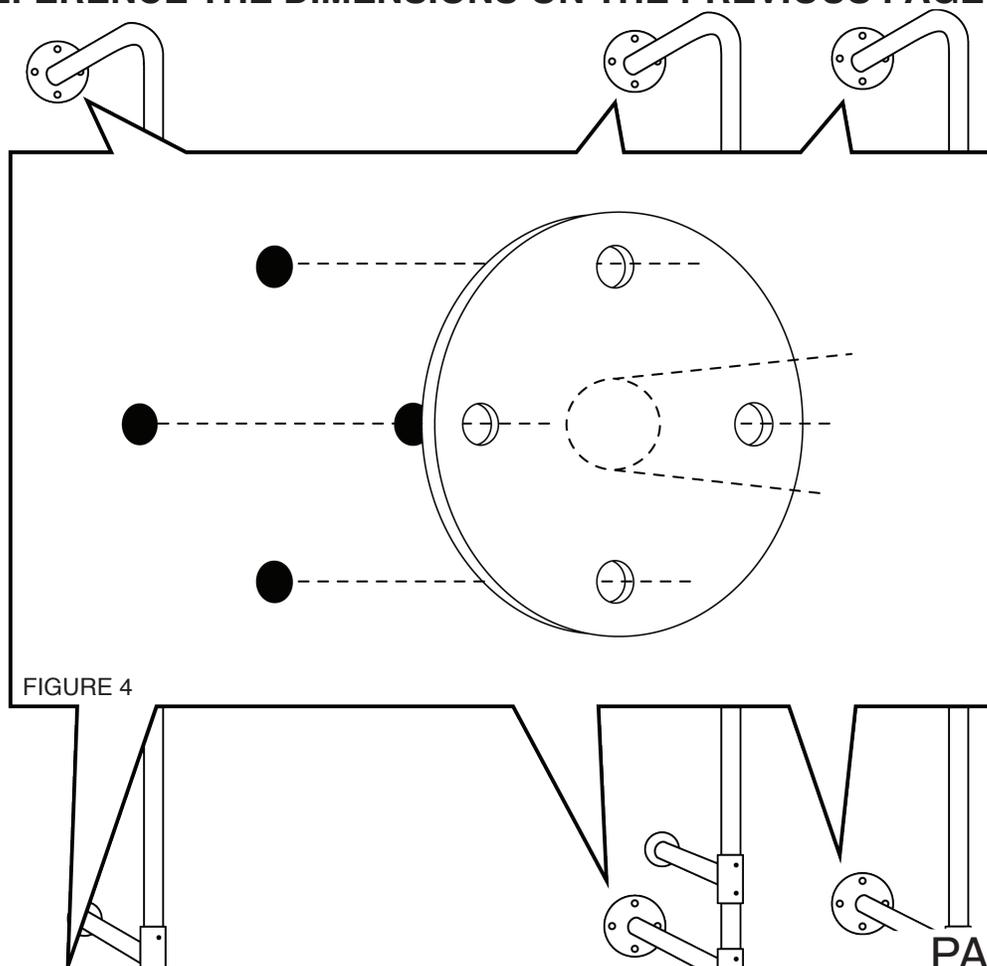


ASSEMBLY INSTRUCTIONS MANUAL

#60860 #60864 #60865 #60866

BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 1-4


STEP 5

USING THE COUNTERSINK SCREW AS A DRILL BIT, SCREW INTO THE WALL THEN REMOVE. INSTALL DRY WALL ANCHORS INTO EACH HOLE. (SEE FIGURE 5) .

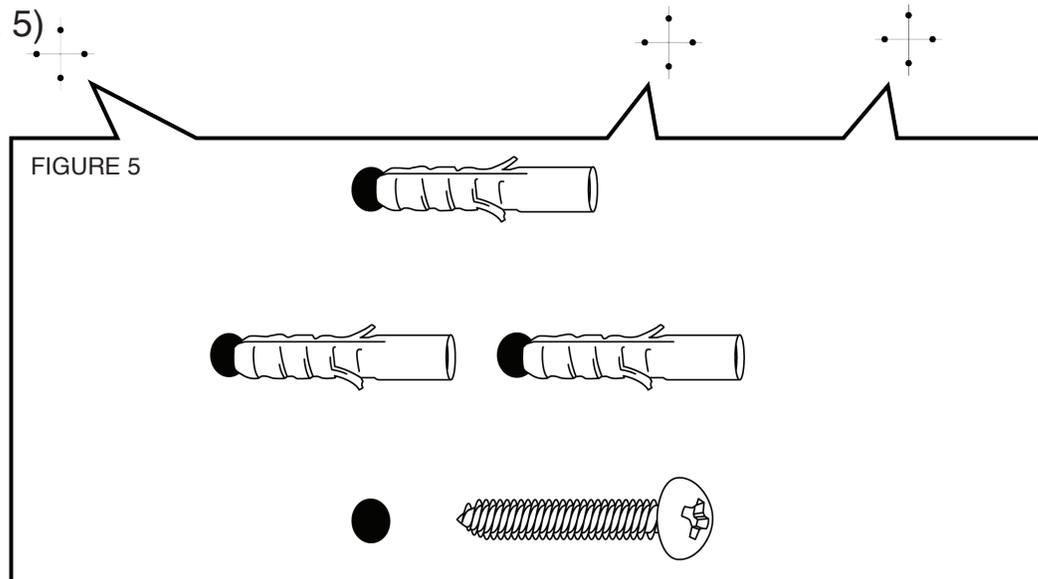

STEP 6

ALIGN THE OUTRIGGER MOUNTING PLATES WITH THE HOLES THEN INSERT A SCREW INTO EACH HOLE, THEN TIGHTEN. (SEE FIGURE 6)

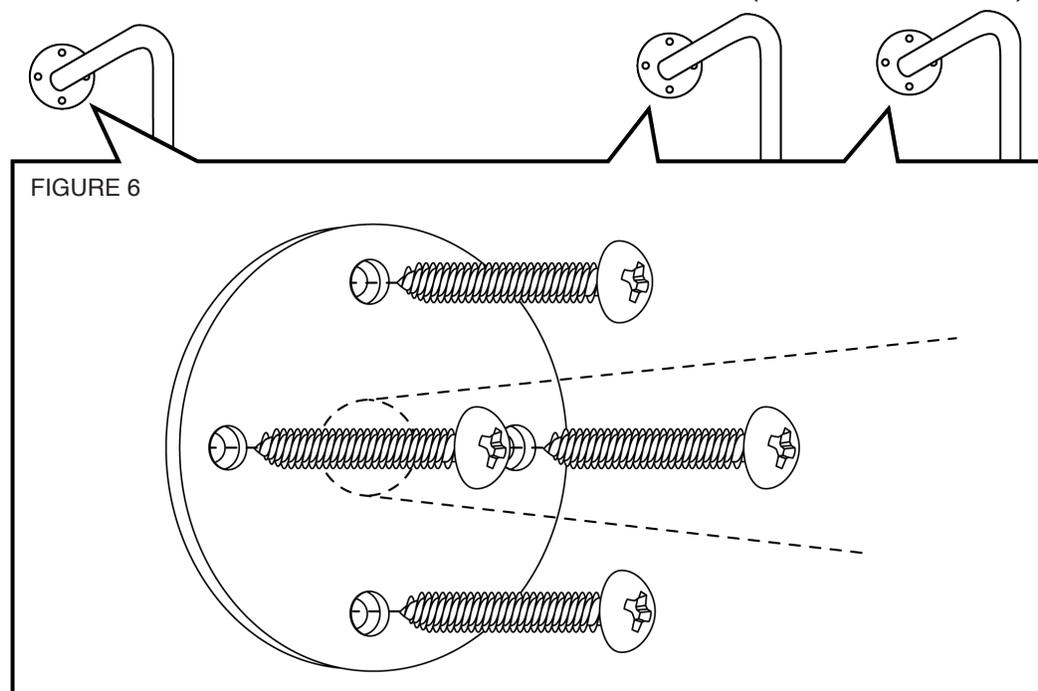


ASSEMBLY INSTRUCTIONS MANUAL

#60860 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 1


STEP 6

PLACE THE 48" AND 24" MELAMINE SHELVES ON TO THE BRACKETS, THEN HANG THE 48" AND 24" BASKETS, FINALLY INSTALL THE 48" AND 24" HANGRAILS. (SEE FIGURE 7) CHECK THE LEVEL OF EACH, ADJUST ACCORDINGLY, THEN FINALLY TIGHTEN ALL SET SCREWS.

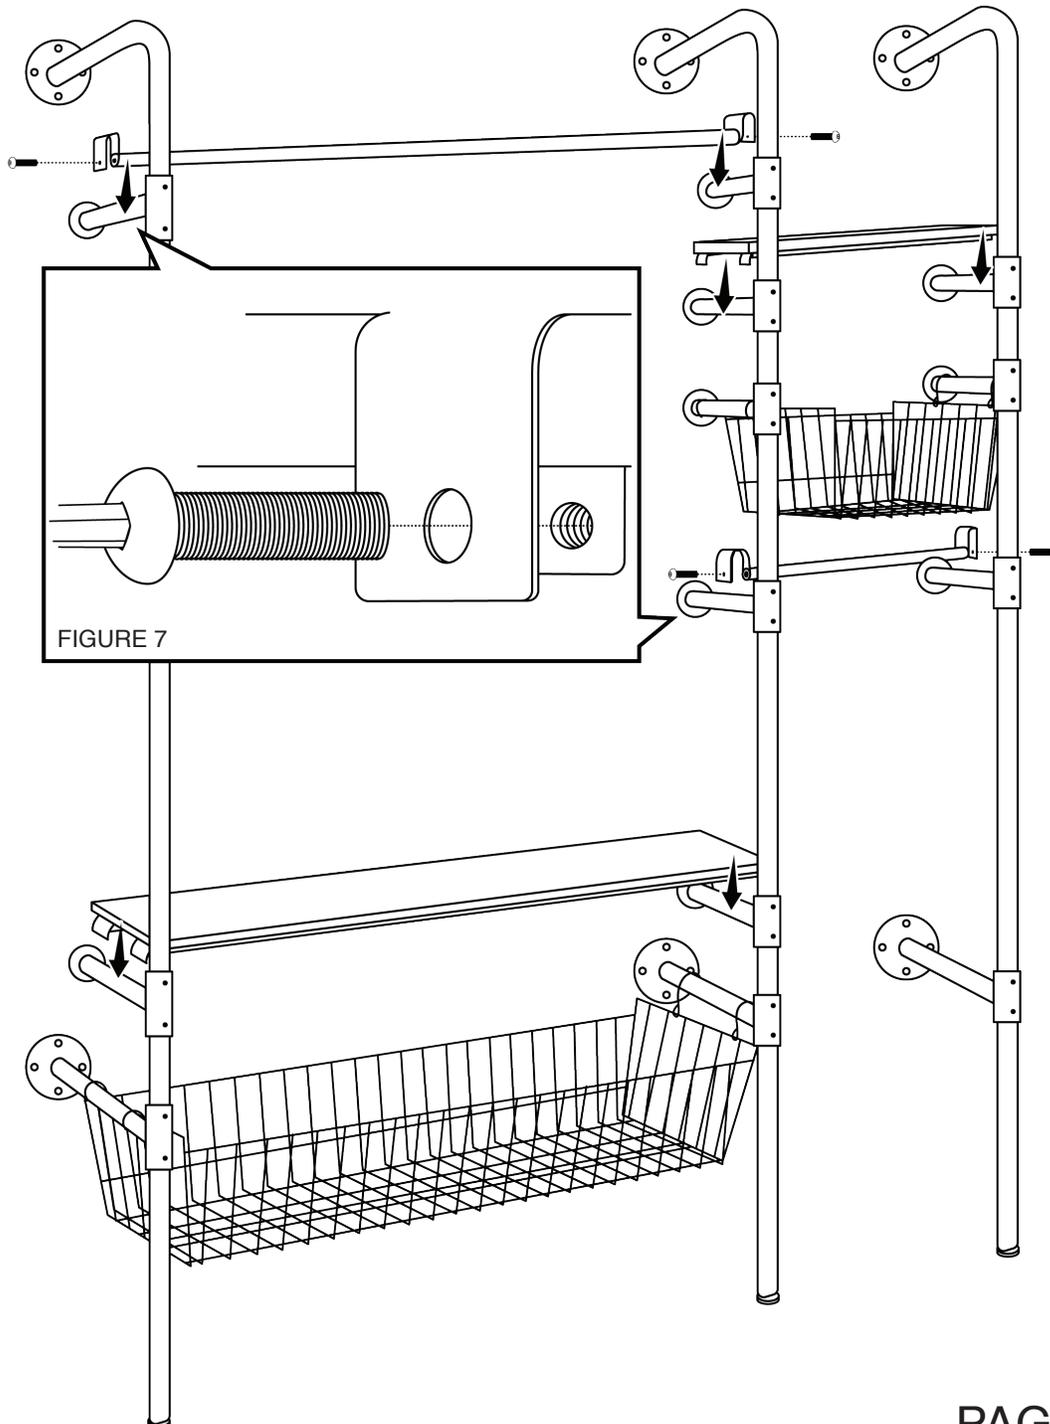

ASSEMBLY INSTRUCTIONS MANUAL


#60864 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 2

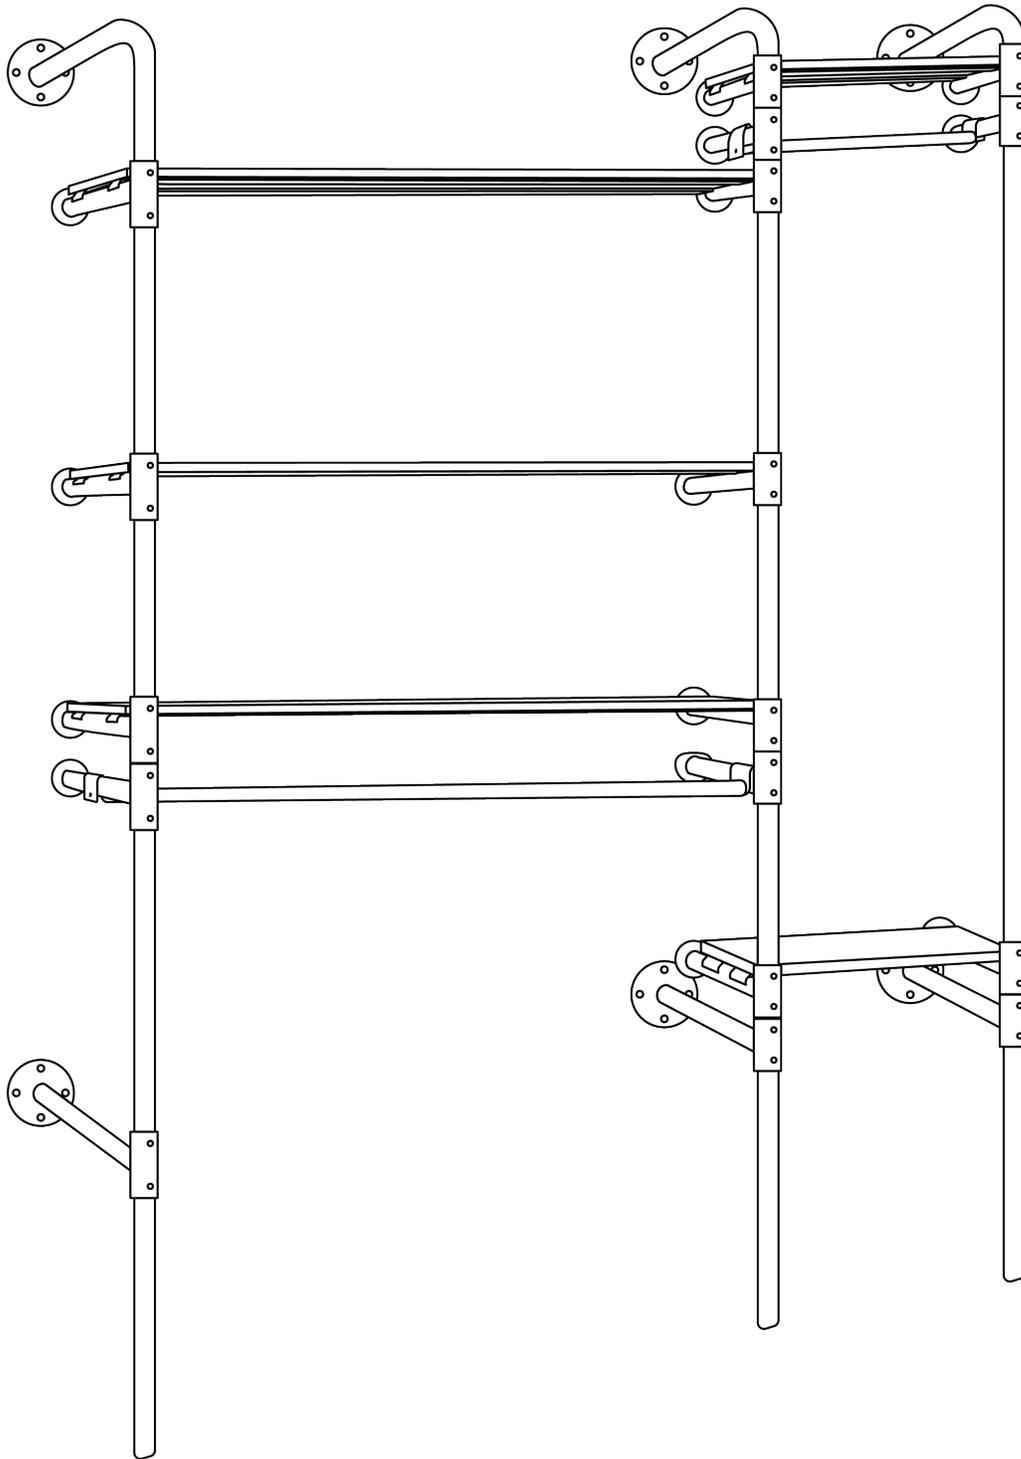

ASSEMBLY INSTRUCTIONS MANUAL

#60864 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 2


PARTS IN CARTON:

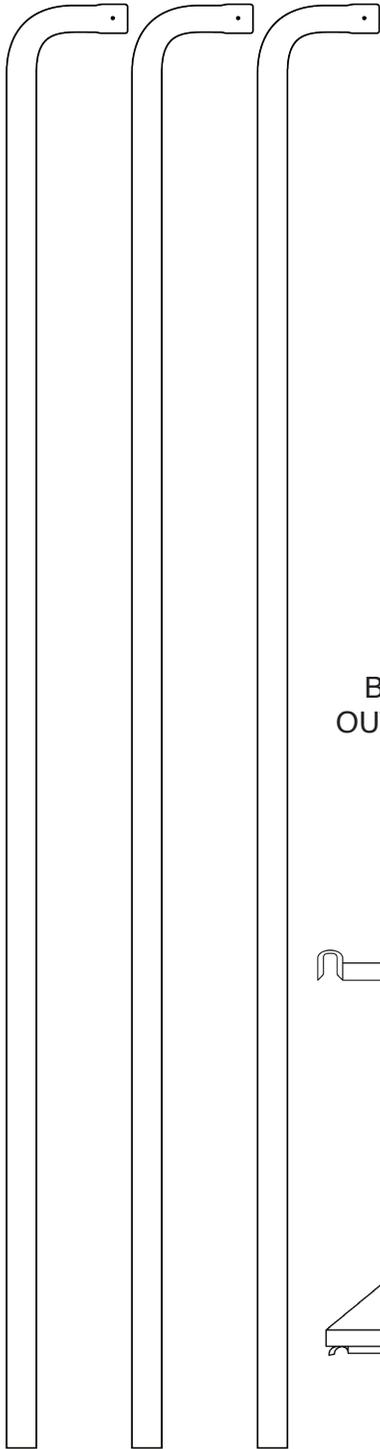


BOUTIQUE VINTAGE
OUTRIGGER UPRIGHTS
(3 EACH)



BOUTIQUE VINTAGE OUTRIGGER
BAR BRACKETS (3 EACH)




BOUTIQUE VINTAGE STRAIGHT
BAR BRACKETS (10 EACH)

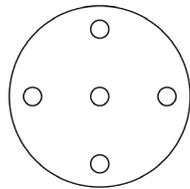


BOUTIQUE VINTAGE
OUTRIGGER MOUNTING
PLATE (6 EACH)




BOUTIQUE VINTAGE OUTRIGGER
STRAIGHT BAR (3 EACH)




BOUTIQUE VINTAGE 48"
HANGRAIL (1 EACH)



BOUTIQUE VINTAGE 24"
HANGRAIL (1 EACH)



BOUTIQUE VINTAGE 48"
MELAMINE SHELF (3 EACH)




BOUTIQUE VINTAGE 24"
HANGRAIL (2EACH)

ASSEMBLY INSTRUCTIONS MANUAL

#60864 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 2

PARTS IN CARTON:

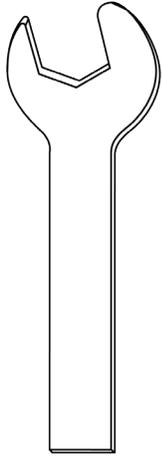


WRENCH
(1 EACH)




HEX KEY
(1 EACH - 6mm)




HEX KEY
(1 EACH - 4mm)




HEX KEY
(1 EACH - 3mm)

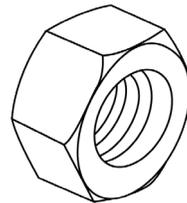


1/4 NUT
(3 EACH)

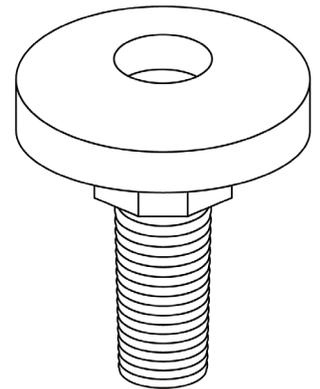


OUTRIGGER FOOT
(3 EACH)

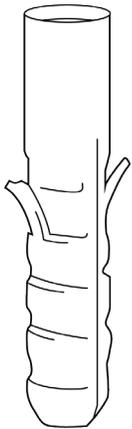


DRYWALL ANCHOR
(24 EACH)




SET SCREWS
(28 EACH)

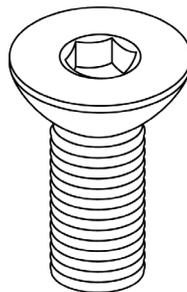

1" FLAT BOLT
(6 EACH)

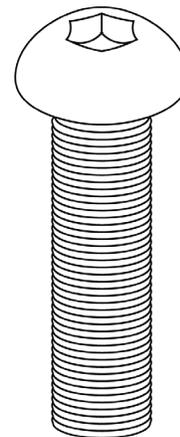

1 5/8" LONG BOLT
(3 EACH)

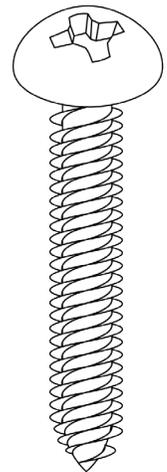

1 3/4" COUNTERSINK
SCREW
(24 EACH)


YOU WILL NEED TO SUPPLY YOUR OWN TAPE MEASURE, LEVEL, DRILL OR SCREWDRIVER FOR INSTALLATION.

ASSEMBLY INSTRUCTIONS MANUAL

#60864 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 2

STEP 1

ASSEMBLE THE OUTRIGGER PLATE AND STRAIGHT BAR WITH THE FLAT BOLT. REPEAT FOR EACH OUTRIGGER. THEN JOIN THE STRAIGHT BAR AND OUTRIGGER WITH THE LONG BOLT. (SEE FIGURE 1)

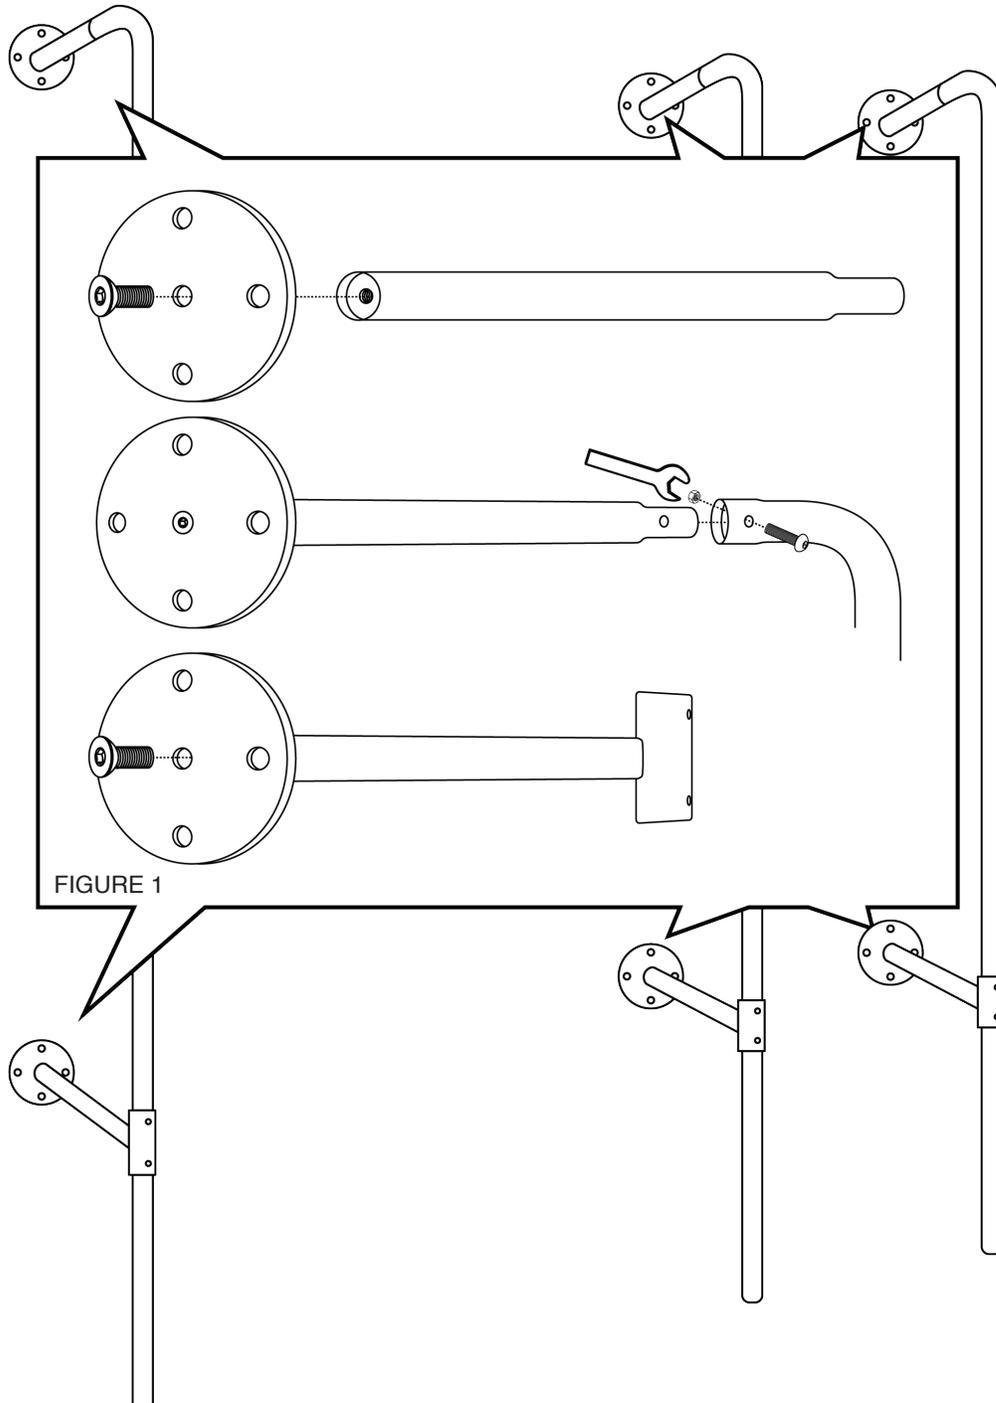


ASSEMBLY INSTRUCTIONS MANUAL

#60864 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 2

STEP 2

NEXT SLIDE THE STRAIGHT BAR BRACKETS ON TO EACH OUTRIGGER. ADJUST TO SPECIFIED HEIGHTS OR ADJUST ACCORDINGLY. THEN INSERT AND LIGHTLY TIGHTEN EACH SET SCREW. (SEE FIGURE 2) **NOTE: THE BRACKETS WILL NEED TO BE ADJUSTED TO ENSURE A LEVEL SURFACE.**

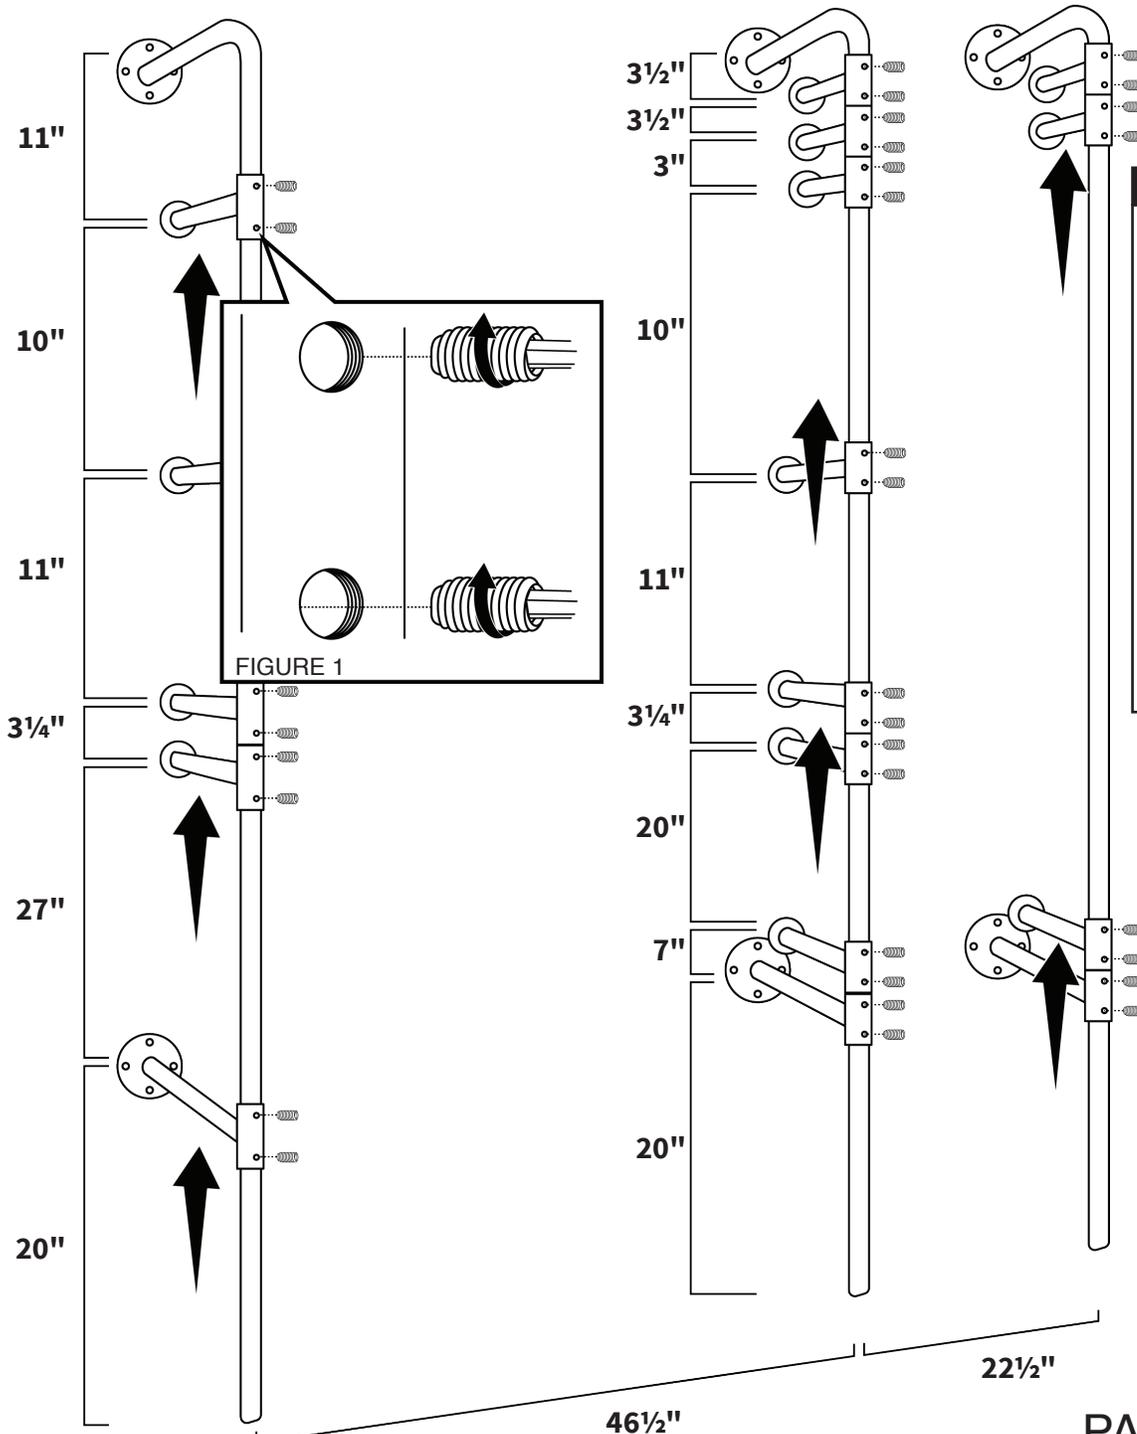

IMPORTANT

NOTE: THESE MEASUREMENTS ARE A SUGGESTED GUIDELINE AND CAN / SHOULD BE ADJUSTED TO MEET THE NEEDS OF THE MERCHANDISE THAT IS BEING DISPLAYED.


THE STRAIGHT BAR BRACKETS DO NOT TOUCH THE WALL, THERE SHOULD BE A 4" GAP BETWEEN THE WALL AND STRAIGHT BAR BRACKETS.

ASSEMBLY INSTRUCTIONS MANUAL

#60864 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 2

STEP 3


INSTALL THE OUTRIGGER FEET ONTO EACH OUTRIGGER. (SEE FIGURE 3)

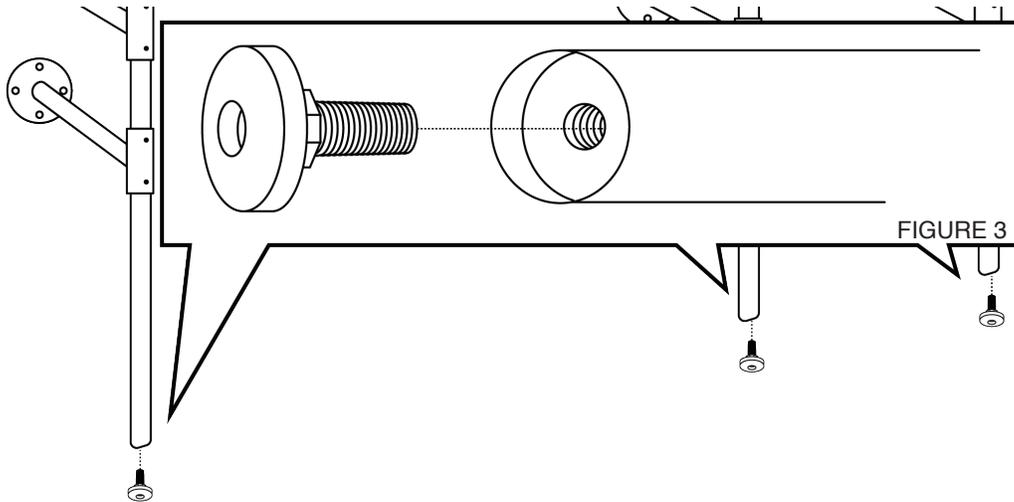

STEP 4

PLACE THE OUTRIGGER ASSEMBLY **LEVEL AND VERTICAL** AGAINST THE WALL. MARK EACH MOUNTING PLATE HOLE LOCATION. (SEE FIGURE 4)

NOTE: REFERENCE THE DIMENSIONS ON THE PREVIOUS PAGE FOR SPACING

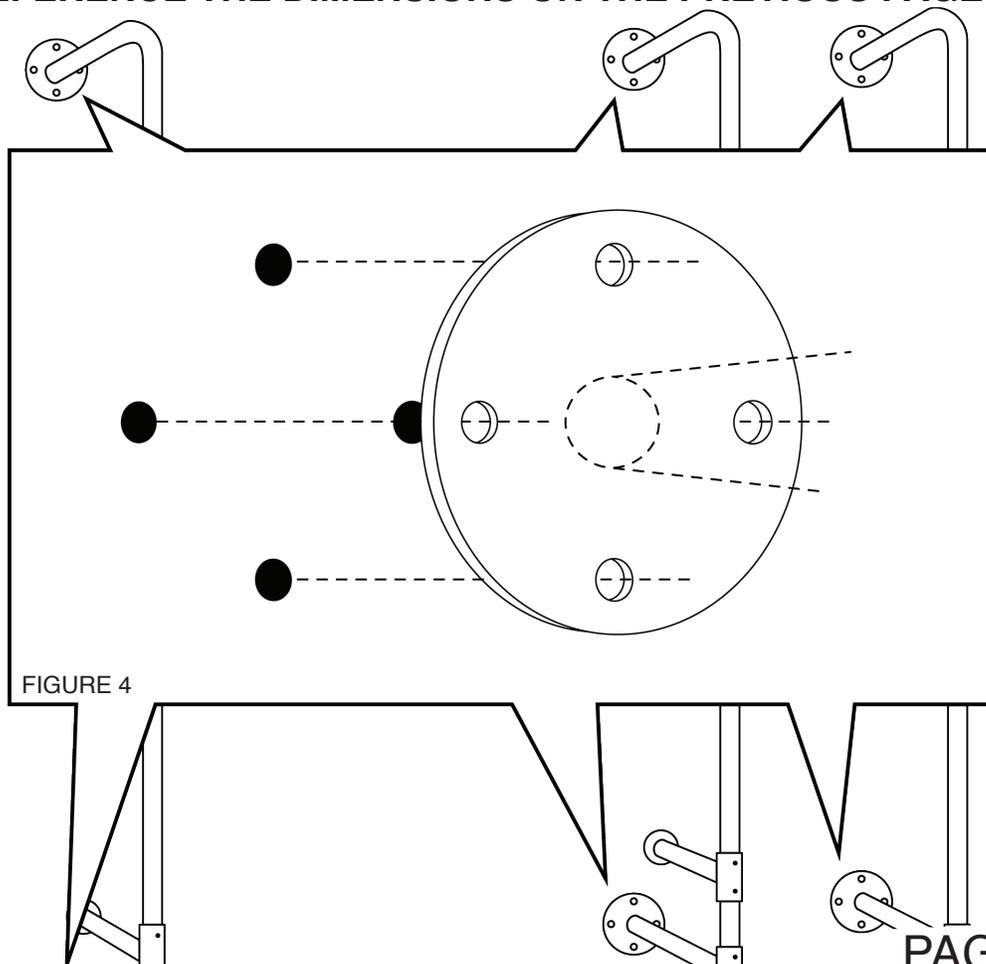


ASSEMBLY INSTRUCTIONS MANUAL

#60864 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 2


STEP 5

USING THE COUNTERSINK SCREW AS A DRILL BIT, SCREW INTO THE WALL THEN REMOVE. INSTALL DRY WALL ANCHORS INTO EACH HOLE. (SEE FIGURE 5) .

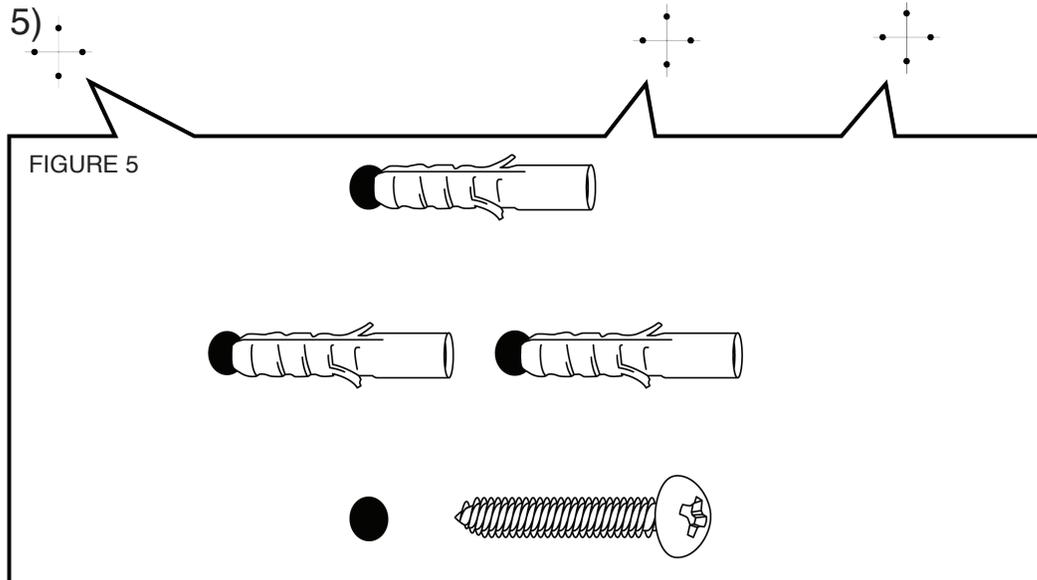

STEP 6

ALIGN THE OUTRIGGER MOUNTING PLATES WITH THE HOLES THEN INSERT A SCREW INTO EACH HOLE, THEN TIGHTEN. (SEE FIGURE 6)

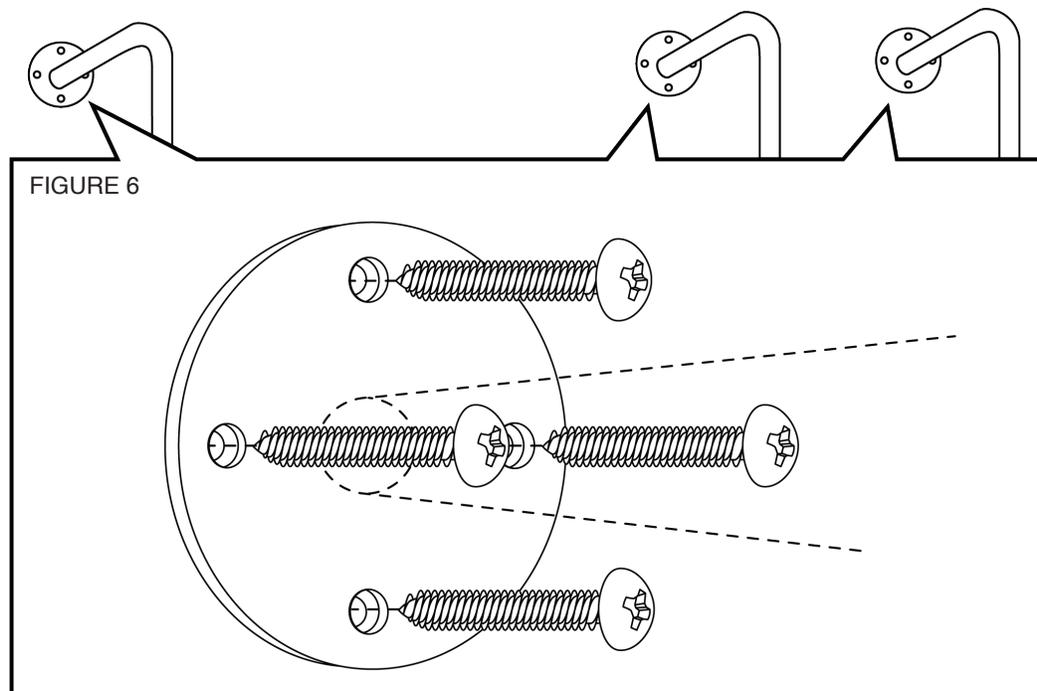


ASSEMBLY INSTRUCTIONS MANUAL

#60864 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 2


STEP 6

PLACE THE 48" AND 24" MELAMINE SHELVES ON TO THE BRACKETS, FINALLY INSTALL THE 48" AND 24" HANGRAILS. (SEE FIGURE 7) CHECK THE LEVEL OF EACH, ADJUST ACCORDINGLY, THEN FINALLY TIGHTEN ALL SET SCREWS.

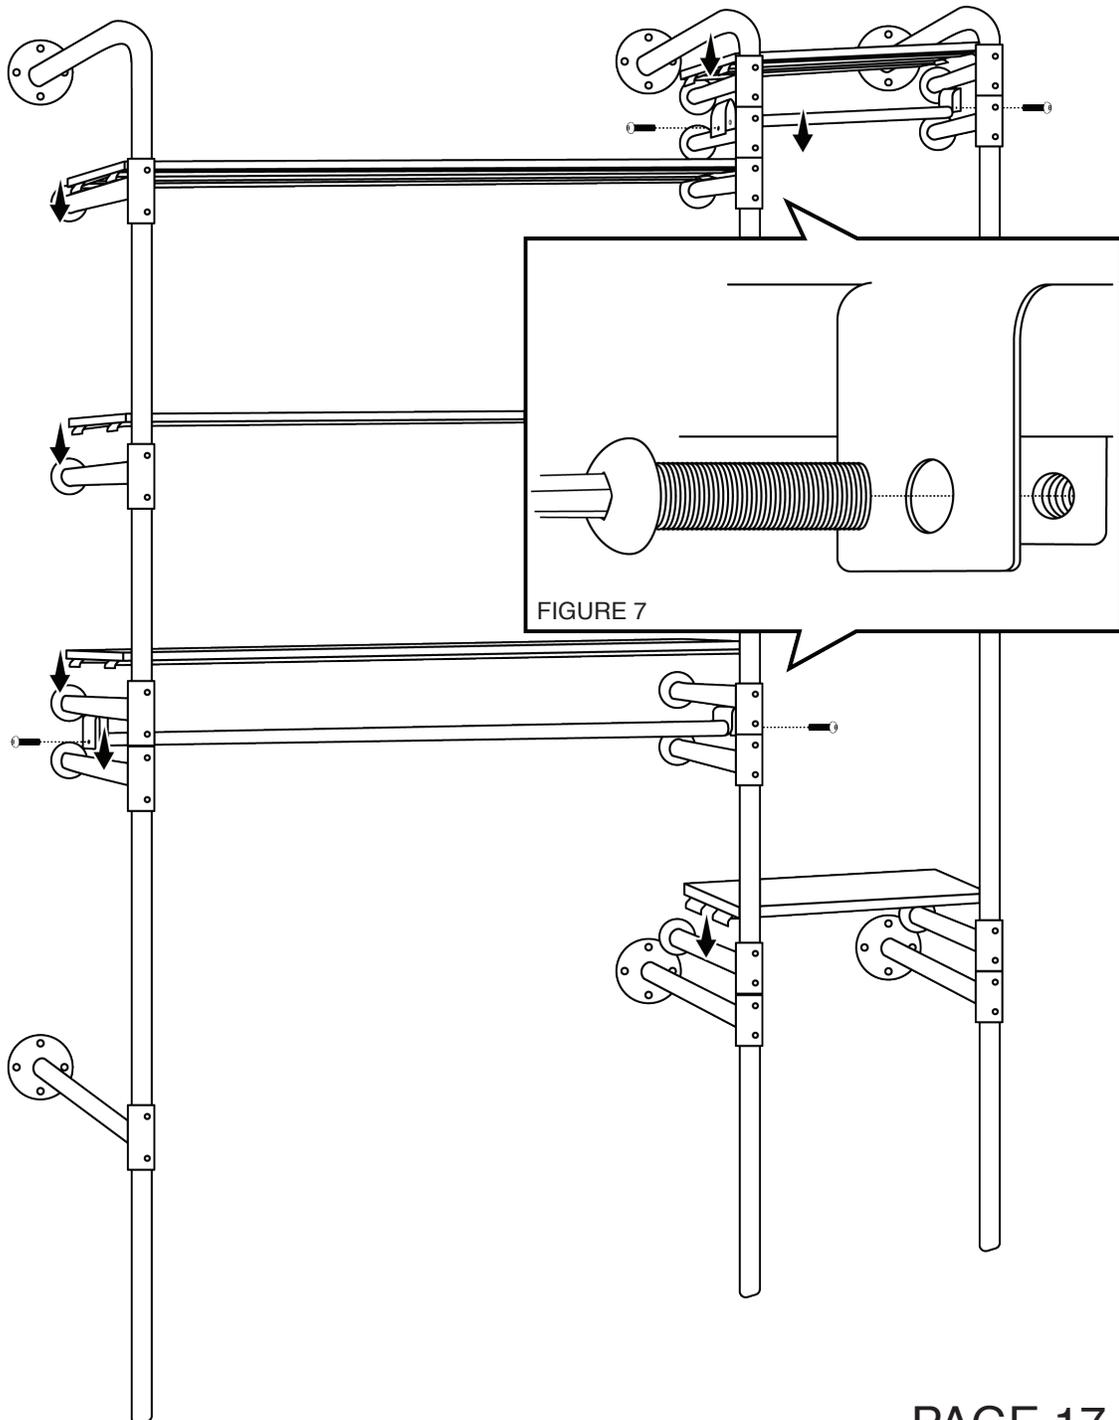

ASSEMBLY INSTRUCTIONS MANUAL


#60865 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 3

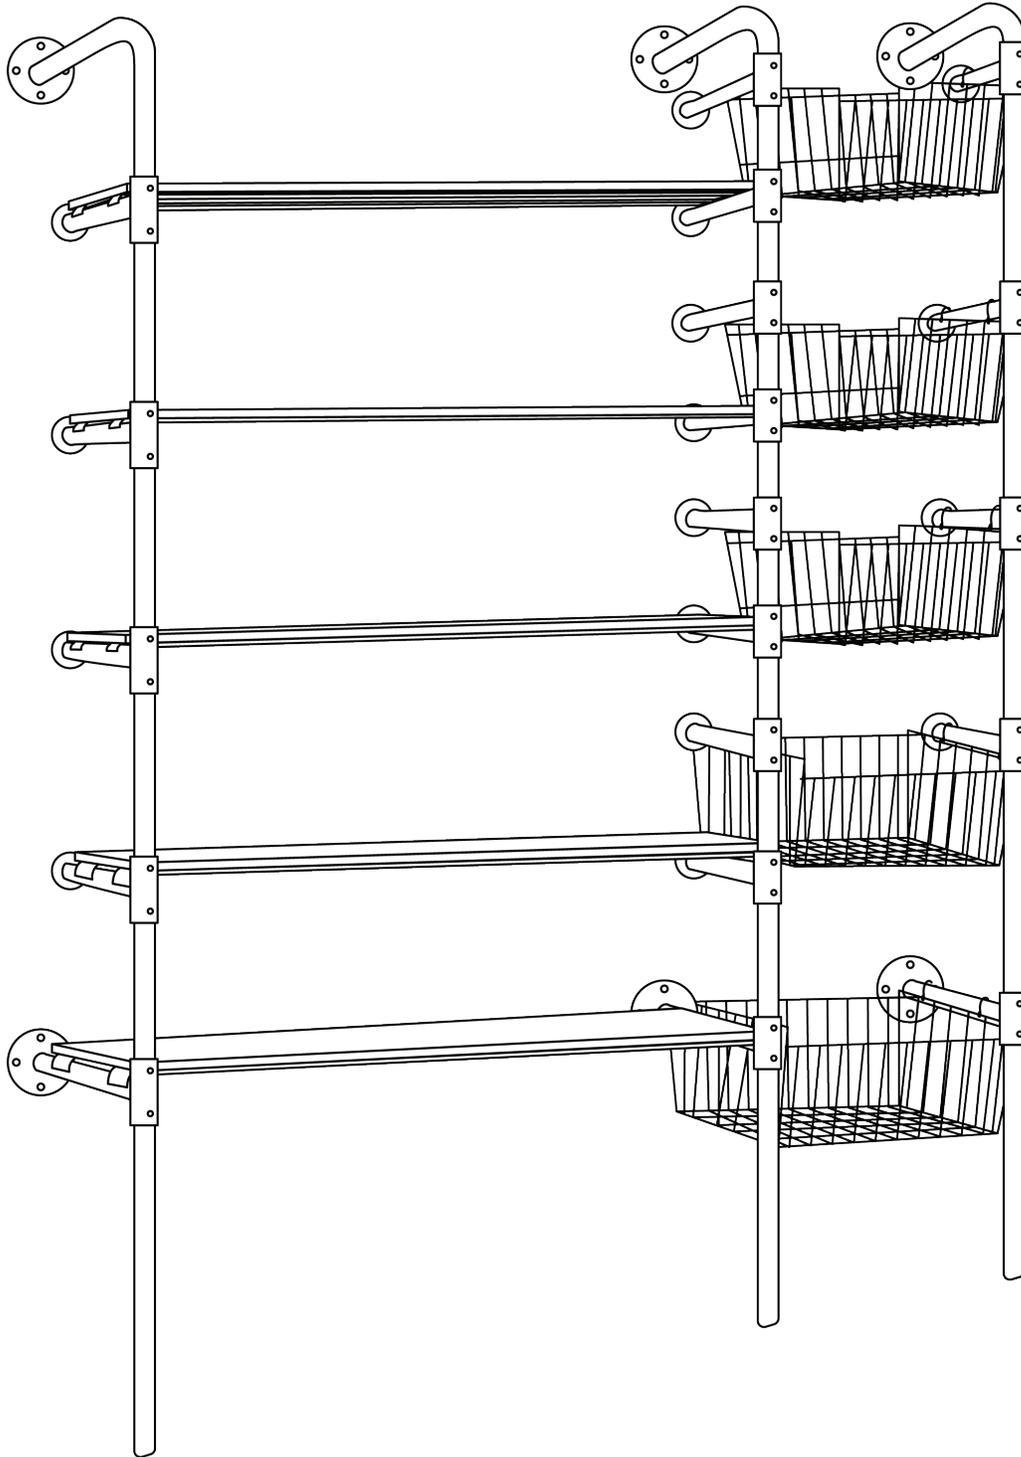

ASSEMBLY INSTRUCTIONS MANUAL

#60865 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 3


PARTS IN CARTON:

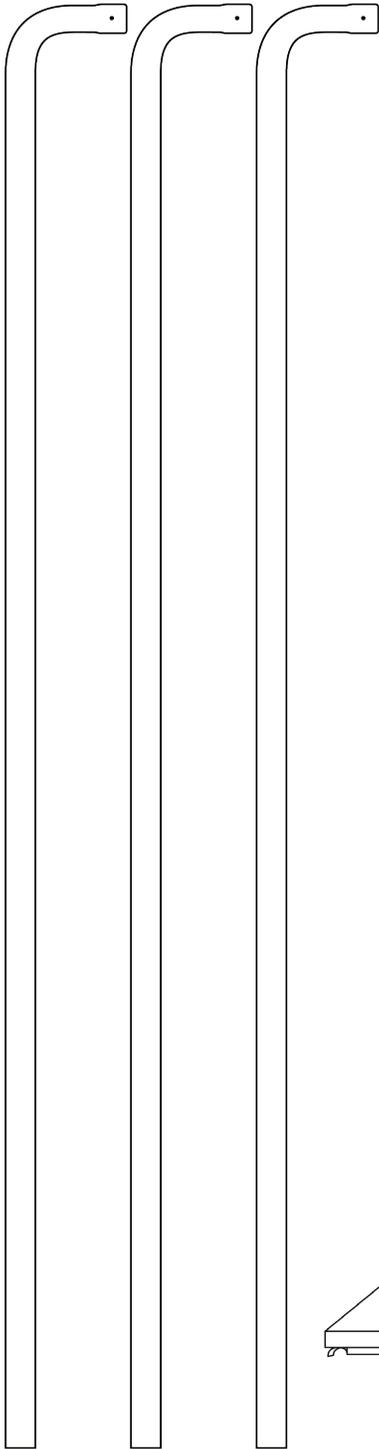

BOUTIQUE VINTAGE
OUTRIGGER UPRIGHTS
(3 EACH)




BOUTIQUE VINTAGE OUTRIGGER
BAR BRACKETS (3 EACH)




BOUTIQUE VINTAGE STRAIGHT
BAR BRACKETS (10 EACH)




BOUTIQUE VINTAGE OUTRIGGER
STRAIGHT BAR (3 EACH)

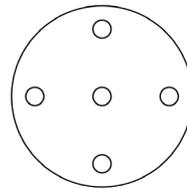

BOUTIQUE VINTAGE
OUTRIGGER MOUNTING
PLATE (6 EACH)



BOUTIQUE VINTAGE 48"
MELAMINE SHELF (5 EACH)

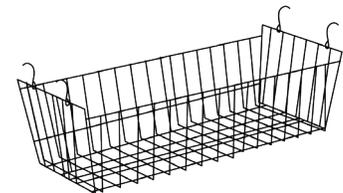


BOUTIQUE VINTAGE 24"
BASKET (4 EACH)

ASSEMBLY INSTRUCTIONS MANUAL

#60865 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 3

PARTS IN CARTON:

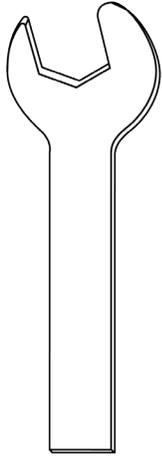


WRENCH
(1 EACH)




HEX KEY
(1 EACH - 6mm)




HEX KEY
(1 EACH - 4mm)




HEX KEY
(1 EACH - 3mm)

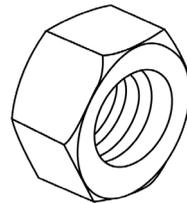


1/4 NUT
(4 EACH)

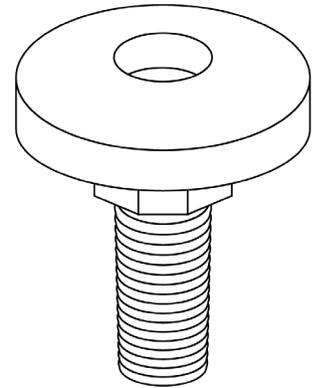


OUTRIGGER FOOT
(3 EACH)

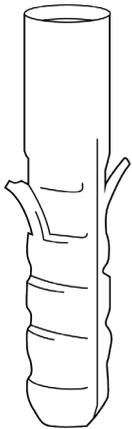


DRYWALL ANCHOR
(24 EACH)




SET SCREWS
(28 EACH)

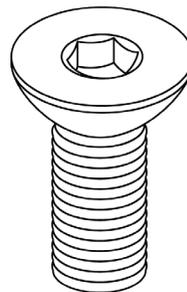

1" FLAT BOLT
(6 EACH)

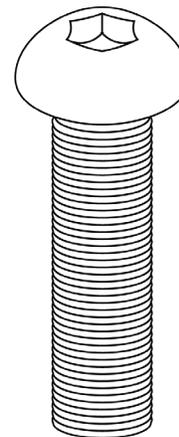

1 5/8" LONG BOLT
(3 EACH)

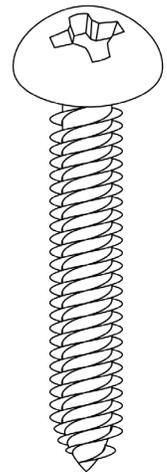

1 3/4" COUNTERSINK
SCREW
(24 EACH)

YOU WILL NEED TO SUPPLY YOUR OWN TAPE MEASURE, LEVEL, DRILL OR SCREWDRIVER FOR INSTALLATION.

ASSEMBLY INSTRUCTIONS MANUAL

#60865 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 3

STEP 1

ASSEMBLE THE OUTRIGGER PLATE AND STRAIGHT BAR WITH THE FLAT BOLT. REPEAT FOR EACH OUTRIGGER. THEN JOIN THE STRAIGHT BAR AND OUTRIGGER WITH THE LONG BOLT. (SEE FIGURE 1)

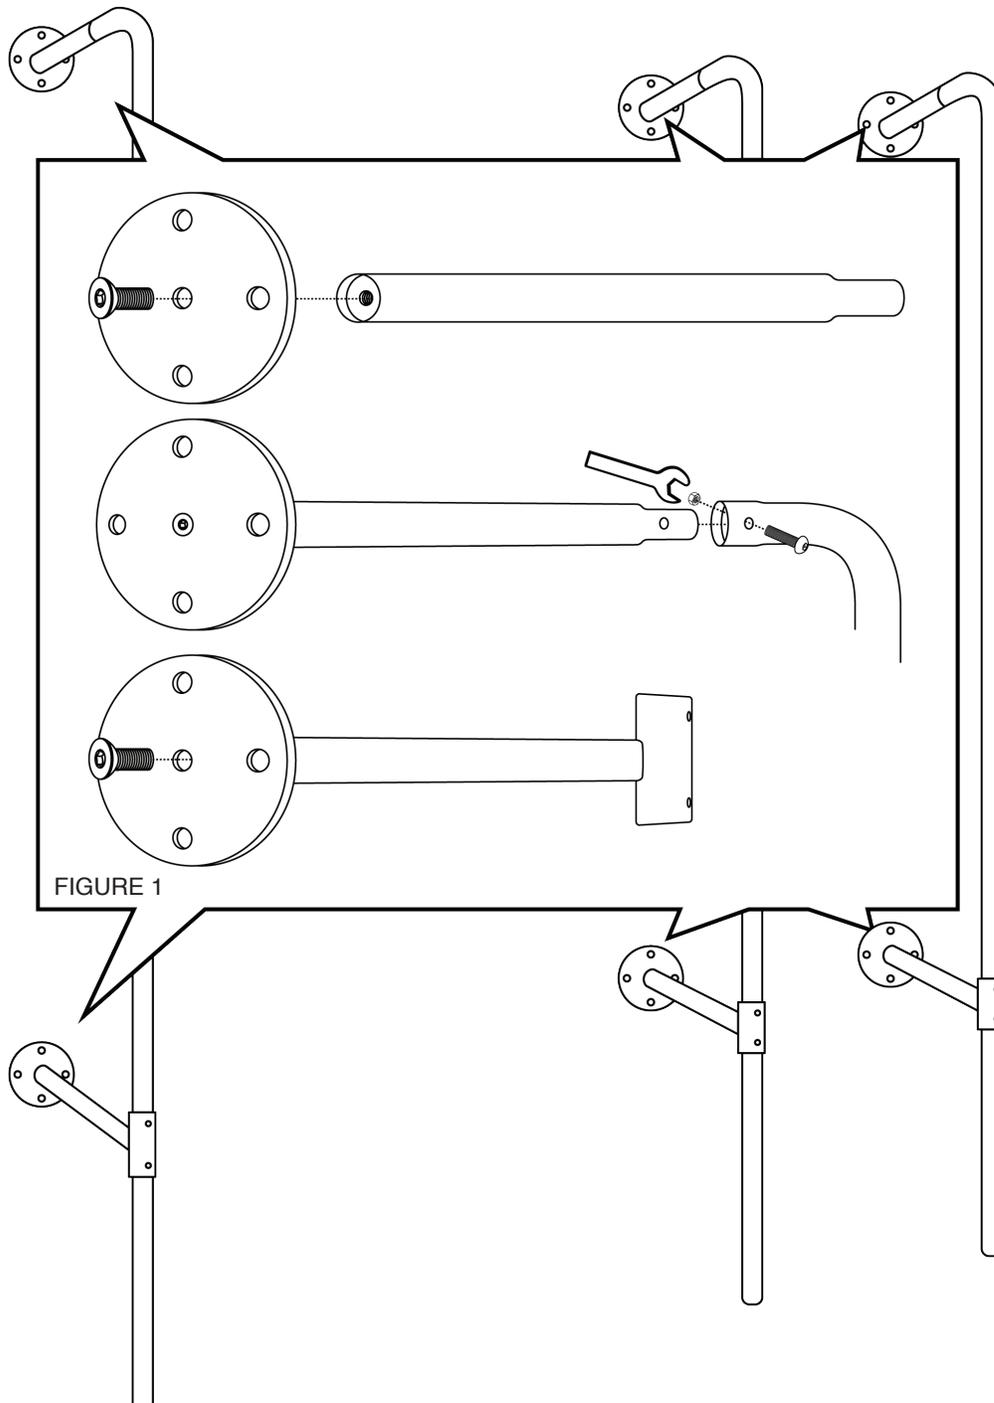



FIGURE 1

ASSEMBLY INSTRUCTIONS MANUAL

#60865 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 3

STEP 2

NEXT SLIDE THE STRAIGHT BAR BRACKETS ON TO EACH OUTRIGGER. ADJUST TO SPECIFIED HEIGHTS OR ADJUST ACCORDINGLY. THEN INSERT AND LIGHTLY TIGHTEN EACH SET SCREW. (SEE FIGURE 2) **NOTE: THE BRACKETS WILL NEED TO BE ADJUSTED TO ENSURE A LEVEL SURFACE.**

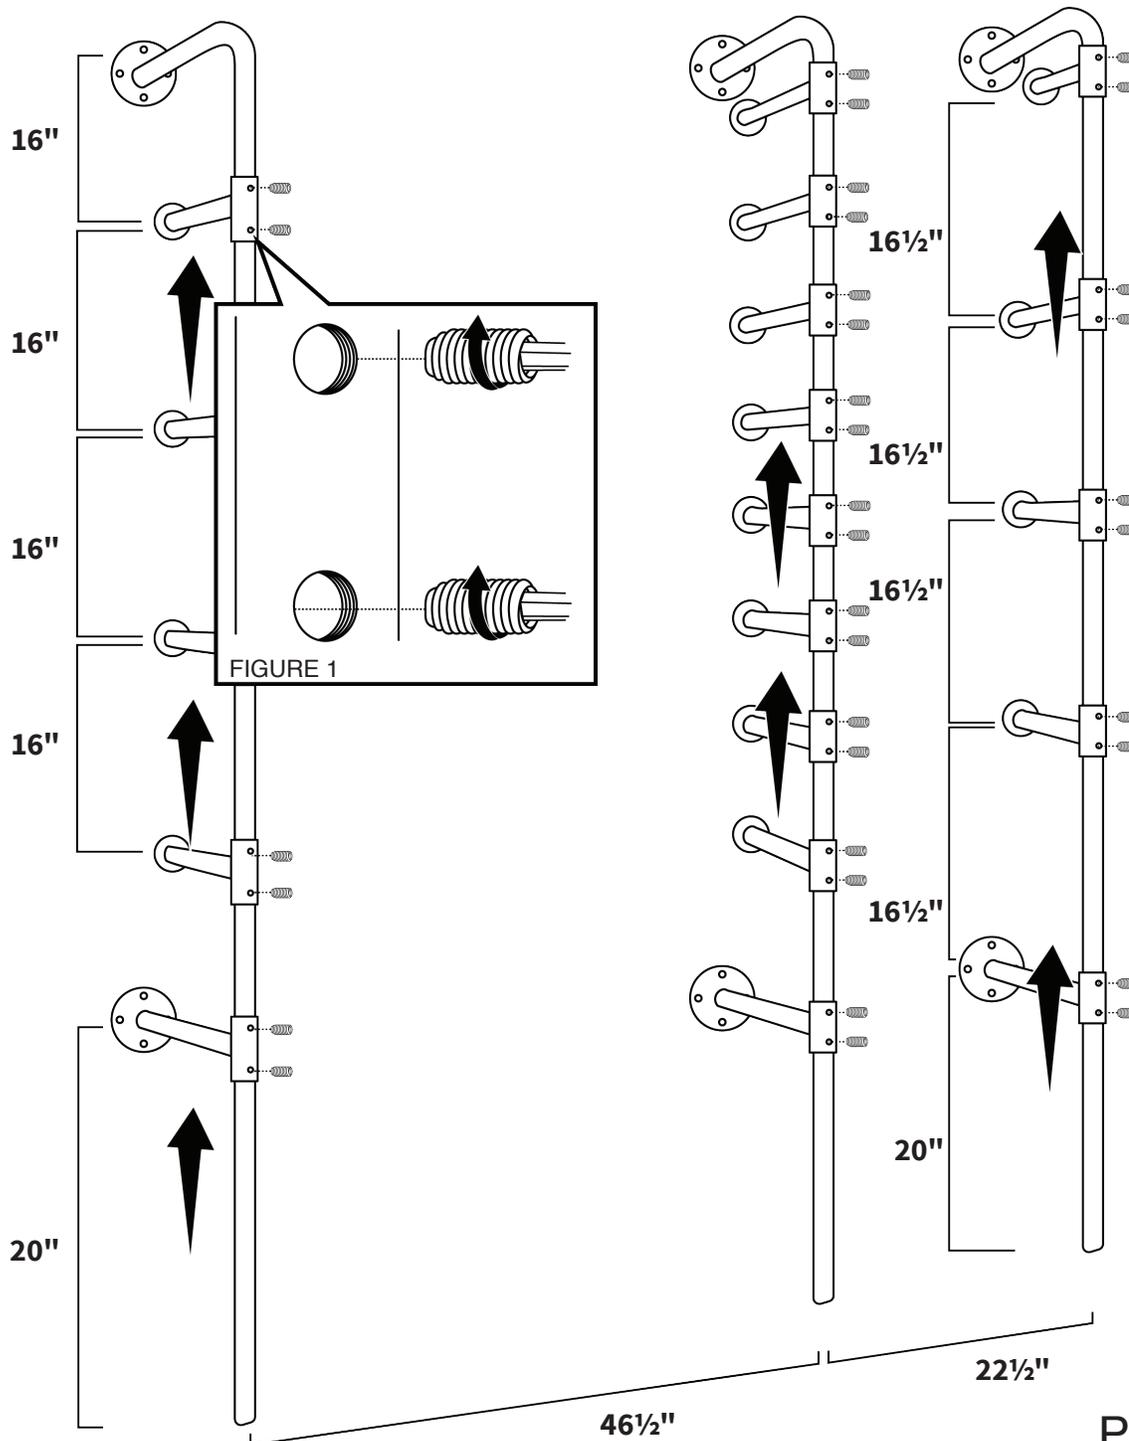

IMPORTANT

NOTE: THESE MEASUREMENTS ARE A SUGGESTED GUIDELINE AND CAN / SHOULD BE ADJUSTED TO MEET THE NEEDS OF THE MERCHANDISE THAT IS BEING DISPLAYED.


THE STRAIGHT BAR BRACKETS **DO NOT** TOUCH THE WALL, THERE SHOULD BE A 4" GAP BETWEEN THE WALL AND STRAIGHT BAR BRACKETS.

ASSEMBLY INSTRUCTIONS MANUAL

#60865 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 3

STEP 3


INSTALL THE OUTRIGGER FEET ONTO EACH OUTRIGGER. (SEE FIGURE 3)

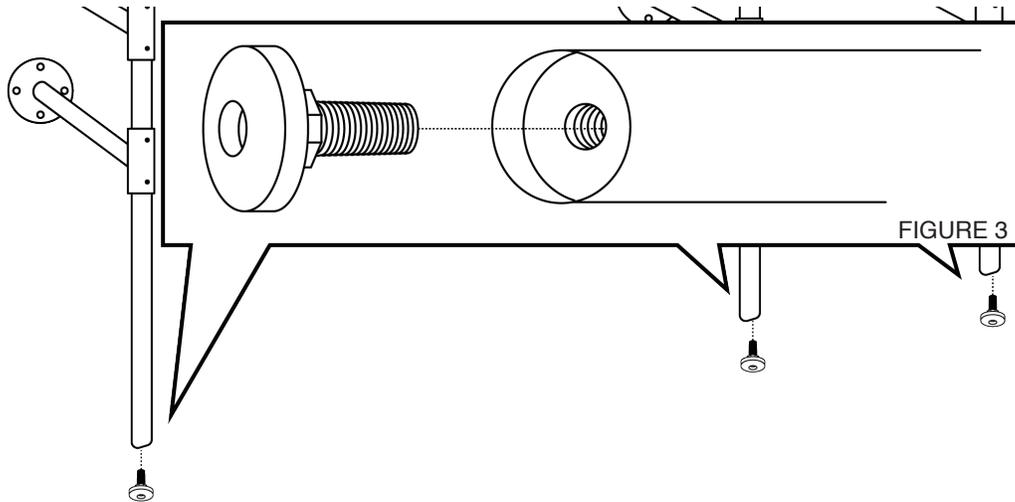

STEP 4

PLACE THE OUTRIGGER ASSEMBLY **LEVEL AND VERTICAL** AGAINST THE WALL. MARK EACH MOUNTING PLATE HOLE LOCATION. (SEE FIGURE 4)

NOTE: REFERENCE THE DIMENSIONS ON THE PREVIOUS PAGE FOR SPACING

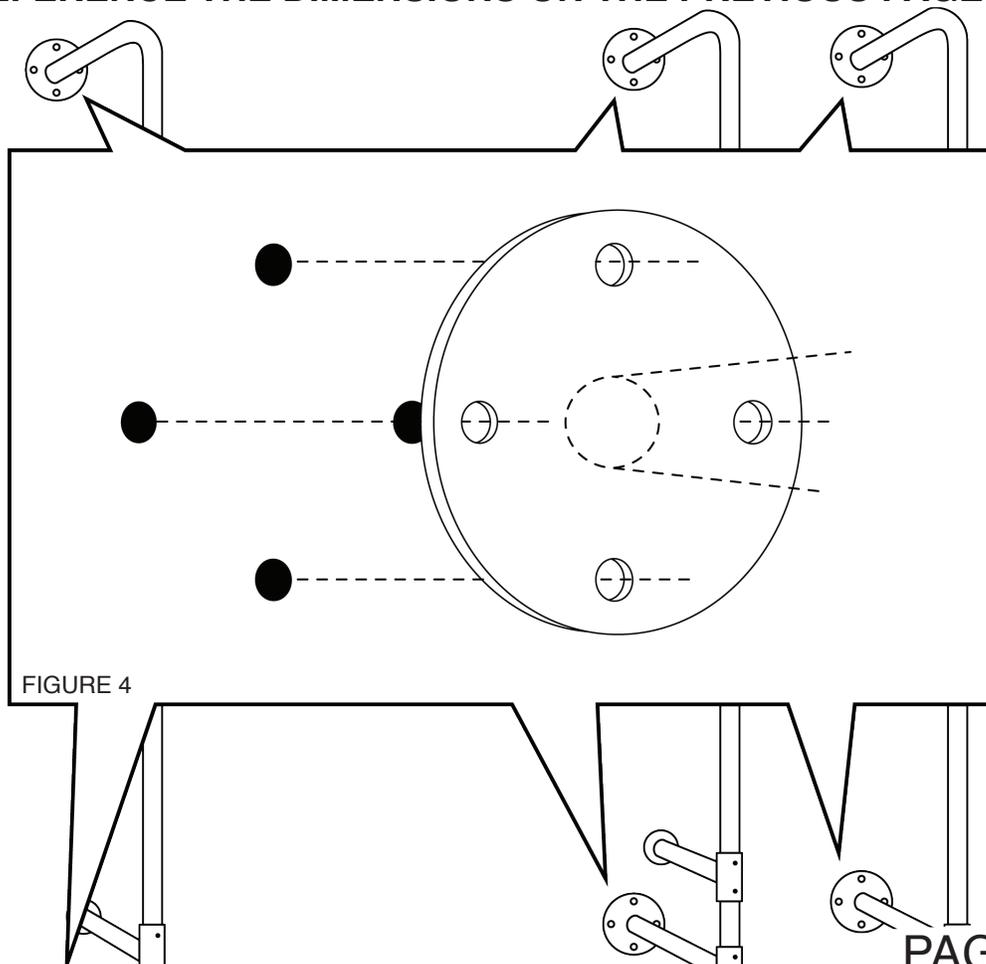


ASSEMBLY INSTRUCTIONS MANUAL

#60865 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 3


STEP 5

USING THE COUNTERSINK SCREW AS A DRILL BIT, SCREW INTO THE WALL THEN REMOVE. INSTALL DRY WALL ANCHORS INTO EACH HOLE. (SEE FIGURE 5) .

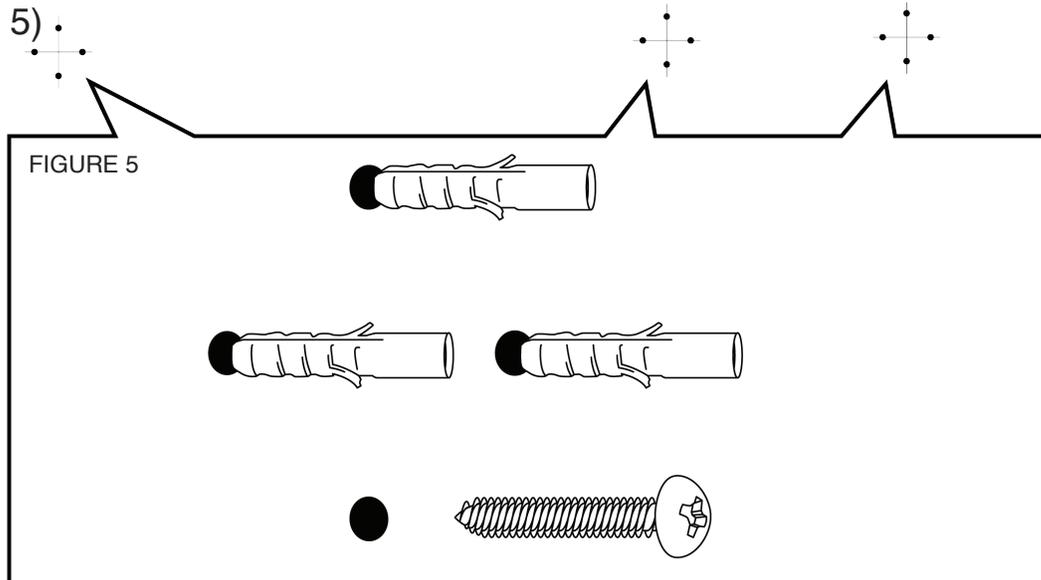

STEP 6

ALIGN THE OUTRIGGER MOUNTING PLATES WITH THE HOLES THEN INSERT A SCREW INTO EACH HOLE, THEN TIGHTEN. (SEE FIGURE 6)

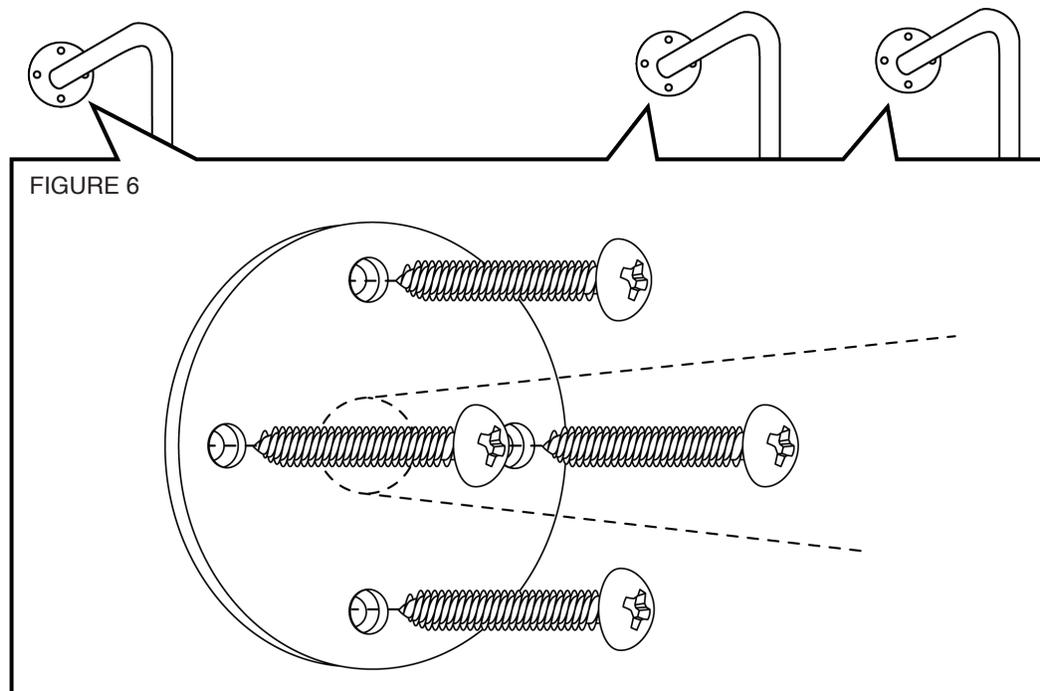


ASSEMBLY INSTRUCTIONS MANUAL

#60865 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 3


STEP 6

PLACE THE 48" MELAMINE SHELVES ON TO THE BRACKETS, FINALLY HANG THE 24" BASKETS. CHECK THE LEVEL OF EACH SHELF, ADJUST ACCORDINGLY, THEN FINALLY TIGHTEN ALL SET SCREWS.

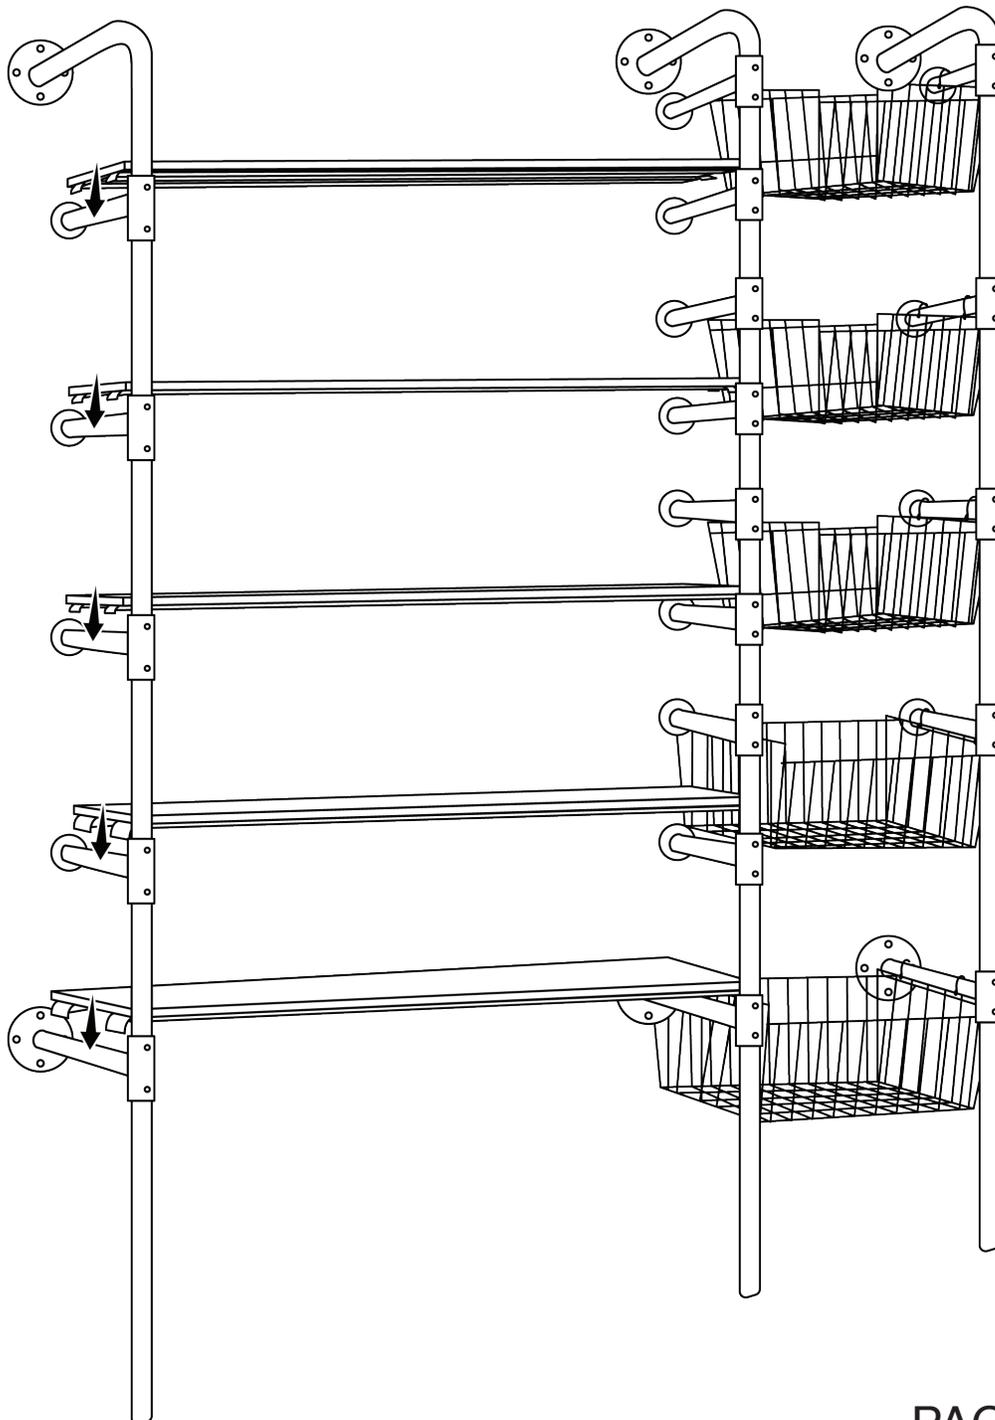

ASSEMBLY INSTRUCTIONS MANUAL


#60866 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 4

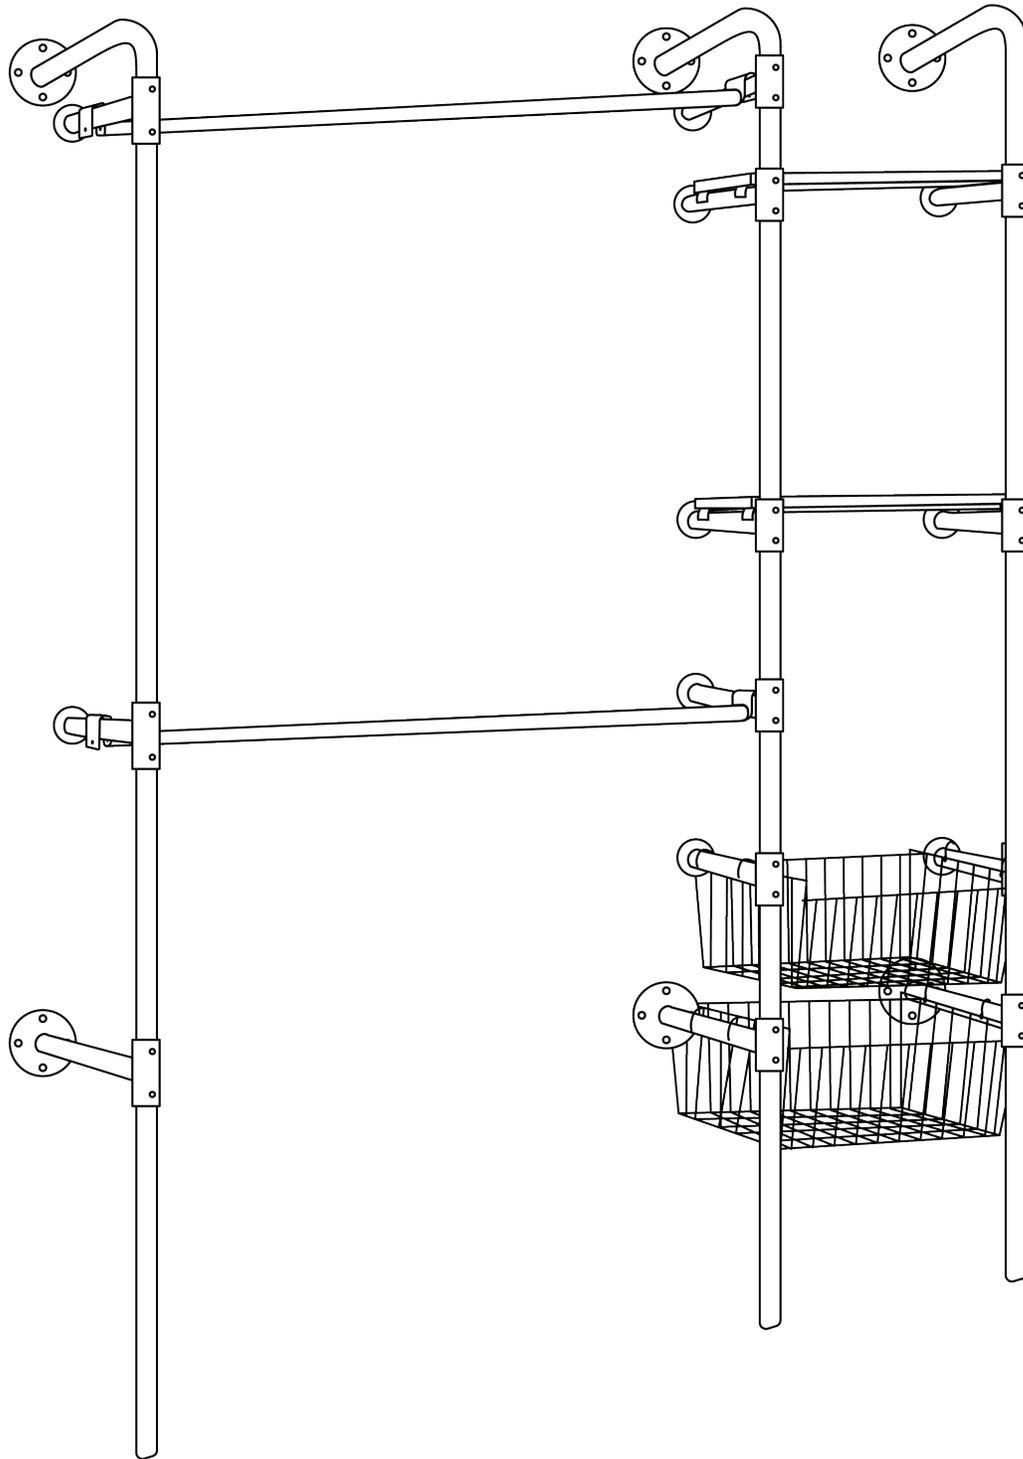

ASSEMBLY INSTRUCTIONS MANUAL

#60866 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 4


PARTS IN CARTON:

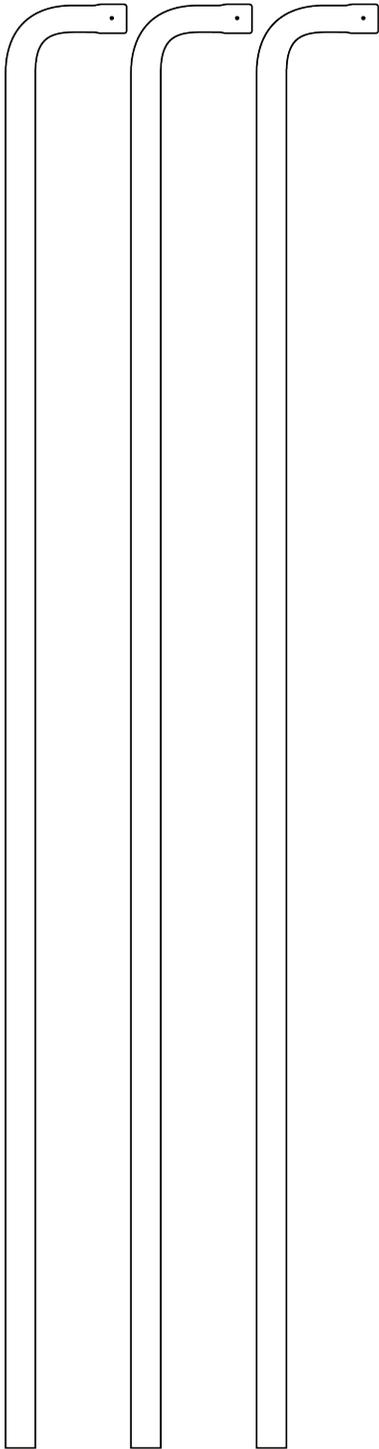

BOUTIQUE VINTAGE
OUTRIGGER UPRIGHTS
(3 EACH)




BOUTIQUE VINTAGE OUTRIGGER
BAR BRACKETS (3 EACH)




BOUTIQUE VINTAGE STRAIGHT
BAR BRACKETS (10 EACH)




BOUTIQUE VINTAGE OUTRIGGER
STRAIGHT BAR (3 EACH)




BOUTIQUE VINTAGE 48"
HANGRAIL (2 EACH)

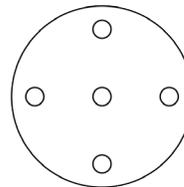

BOUTIQUE VINTAGE
OUTRIGGER MOUNTING
PLATE (6 EACH)



BOUTIQUE VINTAGE 24"
HANGRAIL (2 EACH)

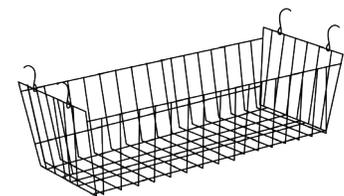


BOUTIQUE VINTAGE 24"
BASKET (2 EACH)

ASSEMBLY INSTRUCTIONS MANUAL

#60866 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 4

PARTS IN CARTON:

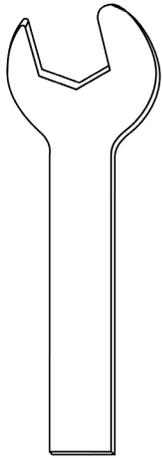


WRENCH
(1 EACH)




HEX KEY
(1 EACH - 6mm)




HEX KEY
(1 EACH - 4mm)




HEX KEY
(1 EACH - 3mm)

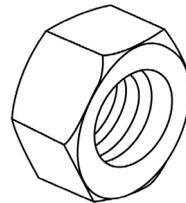


1/4 NUT
(4 EACH)

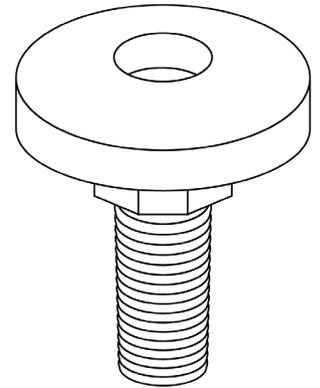


OUTRIGGER FOOT
(3 EACH)

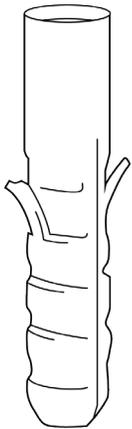


DRYWALL ANCHOR
(24 EACH)




SET SCREWS
(28 EACH)

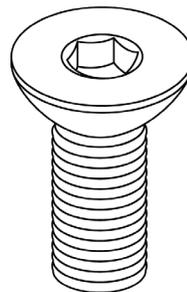

1" FLAT BOLT
(6 EACH)

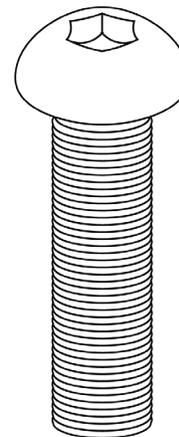

1 5/8" LONG BOLT
(3 EACH)

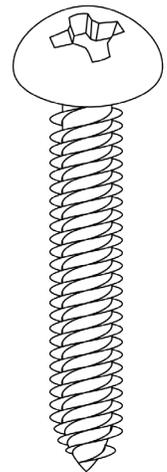

1 3/4" COUNTERSINK
SCREW
(24 EACH)


YOU WILL NEED TO SUPPLY YOUR OWN TAPE MEASURE, LEVEL, DRILL OR SCREWDRIVER FOR INSTALLATION.

ASSEMBLY INSTRUCTIONS MANUAL

#60866 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 4

STEP 1

ASSEMBLE THE OUTRIGGER PLATE AND STRAIGHT BAR WITH THE FLAT BOLT. REPEAT FOR EACH OUTRIGGER. THEN JOIN THE STRAIGHT BAR AND OUTRIGGER WITH THE LONG BOLT. (SEE FIGURE 1)

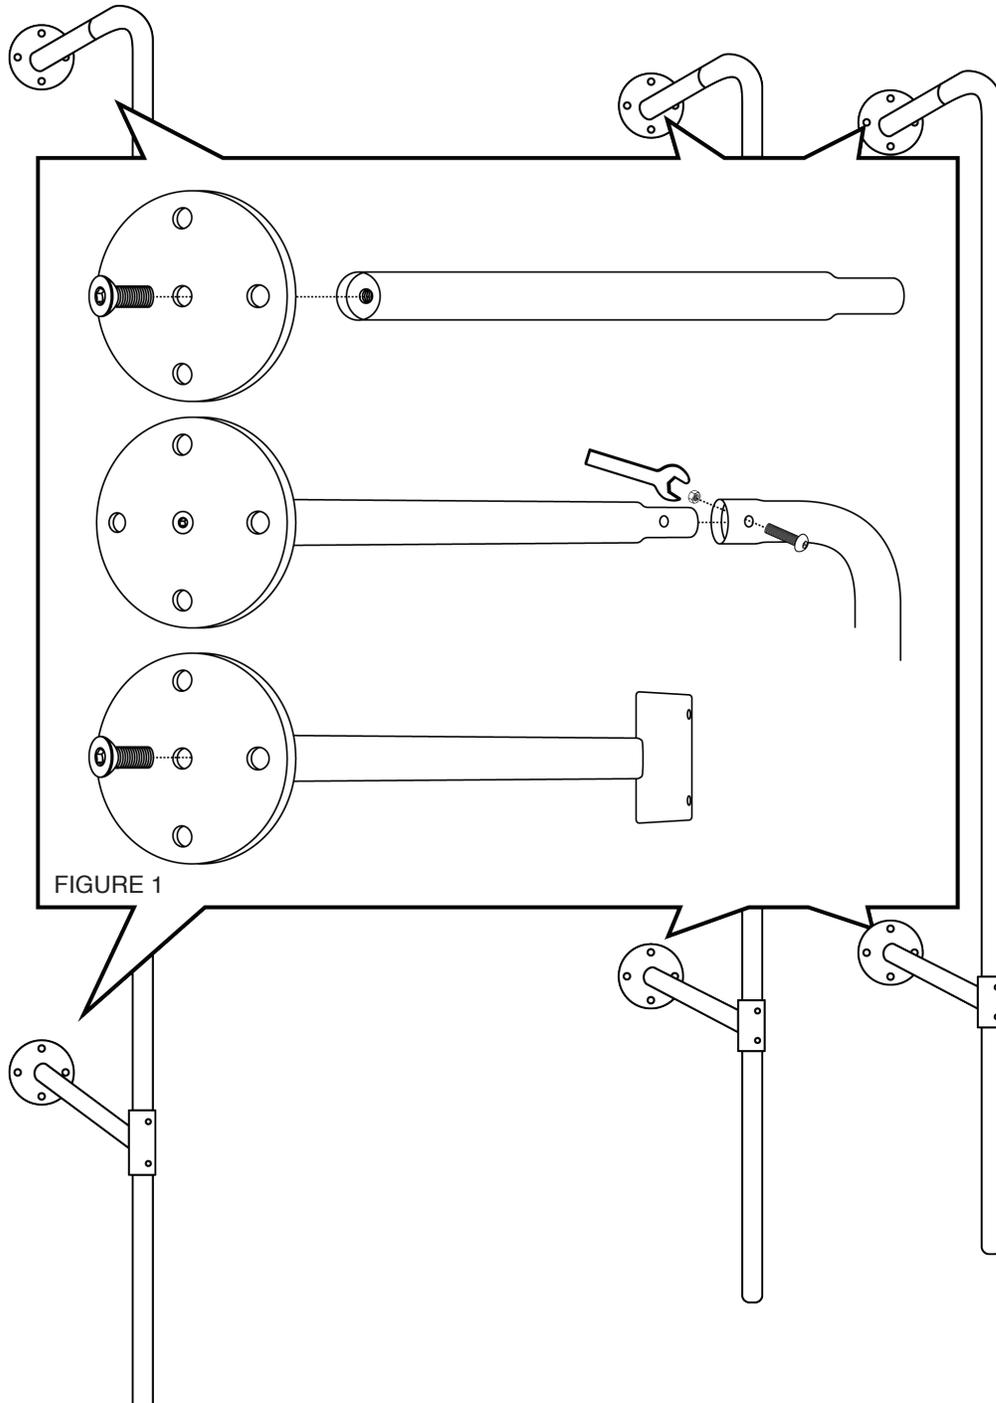


ASSEMBLY INSTRUCTIONS MANUAL

#60866 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 4

STEP 2

NEXT SLIDE THE STRAIGHT BAR BRACKETS ON TO EACH OUTRIGGER. ADJUST TO SPECIFIED HEIGHTS OR ADJUST ACCORDINGLY. THEN INSERT AND LIGHTLY TIGHTEN EACH SET SCREW. (SEE FIGURE 2) **NOTE: THE BRACKETS WILL NEED TO BE ADJUSTED TO ENSURE A LEVEL SURFACE.**

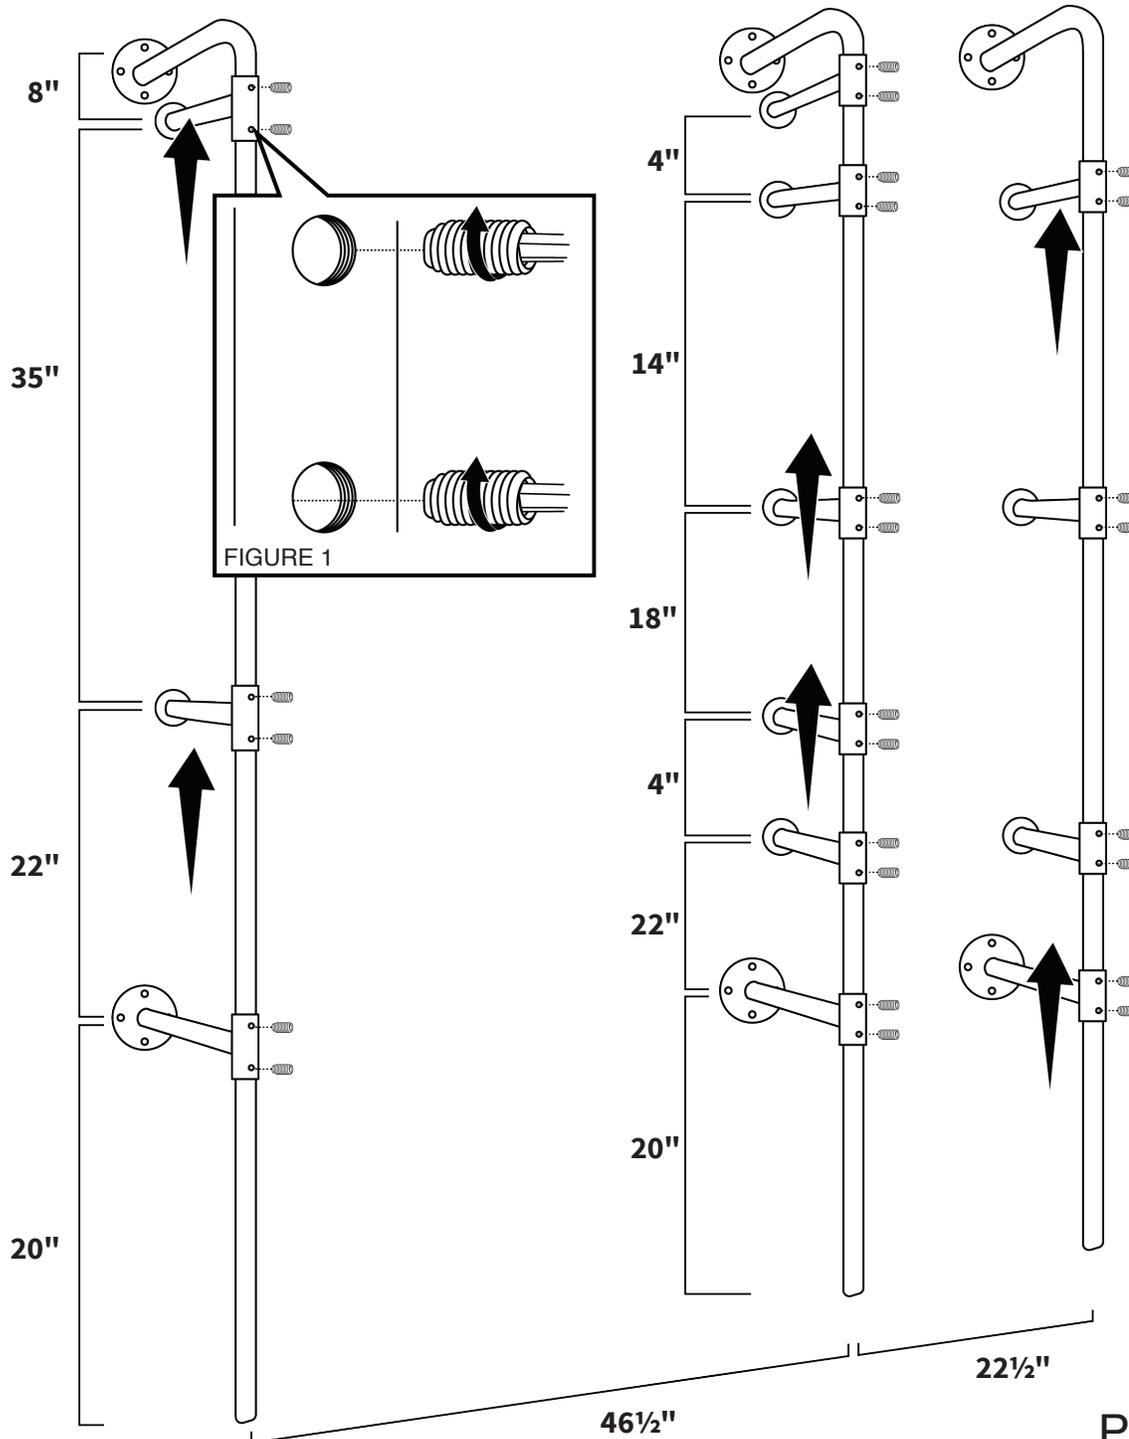

IMPORTANT

NOTE: THESE MEASUREMENTS ARE A SUGGESTED GUIDELINE AND CAN / SHOULD BE ADJUSTED TO MEET THE NEEDS OF THE MERCHANDISE THAT IS BEING DISPLAYED.


THE STRAIGHT BAR BRACKETS **DO NOT** TOUCH THE WALL, THERE SHOULD BE A 4" GAP BETWEEN THE WALL AND STRAIGHT BAR BRACKETS.

ASSEMBLY INSTRUCTIONS MANUAL

#60866 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 4

STEP 3


INSTALL THE OUTRIGGER FEET ONTO EACH OUTRIGGER. (SEE FIGURE 3)

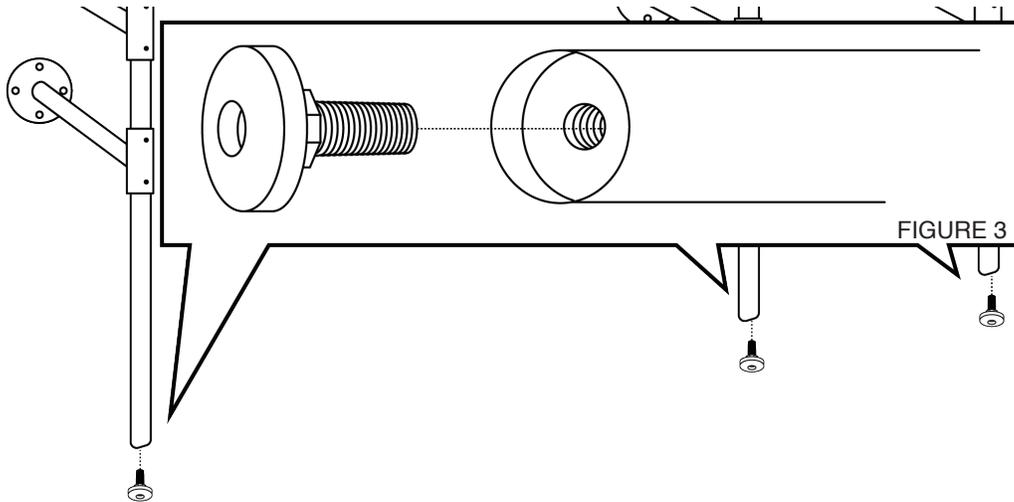

STEP 4

PLACE THE OUTRIGGER ASSEMBLY **LEVEL AND VERTICAL** AGAINST THE WALL. MARK EACH MOUNTING PLATE HOLE LOCATION. (SEE FIGURE 4)

NOTE: REFERENCE THE DIMENSIONS ON THE PREVIOUS PAGE FOR SPACING

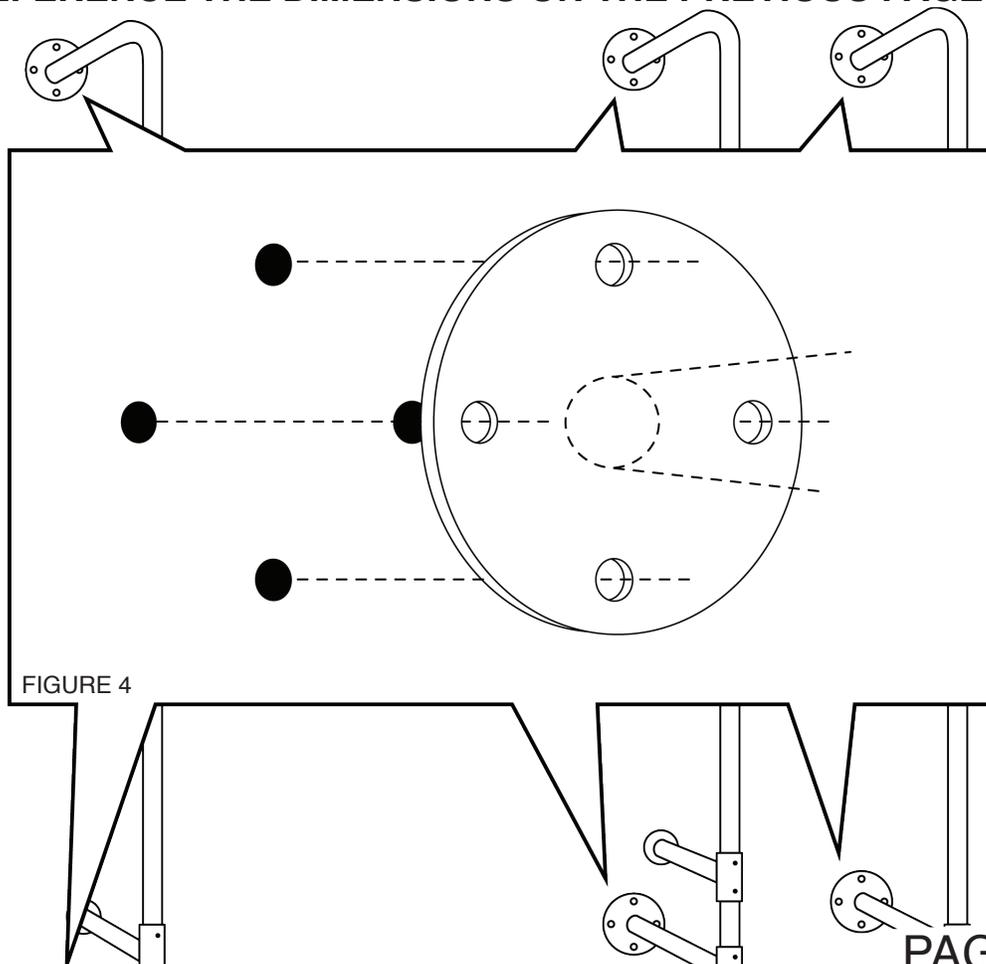


ASSEMBLY INSTRUCTIONS MANUAL

#60866 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 4


STEP 5

USING THE COUNTERSINK SCREW AS A DRILL BIT, SCREW INTO THE WALL THEN REMOVE. INSTALL DRY WALL ANCHORS INTO EACH HOLE. (SEE FIGURE 5) .

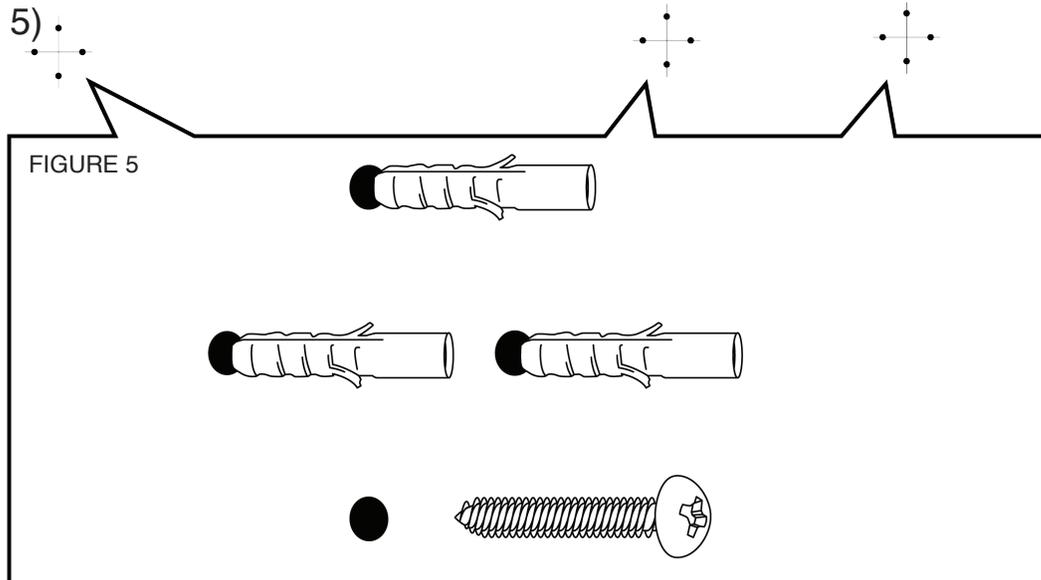

STEP 6

ALIGN THE OUTRIGGER MOUNTING PLATES WITH THE HOLES THEN INSERT A SCREW INTO EACH HOLE, THEN TIGHTEN. (SEE FIGURE 6)

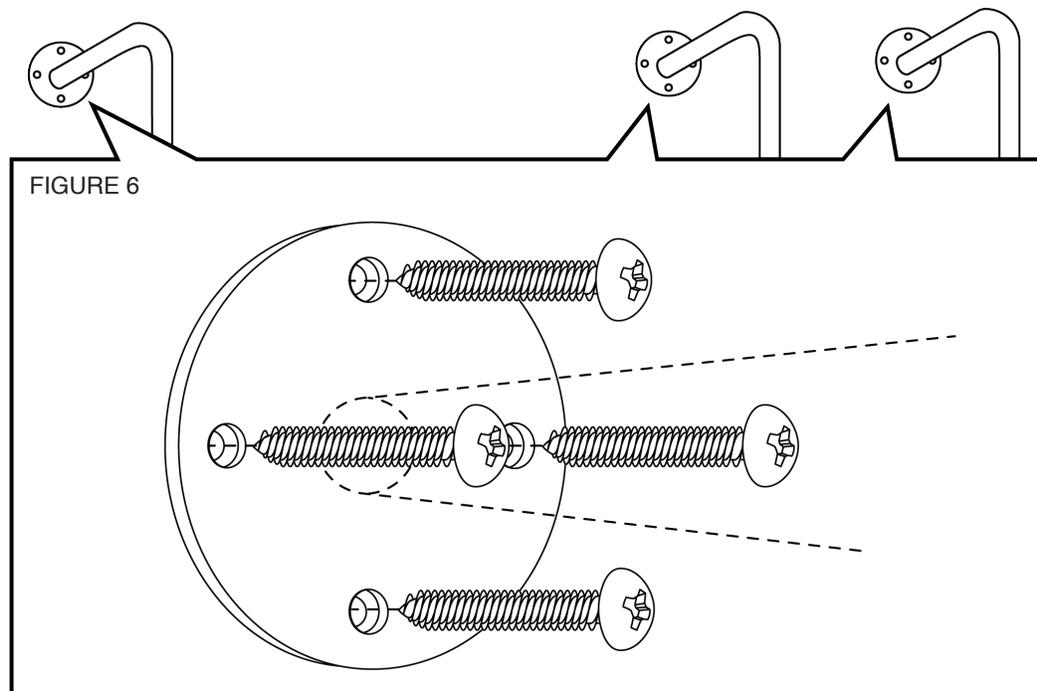

ASSEMBLY INSTRUCTIONS MANUAL

#60866 - BOUTIQUE VINTAGE OUTRIGGER SYSTEM KIT 4

STEP 6

PLACE THE 24" MELAMINE SHELVES ON TO THE BRACKETS, FINALLY INSTALL THE 48" HANGRAILS (SEE FIGURE 7). CHECK THE LEVEL OF EACH SHELF, ADJUST ACCORDINGLY, THEN FINALLY TIGHTEN ALL SET SCREWS.

