


ASSEMBLY INSTRUCTIONS MANUAL


#60863 #60873 #60874 60875

CHROME OUTRIGGER SYSTEM KIT 1-4

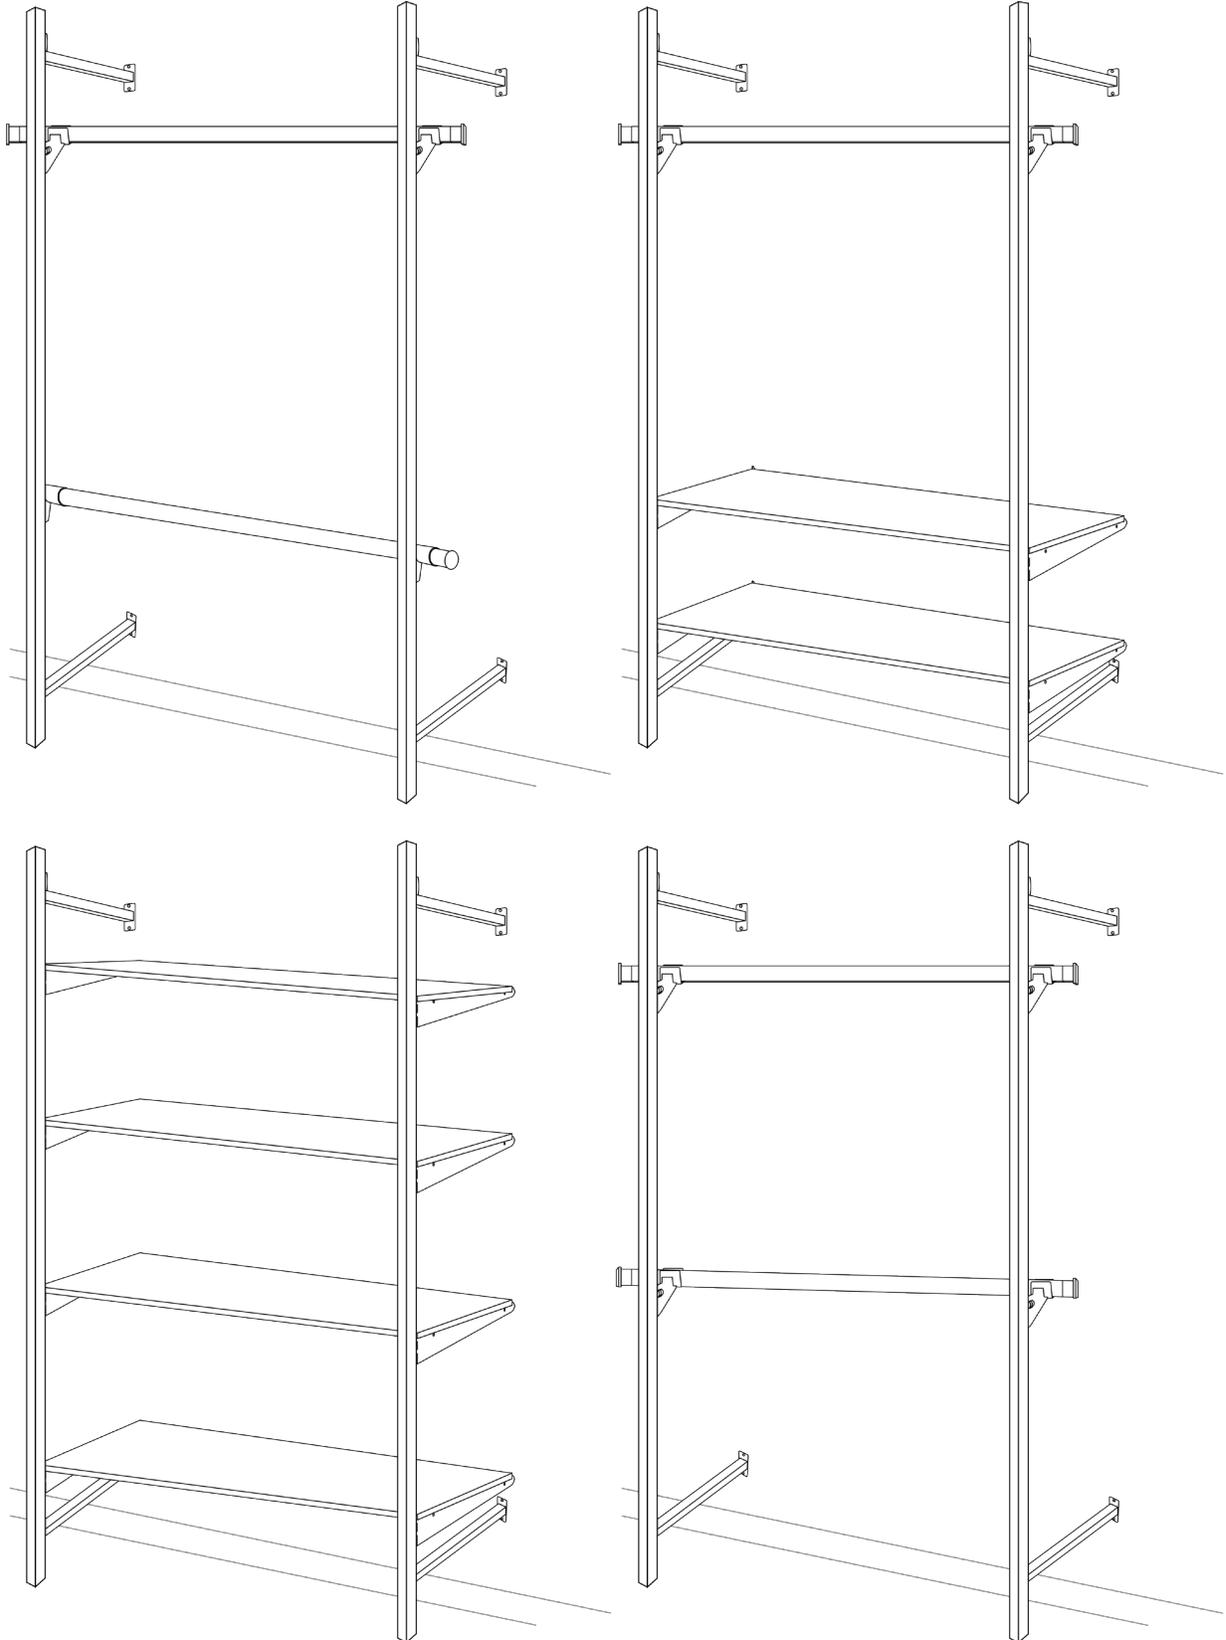

ASSEMBLY INSTRUCTIONS MANUAL


#60863 - CHROME OUTRIGGER SYSTEM KIT 1

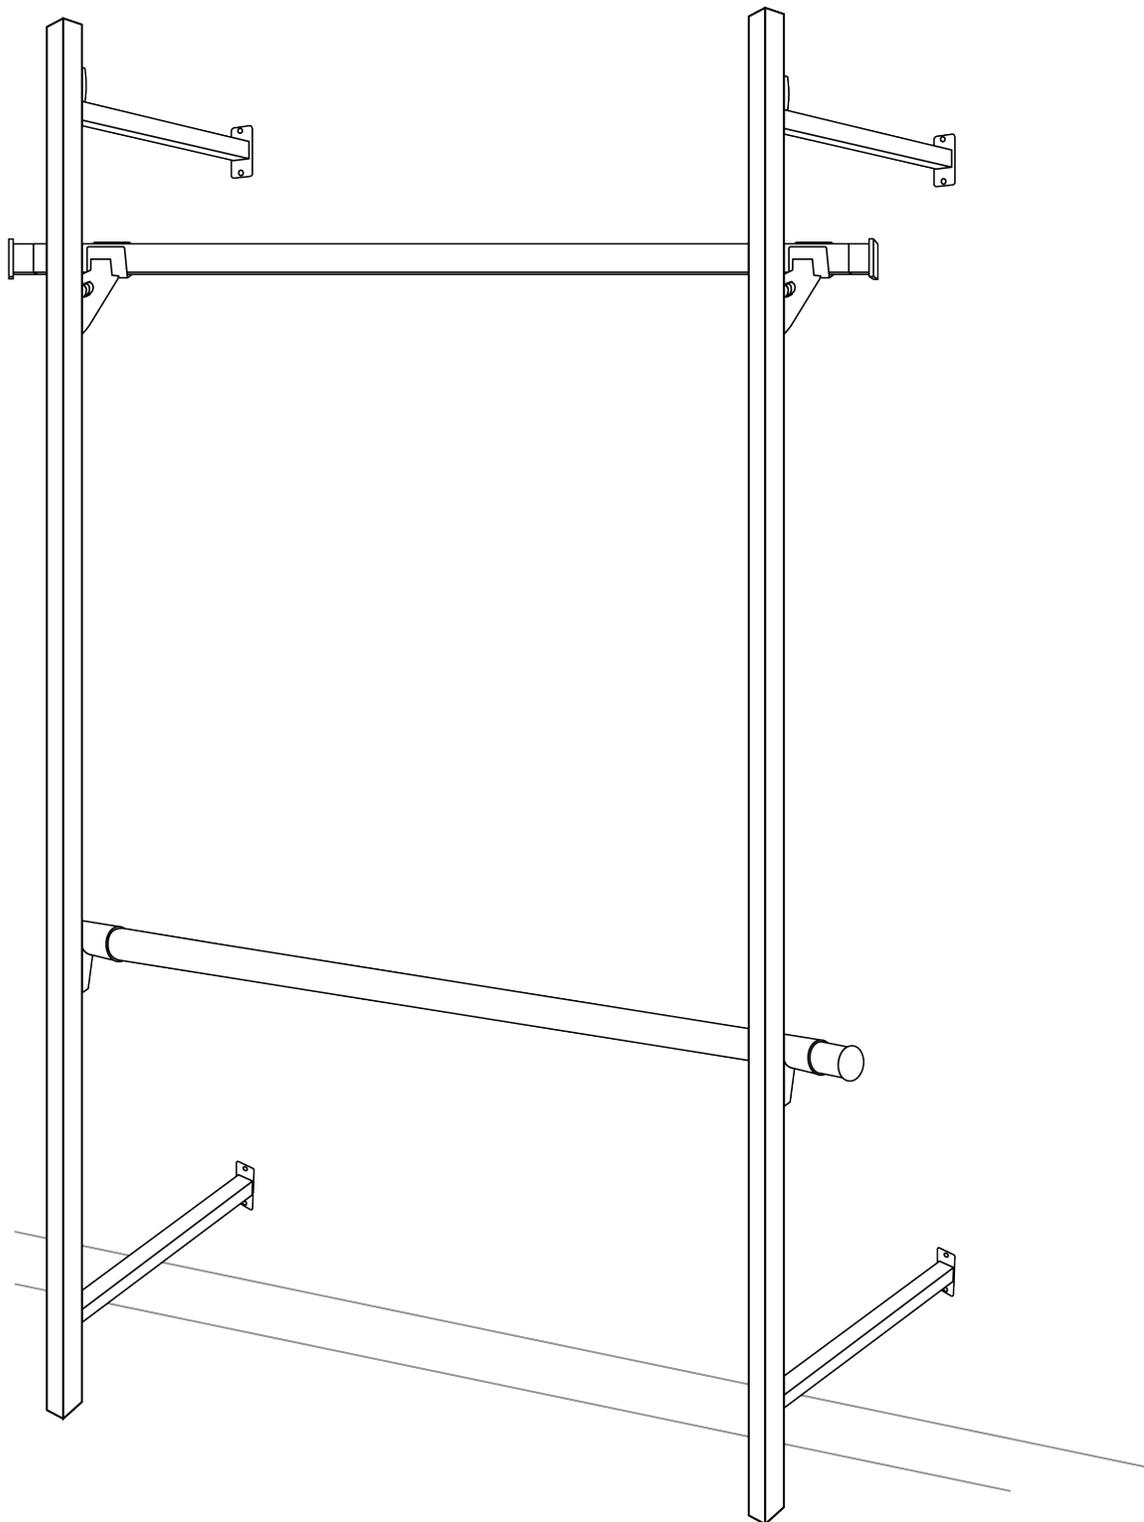


ASSEMBLY INSTRUCTIONS MANUAL

#60863 - CHROME OUTRIGGER SYSTEM KIT 1


PARTS IN CARTON:




CHROME OUTRIGGER
UPRIGHTS
(2 EACH)




SET SCREWS
(4 EACH)

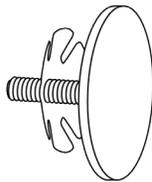

CHROME END CAPS FOR
ROUND HANGRAILS
(2 EACH)

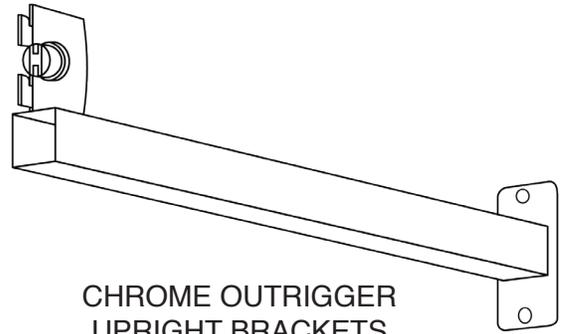


CHROME OUTRIGGER
UPRIGHT BRACKETS
(4 EACH)

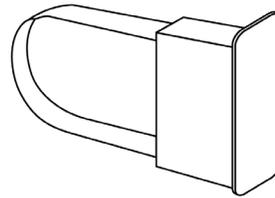


CHROME FLUSH END CAPS
FOR DIMENSIONAL HANGRAIL
(2 EACH)




1 1/4" DIAMETER HANGRAIL
(1 EACH)



4' CHROME DIMENSIONAL 1/2" X 1 1/2" HANGRAIL
(1 EACH)

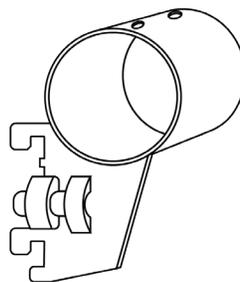

3" ROUND CHROME
HANGRAIL BRACKETS
(2 EACH)

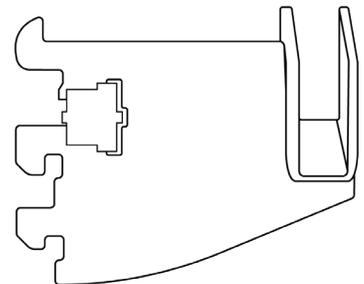


3" CHROME DIMENSIONAL
HANGRAIL BRACKETS
(2 EACH)

ASSEMBLY INSTRUCTIONS MANUAL


#60863 - CHROME OUTRIGGER SYSTEM KIT 1

HARDWARE THAT NEEDS TO BE PURCHASED

THESE PARTS WILL NEED TO BE PURCHASED AT YOUR LOCAL HARDWARE STORE. THE RECOMMENDED HARDWARE FOR THIS INSTALL, (8) #8 COUNTERSINK SCREWS AND (8) 3/16 ANCHORS. IF MOUNTING TO STUDS, USE (8) #8 COUNTERSINK SCREWS AND 3/16 DRILL BIT.

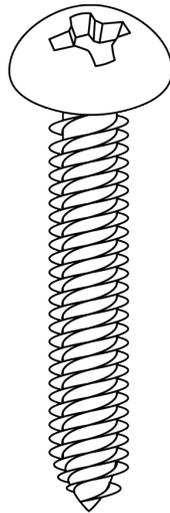

#8 COUNTERSINK
SCREW (8 EACH)

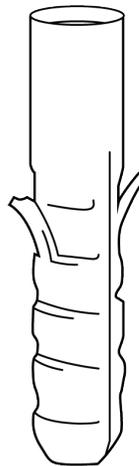

DRYWALL ANCHOR
(8 EACH)

YOU WILL NEED TO SUPPLY YOUR OWN TAPE MEASURE, LEVEL,
DRILL OR SCREWDRIVER FOR INSTALLATION.

ASSEMBLY INSTRUCTIONS MANUAL


#60863 #60873 #60874 60875

CHROME OUTRIGGER SYSTEM KIT 1-4

STEP 1

THE OUTRIGGER BRACKETS SHOULD BE MOUNTED 15" FROM THE FLOOR, 66" BETWEEN THE TOP AND BOTTOM BRACKET, AND 47" IN BETWEEN THE BRACKETS. MARK THE MOUNTING LOCATIONS OF EACH (SEE FIGURE 1).

NOTE: IT IS POSSIBLE TO USE THE UPRIGHTS AS AN ALIGNMENT TOOL TO ENSURE FINAL BRACKET POSITION.

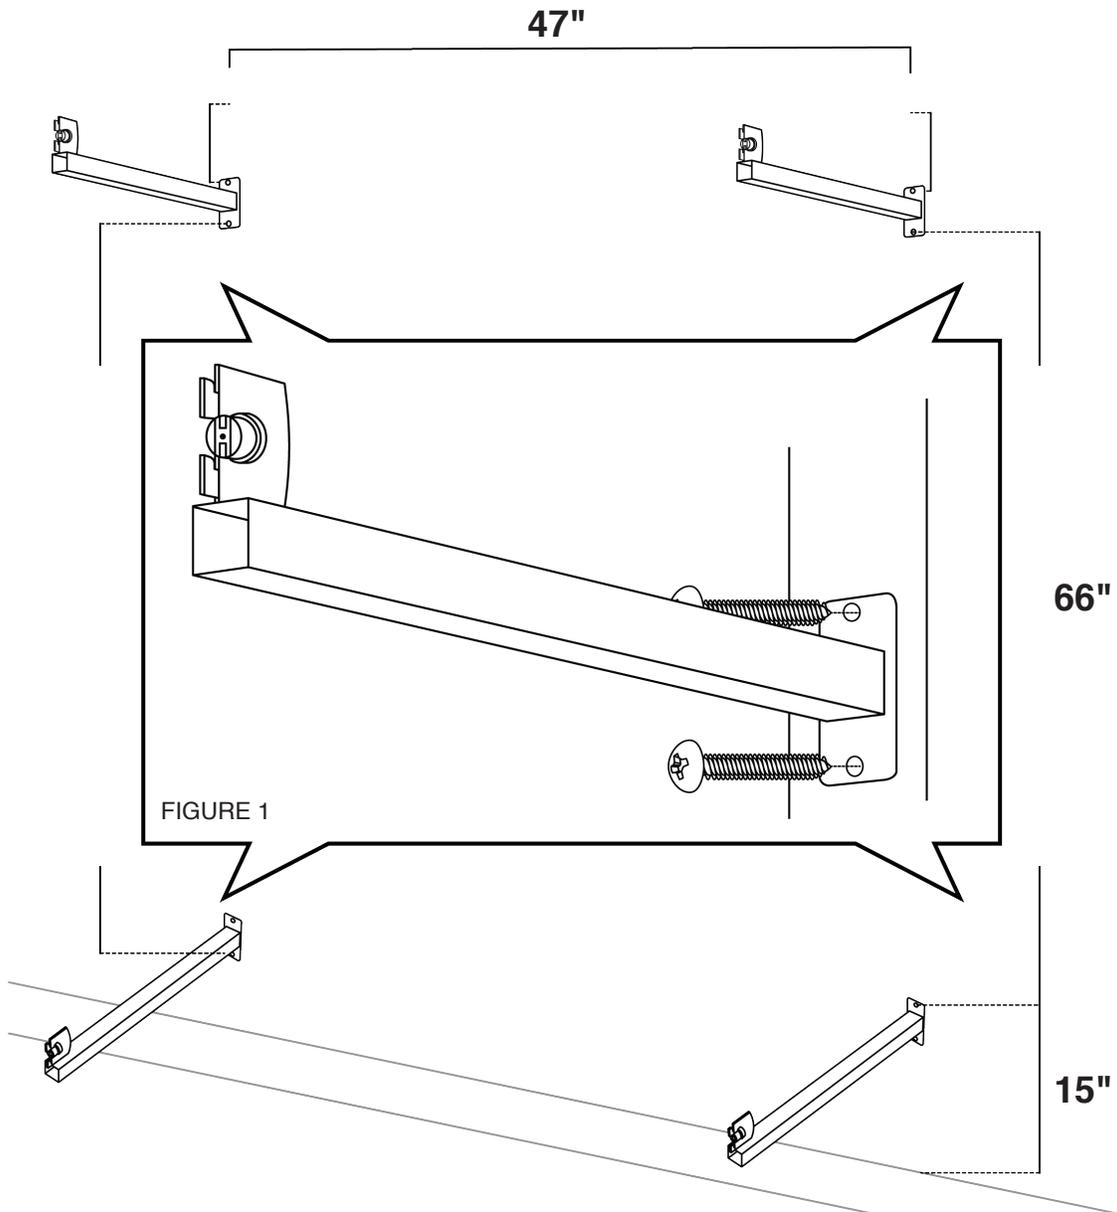


ASSEMBLY INSTRUCTIONS MANUAL

#60863 #60873 #60874 60875

CHROME OUTRIGGER SYSTEM KIT 1-4

STEP 1.1

INSTALL DRY WALL ANCHORS INTO EACH HOLE, THEN MOUNT THE BRACKETS WITH THE COUNTERSINK SCREWS.

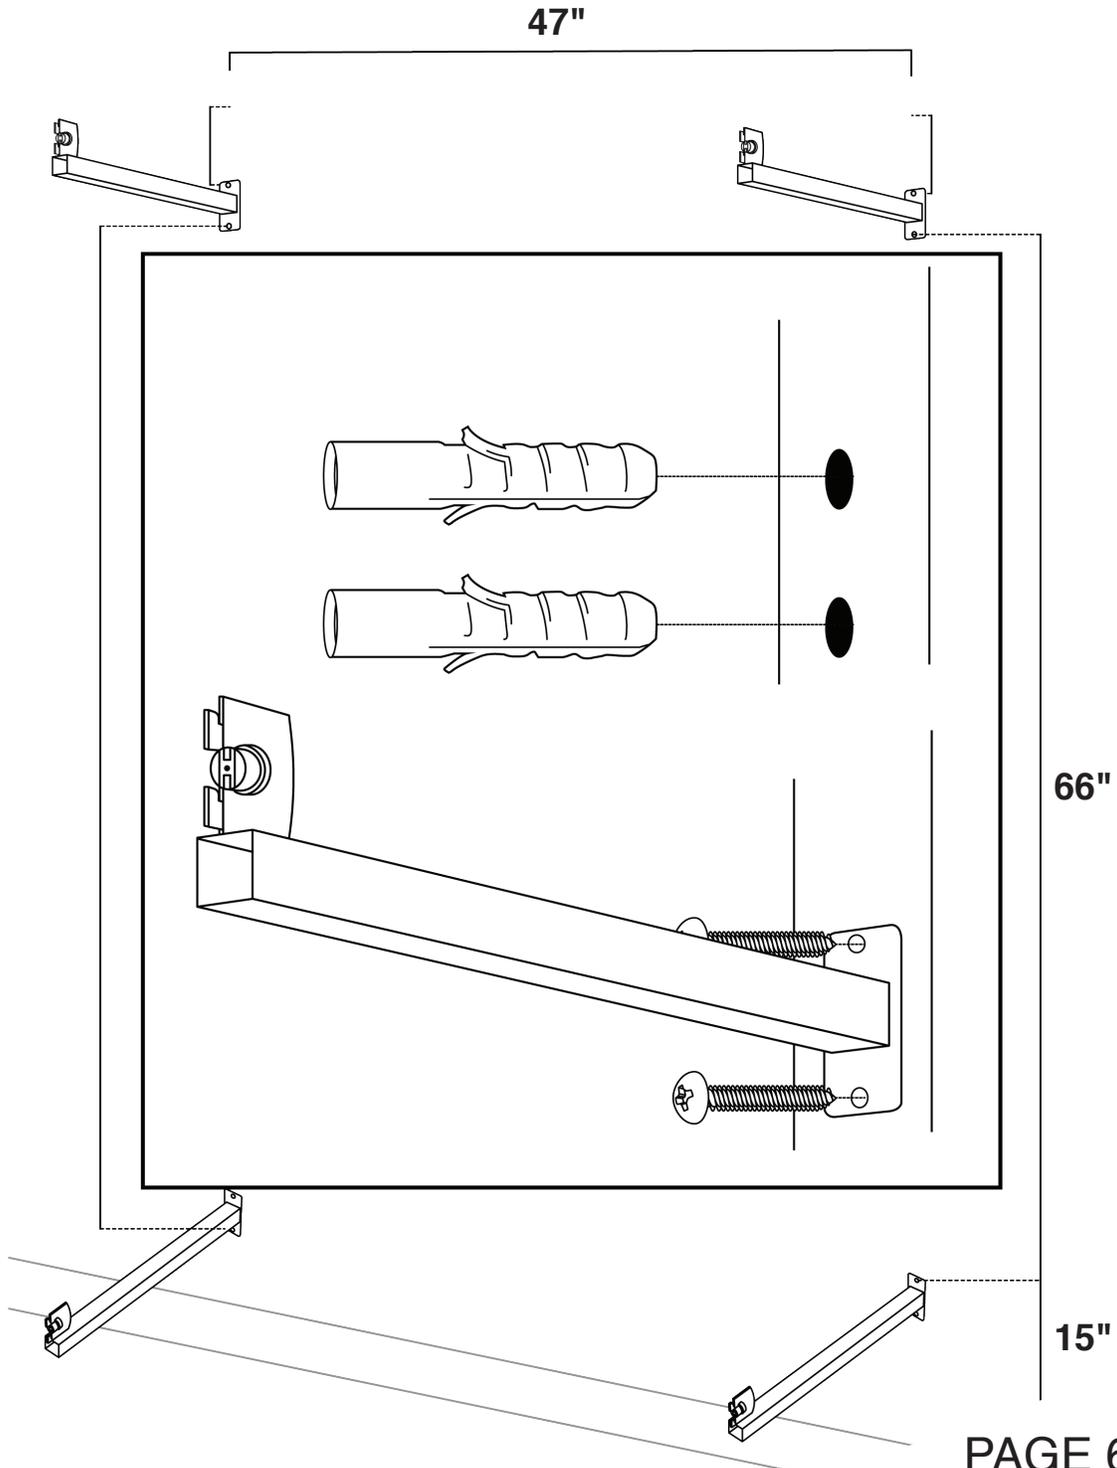


ASSEMBLY INSTRUCTIONS MANUAL

#60863 #60873 #60874 60875

CHROME OUTRIGGER SYSTEM KIT 1-4

STEP 2

AFTER MOUNTING THE OUTRIGGER BRACKETS, HANG THE OUTRIGGER UPRIGHTS, BY ALIGNING THE SLOTS IN THE OUTRIGGER UPRIGHTS WITH THE HOOKS ON THE OUTRIGGER BRACKETS. (SEE FIGURE 2)

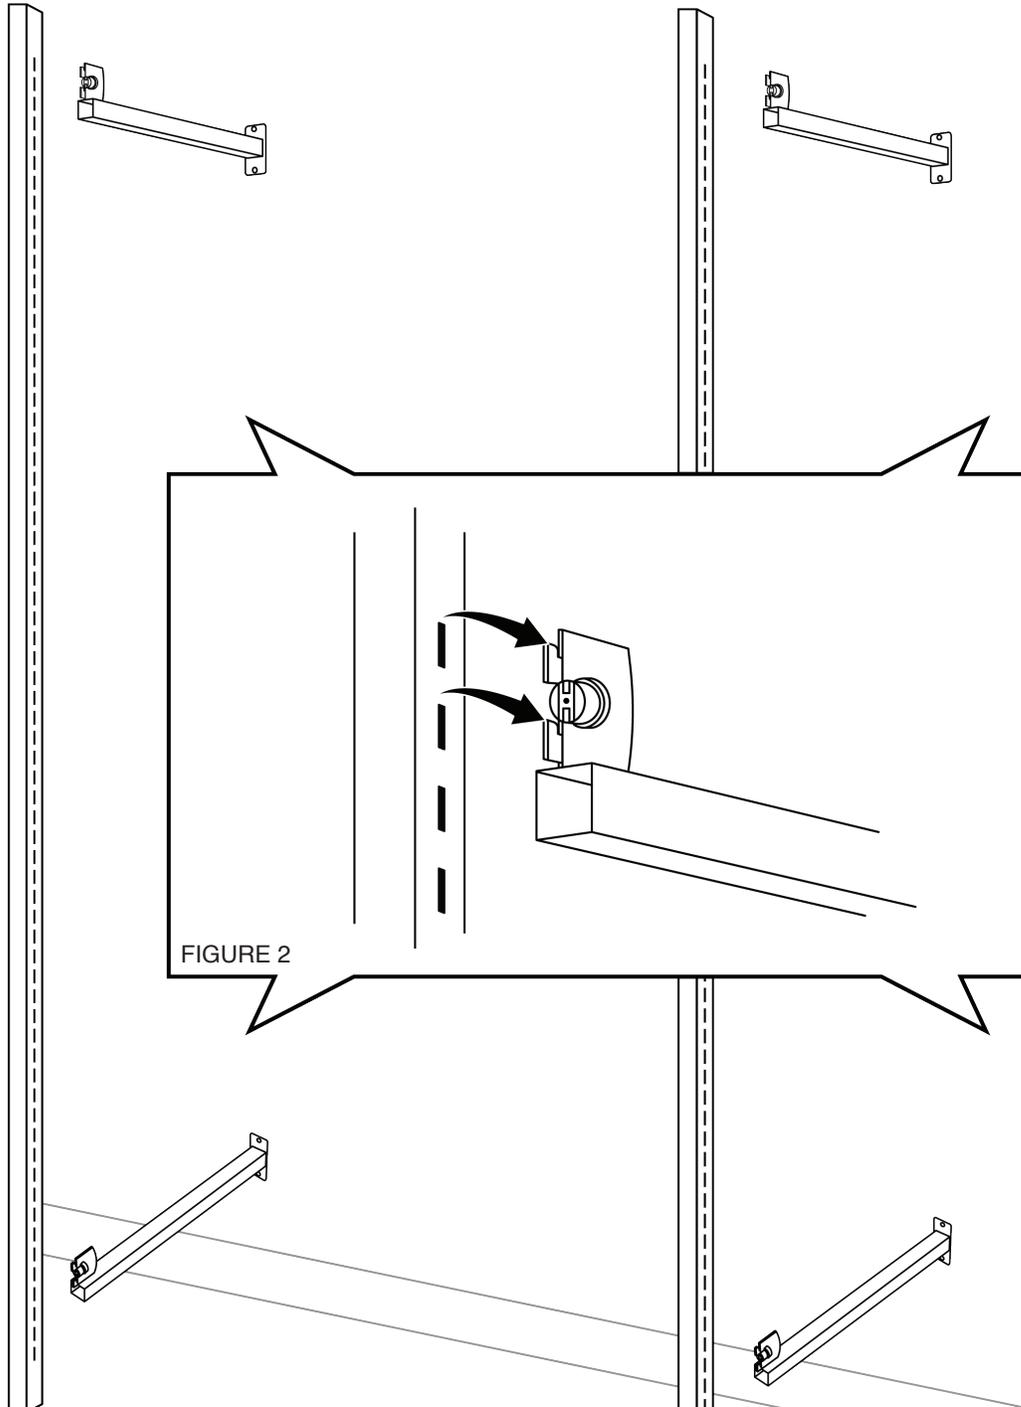


ASSEMBLY INSTRUCTIONS MANUAL

#60863 - CHROME OUTRIGGER SYSTEM KIT 1


STEP 3

INSTALL THE 3" CHROME DIMENSIONAL HANGRAIL BRACKETS ON TO THE BACK OF THE OUTRIGGER UPRIGHTS. (SEE FIGURE 3)

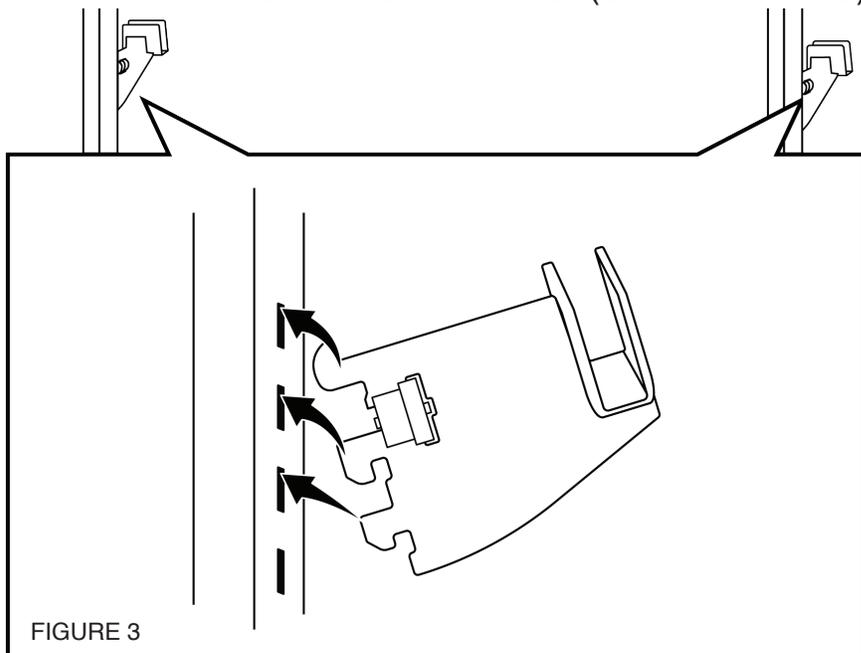

STEP 4

PLACE THE 3" CHROME DIMENSIONAL HANGRAIL INTO THE BRACKETS THEN INSERT THE ENDCAPS INTO EACH END. (SEE FIGURE 4)

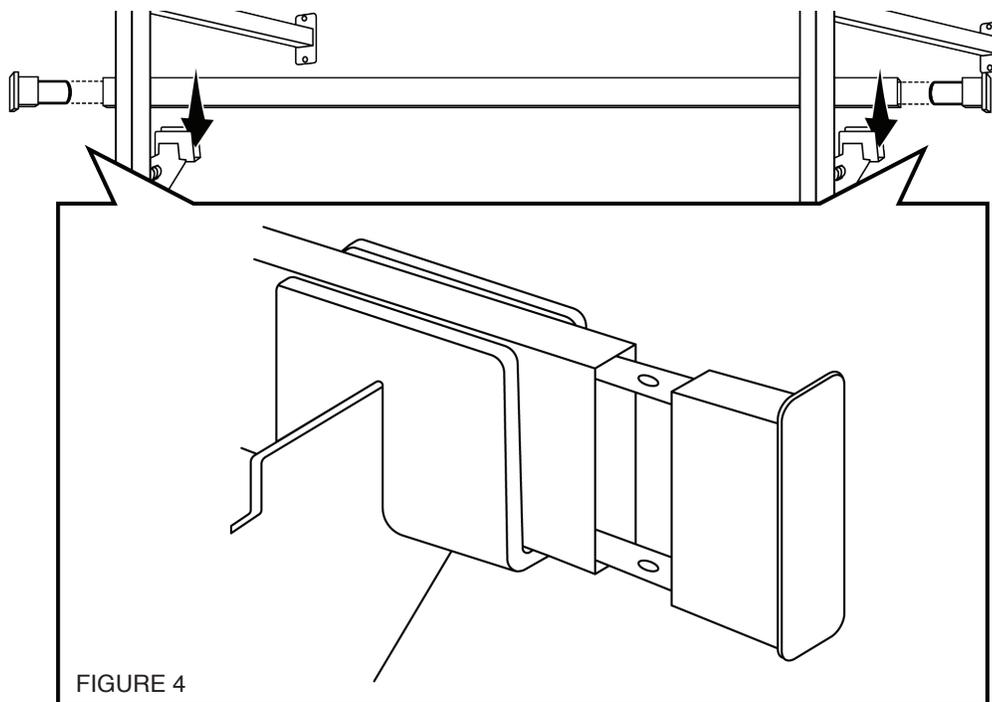


ASSEMBLY INSTRUCTIONS MANUAL

#60863 - CHROME OUTRIGGER SYSTEM KIT 1


STEP 5

INSTALL THE 3" ROUND CHROME HANGRAIL BRACKETS ON TO THE BACK OF THE OUTRIGGER UPRIGHTS. (SEE FIGURE 5)

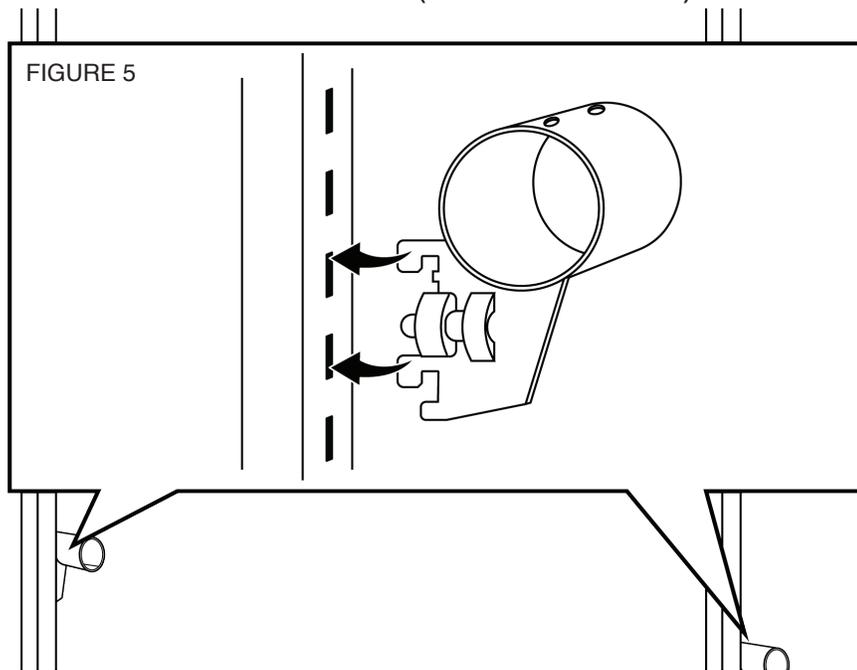


STEP 6

PLACE THE 3" ROUND CHROME HANGRAIL THROUGH THE BRACKETS THEN INSERT THE ENDCAPS INTO EACH END. (SEE FIGURE 6)

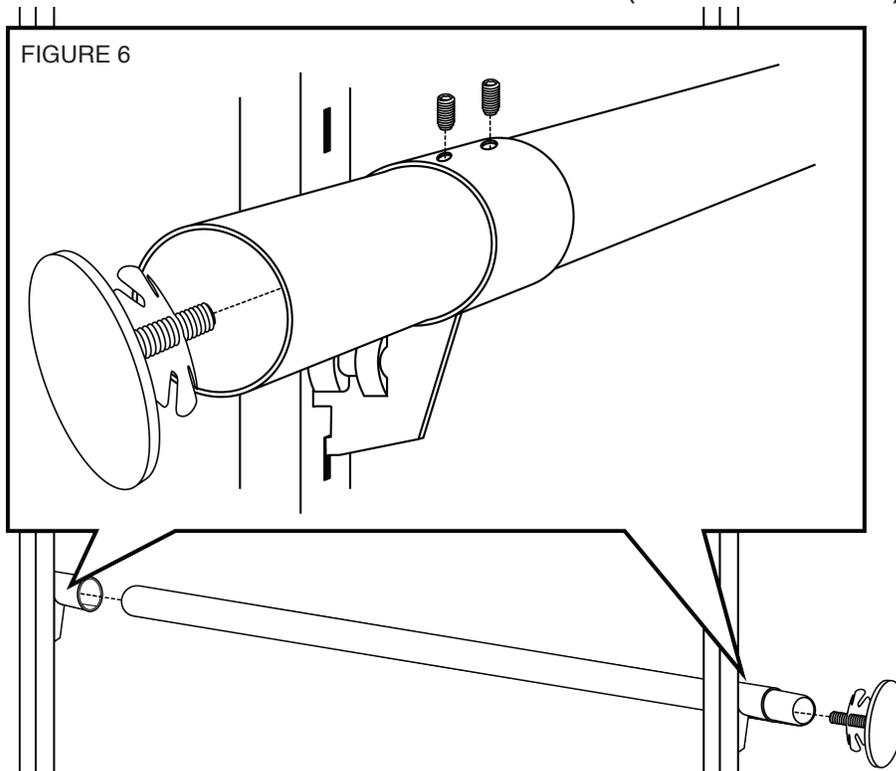

ASSEMBLY INSTRUCTIONS MANUAL


#60873 - CHROME OUTRIGGER SYSTEM KIT 2

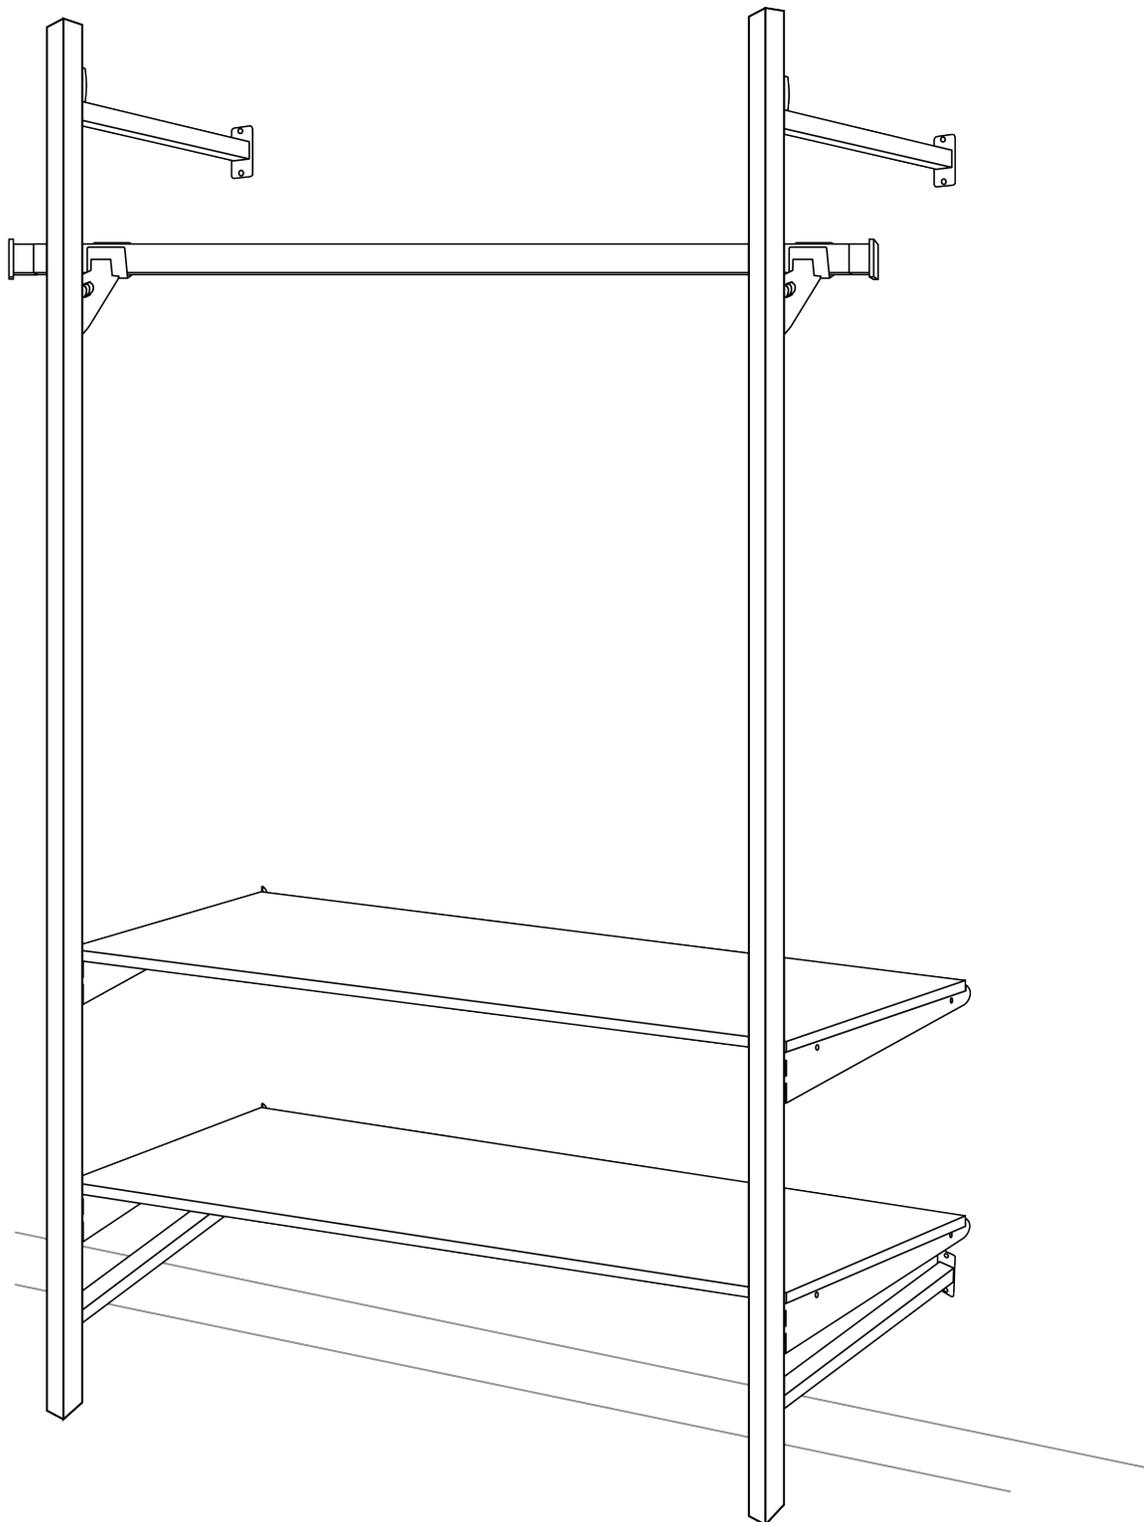


ASSEMBLY INSTRUCTIONS MANUAL

#60873 - CHROME OUTRIGGER SYSTEM KIT 2


PARTS IN CARTON:




CHROME OUTRIGGER
UPRIGHTS
(2 EACH)

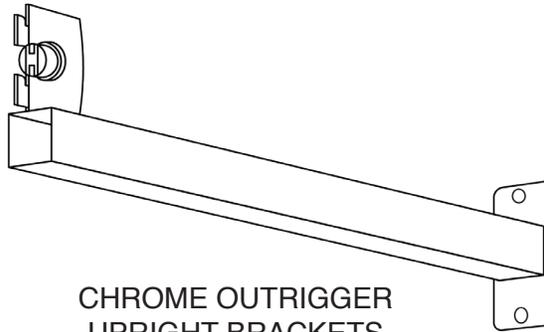

CHROME OUTRIGGER
UPRIGHT BRACKETS
(4 EACH)

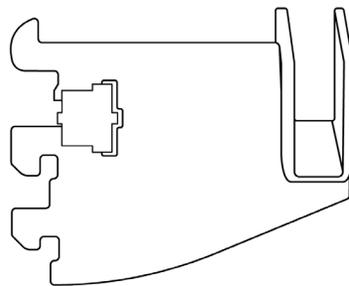


3" CHROME DIMENSIONAL
HANGRAIL BRACKETS
(2 EACH)

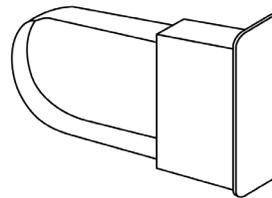


CHROME FLUSH END CAPS
FOR DIMENSIONAL HANGRAIL
(2 EACH)



4' CHROME DIMENSIONAL 1/2" X 1 1/2" HANGRAIL
(1 EACH)

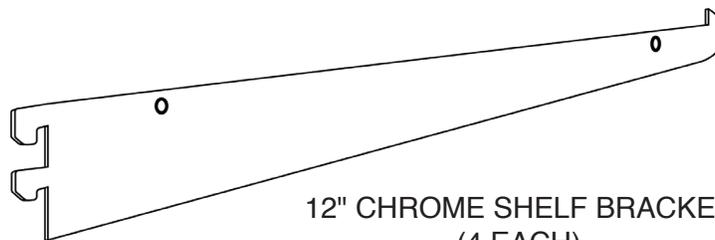

12" CHROME SHELF BRACKET
(4 EACH)

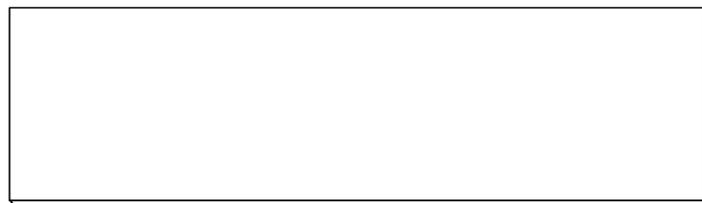


48" X 12" LAMINATED BLACK
MELAMINE SHELVES
(2 EACH)

ASSEMBLY INSTRUCTIONS MANUAL


#60873 - CHROME OUTRIGGER SYSTEM KIT 2

HARDWARE THAT NEEDS TO BE PURCHASED

THESE PARTS WILL NEED TO BE PURCHASED AT YOUR LOCAL HARDWARE STORE. THE RECOMMENDED HARDWARE FOR THIS INSTALL, (8) #8 COUNTERSINK SCREWS AND (8) 3/16 ANCHORS. IF MOUNTING TO STUDS, USE (8) #8 COUNTERSINK SCREWS AND 3/16 DRILL BIT.

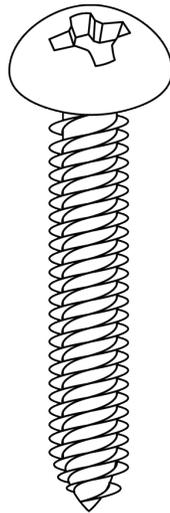

#8 COUNTERSINK
SCREW (8 EACH)

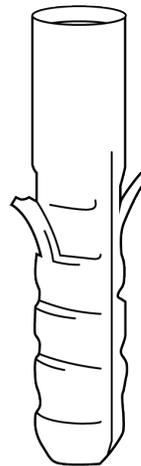

DRYWALL ANCHOR
(8 EACH)

YOU WILL NEED TO SUPPLY YOUR OWN TAPE MEASURE, LEVEL,
DRILL OR SCREWDRIVER FOR INSTALLATION.

ASSEMBLY INSTRUCTIONS MANUAL


#60873 - CHROME OUTRIGGER SYSTEM KIT 2

STEP 1 & 2

PLEASE REFERENCE PAGES 5 THROUGH 7 FOR WALL MOUNTING THE OUTRIGGER BRACKETS.

STEP 3

INSTALL THE 3" CHROME DIMENSIONAL HANGRAIL BRACKETS ON TO THE BACK OF THE OUTRIGGER UPRIGHTS. (SEE FIGURE 1)

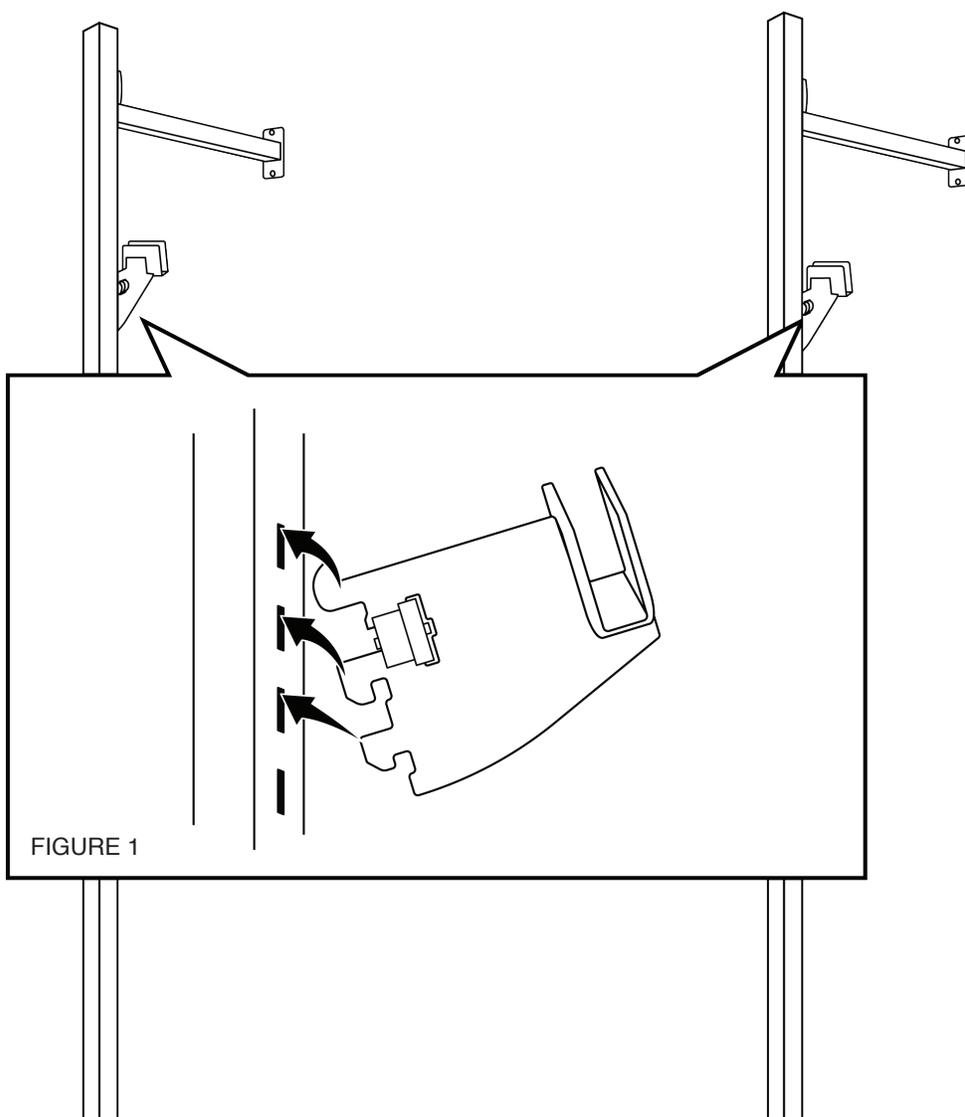

ASSEMBLY INSTRUCTIONS MANUAL

#60873 - CHROME OUTRIGGER SYSTEM KIT 2

STEP 4

PLACE THE 3" CHROME DIMENSIONAL HANGRAIL INTO THE BRACKETS THEN INSERT THE ENDCAPS INTO EACH END. (SEE FIGURE 2)



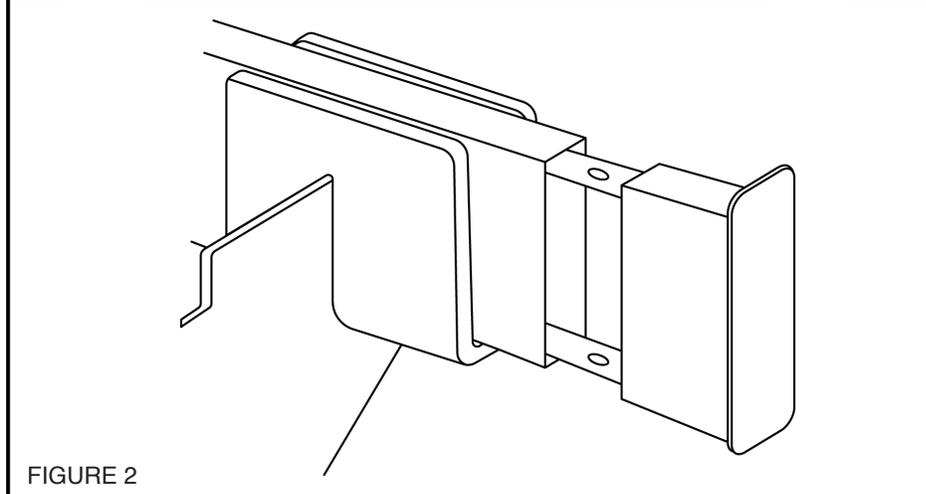


FIGURE 2

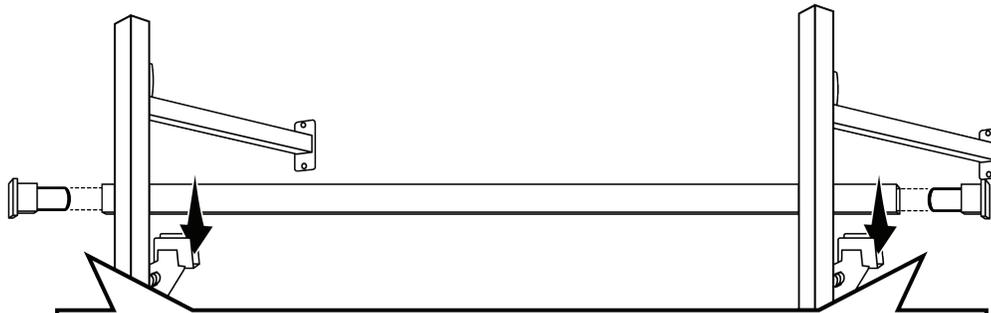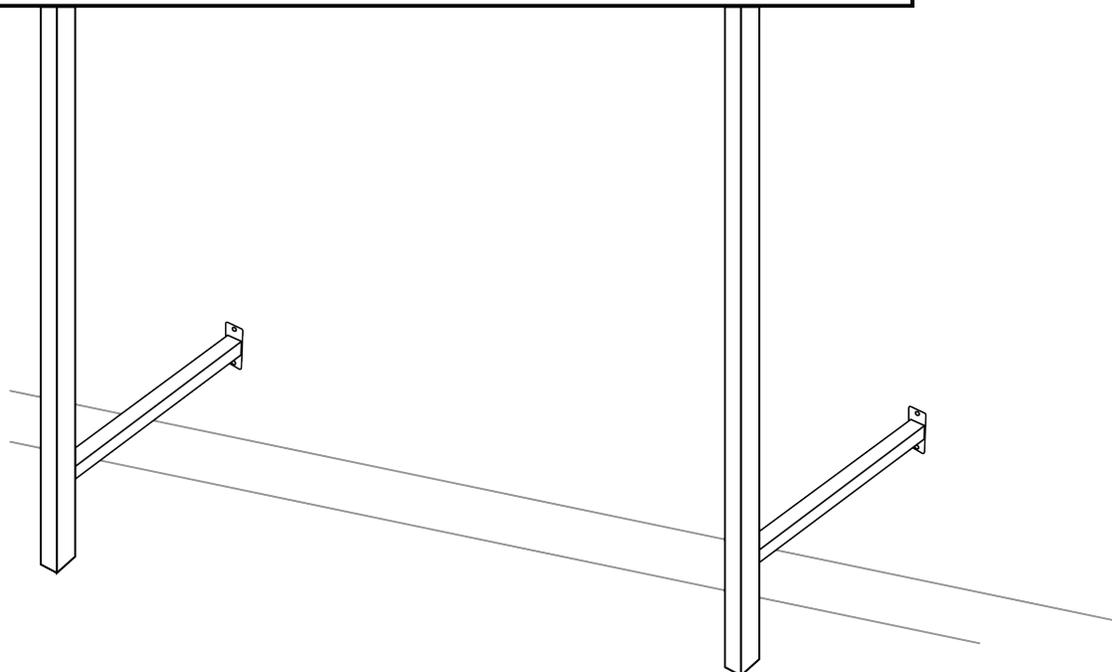


ASSEMBLY INSTRUCTIONS MANUAL

#60873 - CHROME OUTRIGGER SYSTEM KIT 2

STEP 5

INSERT THE 12" CHROME SHELF BRACKET INTO THE OUTRIGGER UPRIGHTS AT DESIRED HEIGHT. (SEE FIGURE 3)

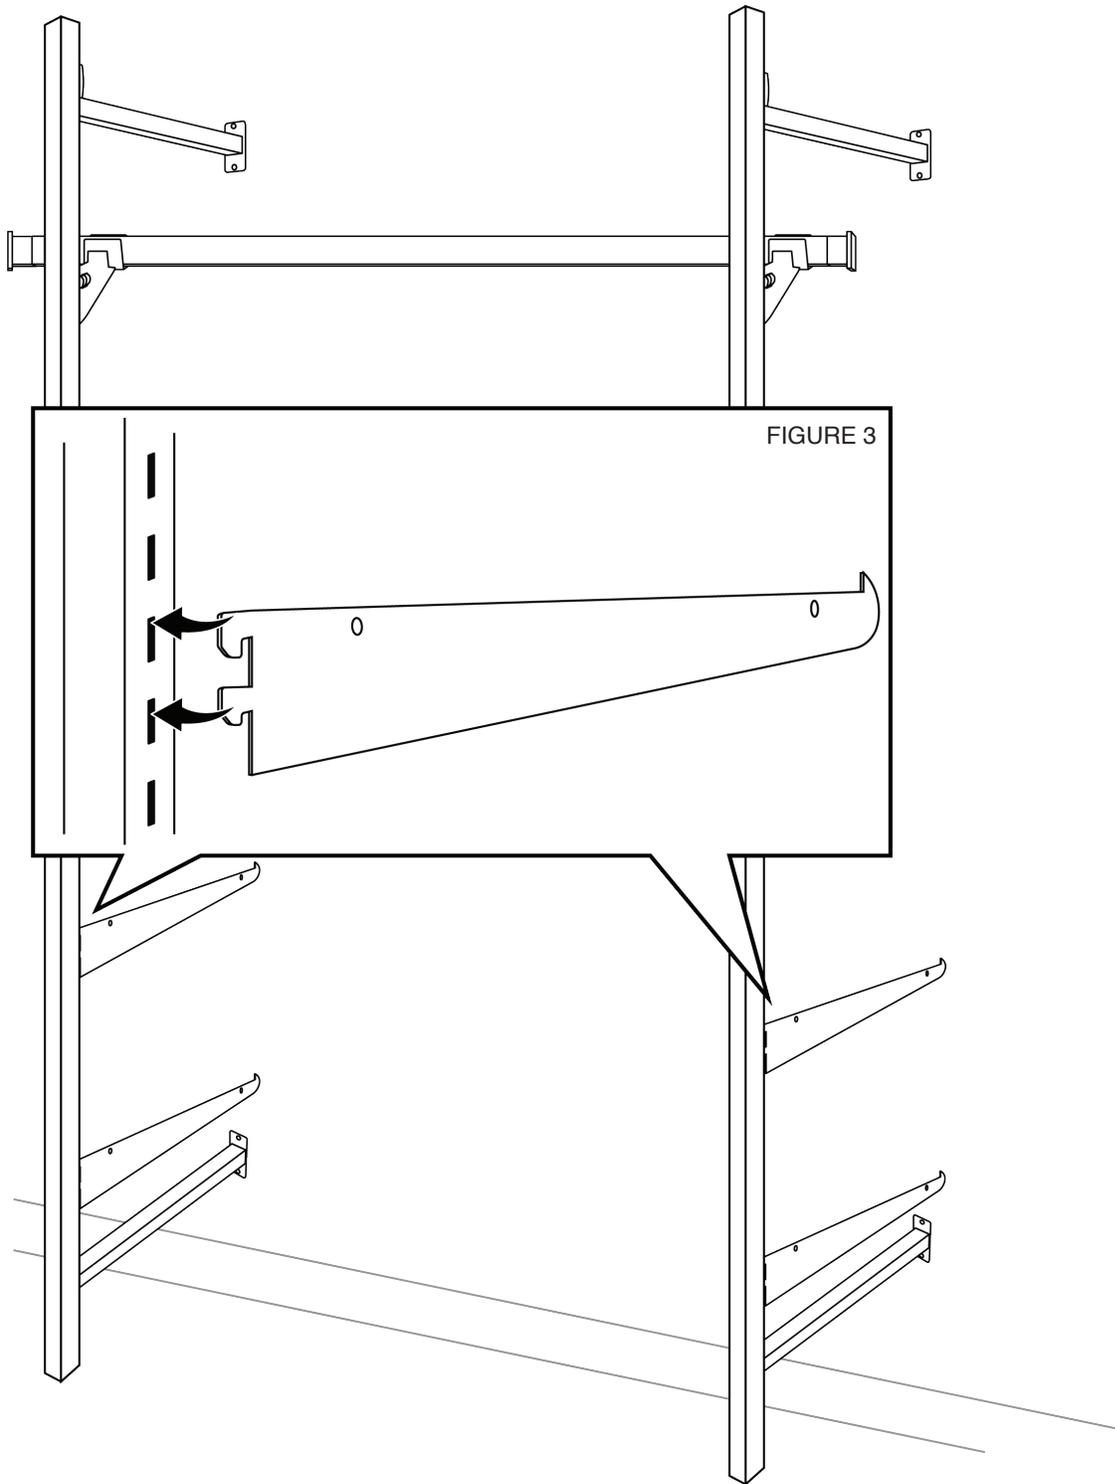


ASSEMBLY INSTRUCTIONS MANUAL

#60873 - CHROME OUTRIGGER SYSTEM KIT 2


STEP 6

PLACE THE MELAMINE SHELVES ONTO THE UPPER AND LOWER SHELF BRACKETS.

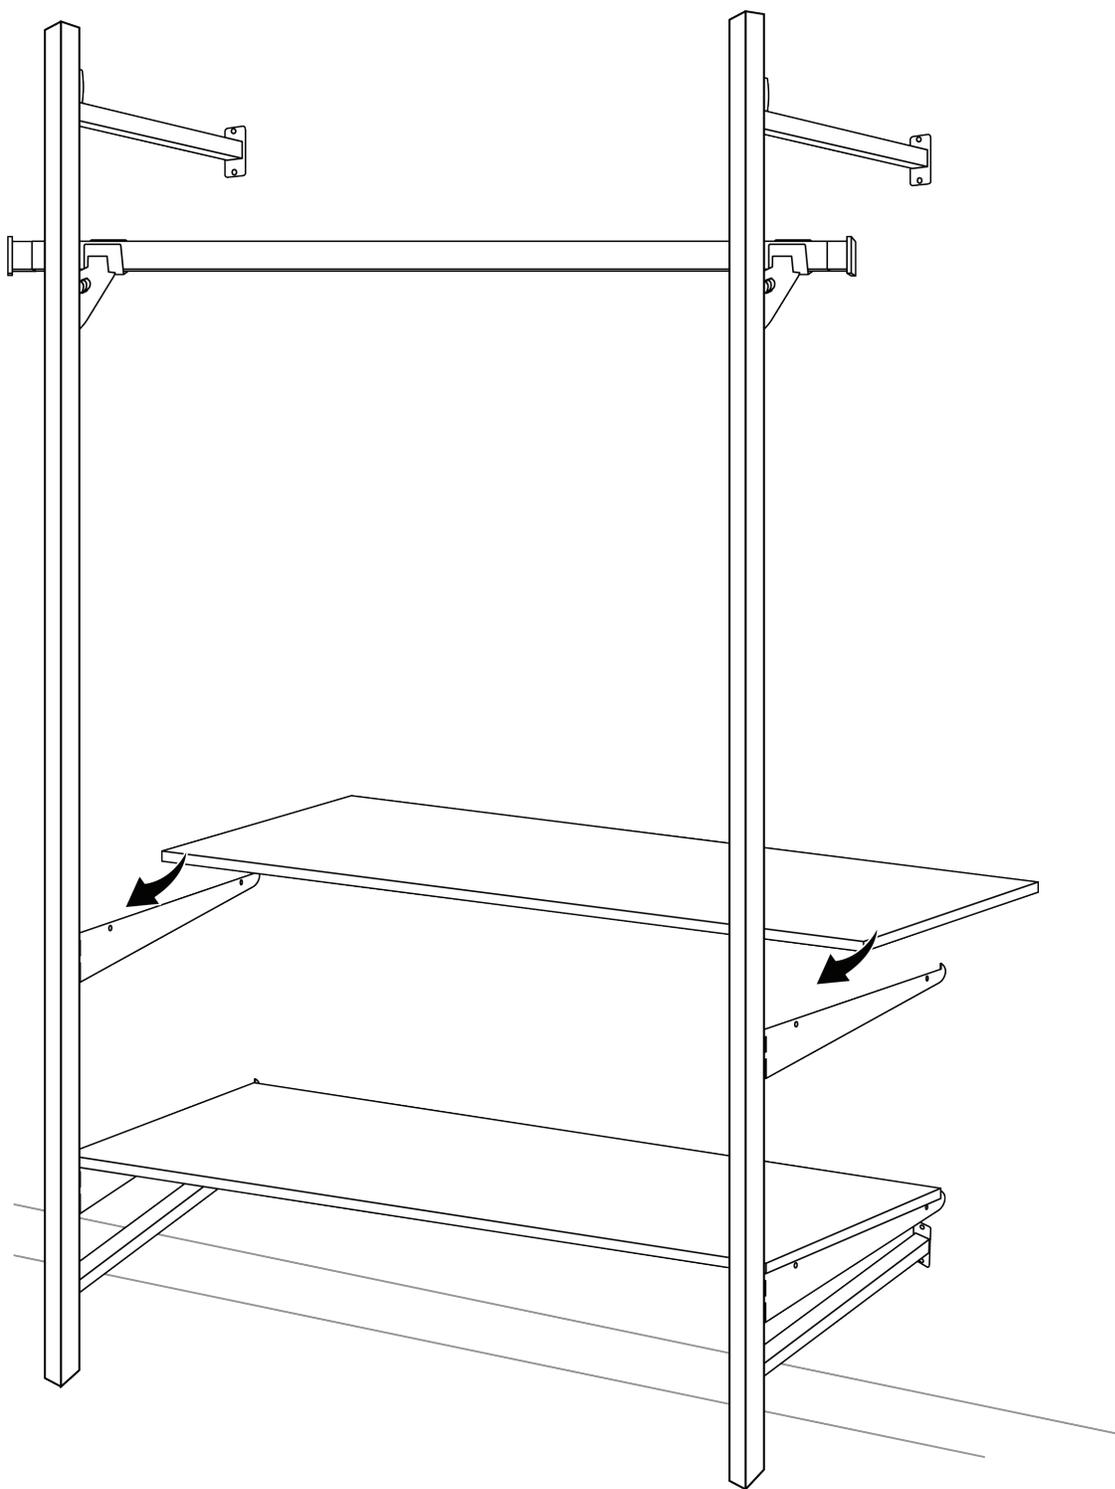

ASSEMBLY INSTRUCTIONS MANUAL


#60874 - CHROME OUTRIGGER SYSTEM KIT 3

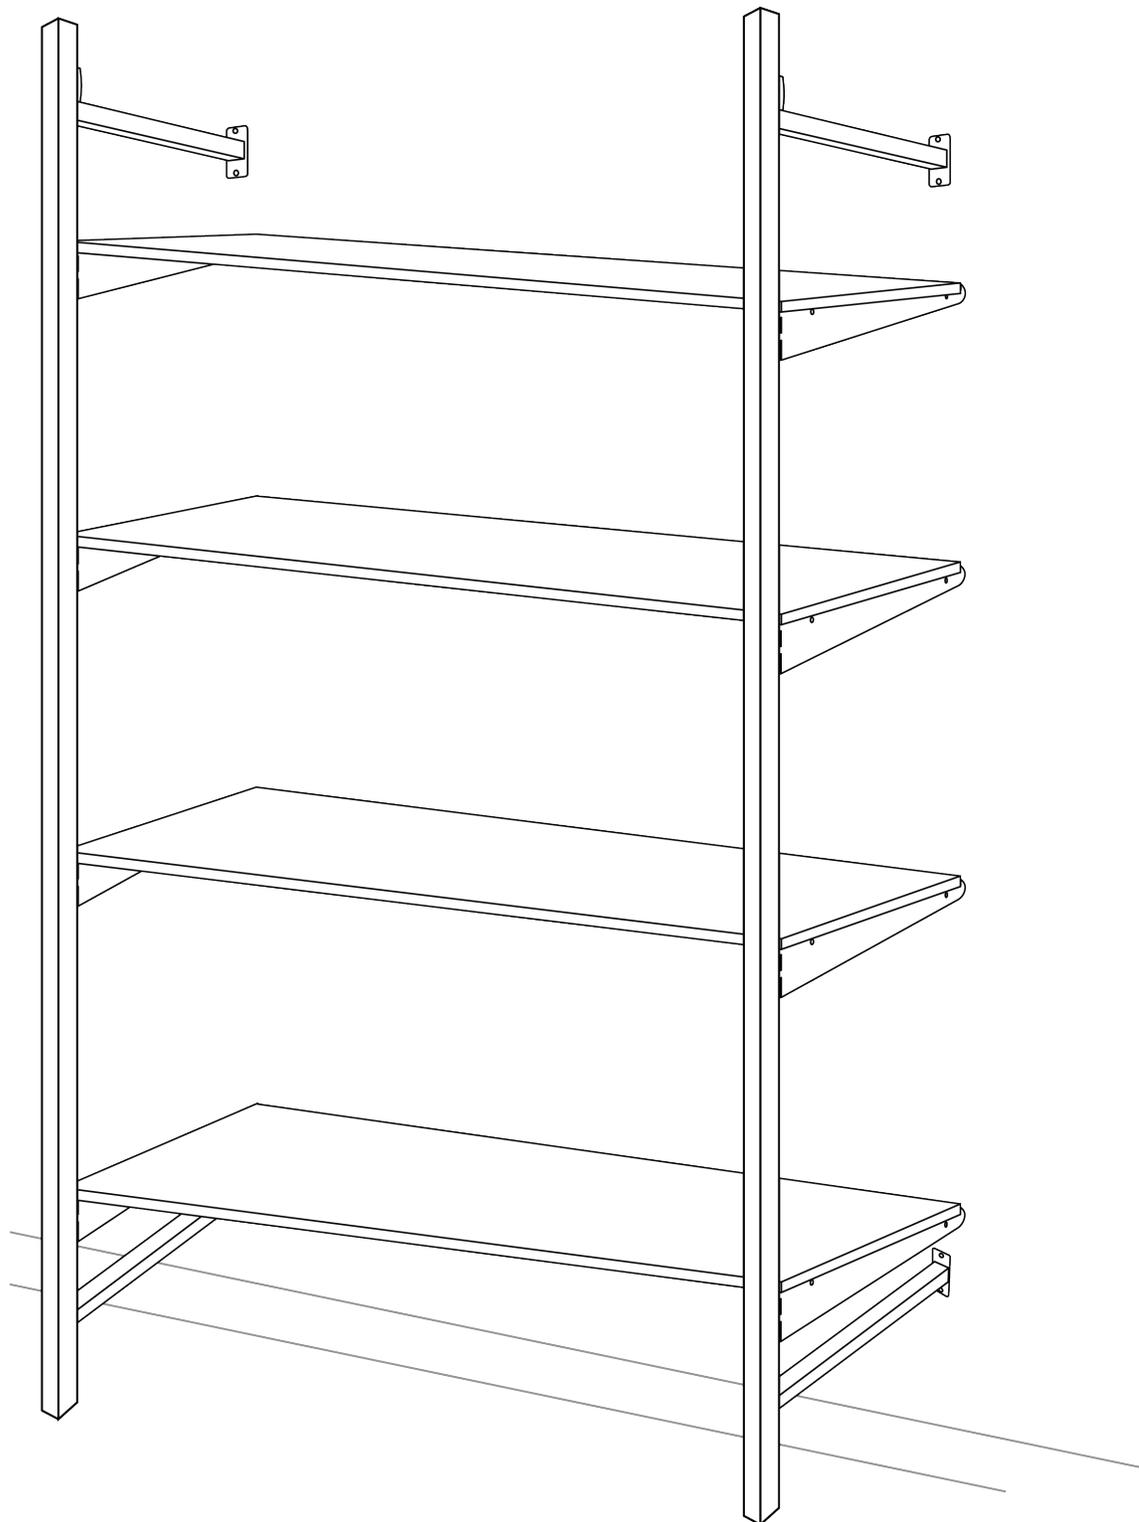


ASSEMBLY INSTRUCTIONS MANUAL

#60874 - CHROME OUTRIGGER SYSTEM KIT 3


PARTS IN CARTON:




CHROME OUTRIGGER
UPRIGHTS
(2 EACH)

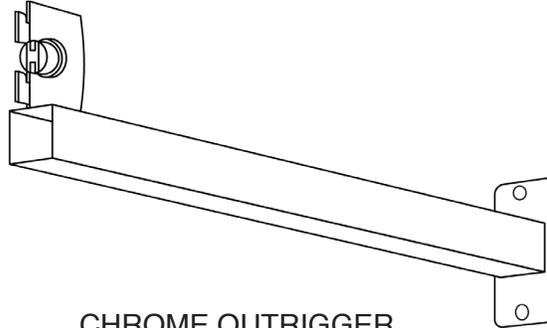

CHROME OUTRIGGER
UPRIGHT BRACKETS
(4 EACH)

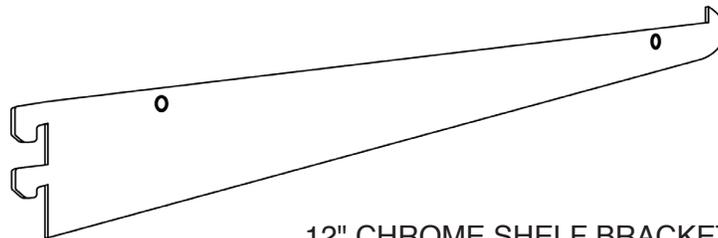

12" CHROME SHELF BRACKET
(8 EACH)

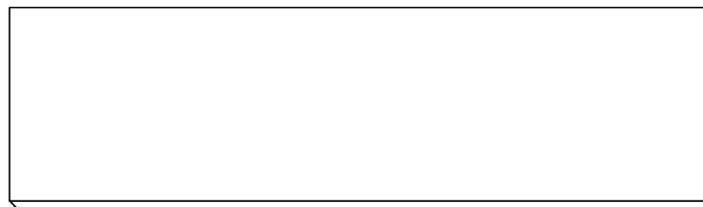


48" X 12" LAMINATED BLACK
MELAMINE SHELVES
(4 EACH)

ASSEMBLY INSTRUCTIONS MANUAL


#60874 - CHROME OUTRIGGER SYSTEM KIT 3

HARDWARE THAT NEEDS TO BE PURCHASED

THESE PARTS WILL NEED TO BE PURCHASED AT YOUR LOCAL HARDWARE STORE. THE RECOMMENDED HARDWARE FOR THIS INSTALL, (8) #8 COUNTERSINK SCREWS AND (8) 3/16 ANCHORS. IF MOUNTING TO STUDS, USE (8) #8 COUNTERSINK SCREWS AND 3/16 DRILL BIT.

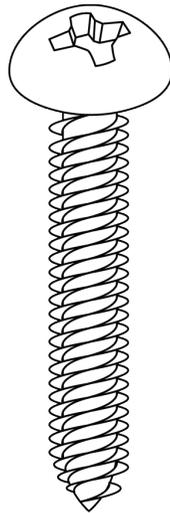

#8 COUNTERSINK
SCREW (8 EACH)

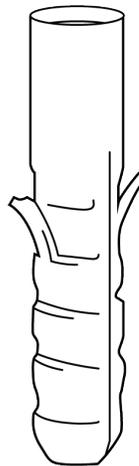

DRYWALL ANCHOR
(8 EACH)

YOU WILL NEED TO SUPPLY YOUR OWN TAPE MEASURE, LEVEL,
DRILL OR SCREWDRIVER FOR INSTALLATION.

ASSEMBLY INSTRUCTIONS MANUAL


#60874 - CHROME OUTRIGGER SYSTEM KIT 3

STEP 1 & 2

PLEASE REFERENCE PAGES 5 THROUGH 7 FOR WALL MOUNTING THE OUTRIGGER BRACKETS.

STEP 3

INSERT THE 12" CHROME SHELF BRACKETS INTO THE OUTRIGGER UPRIGHTS AT DESIRED HEIGHTS OR 21" IN BETWEEN EACH SHELF BRACKET. (SEE FIGURE 1)

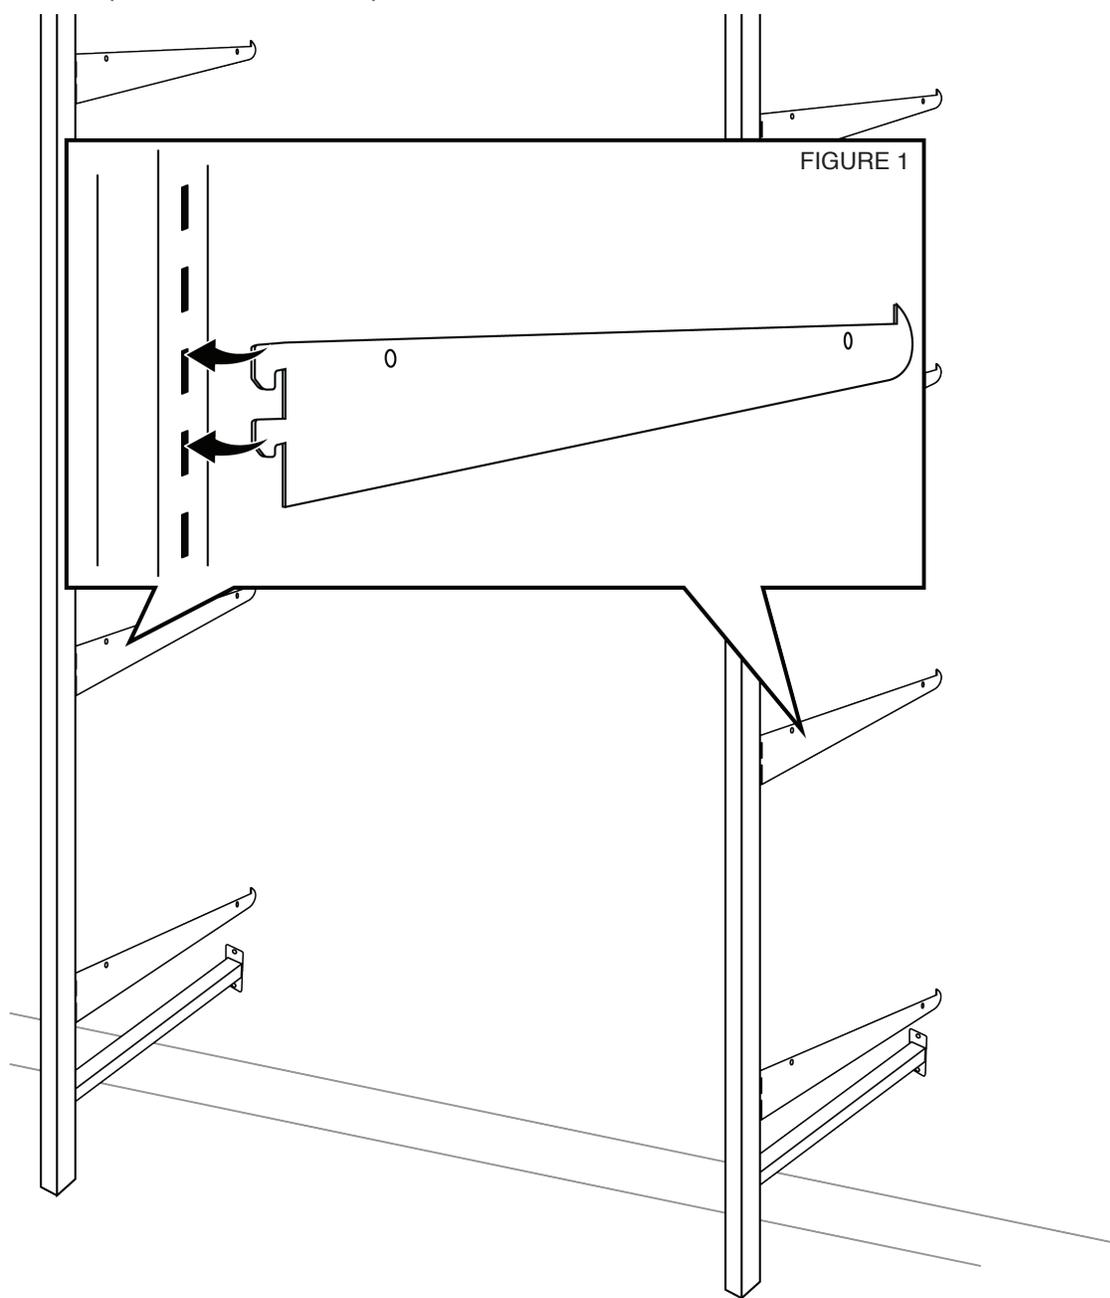

ASSEMBLY INSTRUCTIONS MANUAL

#60874 - CHROME OUTRIGGER SYSTEM KIT 3


STEP 4

PLACE THE MELAMINE SHELVES ONTO EACH SHELF BRACKET.



ASSEMBLY INSTRUCTIONS MANUAL


#60875 - CHROME OUTRIGGER SYSTEM KIT 4

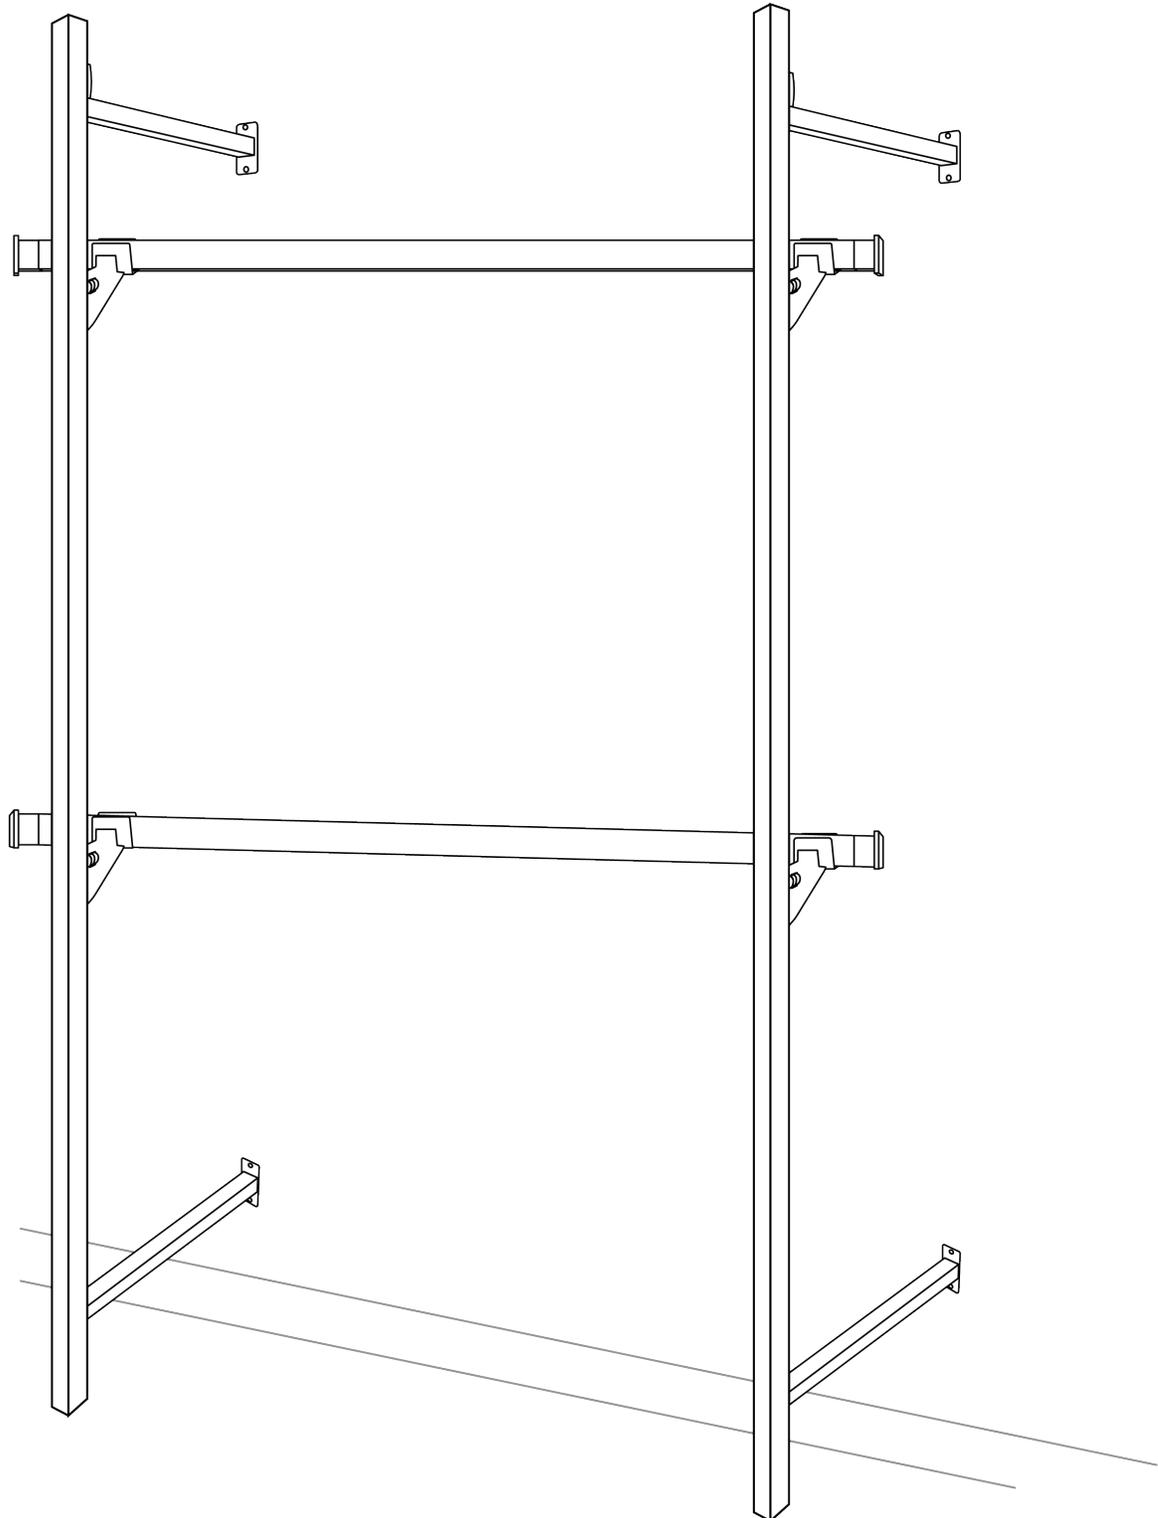


ASSEMBLY INSTRUCTIONS MANUAL

#60875 - CHROME OUTRIGGER SYSTEM KIT 4


PARTS IN CARTON:




CHROME OUTRIGGER
UPRIGHTS
(2 EACH)

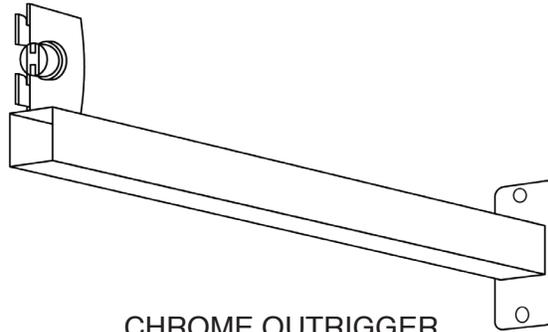

CHROME OUTRIGGER
UPRIGHT BRACKETS
(4 EACH)

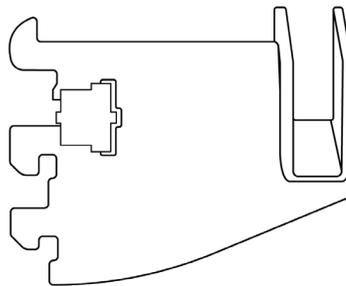

3" CHROME DIMENSIONAL
HANGRAIL BRACKETS
(4 EACH)

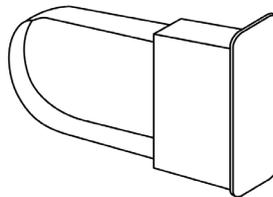

CHROME FLUSH END CAPS
FOR DIMENSIONAL HANGRAIL
(4 EACH)




4' CHROME DIMENSIONAL 1/2" X 1 1/2" HANGRAIL
(2 EACH)

ASSEMBLY INSTRUCTIONS MANUAL


#60875 - CHROME OUTRIGGER SYSTEM KIT 4

HARDWARE THAT NEEDS TO BE PURCHASED

THESE PARTS WILL NEED TO BE PURCHASED AT YOUR LOCAL HARDWARE STORE. THE RECOMMENDED HARDWARE FOR THIS INSTALL, (8) #8 COUNTERSINK SCREWS AND (8) 3/16 ANCHORS. IF MOUNTING TO STUDS, USE (8) #8 COUNTERSINK SCREWS AND 3/16 DRILL BIT.

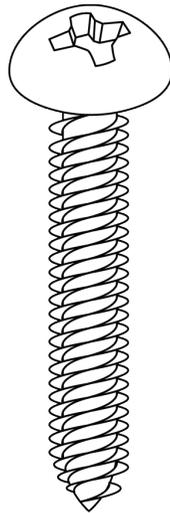

#8 COUNTERSINK
SCREW (8 EACH)

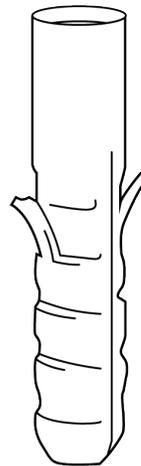

DRYWALL ANCHOR
(8 EACH)

YOU WILL NEED TO SUPPLY YOUR OWN TAPE MEASURE, LEVEL,
DRILL OR SCREWDRIVER FOR INSTALLATION.

ASSEMBLY INSTRUCTIONS MANUAL


#60875 - CHROME OUTRIGGER SYSTEM KIT 4

STEP 1 & 2

PLEASE REFERENCE PAGES 5 THROUGH 7 FOR WALL MOUNTING THE OUTRIGGER BRACKETS.

STEP 3

INSTALL THE 3" CHROME DIMENSIONAL HANGRAIL BRACKETS ON TO THE BACK OF THE OUTRIGGER UPRIGHTS. (SEE FIGURE 1)

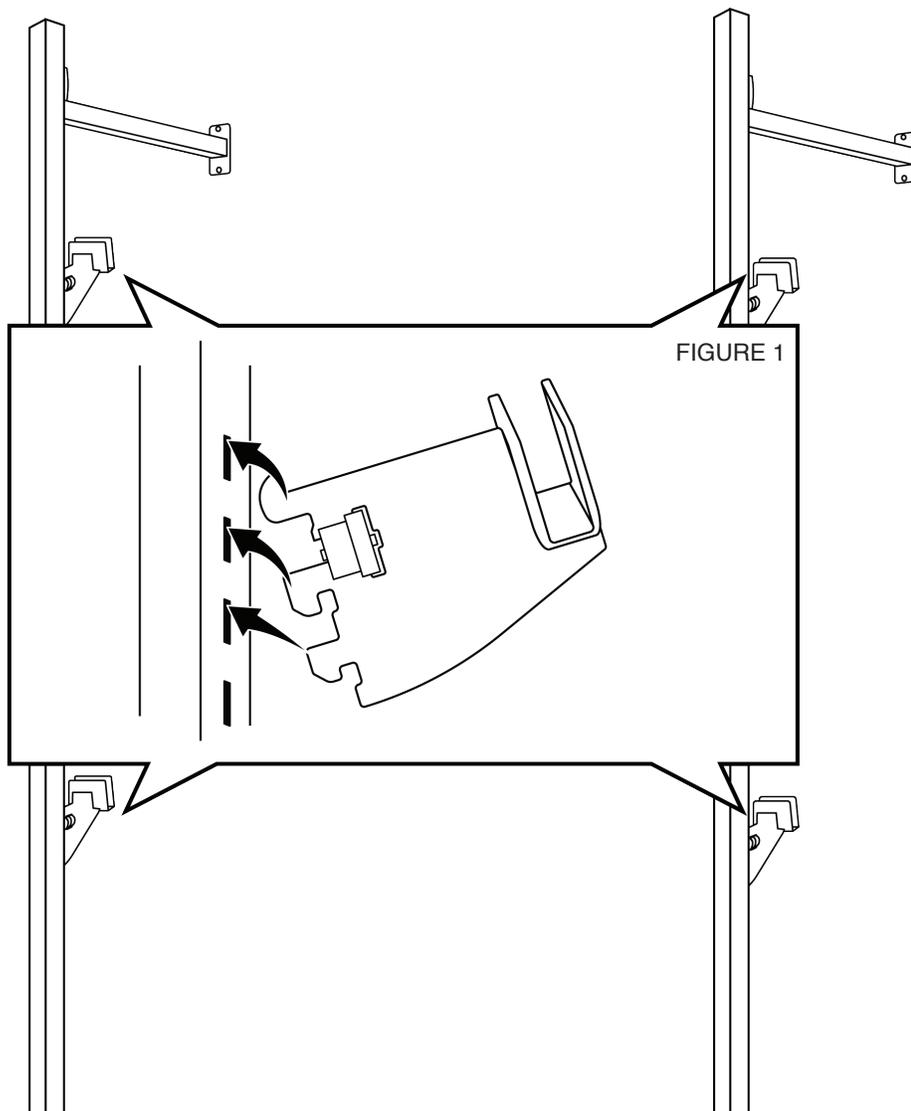

ASSEMBLY INSTRUCTIONS MANUAL

#60875 - CHROME OUTRIGGER SYSTEM KIT 4

STEP 4

PLACE THE 3" CHROME DIMENSIONAL HANGRAIL INTO THE BRACKETS THEN INSERT THE ENDCAPS INTO EACH END. (SEE FIGURE 2)

