
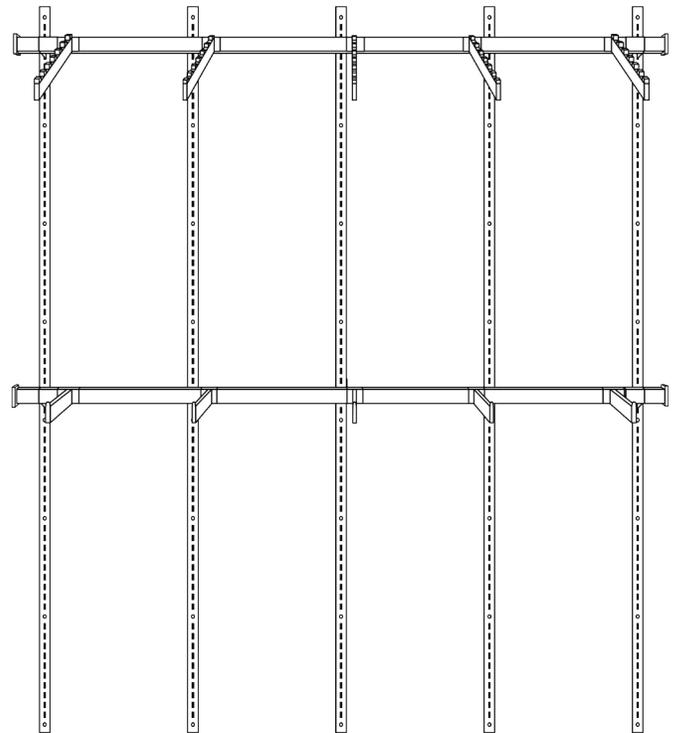
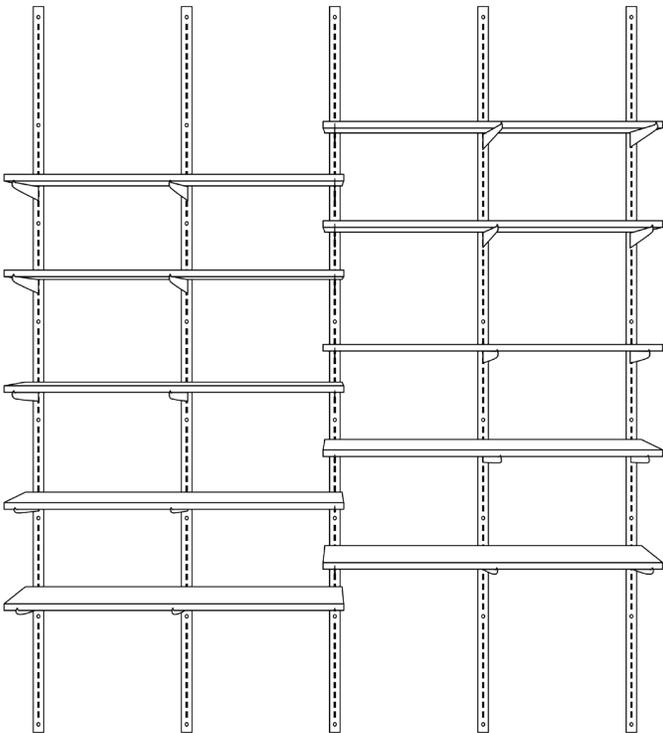


ASSEMBLY INSTRUCTIONS MANUAL


#60876 #60877 #60878 #60879

SLOTTED STANDARD SYSTEM KITS 1-4

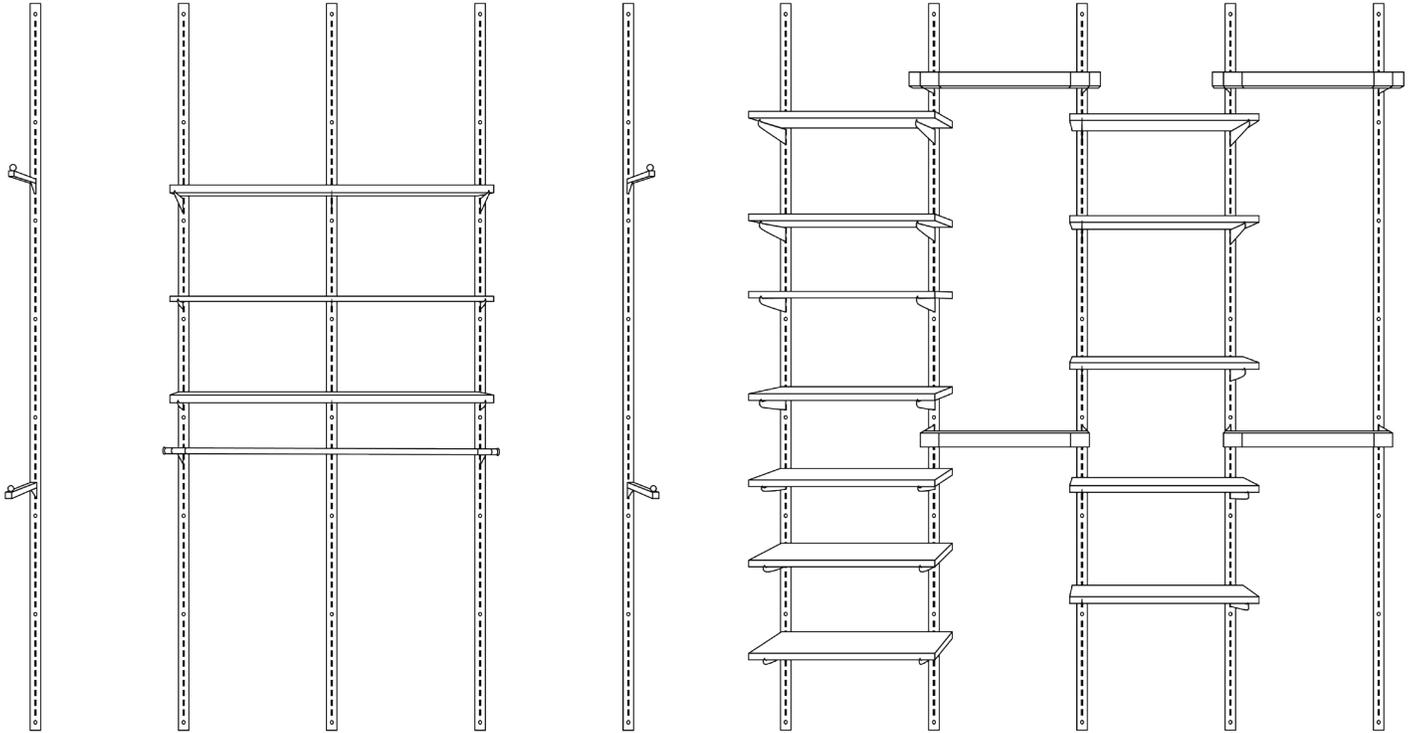

ASSEMBLY INSTRUCTIONS MANUAL


#60876 - SLOTTED STANDARD SYSTEM KIT 1

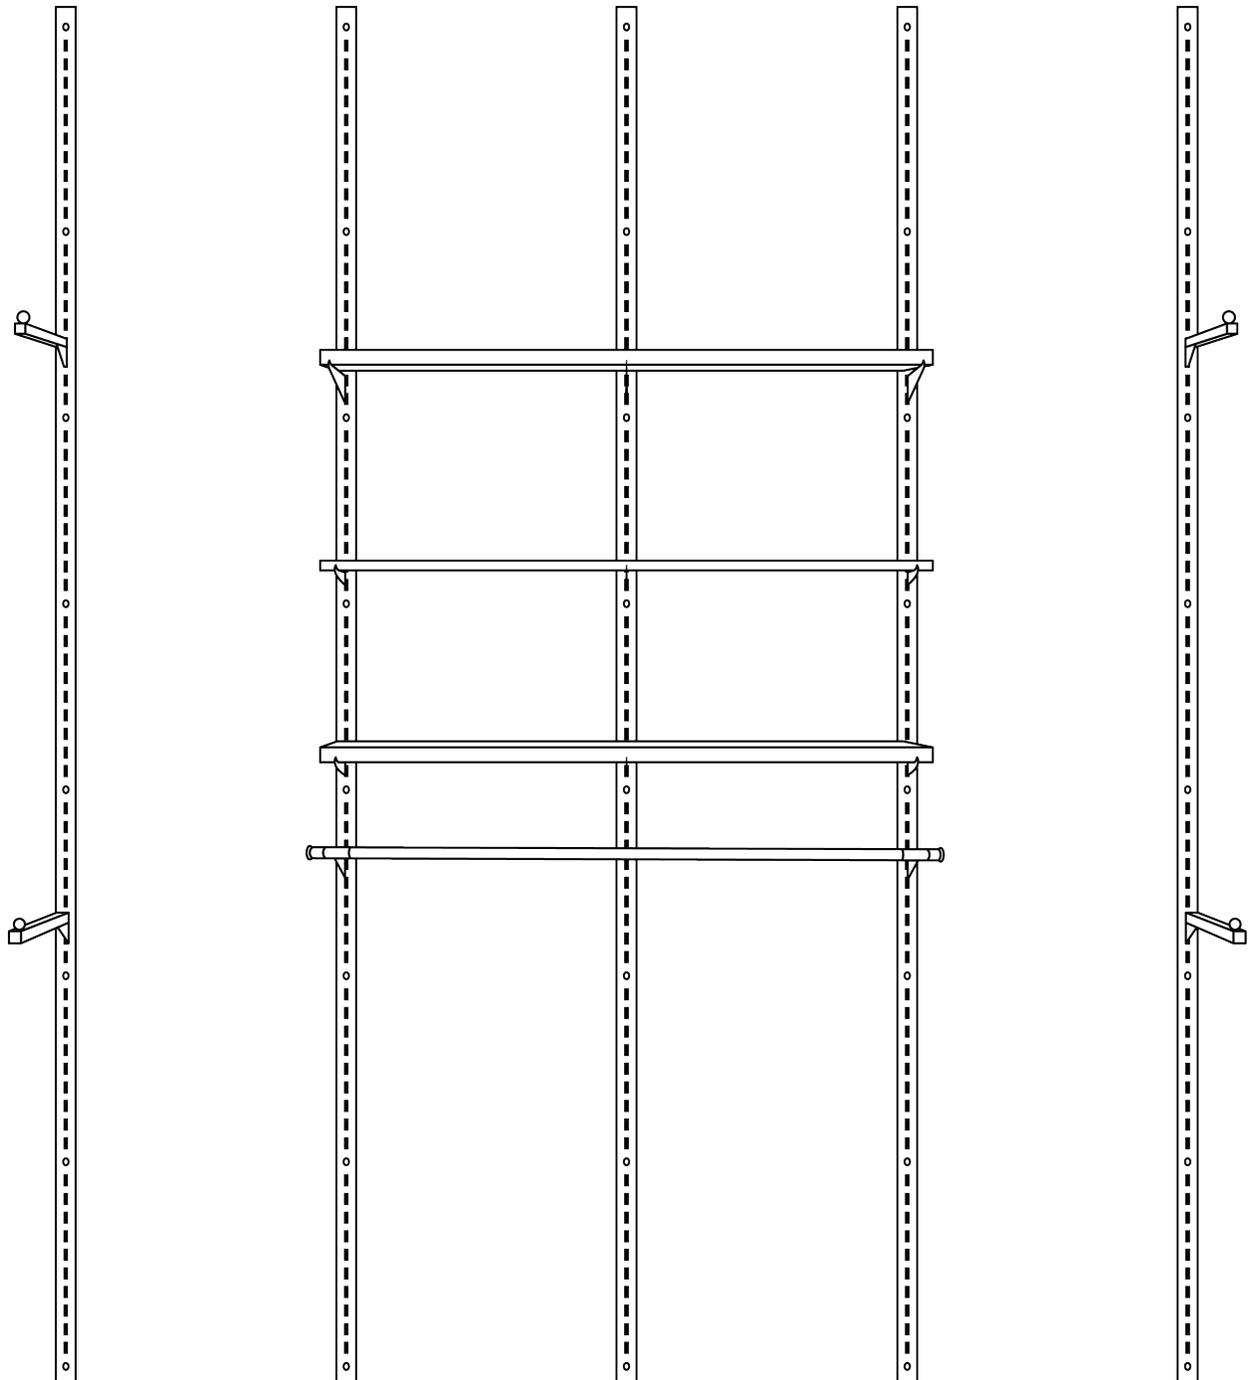


ASSEMBLY INSTRUCTIONS MANUAL

#60876 - SLOTTED STANDARD SYSTEM KIT 1


PARTS IN CARTON:

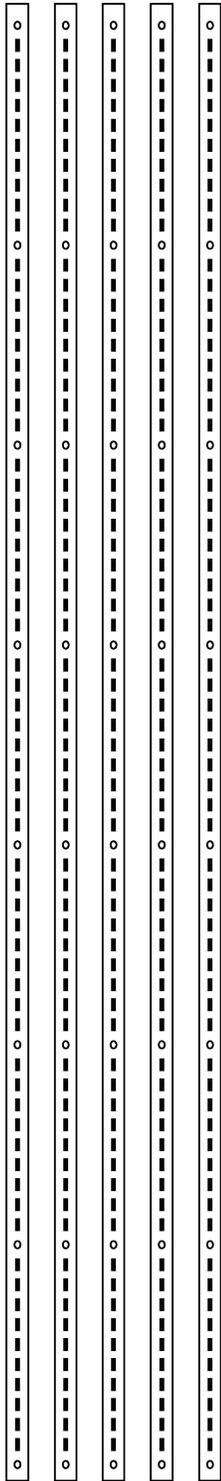


7' SLOTTED
STANDARDS
(5 EACH)

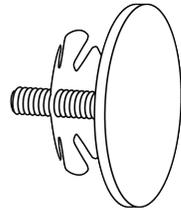


ROUND END CAP
(2 EACH)

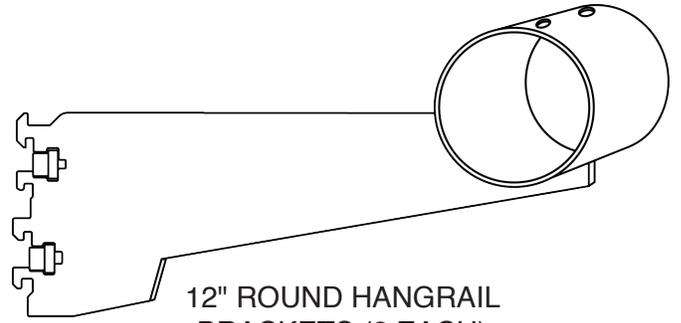


12" ROUND HANGRAIL
BRACKETS (2 EACH)

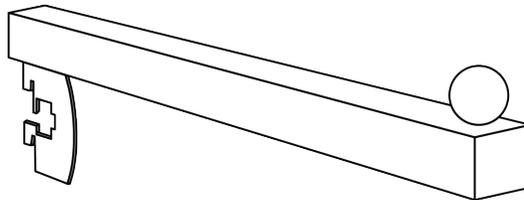


12" STRAIGHT
FACEOUTS (4 EACH)

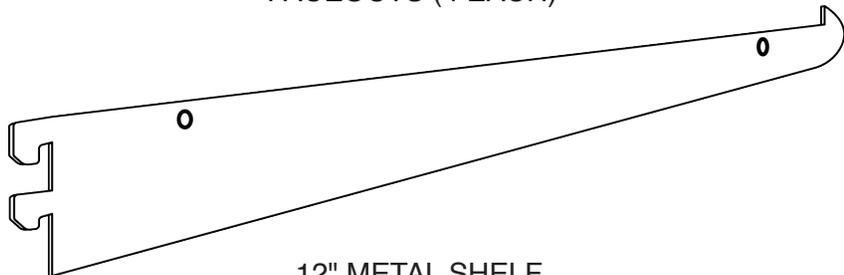

12" METAL SHELF
BRACKETS (9 EACH)



4' ROUND DIAMETER
HANGRAIL (1 EACH)

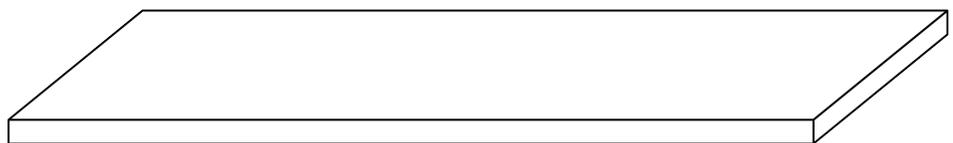


48 X 12" LAMINATED
MELAMINE SHELVES (3 EACH)

ASSEMBLY INSTRUCTIONS MANUAL

#60876 - SLOTTED STANDARD SYSTEM KIT 1

HARDWARE THAT NEEDS TO BE PURCHASED

THESE PARTS WILL NEED TO BE PURCHASED AT YOUR LOCAL HARDWARE STORE. THE RECOMMENDED HARDWARE FOR THIS INSTALL, (40) #8 COUNTERSINK SCREWS AND (40) 3/16 ANCHORS. IF MOUNTING TO STUDS, USE (40) #8 COUNTERSINK SCREWS AND 3/16 DRILL BIT.

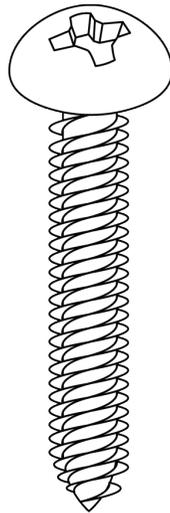

#8 COUNTERSINK
SCREW (40 EACH)



DRYWALL ANCHOR
(40 EACH)

YOU WILL NEED TO SUPPLY YOUR OWN TAPE MEASURE, LEVEL,
DRILL OR SCREWDRIVER FOR INSTALLATION.


ASSEMBLY INSTRUCTIONS MANUAL

#60876 #60877 #60878 #60879

SLOTTED STANDARD SYSTEM KITS 1-4


STEP 1

PLACE THE FIRST STANDARD **LEVEL** AND **VERTICAL** AGAINST THE WALL. MEASURE $23\frac{1}{4}$ " BETWEEN THE CENTER OF THE STANDARDS, AND MARK MOUNTING HOLE LOCATIONS. (SEE FIGURE 1) USING A $\frac{3}{16}$ " DRILL BIT OR USING THE SCREWS AS A DRILL BIT, MAKE YOUR HOLES.

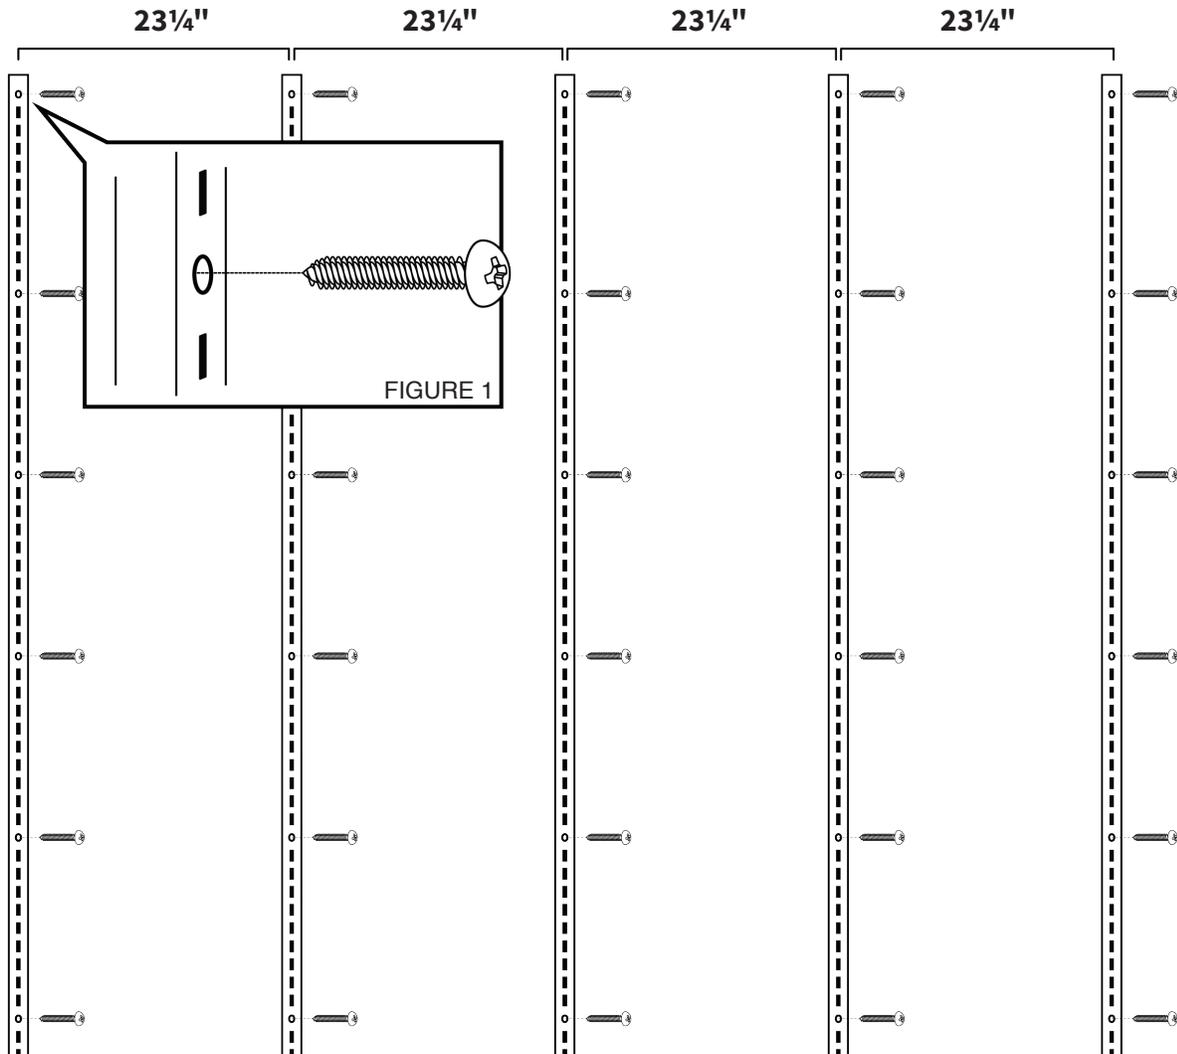

STEP 2

INSTALL DRY WALL ANCHORS INTO EACH HOLE. (SEE FIGURE 2)

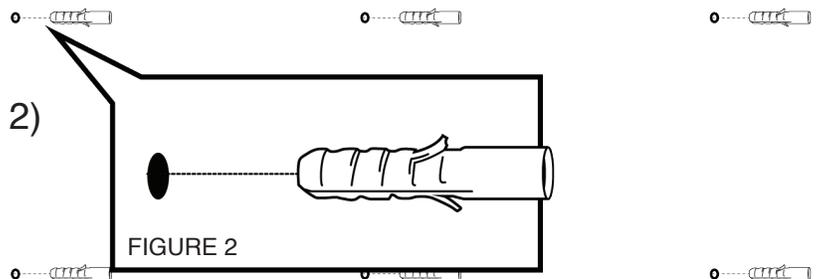


ASSEMBLY INSTRUCTIONS MANUAL

#60876 - SLOTTED STANDARD SYSTEM KITS 1


STEP 3

FIRST HANG THE STRAIGHT FACEOUTS (SEE FIGURE 3), THEN INSERT THE SHELF BRACKETS AND SHELVES (SEE FIGURE 4) AT DESIRED LOCATIONS. FINALLY INSERT THE ROUND HANGRAIL BRACKETS, HANGRAIL, AND ENDCAPS. (SEE FIGURE 5)

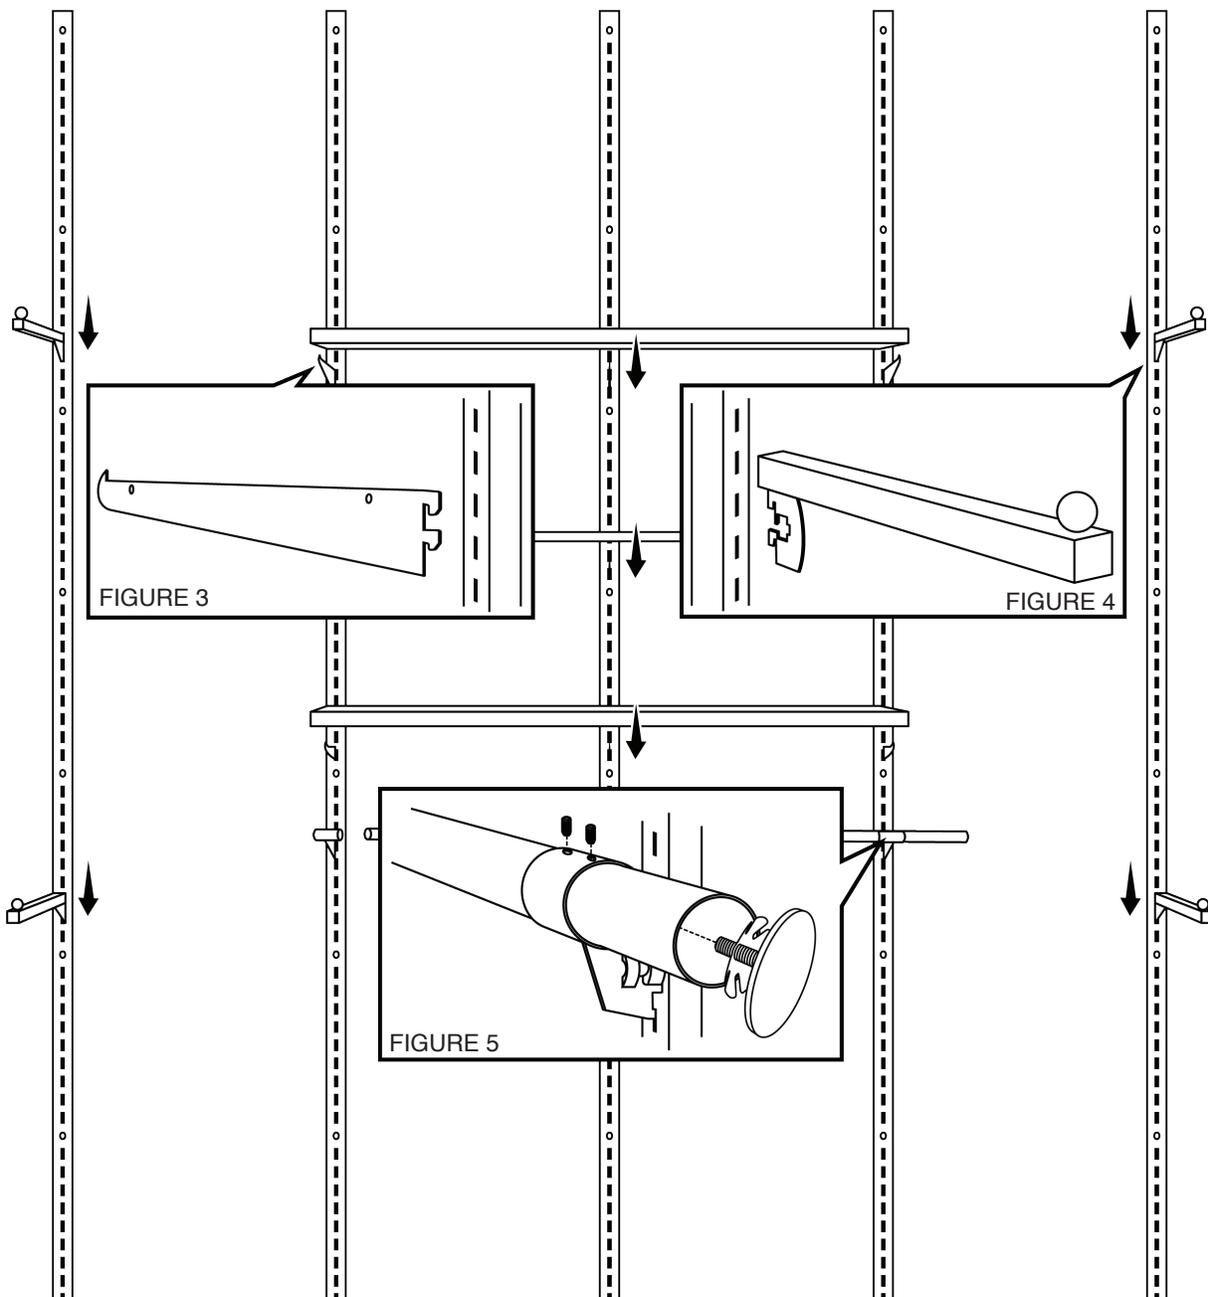

ASSEMBLY INSTRUCTIONS MANUAL


#60877 - SLOTTED STANDARD SYSTEM KIT 2

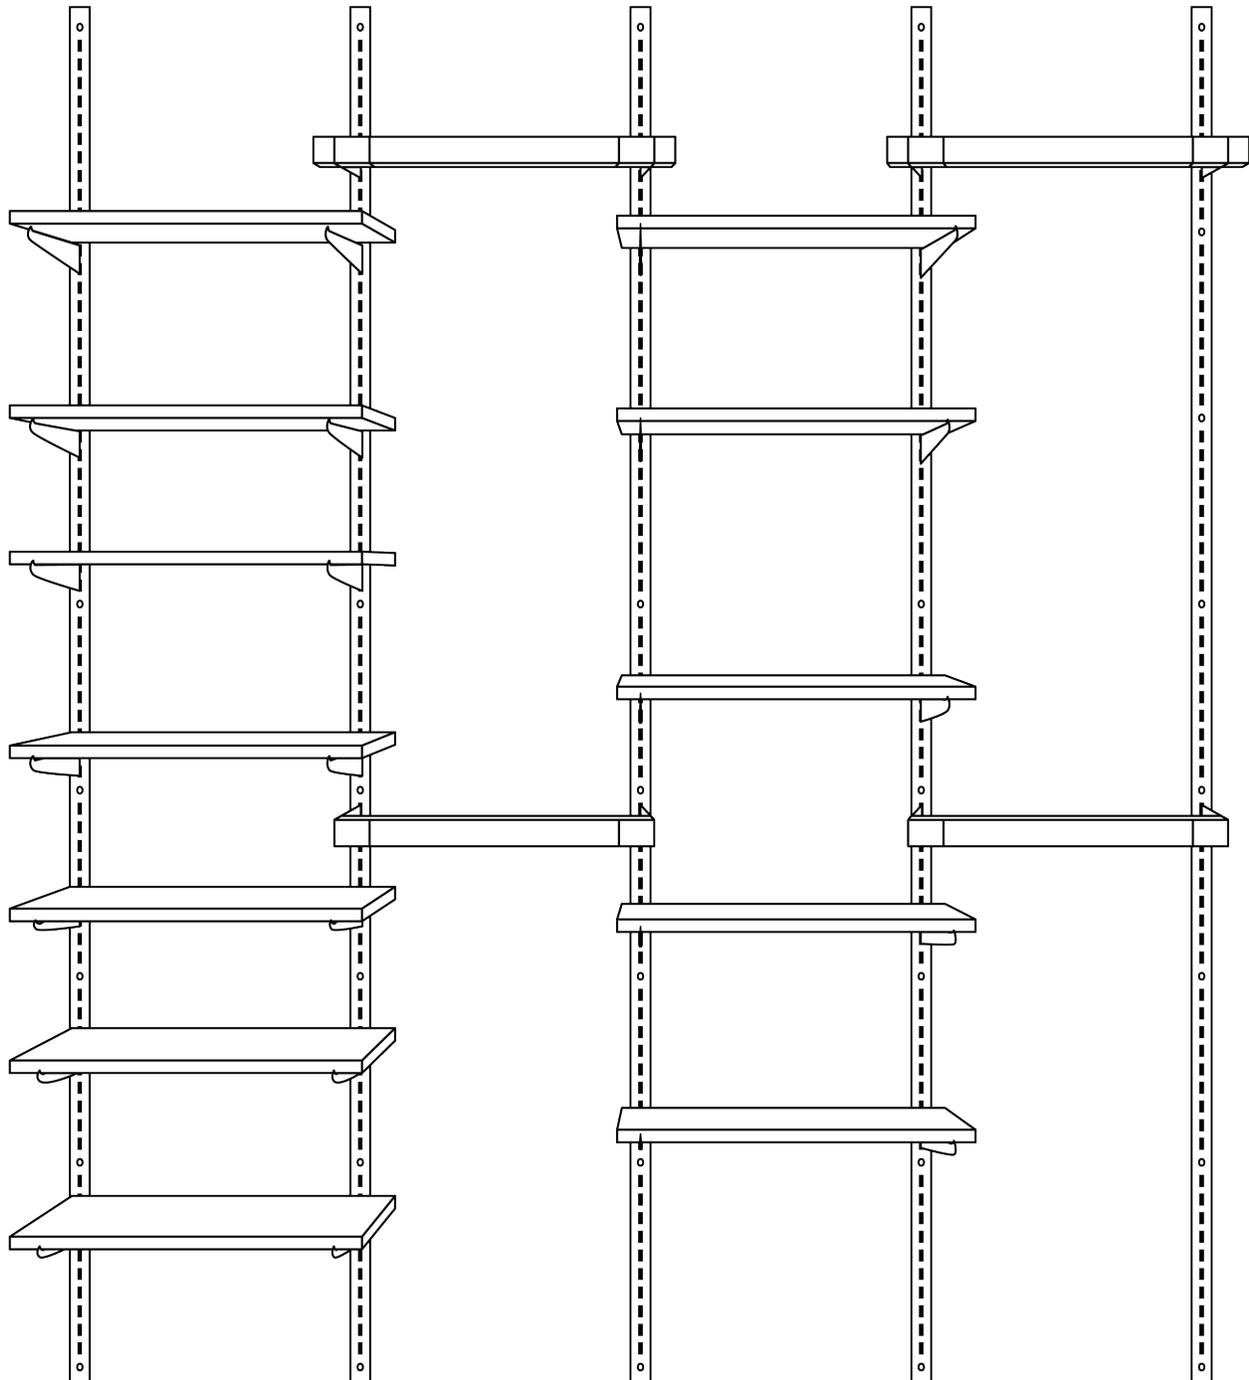


ASSEMBLY INSTRUCTIONS MANUAL

#60877 - SLOTTED STANDARD SYSTEM KIT 2


PARTS IN CARTON:

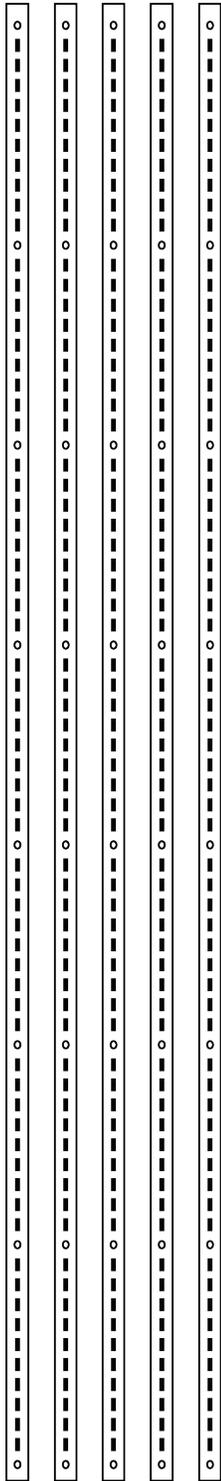


7' SLOTTED
STANDARDS
(5 EACH)

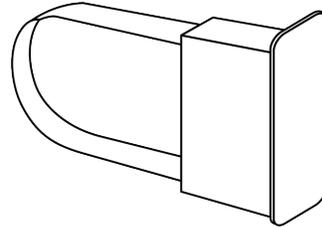


FLUSH END CAPS
(8 EACH)

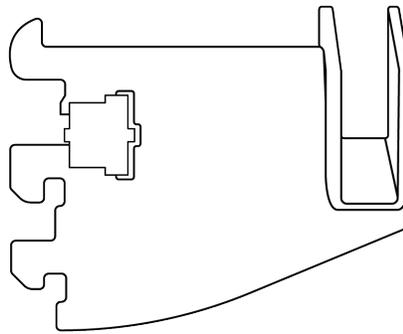

3" DIMENSIONAL HANGRAIL
BRACKET (8 EACH)



4' DIMENSIONAL HANGRAILS
(4 EACH)

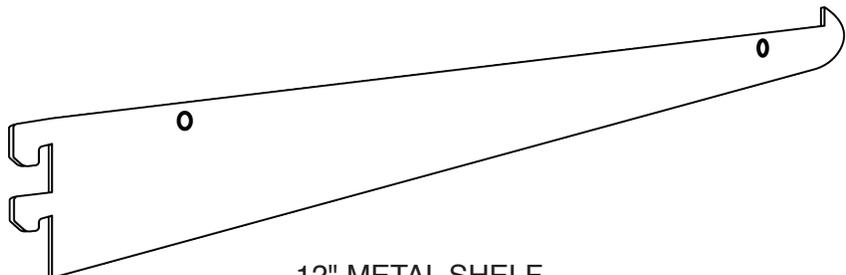

12" METAL SHELF
BRACKETS (24 EACH)




24 X 12" LAMINATED
MELAMINE SHELVES (12 EACH)

ASSEMBLY INSTRUCTIONS MANUAL


#60877 - SLOTTED STANDARD SYSTEM KIT 2

HARDWARE THAT NEEDS TO BE PURCHASED

THESE PARTS WILL NEED TO BE PURCHASED AT YOUR LOCAL HARDWARE STORE. THE RECOMMENDED HARDWARE FOR THIS INSTALL, (40) #8 COUNTERSINK SCREWS AND (40) 3/16 ANCHORS. IF MOUNTING TO STUDS, USE (40) #8 COUNTERSINK SCREWS AND 3/16 DRILL BIT.

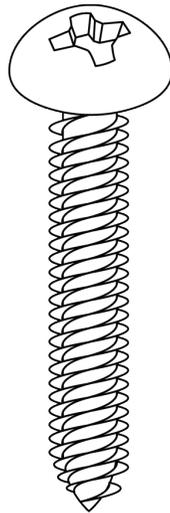

#8 COUNTERSINK
SCREW (40 EACH)

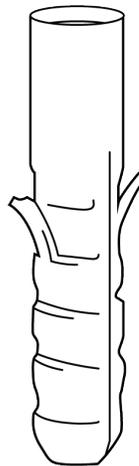

DRYWALL ANCHOR
(40 EACH)

YOU WILL NEED TO SUPPLY YOUR OWN TAPE MEASURE, LEVEL,
DRILL OR SCREWDRIVER FOR INSTALLATION.

ASSEMBLY INSTRUCTIONS MANUAL


#60877 - SLOTTED STANDARD SYSTEM KITS 2

STEP 1-2

PLEASE SEE PAGE 5 FOR SLOTTED STANDARD INSTALL.


STEP 3

FIRST HANG THE SHELF BRACKETS (SEE FIGURE 3), INSERT THE DIMENSIONAL HANGRAIL BRACKETS AND ENDCAPS (SEE FIGURES 4-5) AT DESIRED LOCATIONS. FINALLY PLACE THE SHELVES ONTO THE BRACKETS.

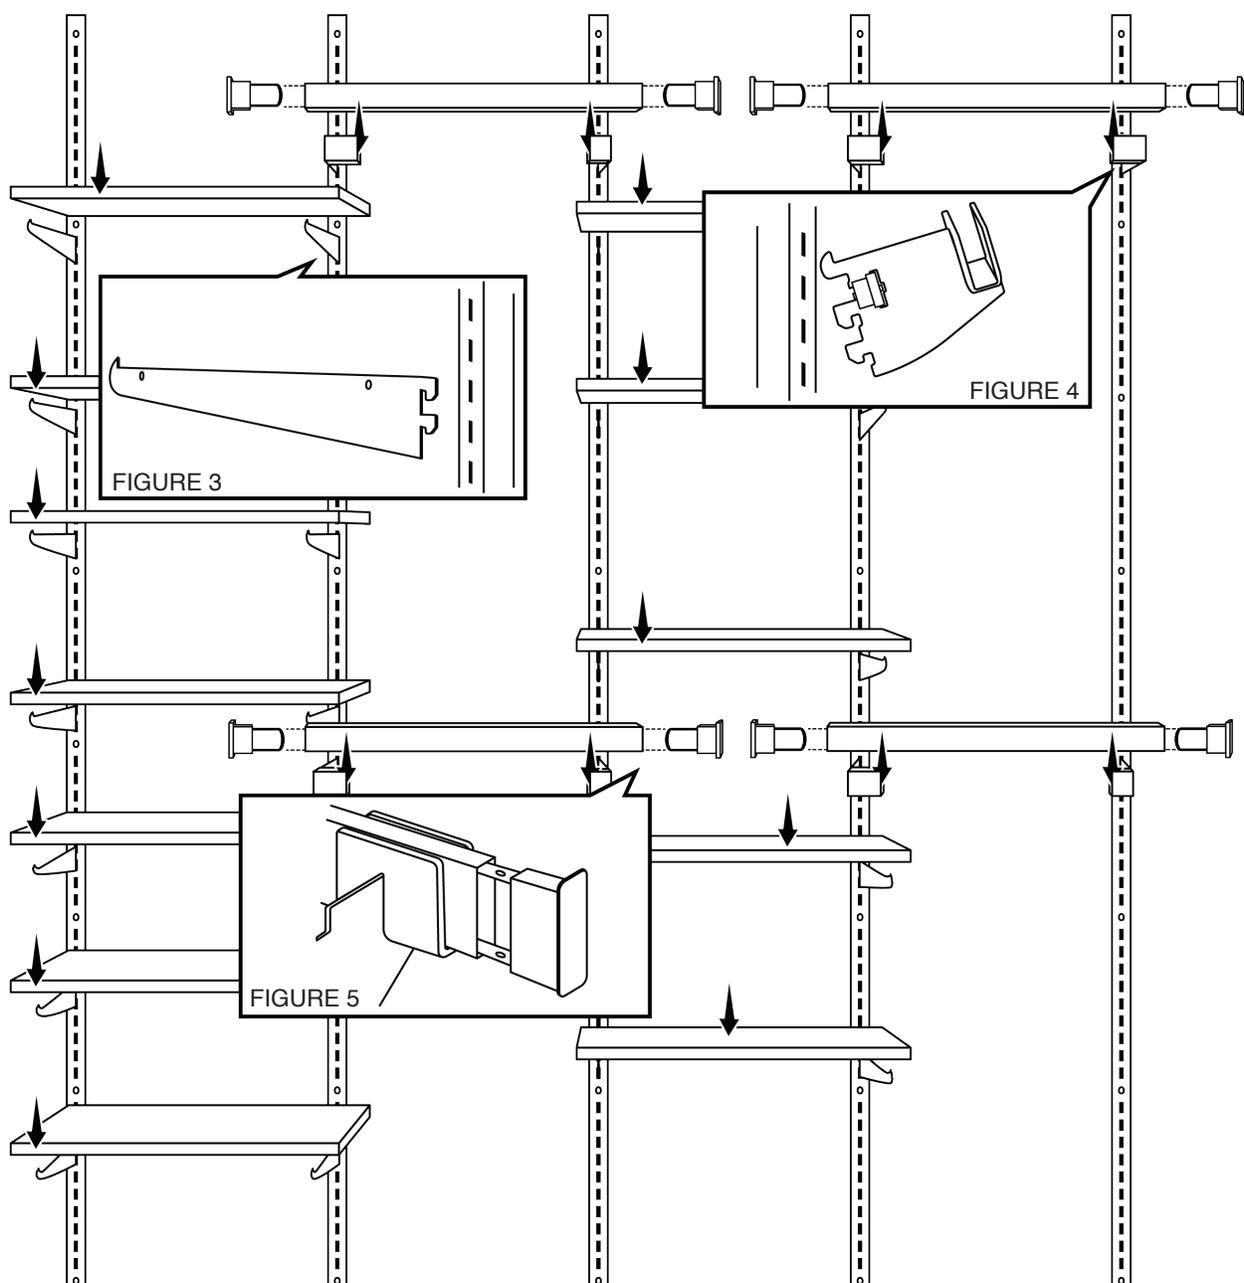

ASSEMBLY INSTRUCTIONS MANUAL


#60878 - SLOTTED STANDARD SYSTEM KIT 3

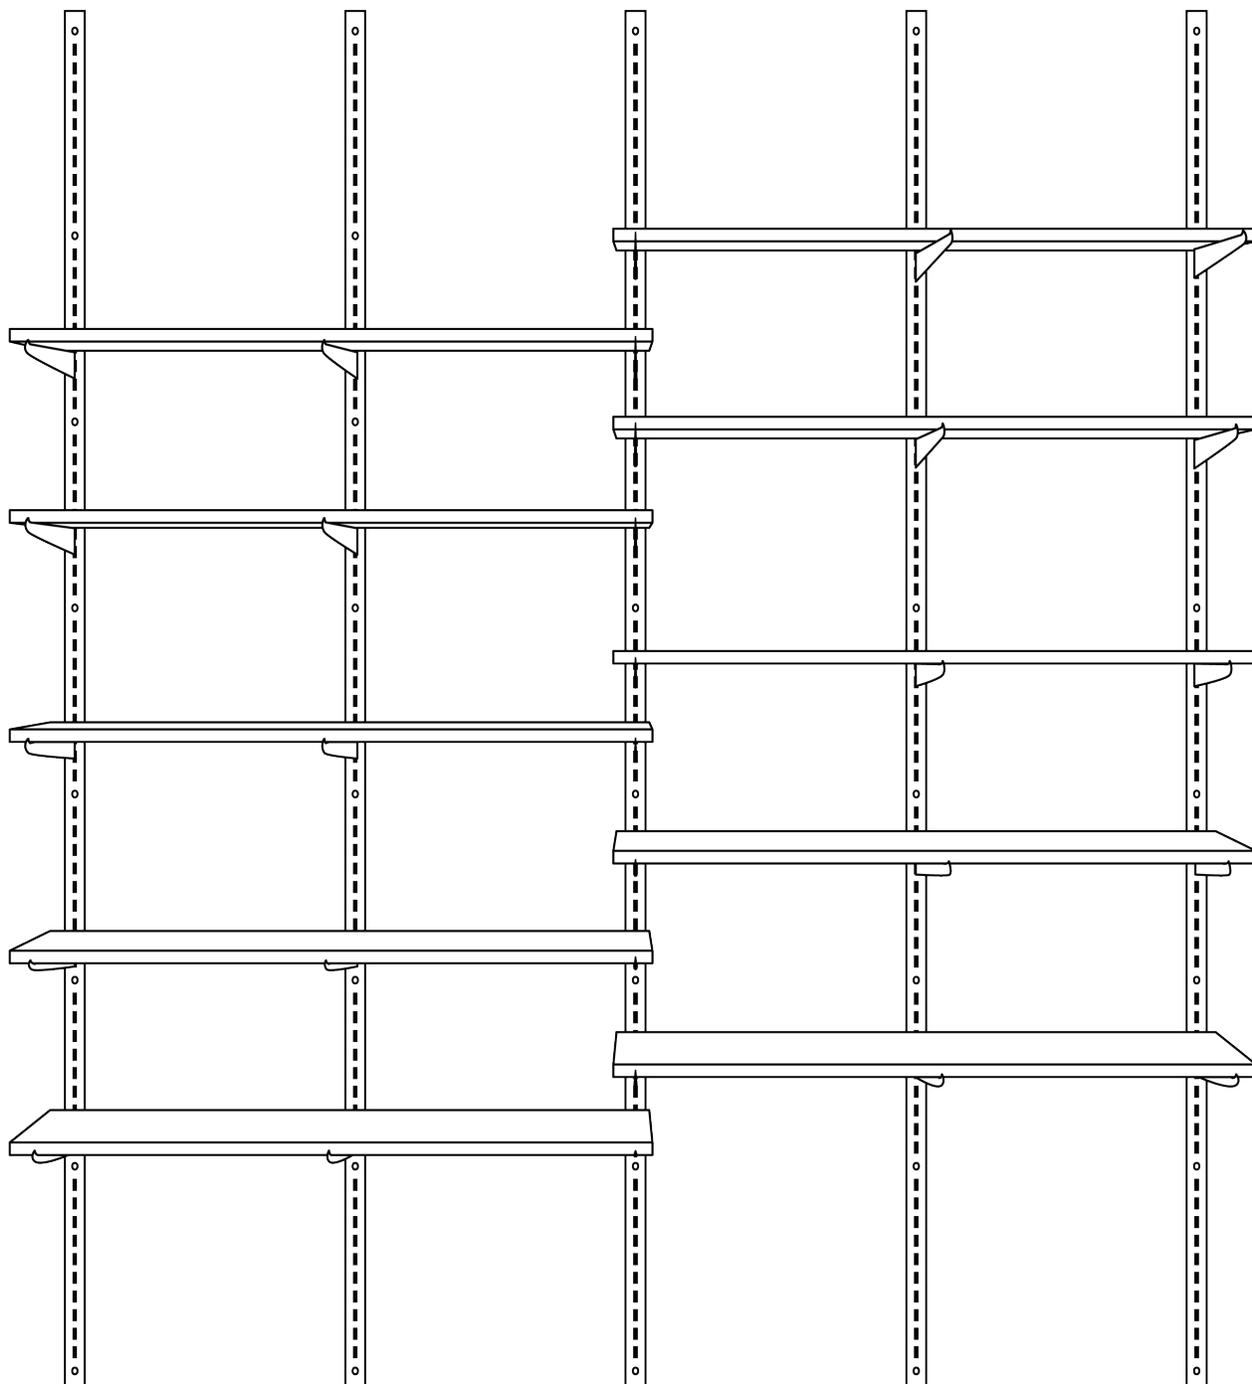


ASSEMBLY INSTRUCTIONS MANUAL

#60878 - SLOTTED STANDARD SYSTEM KIT 3


PARTS IN CARTON:

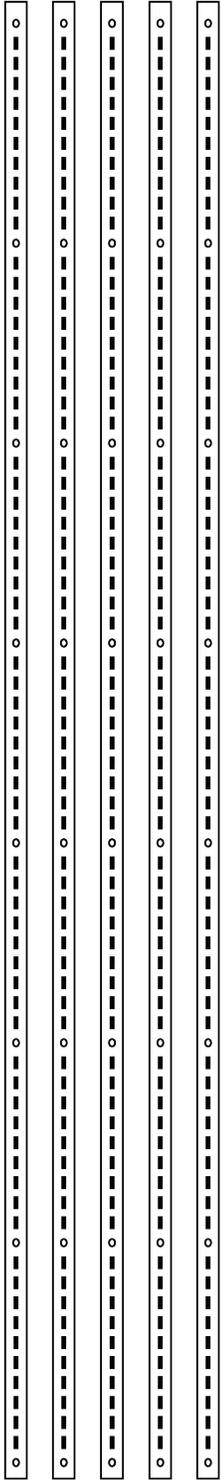

7' SLOTTED
STANDARDS
(5 EACH)

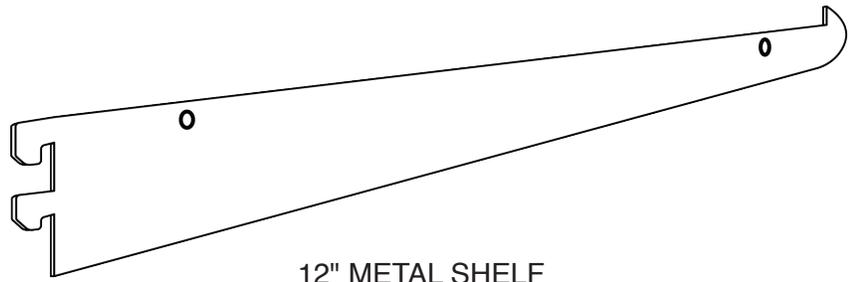

12" METAL SHELF
BRACKETS (30 EACH)

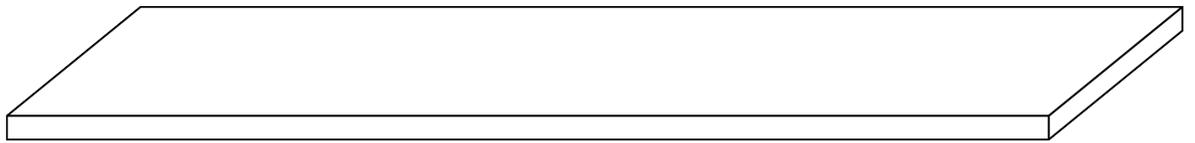


48 X 12" LAMINATED
MELAMINE SHELVES (10 EACH)

ASSEMBLY INSTRUCTIONS MANUAL


#60878 - SLOTTED STANDARD SYSTEM KIT 3

HARDWARE THAT NEEDS TO BE PURCHASED

THESE PARTS WILL NEED TO BE PURCHASED AT YOUR LOCAL HARDWARE STORE. THE RECOMMENDED HARDWARE FOR THIS INSTALL, (40) #8 COUNTERSINK SCREWS AND (40) 3/16 ANCHORS. IF MOUNTING TO STUDS, USE (40) #8 COUNTERSINK SCREWS AND 3/16 DRILL BIT.

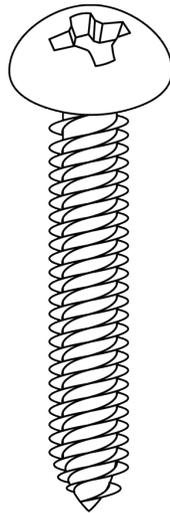

#8 COUNTERSINK
SCREW (40 EACH)

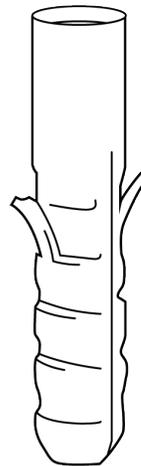

DRYWALL ANCHOR
(40 EACH)

YOU WILL NEED TO SUPPLY YOUR OWN TAPE MEASURE, LEVEL,
DRILL OR SCREWDRIVER FOR INSTALLATION.

ASSEMBLY INSTRUCTIONS MANUAL


#60878 - SLOTTED STANDARD SYSTEM KIT 3

STEP 1-2

PLEASE SEE PAGE 5 FOR SLOTTED STANDARD INSTALL.


STEP 3

FIRST HANG THE SHELF BRACKETS (SEE FIGURE 3) AT DESIRED LOCATIONS. FINALLY PLACE THE SHELVES ONTO THE BRACKETS.

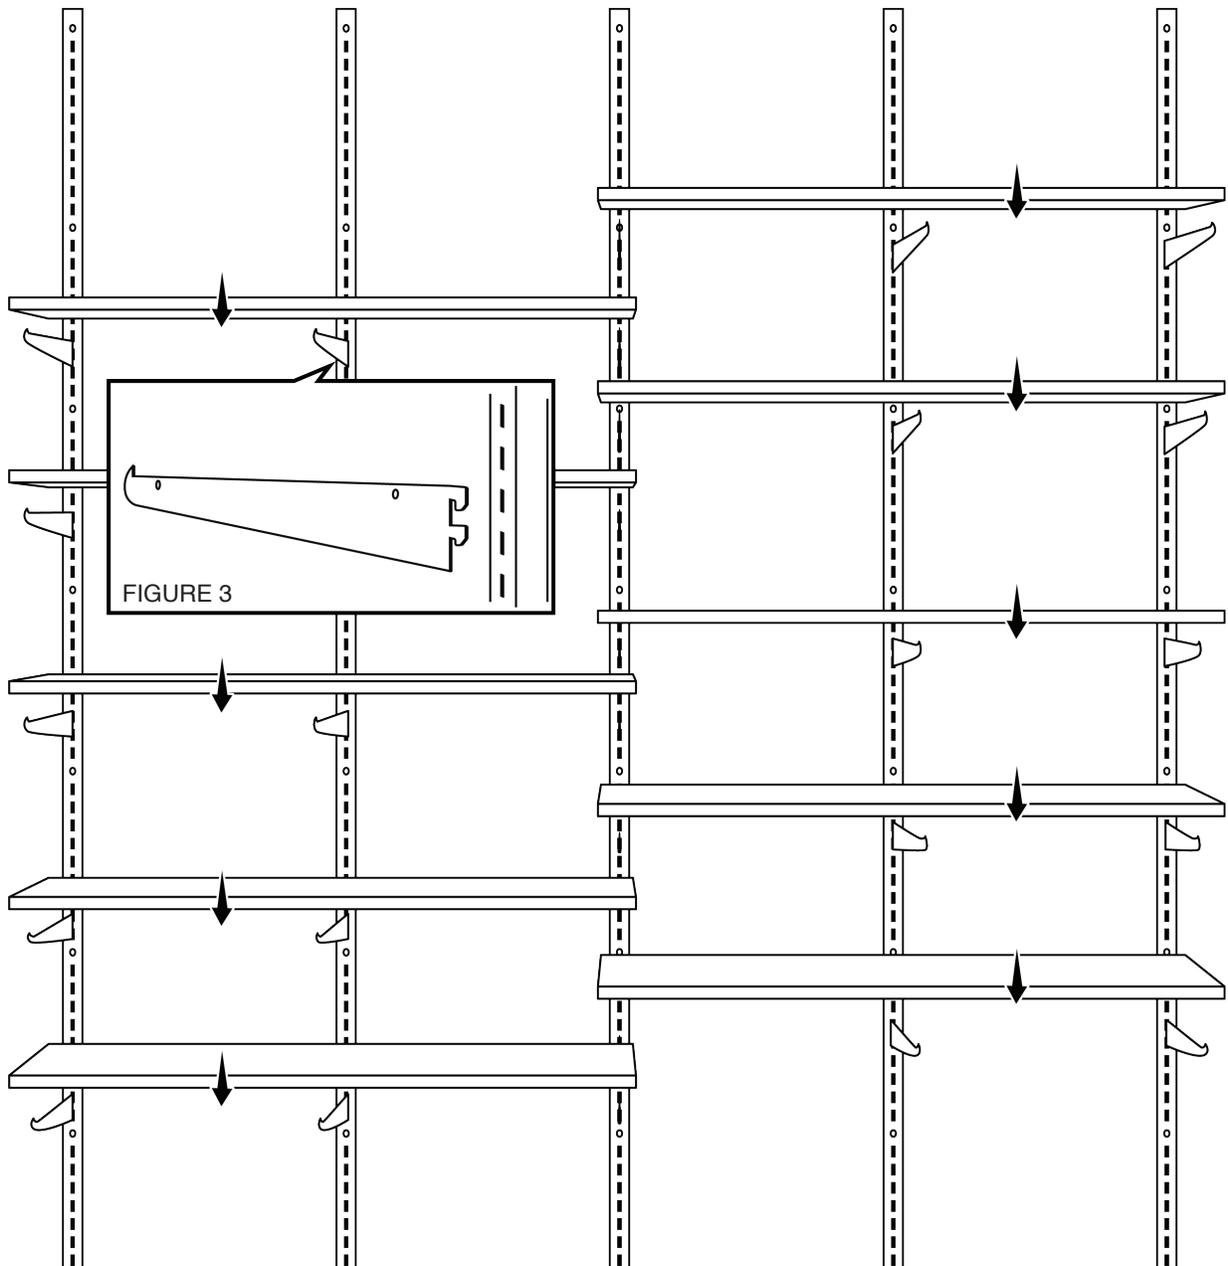

ASSEMBLY INSTRUCTIONS MANUAL


#60879 - SLOTTED STANDARD SYSTEM KIT 4

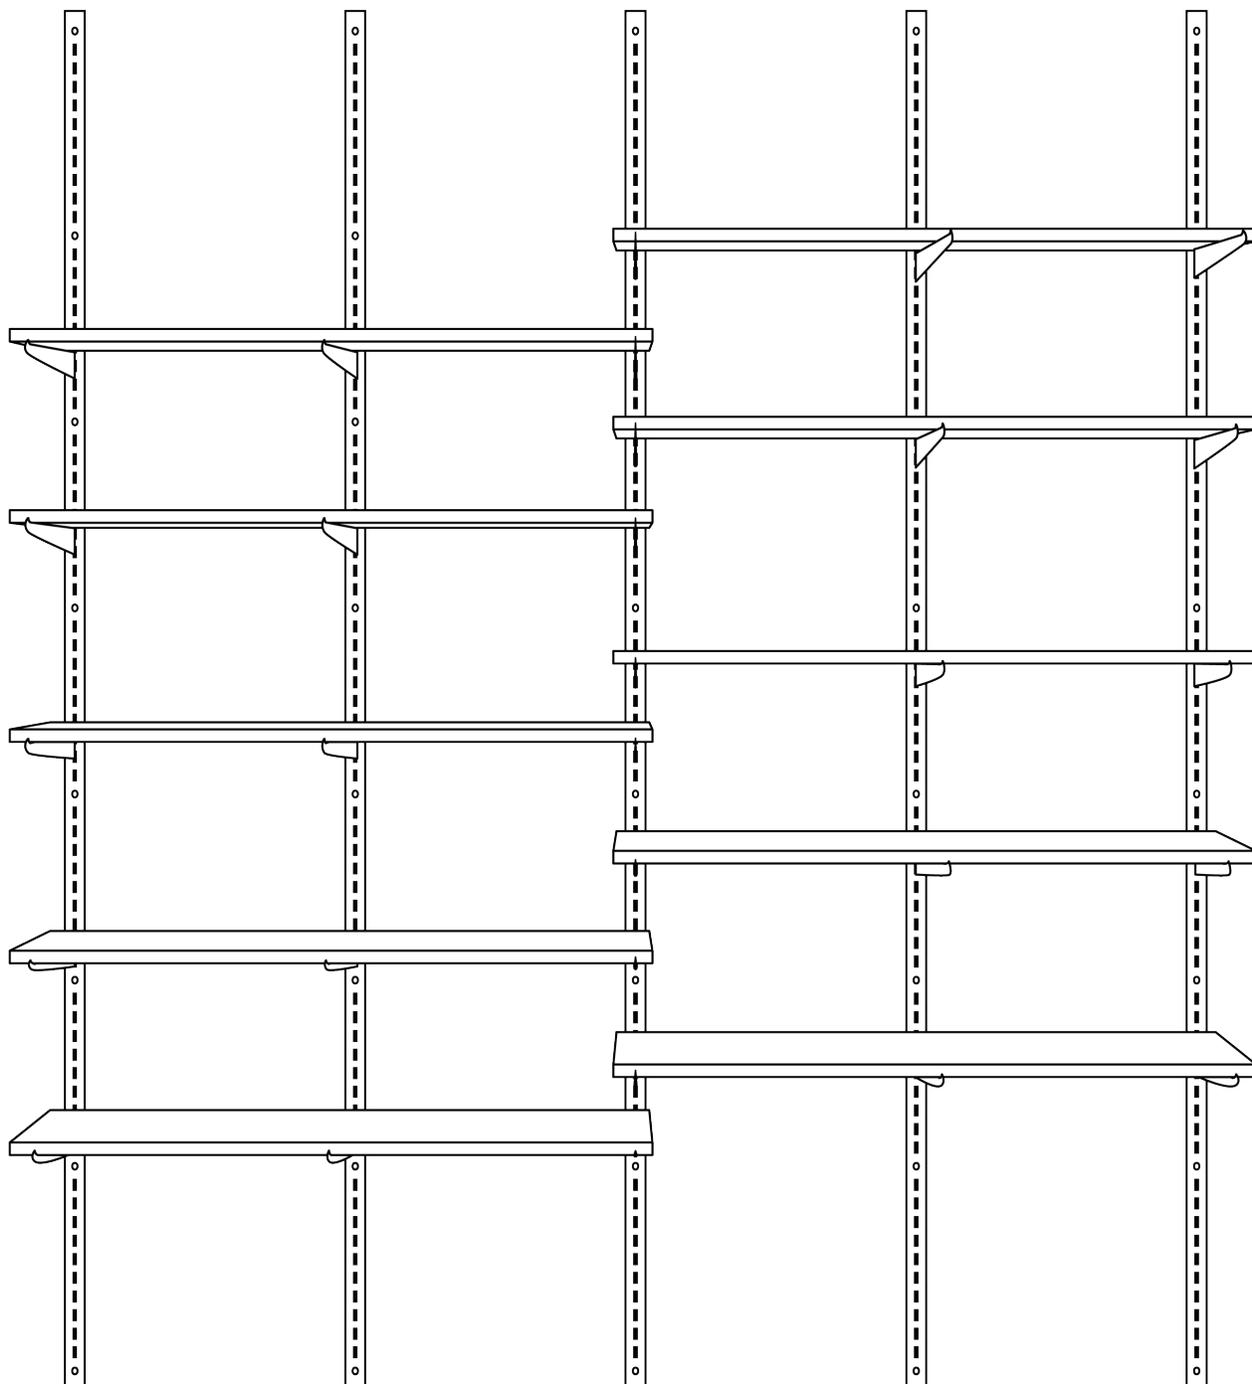

ASSEMBLY INSTRUCTIONS MANUAL

#60879 - SLOTTED STANDARD SYSTEM KIT 4


PARTS IN CARTON:

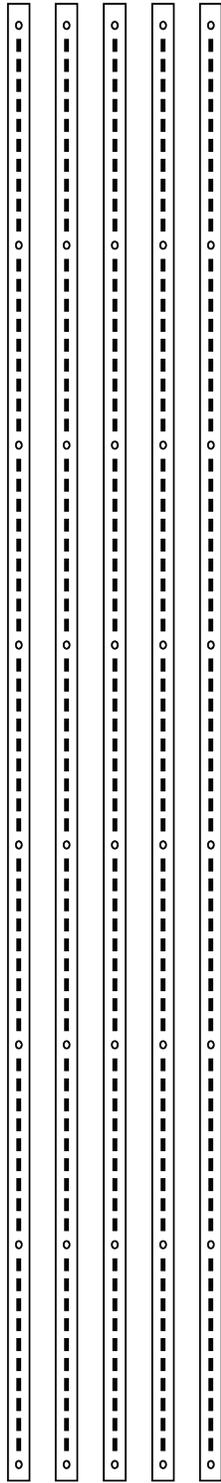


7' SLOTTED
STANDARDS
(5 EACH)




8' DIMENSIONAL
HANGRAILS
(2 EACH)

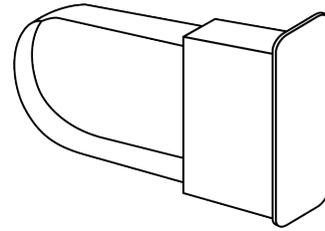


FLUSH END CAPS
(4 EACH)

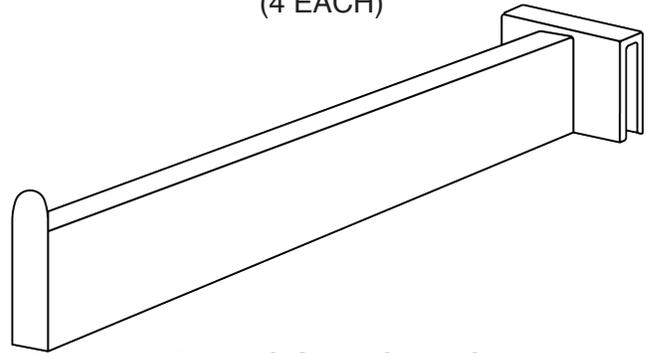

12" DIMENSIONAL STRAIGHT
FACEOUTS (5 EACH)

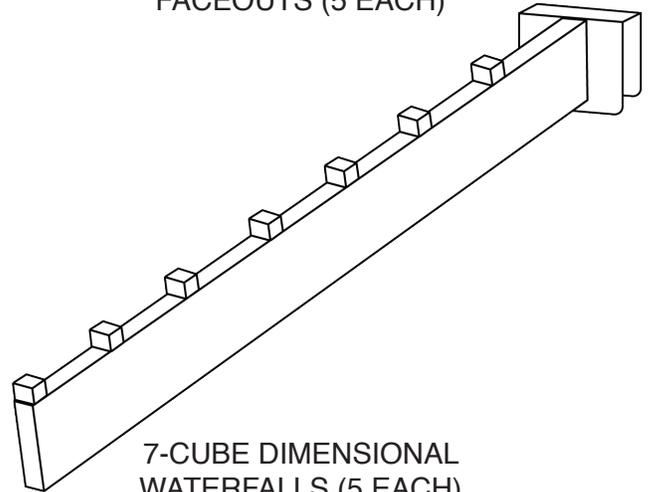

7-CUBE DIMENSIONAL
WATERFALLS (5 EACH)

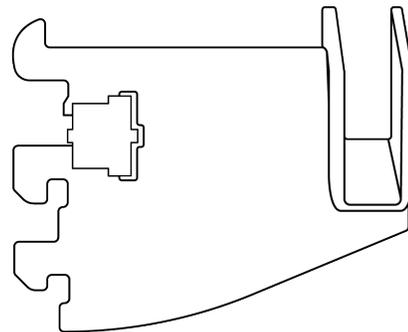


3" DIMENSIONAL HANGRAIL
BRACKETS(10 EACH)

ASSEMBLY INSTRUCTIONS MANUAL


#60879 - SLOTTED STANDARD SYSTEM KIT 4

HARDWARE THAT NEEDS TO BE PURCHASED

THESE PARTS WILL NEED TO BE PURCHASED AT YOUR LOCAL HARDWARE STORE. THE RECOMMENDED HARDWARE FOR THIS INSTALL, (40) #8 COUNTERSINK SCREWS AND (40) 3/16 ANCHORS. IF MOUNTING TO STUDS, USE (40) #8 COUNTERSINK SCREWS AND 3/16 DRILL BIT.

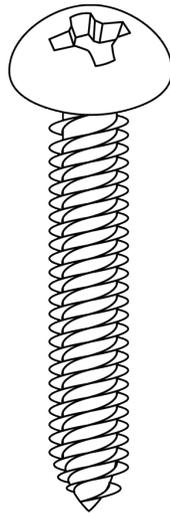

#8 COUNTERSINK
SCREW (40 EACH)

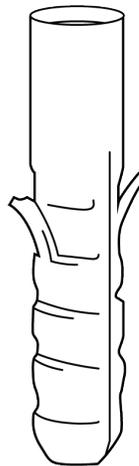

DRYWALL ANCHOR
(40 EACH)

YOU WILL NEED TO SUPPLY YOUR OWN TAPE MEASURE, LEVEL,
DRILL OR SCREWDRIVER FOR INSTALLATION.

ASSEMBLY INSTRUCTIONS MANUAL


#60879 - SLOTTED STANDARD SYSTEM KIT 4

STEP 1-2

PLEASE SEE PAGE 5 FOR SLOTTED STANDARD INSTALL.

STEP 3

PLACE THE DIMENSIONAL HANGRAIL BRACKETS AT DESIRED LOCATIONS. NEXT PLACE THE DIMENSIONAL HANGRAIL INTO THE BRACKETS, AND FINALLY INSERT THE FLUSH ENDCAPS INTO THE HANGRAIL.

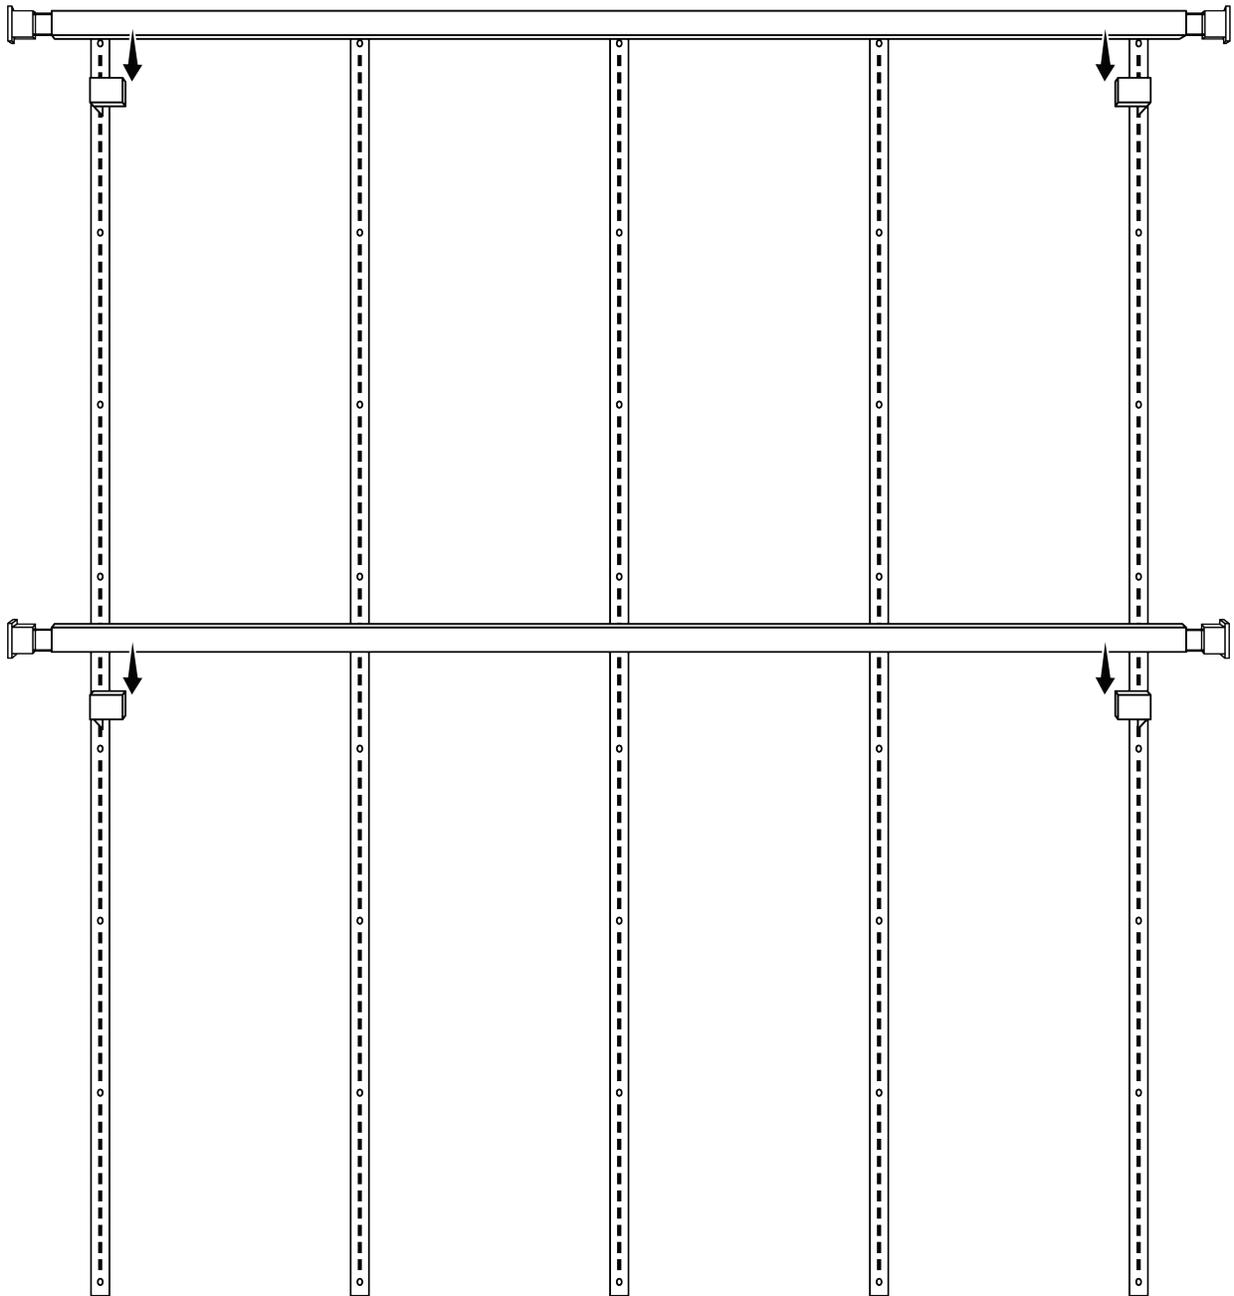

ASSEMBLY INSTRUCTIONS MANUAL

#60879 - SLOTTED STANDARD SYSTEM KIT 4

STEP 4

FINALLY HANG THE FACEOUTS AND WATERFALLS AT DESIRED LOCATIONS.

