



CORNER FILLER ASSEMBLY INSTRUCTION MANUAL

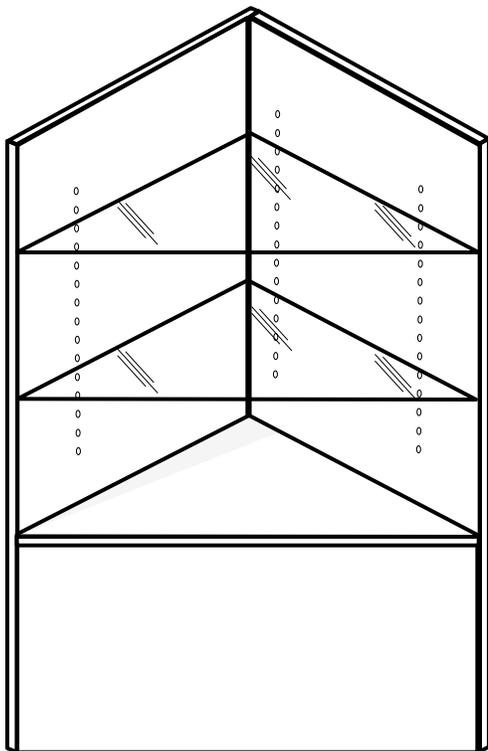

FRONT OF CORNER FILLER

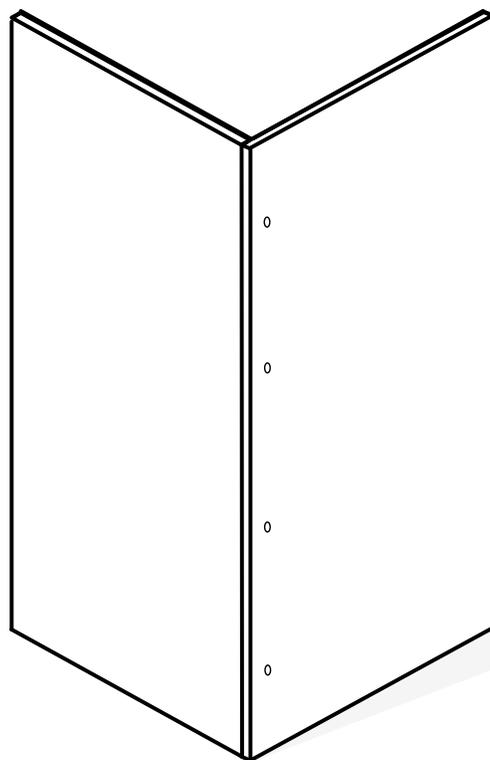

REAR OF CORNER FILLER



STORE SUPPLY WAREHOUSE, LLC

PHONE : 1-800-823-8887


FAX : 1-800-823-0004

WWW.STORESUPPLY.COM


04212008

CORNER FILLER ASSEMBLY INSTRUCTION MANUAL

RECOMMENDED TOOLS FOR ASSEMBLY




PHILLIPS SCREW DRIVER

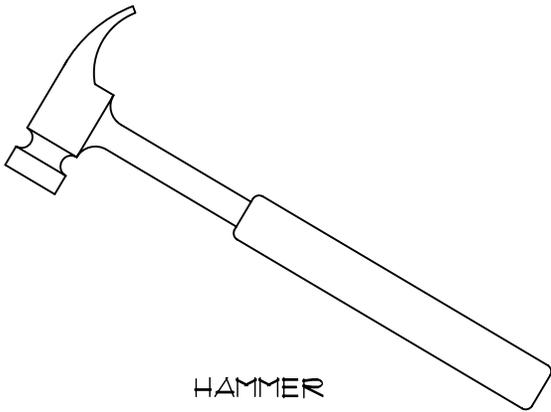

HAMMER

EITHER/OR

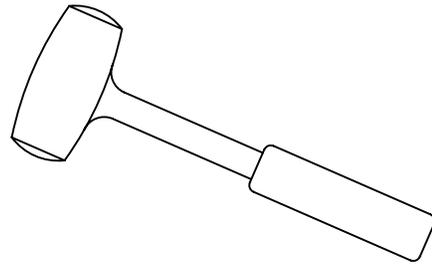

RUBBER Mallet
(PREFERRED)


HARDWARE AND MISC. INCLUDED: (PACKAGED IN A BAG)

NOTE: ALL ITEMS ARE SHOWN ACTUAL SIZE: IF YOU ARE NOT SURE WHICH PART IS CORRECT, THEN PLACE ON TOP OF ITEM BELOW FOR HELP DURING ASSEMBLY.



14 EA. - 1 3/4" L CAM LOCK PINS


NOTE:
THIS ARROW TIP
MUST POINT TO
THE HOLE FOR
CAM LOCK PINS





14 EA. - 3/4" CAM LOCK CONNECTOR NUTS
(CAM LOCK NUTS MAY ALREADY BE INSERTED INTO PANELS)



11 EA. - WOOD DOWELS - 1 1/8" L

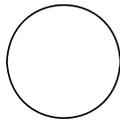

4 EA. - SELF-STICKING
COVERS FOR
MINIFIX CAMS

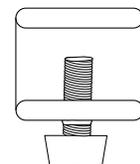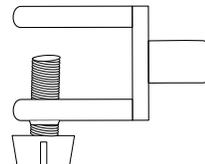


6 EA. - LOCKING SHELF CLIP
WITH SCREW




CORNER FILLER ASSEMBLY INSTRUCTION MANUAL


PARTS INCLUDED INSIDE CARTON:

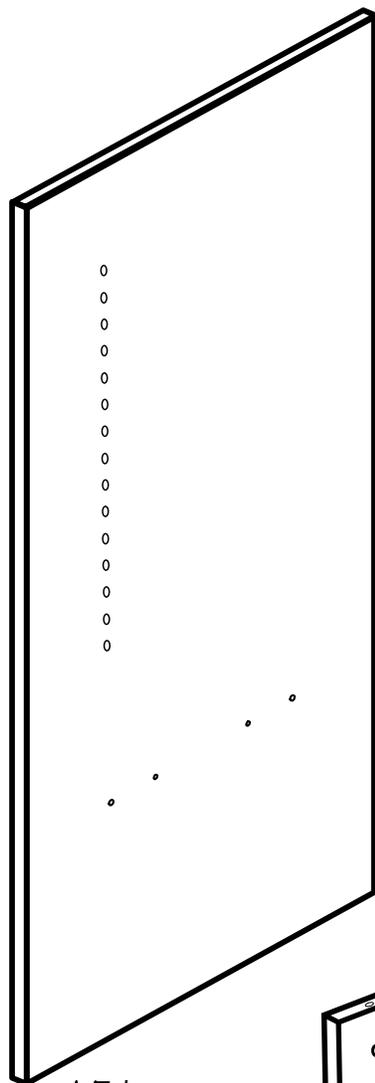


1 EA.
LEFT END PANEL

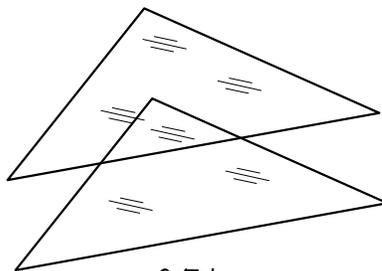


2 EA.
GLASS SHELF

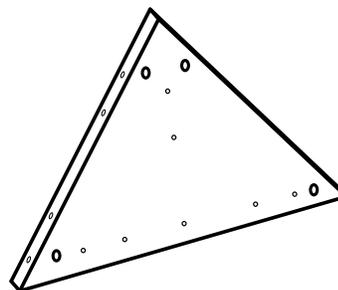


1 EA.
DECK PANEL

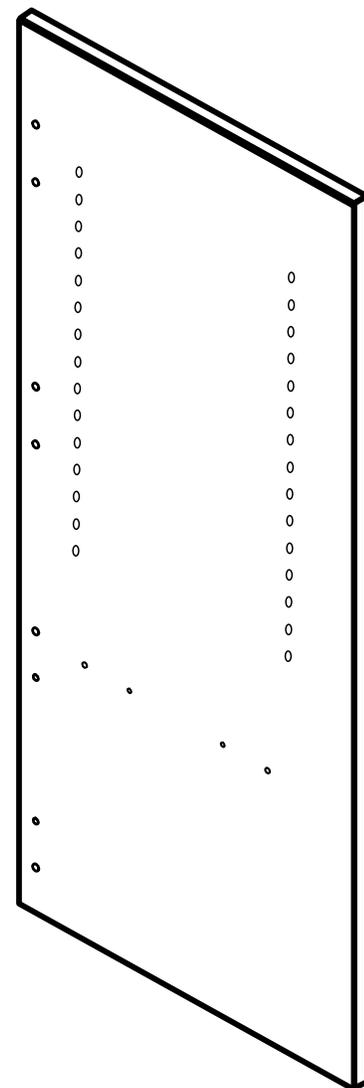

1 EA.
RIGHT END PANEL

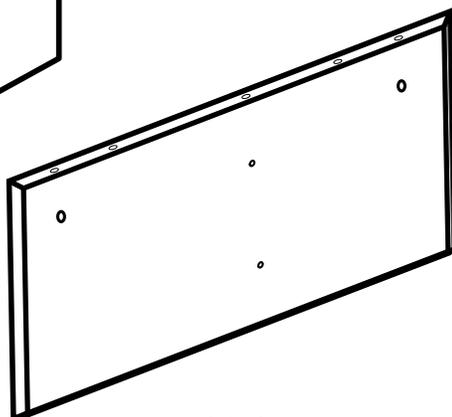

1 EA.
FRONT PANEL

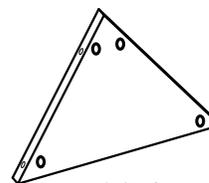

1 EA.
TRIANGLE SUPPORT
PANEL




CORNER FILLER ASSEMBLY INSTRUCTION MANUAL

STEP 1: ASSEMBLY TIME APPROXIMATELY 1/2 HOUR

SCREW ONE CAM LOCK PIN INTO EACH OF THE TWO HOLES IN THE MIDDLE OF THE FRONT PANEL AS INDICATED IN **DIAGRAM "1A"**. PLACE ONE 3/4" CAM LOCK NUT INTO EACH OF THE TWO HOLES IN THE FRONT PANEL AND EACH OF THE FOUR HOLES IN THE TRIANGLE SUPPORT PANEL AS INDICATED IN **DIAGRAM "1A"** MAKING SURE THE ARROWS ON THE CAMS LOCK NUTS ARE FACING OUTWARD. LINE UP THE HOLES ON THE RIGHT SIDE OF THE TRIANGLE SUPPORT PANEL WITH THE CAM LOCK PINS ON THE FRONT PANEL. TIGHTEN THE CAM LOCK NUTS WITH A CLOCKWISE TURN AS INDICATED IN **DIAGRAM "1C"** UNTIL PANELS ARE SECURE.

DIAGRAM "1A"

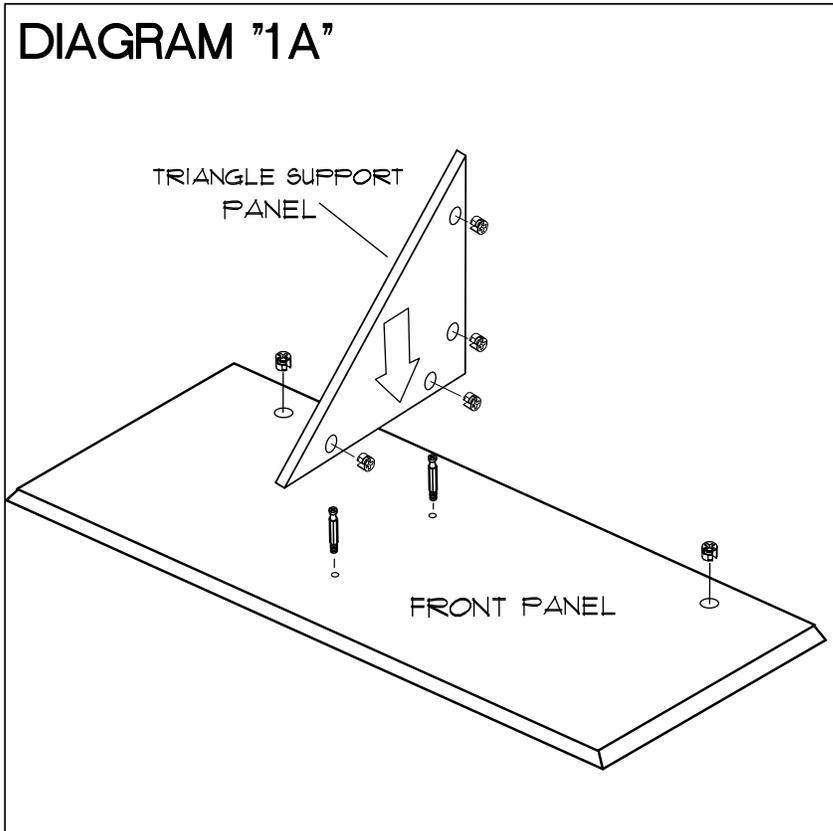

MAKE SURE THAT CAM LOCK PINS AND WOOD DOWELS ARE IN-LINE BEFORE PUSHING DECK PANEL ON END PANEL.


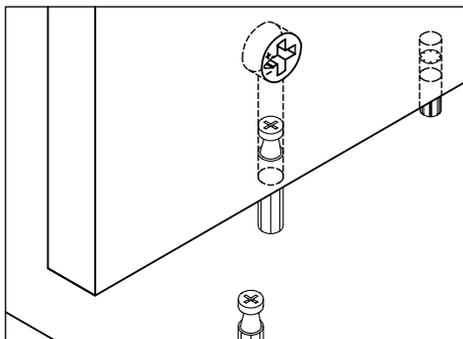


DIAGRAM "1B"

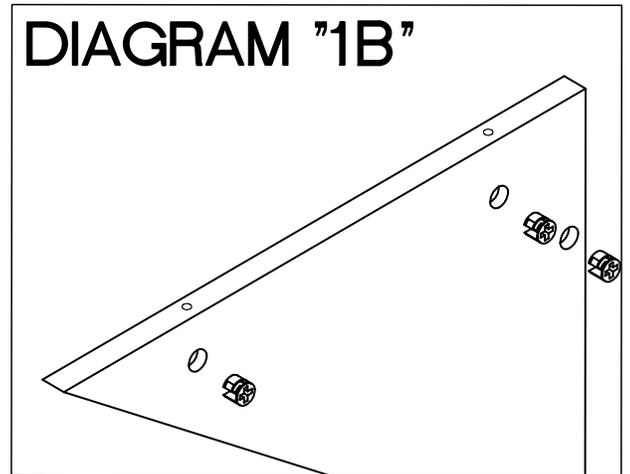

PLEASE NOTE

THE CAM LOCK NUTS MUST BE POINTING OUT WITH THE ARROW TIP TOWARD THE HOLE ON THE END EDGE SEE BELOW

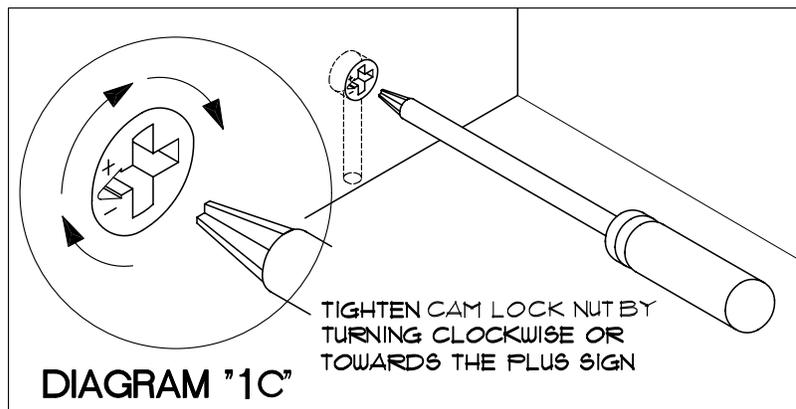
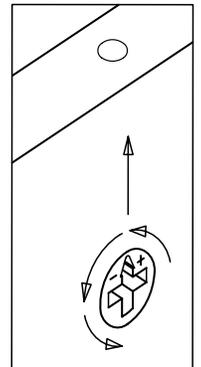


DIAGRAM "1C"

TIGHTEN CAM LOCK NUT BY TURNING CLOCKWISE OR TOWARDS THE PLUS SIGN

CORNER FILLER ASSEMBLY INSTRUCTION MANUAL

STEP 2 :

PLACE ONE 3/4" CAM LOCK CONNECTOR NUT INTO EACH OF THE FOUR(4) HOLES IN THE DECK PANEL. SCREW ONE CAM LOCK PIN INTO EACH OF THE FOUR(4) HOLES AND GENTLY TAP ONE WOODEN DOWEL INTO EACH OF THE THREE(3) HOLES INDICATED IN **DIAGRAM "2A"**. LINE UP THE CAM LOCK PINS AND WOODEN DOWELS WITH THE HOLES ON THE TOP OF THE FRONT PANEL AND TRIANGLE SUPPORT PANEL AND GENTLY TAP INTO PLACE AS SHOWN IN DIAGRAM "2B". TIGHTEN THE FOUR CAM LOCK NUTS ON THE FRONT PANEL AND THE TRIANGLE SUPPORT PANEL TO SECURE.

DIAGRAM "2A"




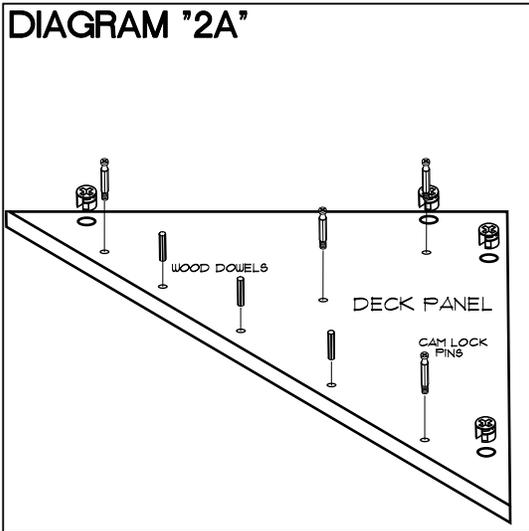


DIAGRAM "2B"

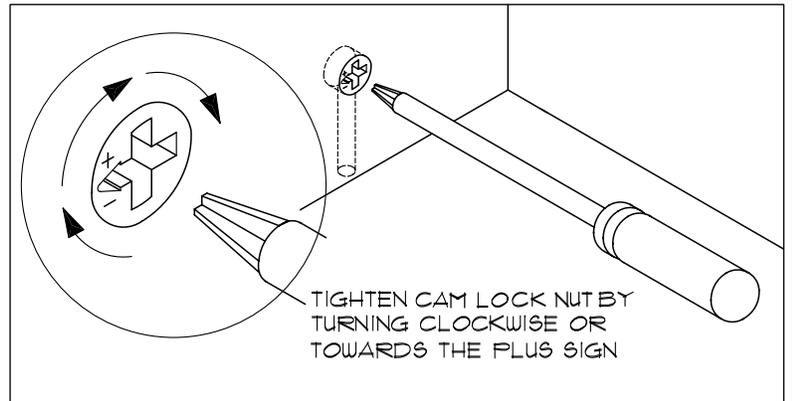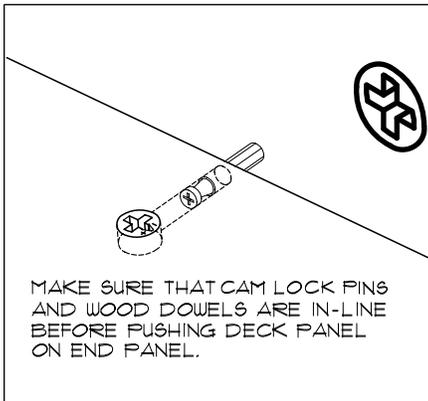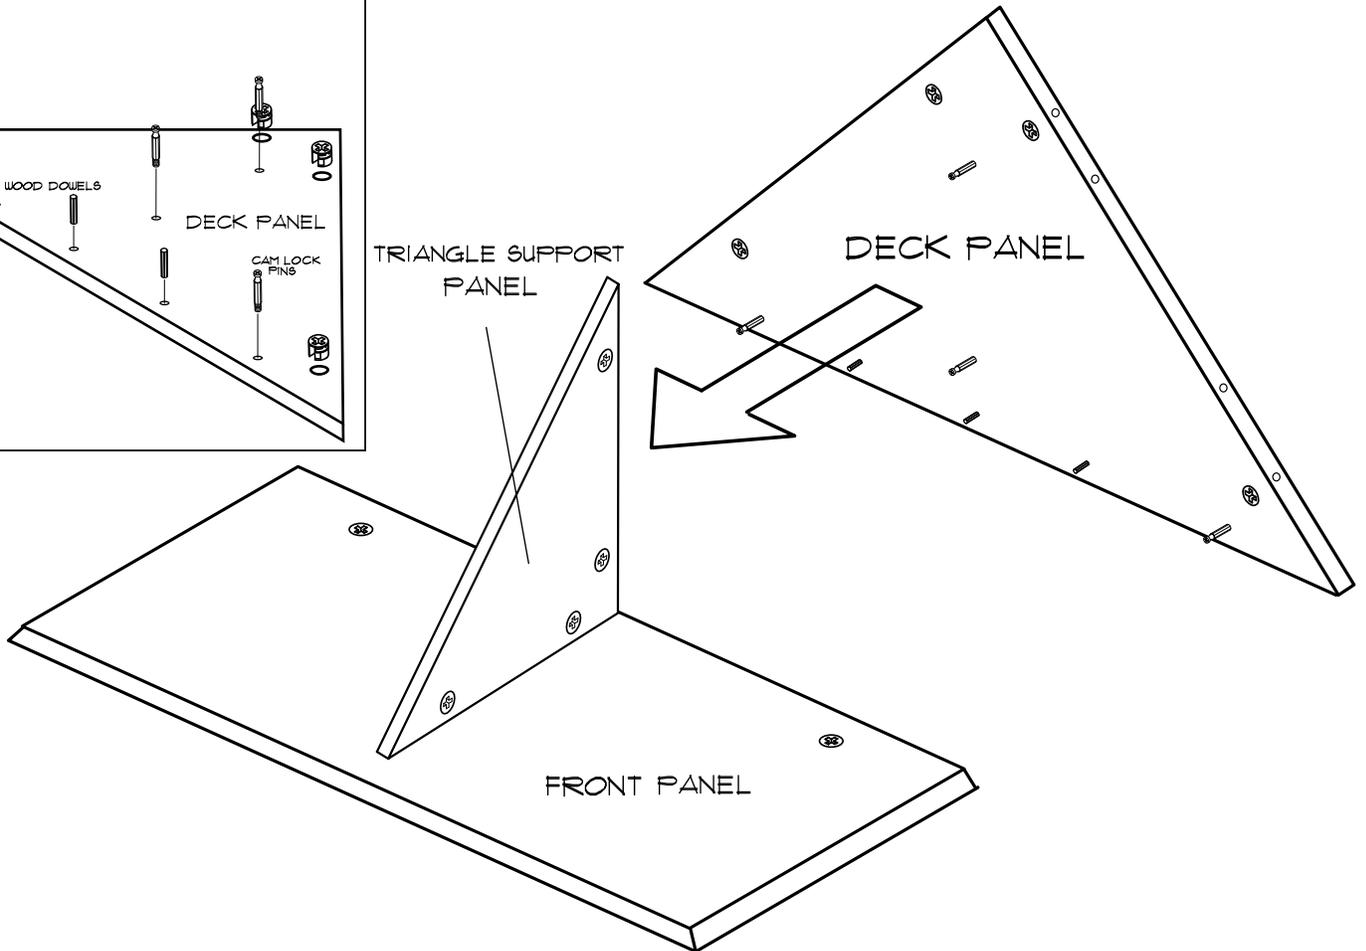

CORNER FILLER ASSEMBLY INSTRUCTION MANUAL

STEP 3 :

SCREW TWO(2) CAM LOCK PINS AND TWO(2) WOODEN DOWELS INTO EACH OF THE HOLES IN THE LEFT END PANEL AS INDICATED IN **DIAGRAM "3A"**. LOWER THE ASSEMBLED BASE FROM STEP 2 ON TO THE LEFT END PANEL AS SHOWN IN **DIAGRAM "3B"** MAKING SURE THAT THE CAM LOCK PINS AND WOODEN DOWELS LINE UP WITH THE HOLES AND CAM LOCK NUTS IN THE LEFT SIDE OF THE DECK PANEL. GENTLY TAP THE PANELS INTO PLACE AND TIGHTEN THE CAM LOCK NUTS TO SECURE.

DIAGRAM "3A"



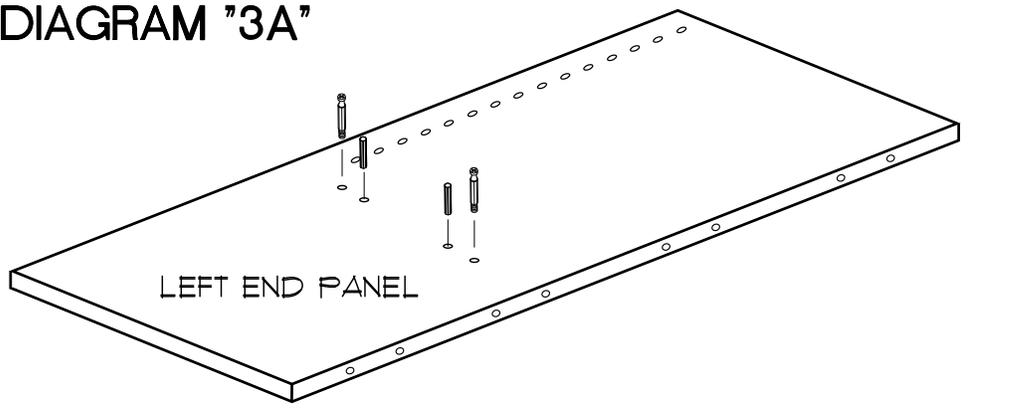


DIAGRAM "3B"

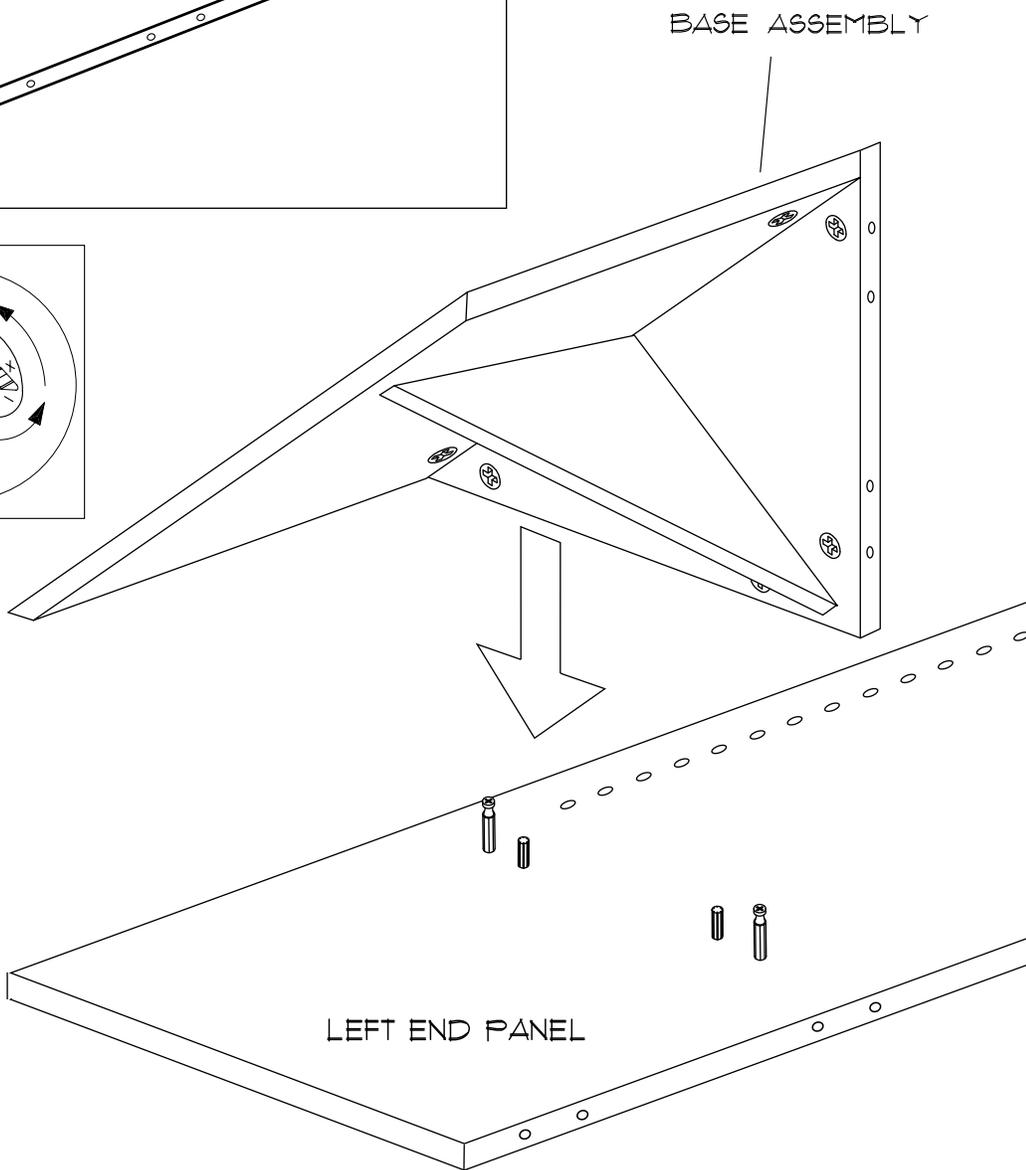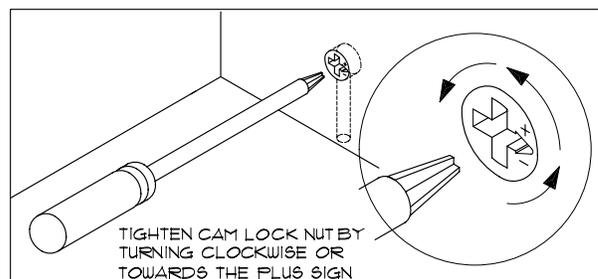

CORNER FILLER ASSEMBLY INSTRUCTION MANUAL

STEP 4 :

INSERT THE SIX(6) REMAINING CAM LOCK PINS AND WOODEN DOWELS INTO THE HOLES IN THE RIGHT SIDE PANEL AS INDICATED IN **DIAGRAM "4A"**. LINE UP THE CAM LOCK PINS AND WOODEN DOWELS IN THE RIGHT SIDE PANEL WITH THE HOLES IN THE LEFT SIDE PANEL AND BASE ASSEMBLY AS INDICATED IN **DIAGRAM "4B"**. GENTLY TAP THE PANEL INTO PLACE AND TIGHTEN ALL EIGHT OF THE REMAINING 3/4" CAM LOCK NUTS INDICATED IN **DIAGRAM "4C"** TO SECURE.

DIAGRAM "4A"



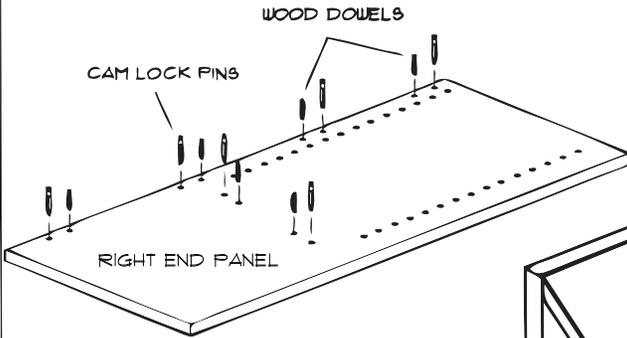


DIAGRAM "4B"

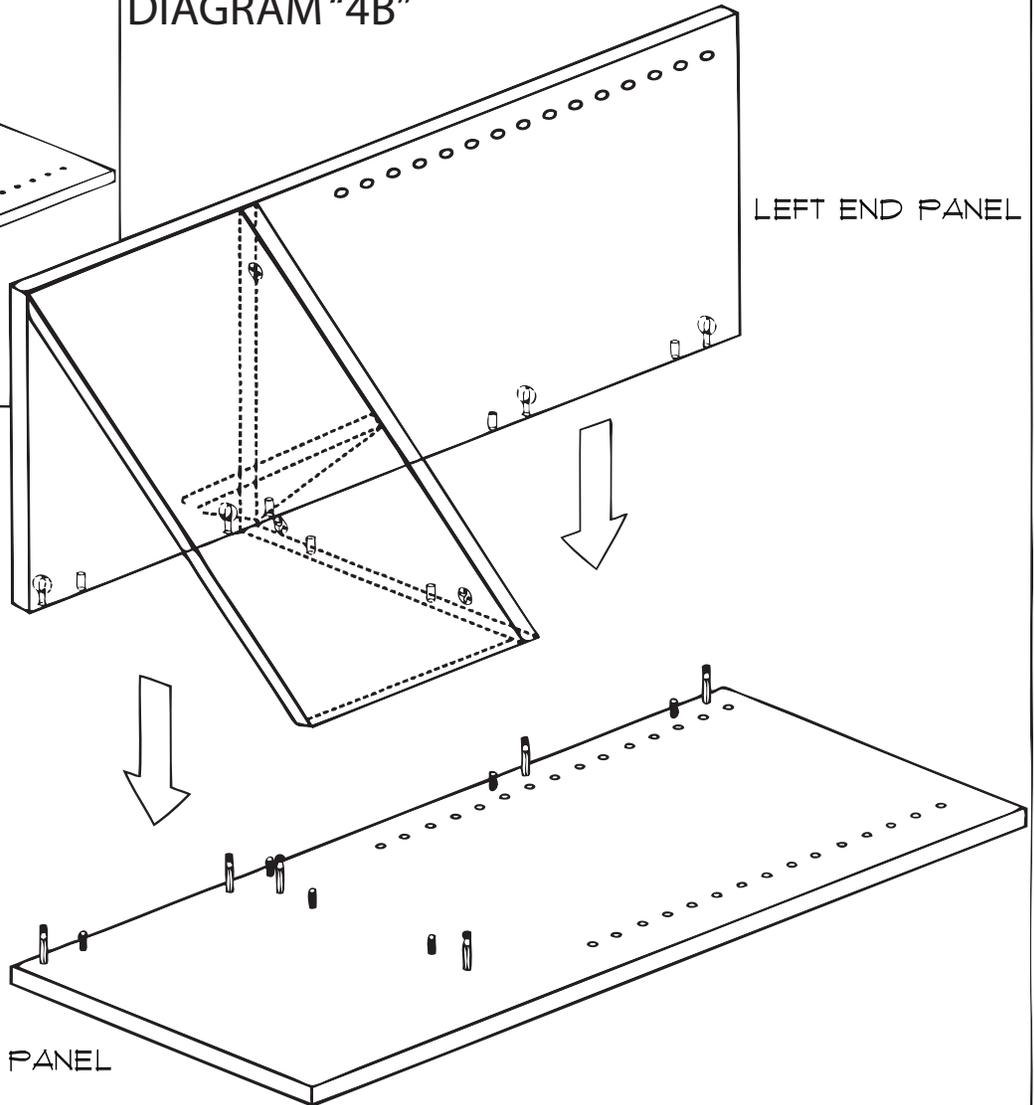

MAKE SURE THAT CAM LOCK PINS AND WOOD DOWELS ARE IN-LINE BEFORE PUSHING DECK PANEL ON END PANEL.

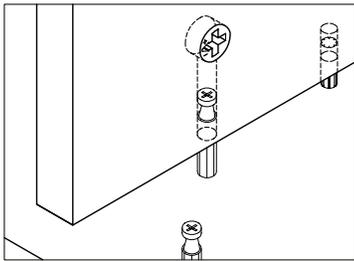

RIGHT END PANEL


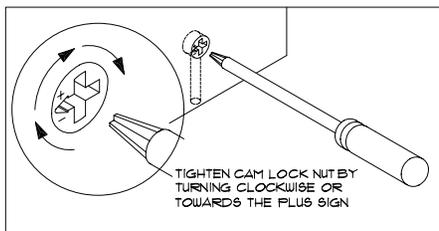


DIAGRAM "4C"

MAKE SURE TO SCREW ALL EIGHT CAM LOCK NUTS CLOCKWISE TO LOCK END PANEL INTO PLACE

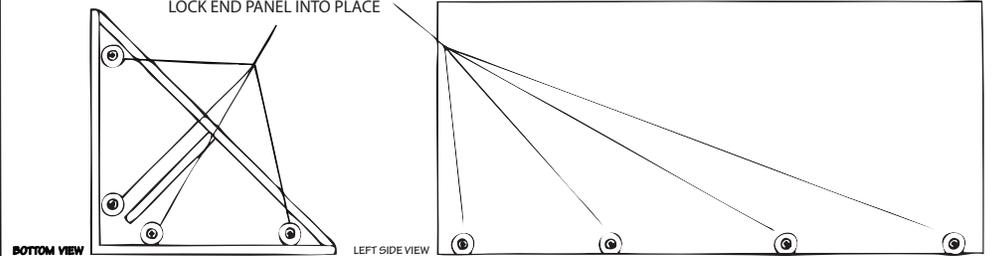

CORNER FILLER ASSEMBLY INSTRUCTION MANUAL

STEP 5 :

TURN THE UNIT UPRIGHT. INSERT THREE OF THE LOCKING SHELF CLIPS AT THE DESIRED HEIGHT. SLIDE ONE OF THE GLASS SHELVES INTO THE CLIPS MOVING FROM LEFT TO RIGHT. ONCE THE SHELF IS IN PLACE, TIGHTEN THE SCREW ON THE BOTTOM OF EACH OF THE SHELF CLIPS TO SECURE. REPEAT FOR THE SECOND SHELF AND YOUR UNIT IS COMPLETE.

DIAGRAM "5A"

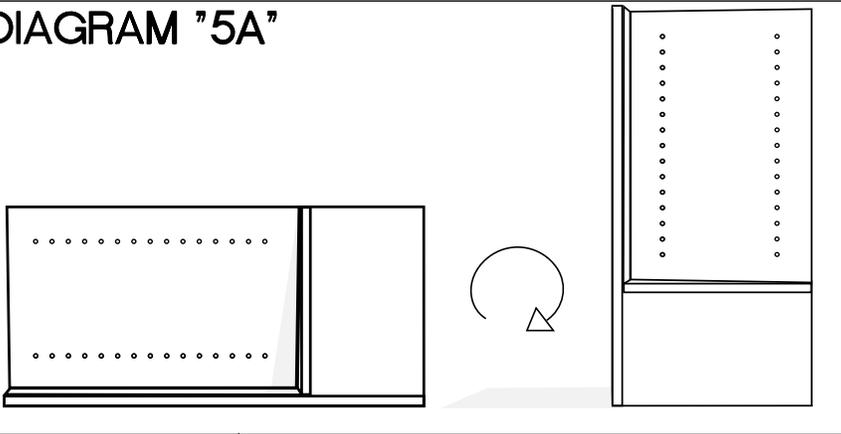


DIAGRAM "5B"

