



Assembly Instruction Manual

ledgetop counter

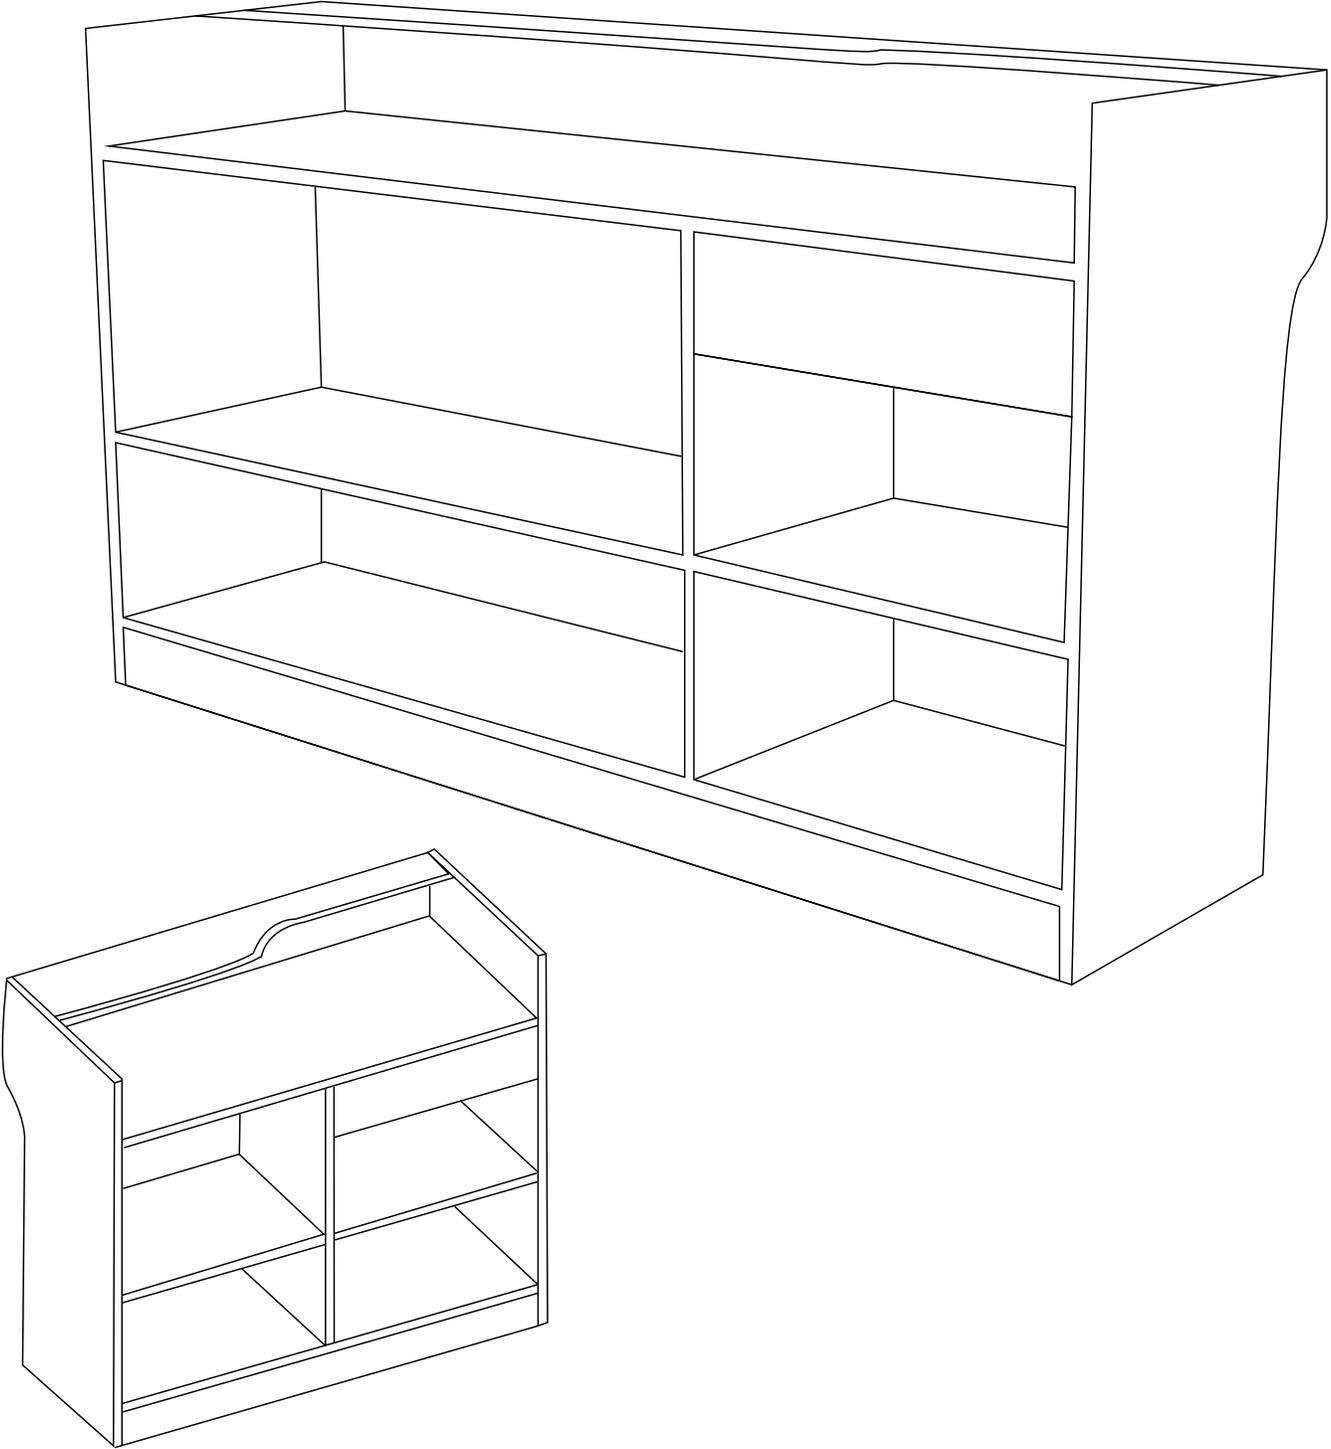


Assembly Instruction Manual ledgetop counter

Recommended Tools for Assembly

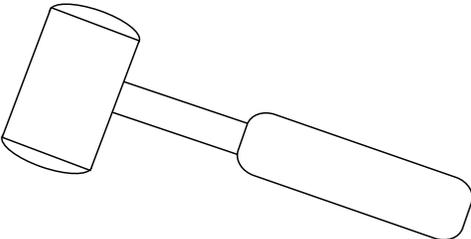


Mallet



Phillips Screw Driver

Parts Included:



Cam Lock Screws (63)




1.25in Screws (5)



Round Stickers (19)



Camlock Nut (pre-installed already (63))

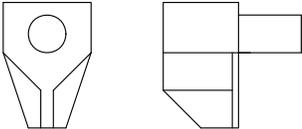


Shelf Clip (9)




White Round Stickers (13)

Assembly Instruction Manual Lidgetop Counter

Parts Included:

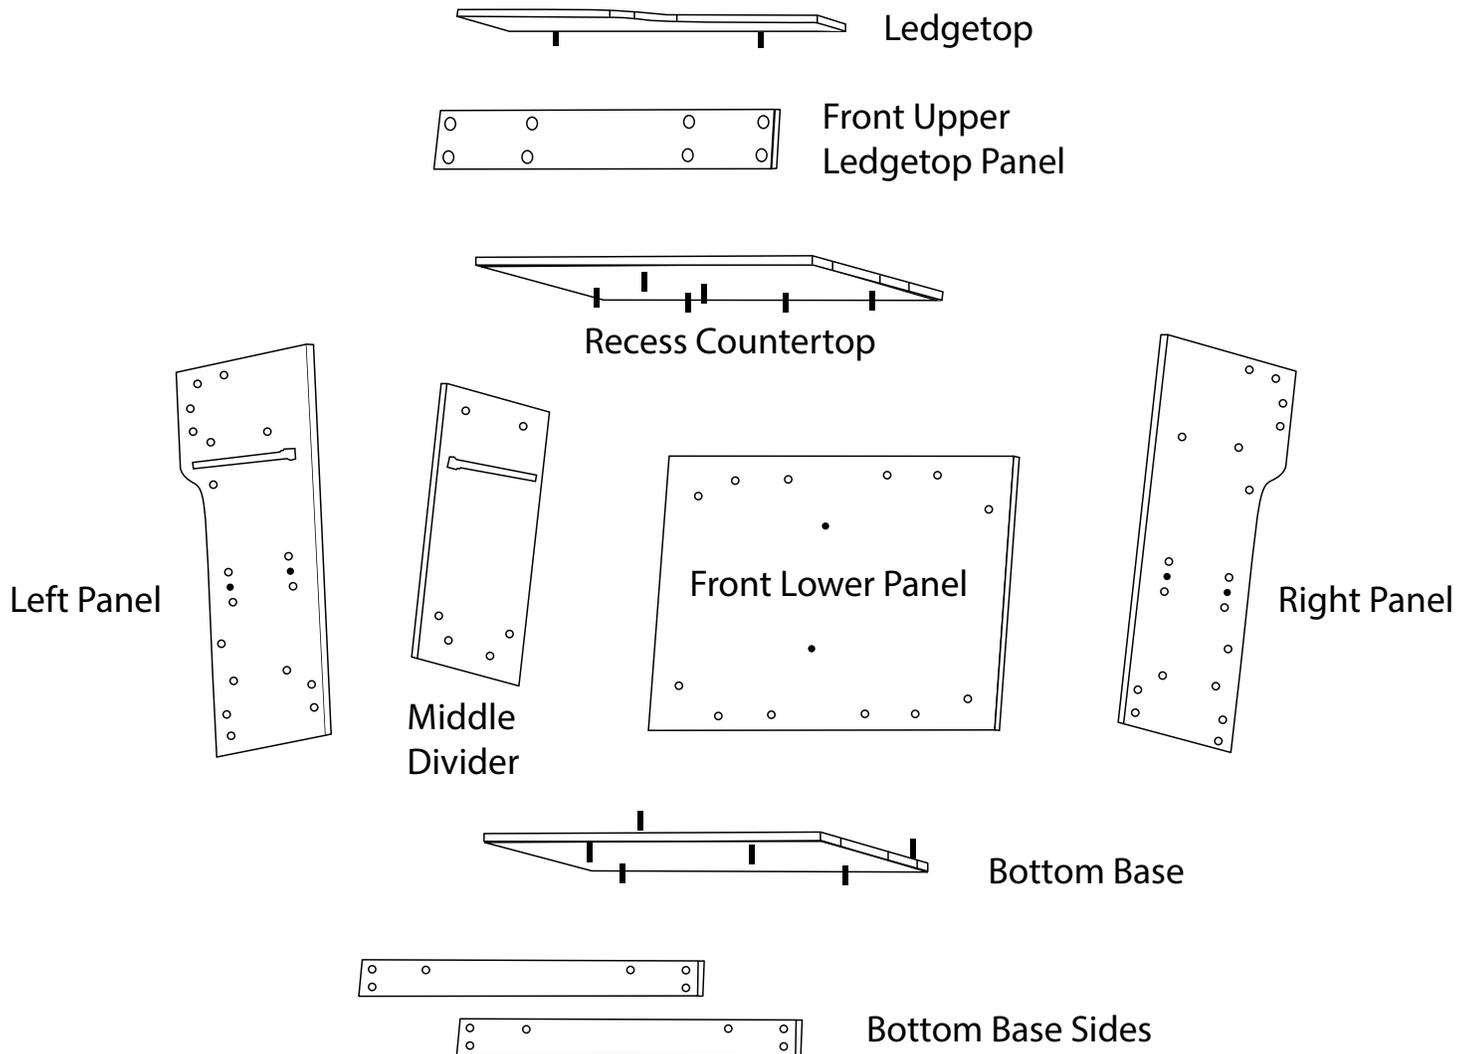

Drawer Parts Included:

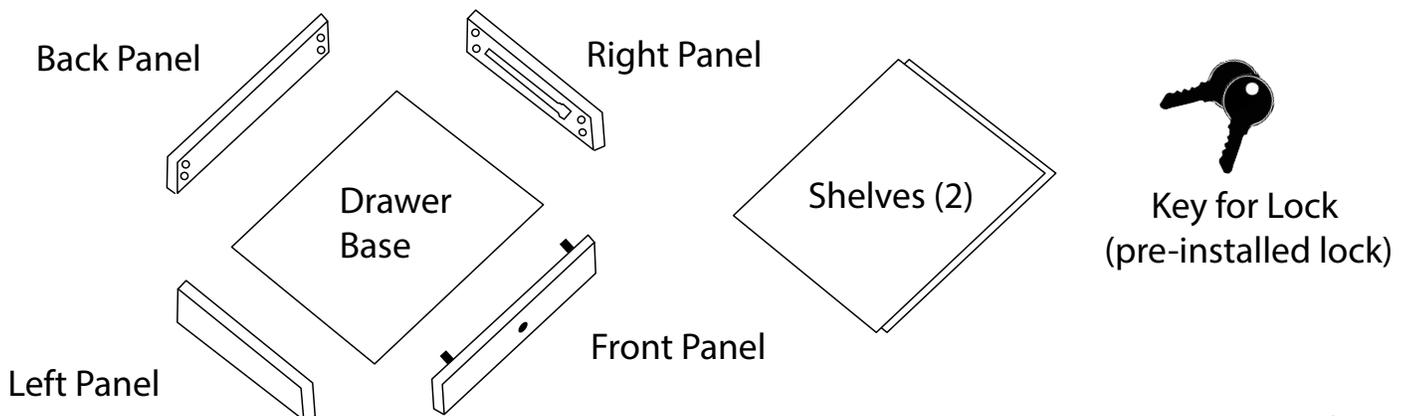

Ledgetop Counter Assembly Instruction Manual

Step 1

Screw cam lock pins in small holes of bottom base. Set bottom base sides on top of bottom base camlock pins. Make sure arrows on cam lock nuts are facing to the right. Then tighten with screw driver. Note: Hardware on bottom base sides should point inward. (See Diagrams)

Diagram 1A

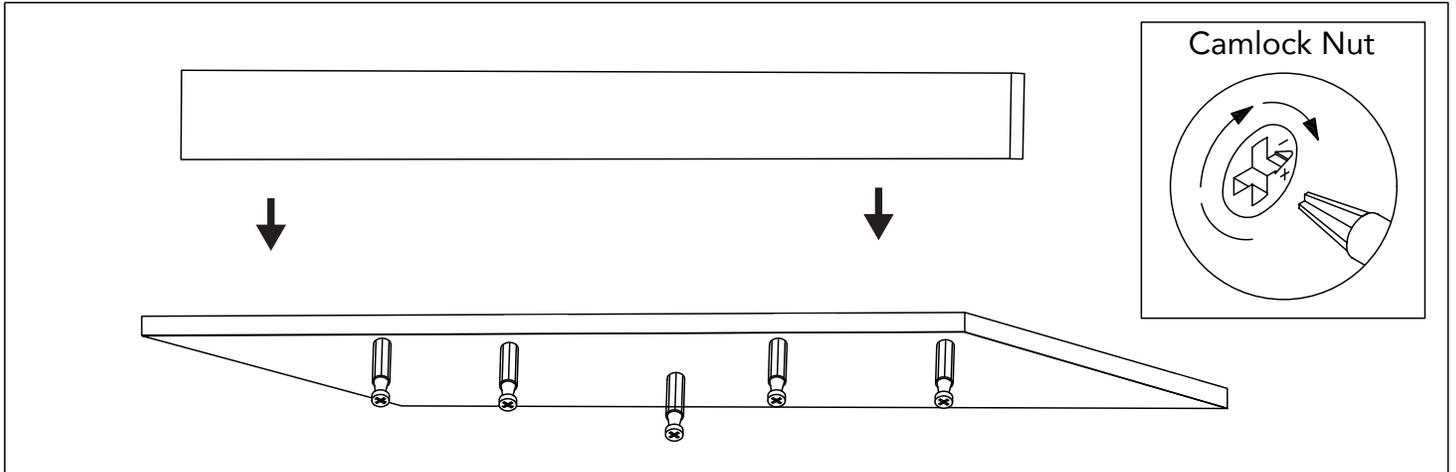


Diagram 1B


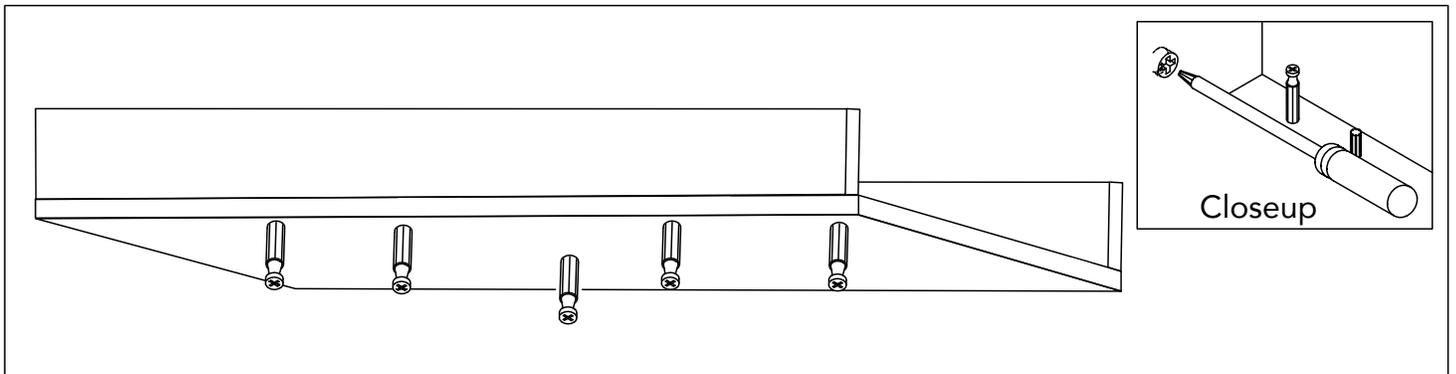


Diagram 1C

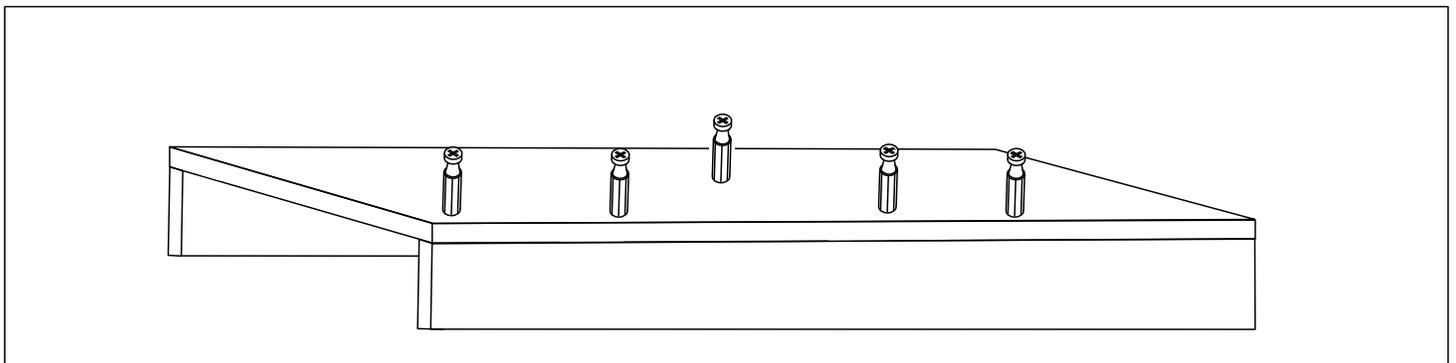

Ledgetop Counter Assembly Instruction Manual

Step 2

Screw cam lock pins in small holes of the front lower panel. Place middle divider on top of camlock pin holes. Make sure arrows on cam lock nuts are facing to the right. Then tighten with screw driver. (See Diagrams)

Diagram 2A


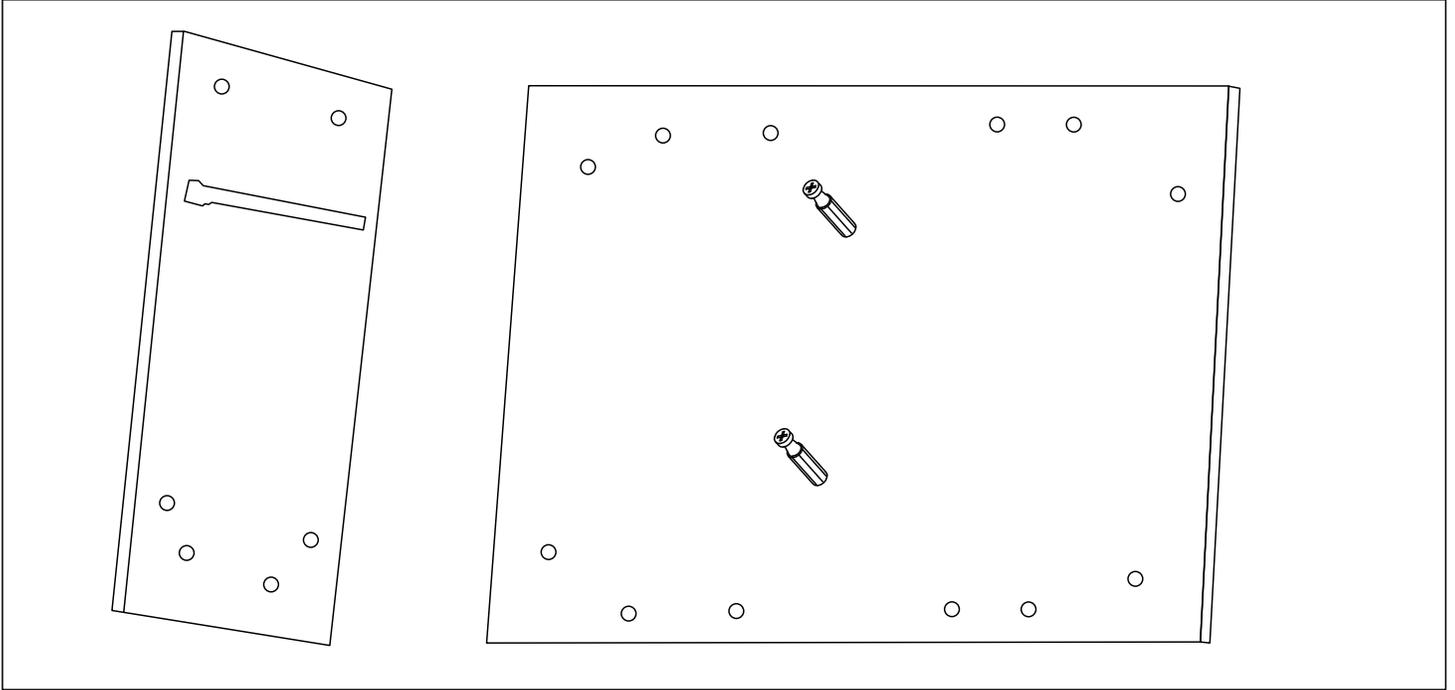


Diagram 2B

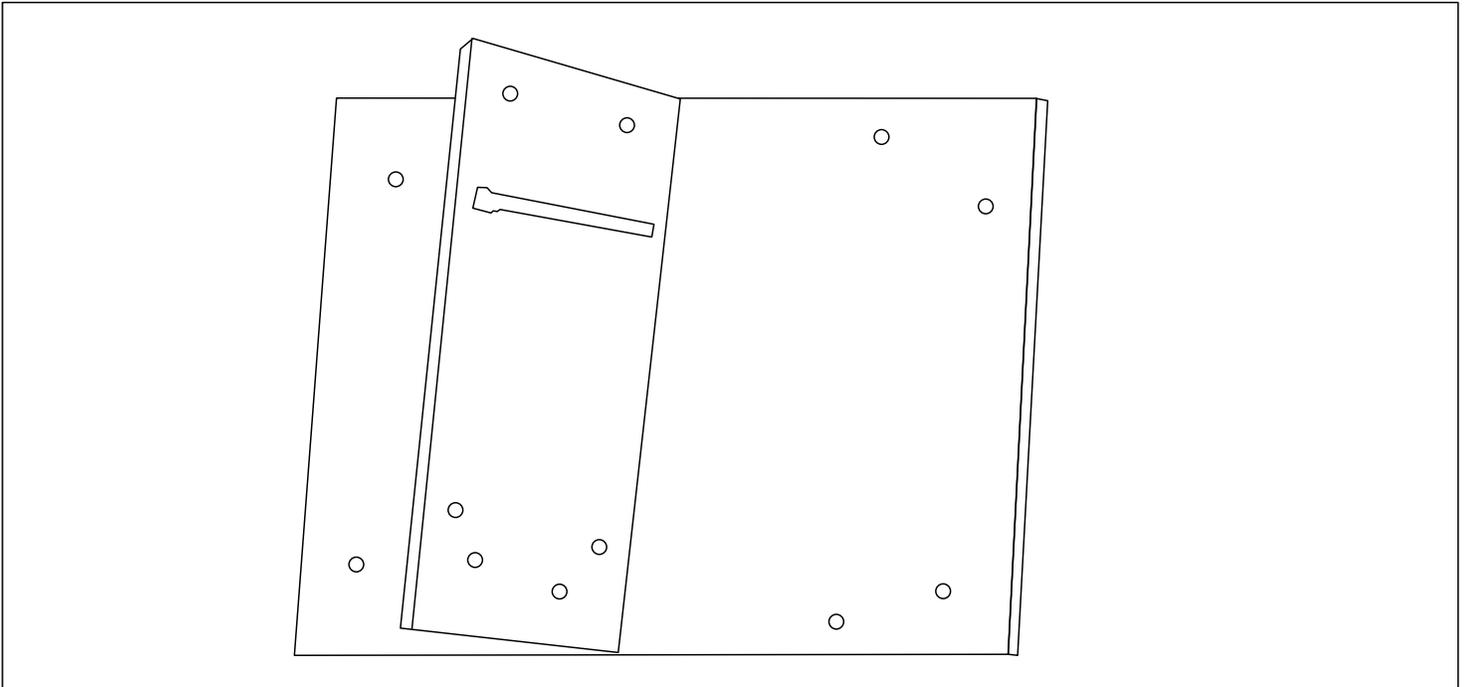


Ledgetop Counter Assembly Instruction Manual

Step 3

Line up front lower panel and middle divider on top of the bottom base camlock pins. Make sure arrows on cam lock nuts are facing to the right. Then tighten with screw driver. (See Diagram 3A)

Diagram 3A

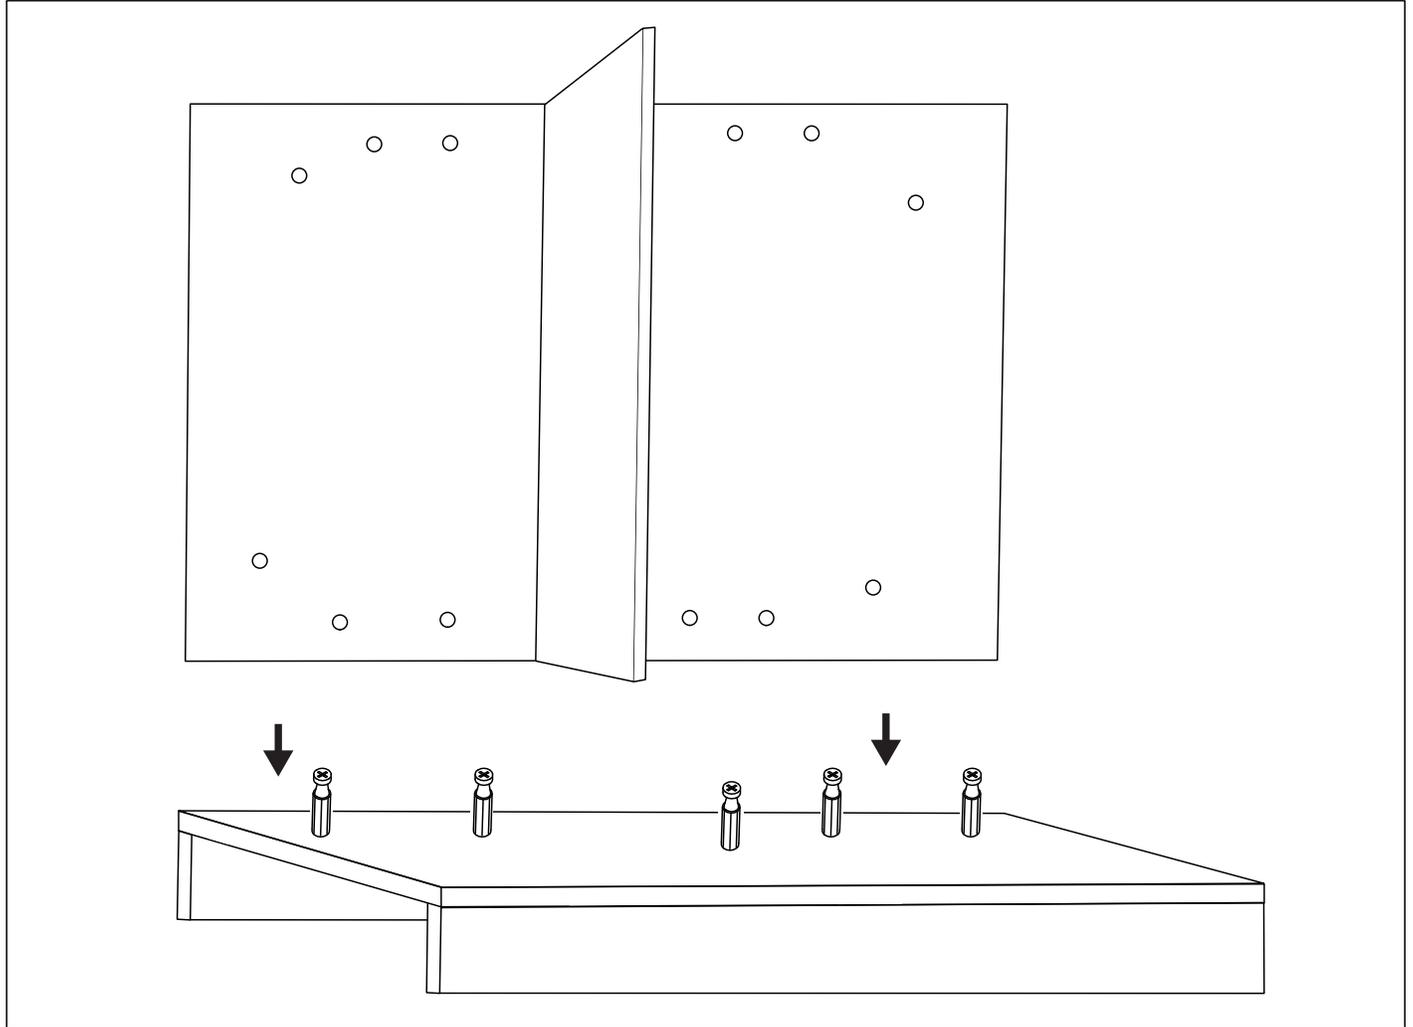


Ledgetop Counter Assembly Instruction Manual

Step 4

Place camlock pins into the recessed countertop. Then place recessed countertop on top of the rest of the unit. Then tighten with screw driver. (See Diagram 4A)

Diagram 4A

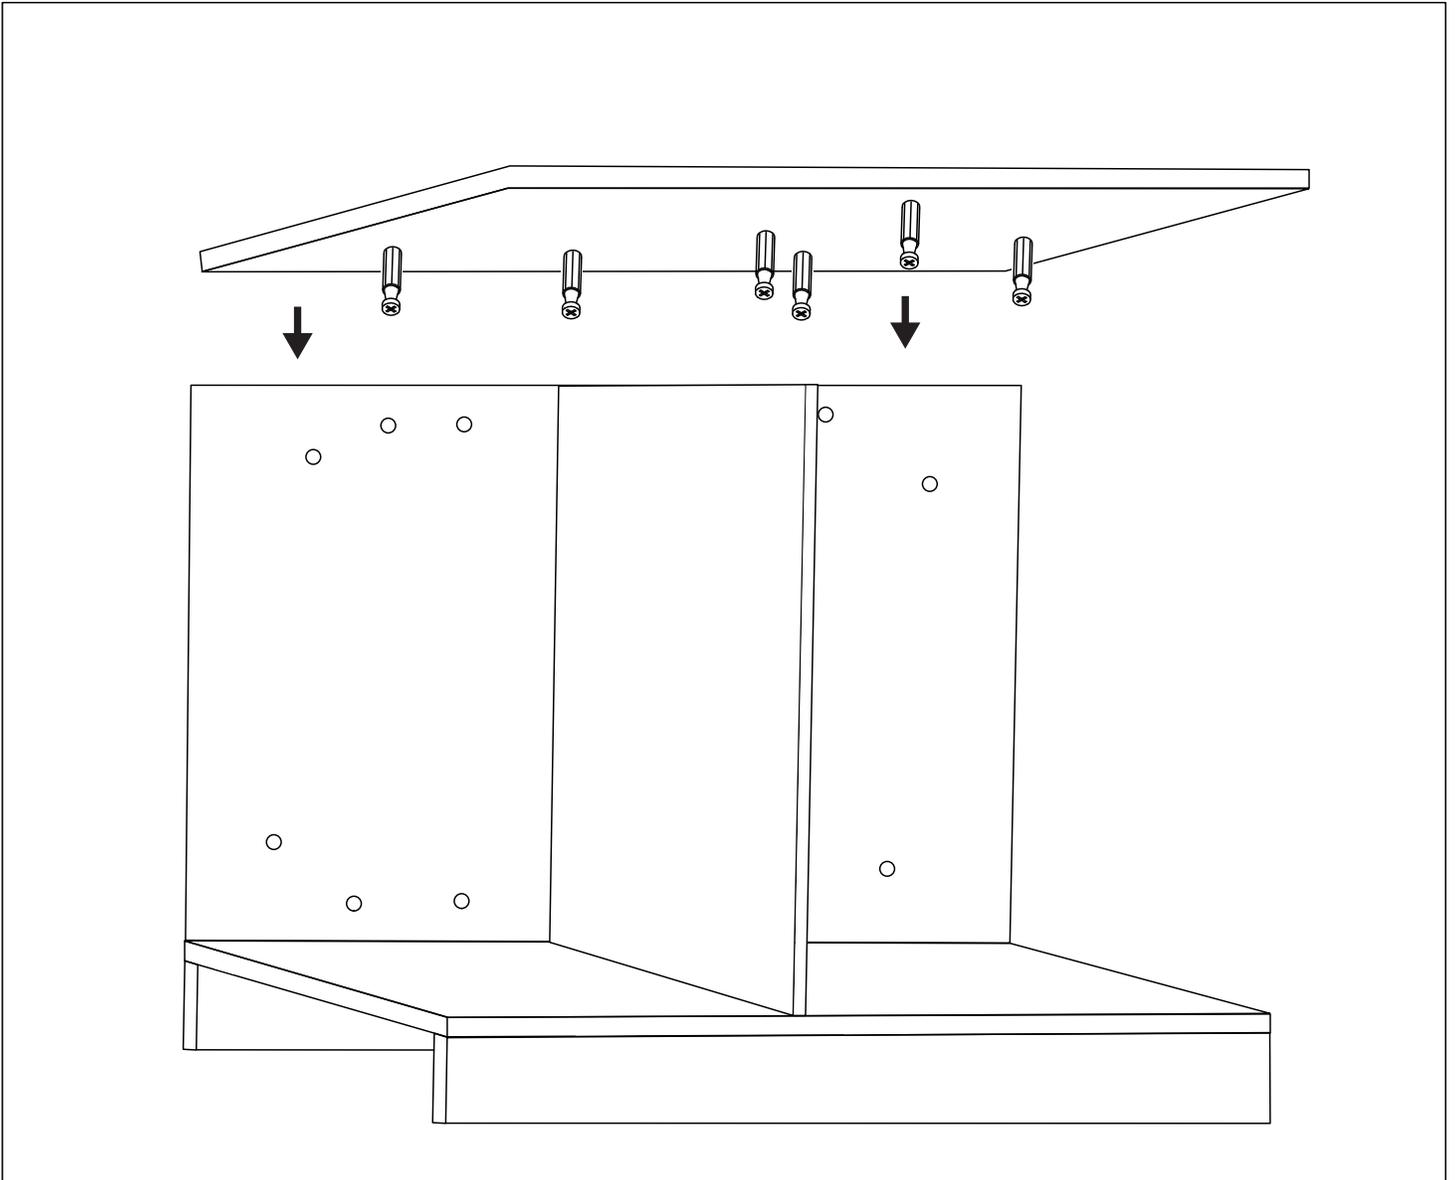


Ledgetop Counter Assembly Instruction Manual

Step 5

Place camlock pins on other side of the recessed countertop. Set front upper ledgetop panel on top of recessed countertop camlock pins. Then tighten with screw driver. (See Diagram 5A)

Diagram 5A

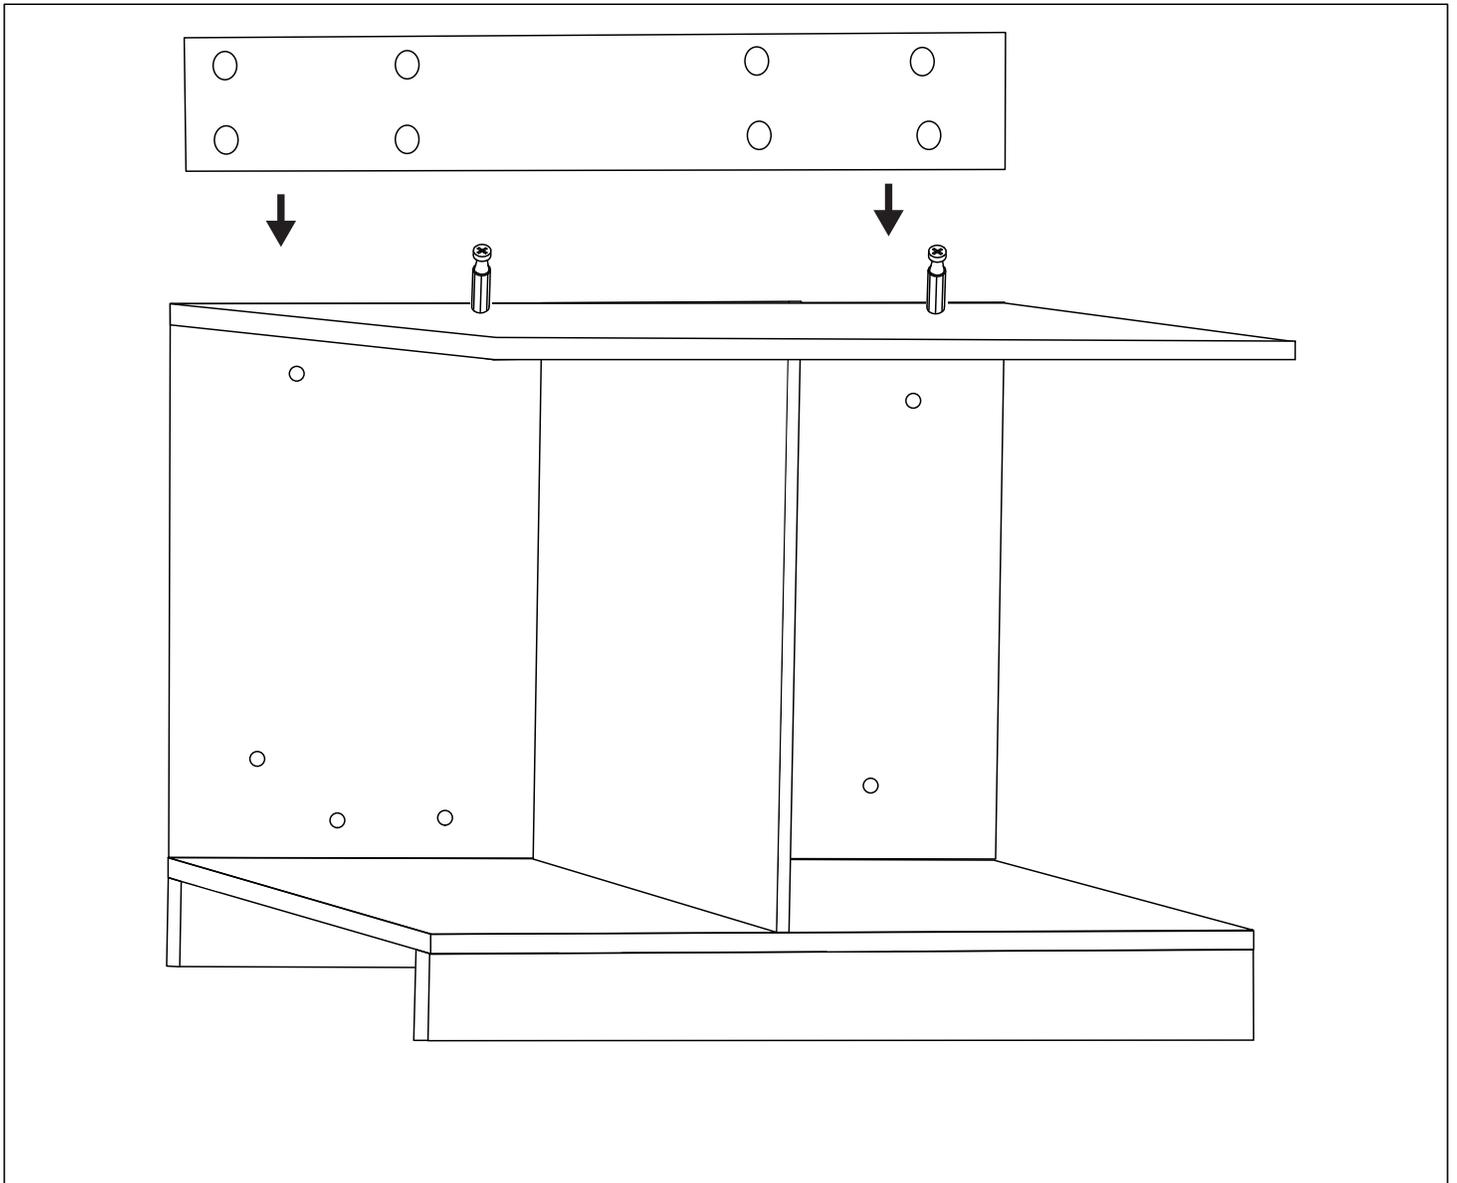

Ledgetop Counter Assembly Instruction Manual

Step 6

Place cam lock pins on ledgetop. Then set ledgetop on top of the recessed countertop. Then tighten with screw driver. (See Diagrams)

Diagram 6A


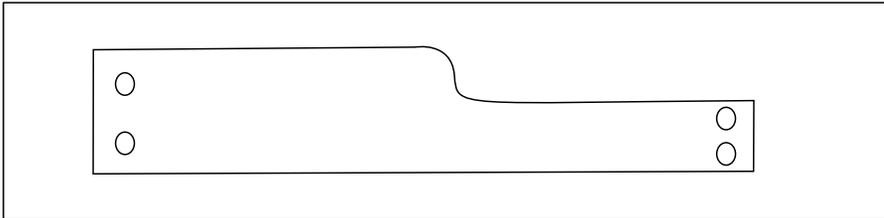


Diagram 6B

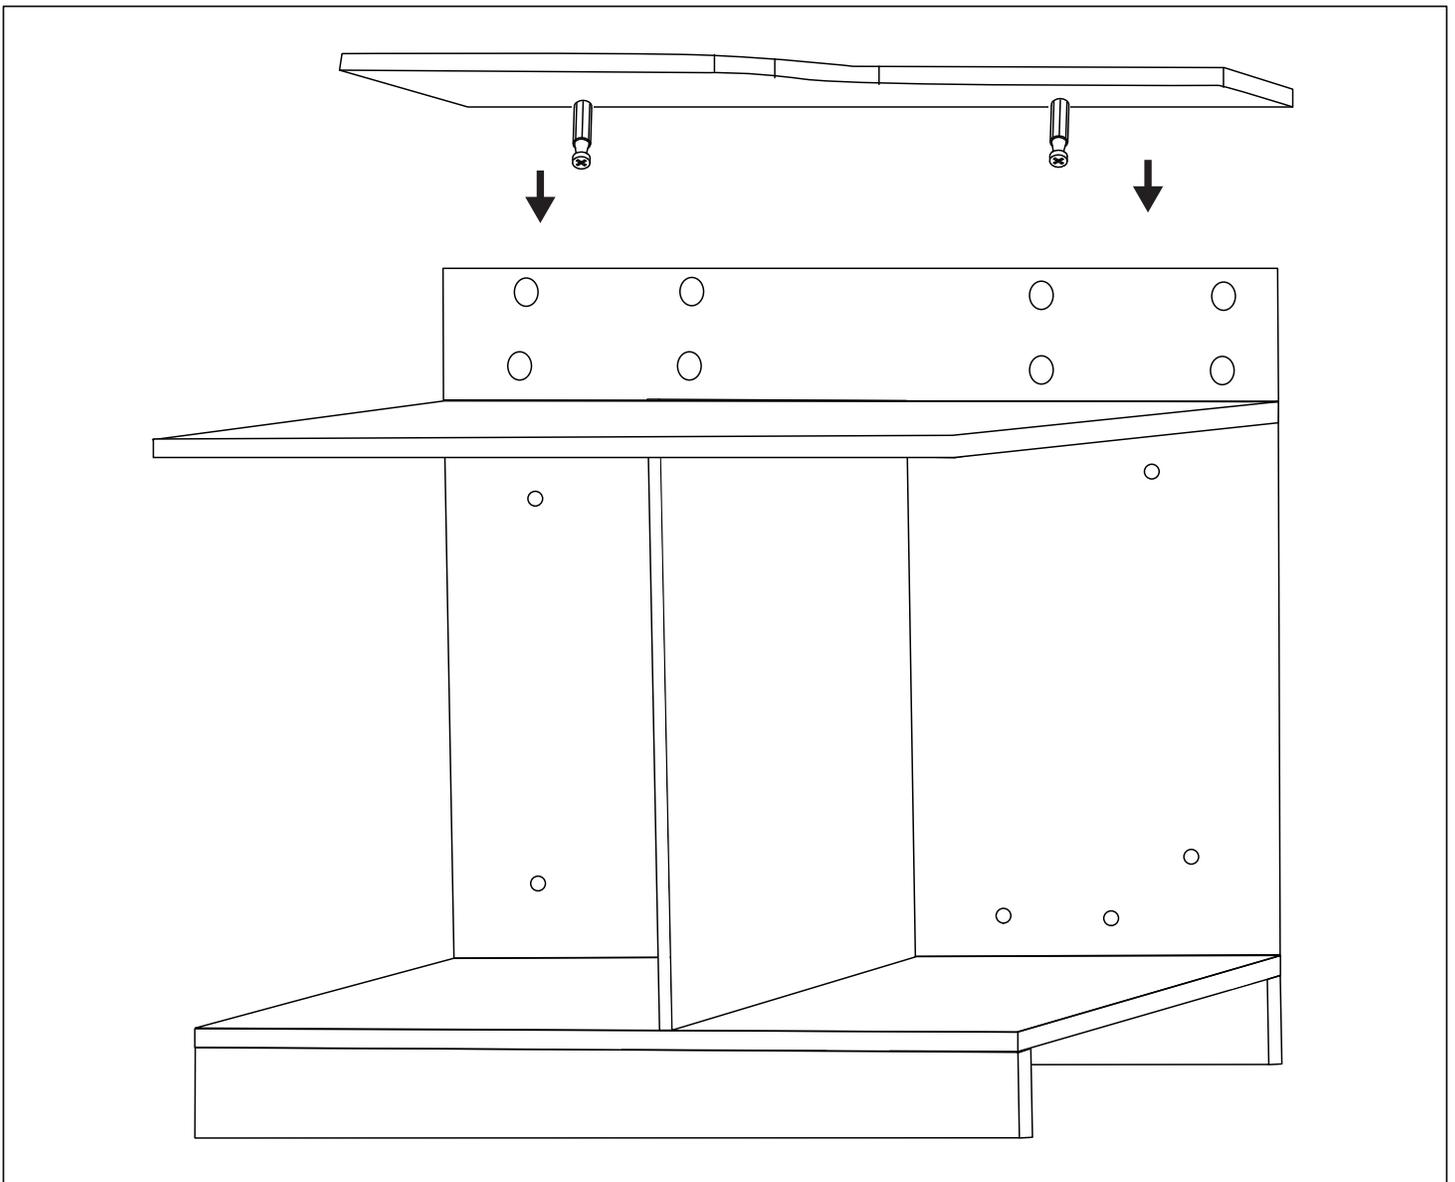

Ledgetop Counter Assembly Instruction Manual

Step 7

Place camlock pins on right and left panels. Attach panels to the rest of the unit. Then tighten with screw driver. (See Diagrams)

Diagram 7A


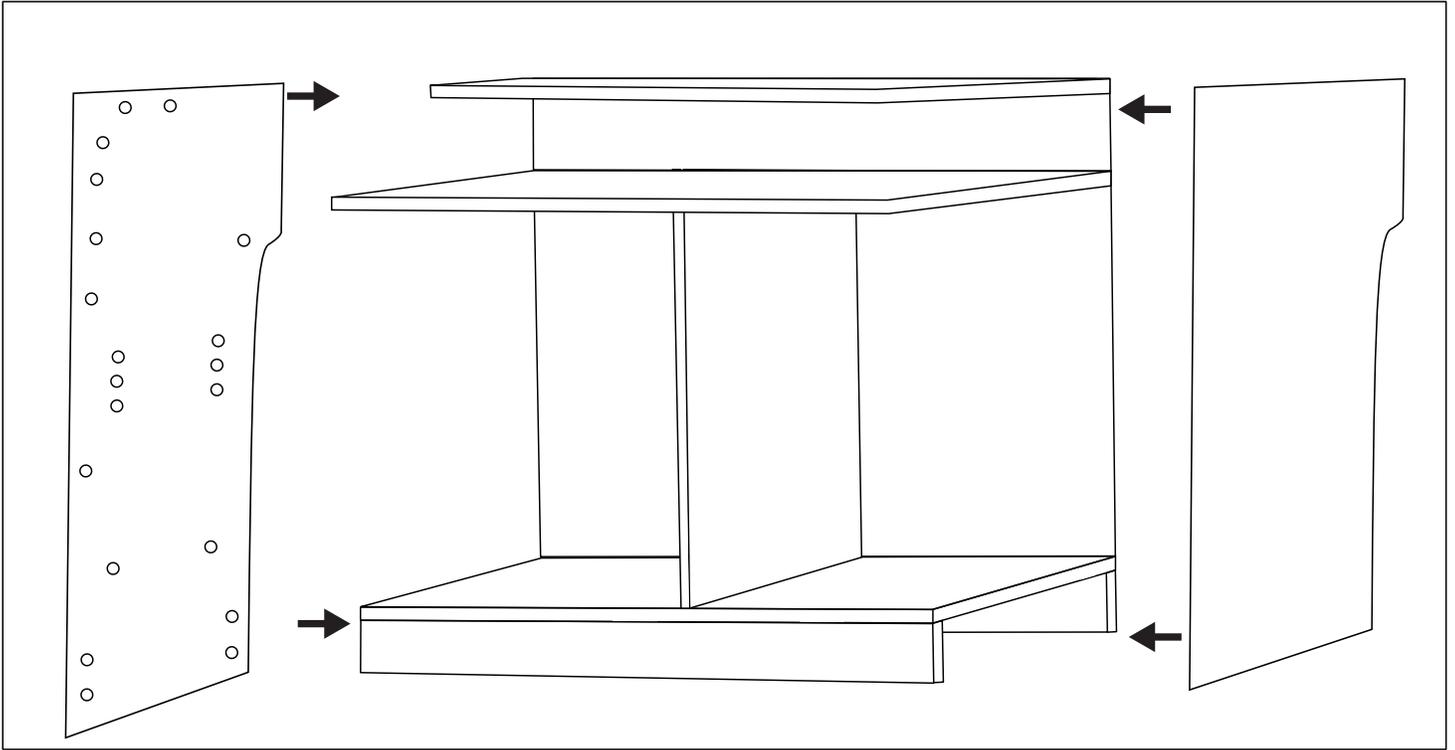


Diagram 7B

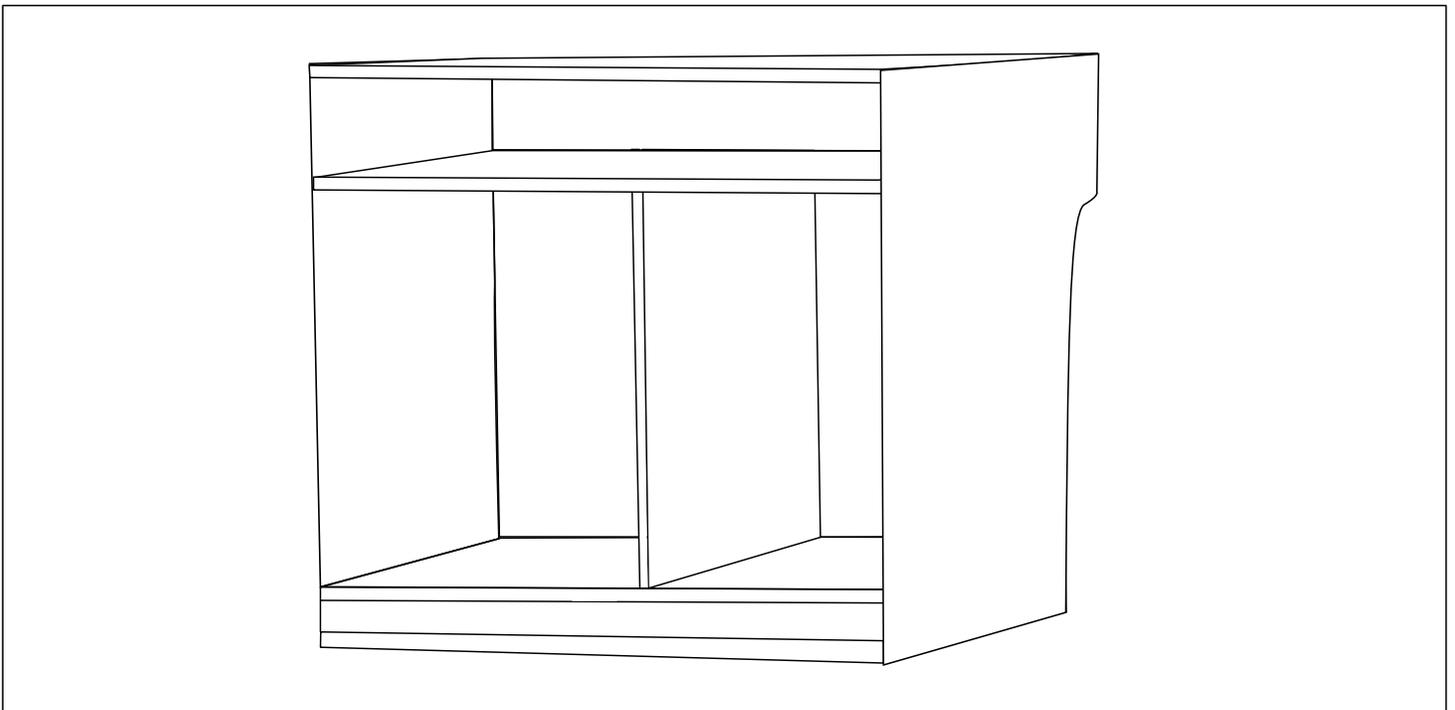

Ledgetop Counter Assembly Instruction Manual

Step 8

Attached left and right drawer panels to the front drawer panels with 1.25in screws. (See Diagram 8A) Slide drawer base along tracks of the right and left panels. (See Diagram 8B) attached back drawer panel to the rest of the drawer. Then tighten with screw driver.

Diagram 8A

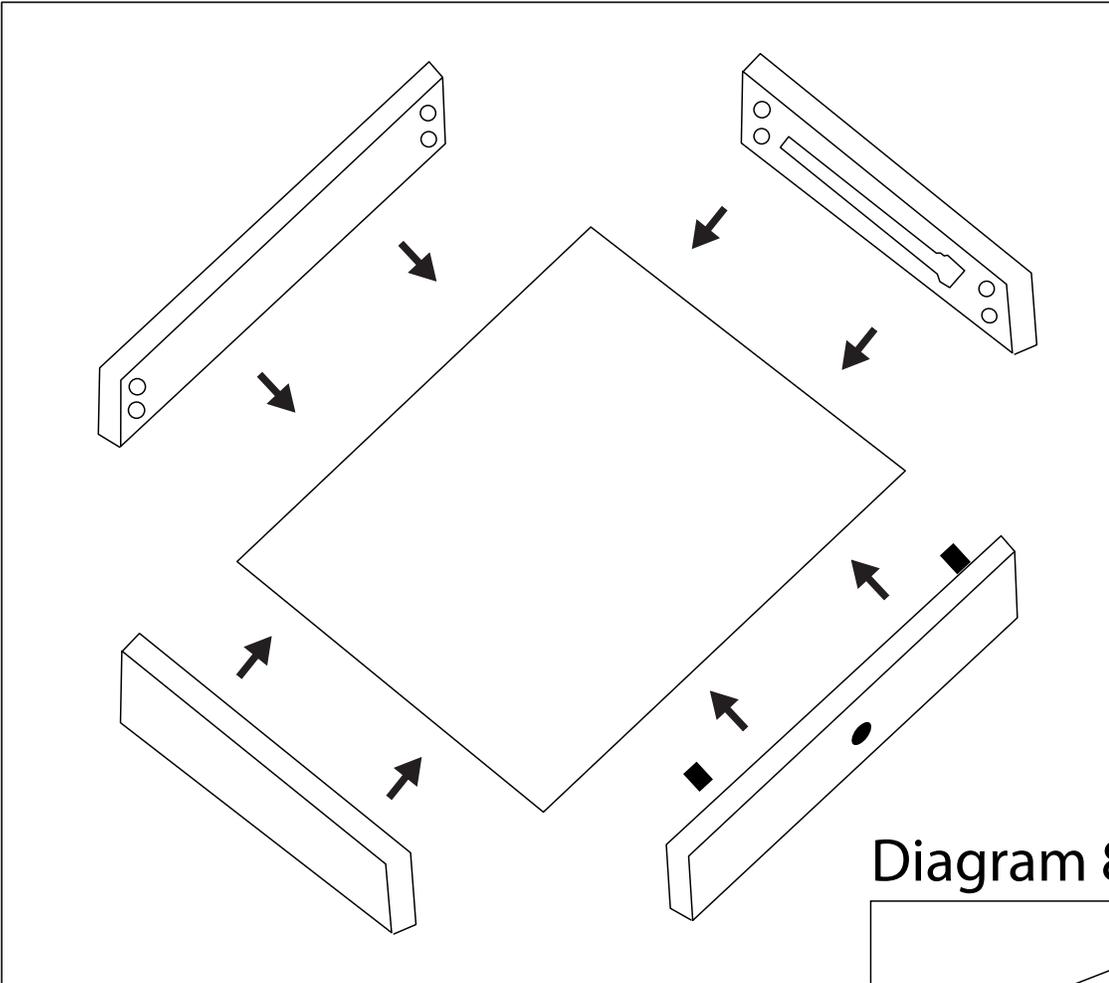


Diagram 8C


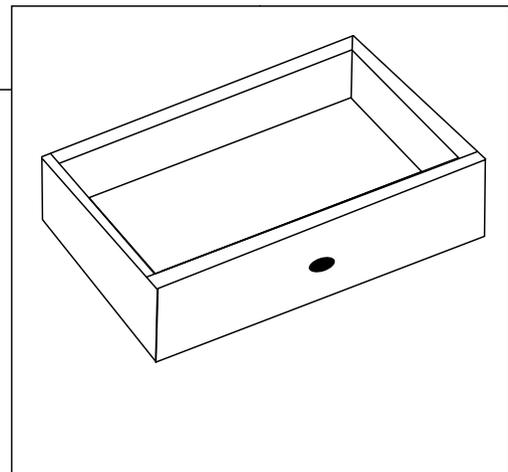


Diagram 8B

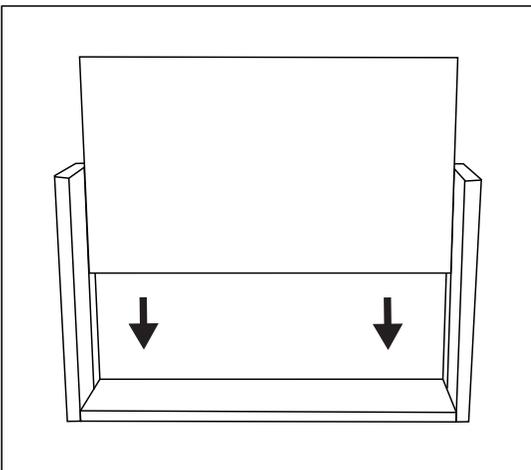

Ledgetop Counter Assembly Instruction Manual

Step 9

Set drawer and shelves into unit. Your unit is now complete. (See Diagram)

