

48” METAL FRAMED SERVICE COUNTER

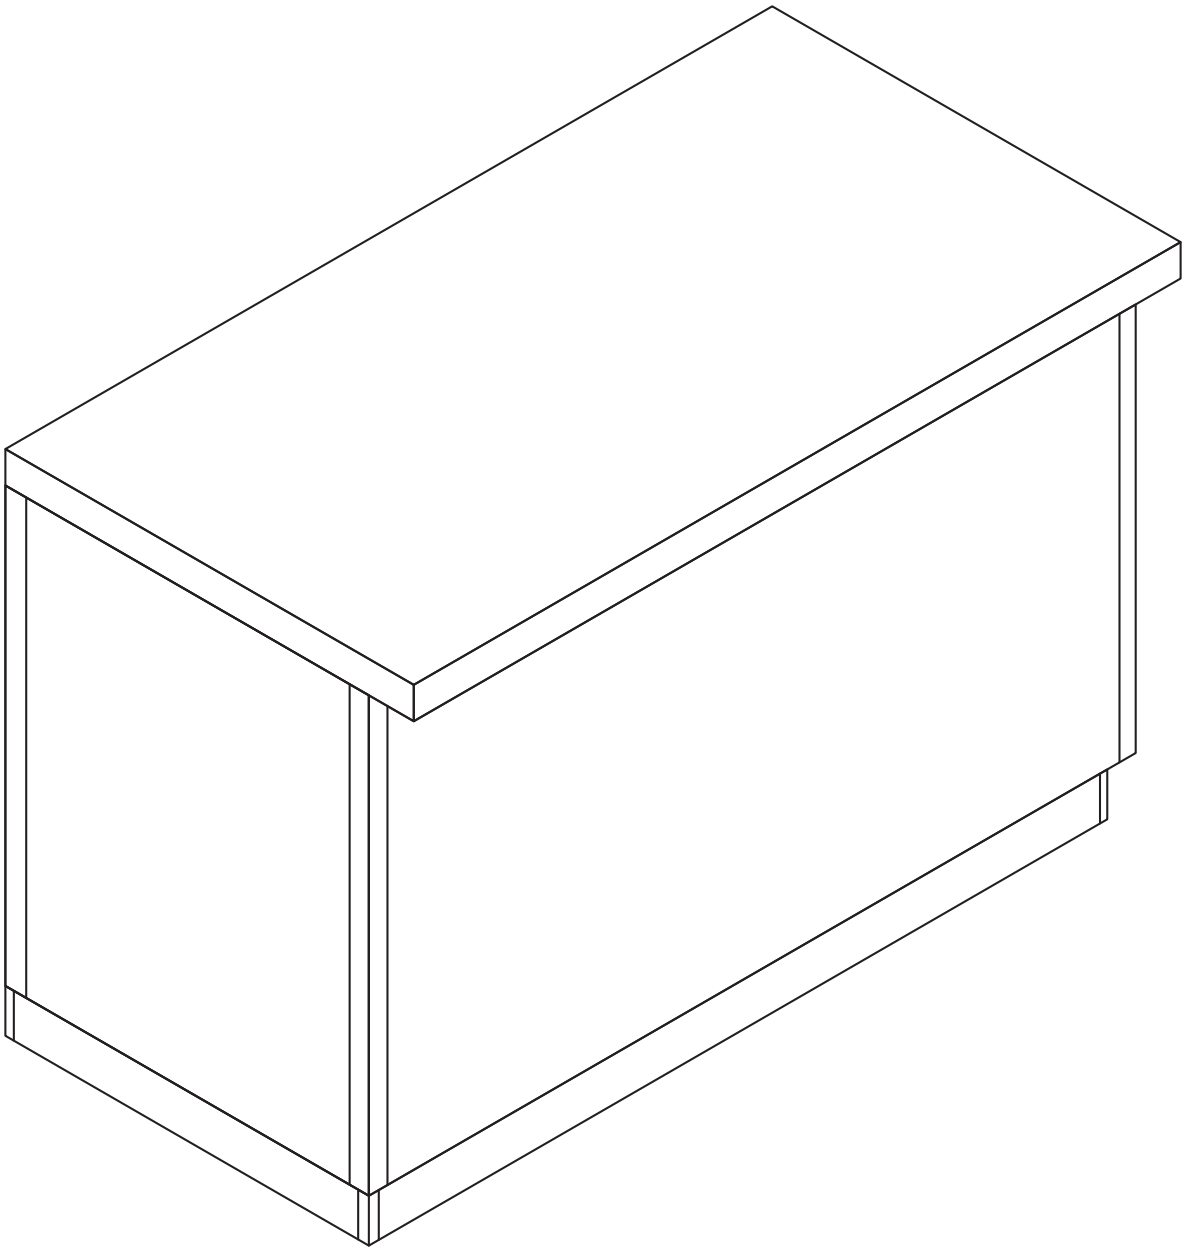


48” METAL FRAMED SERVICE COUNTER

PARTS IN CARTON:




CAM LOCK PINS
(44 EACH)

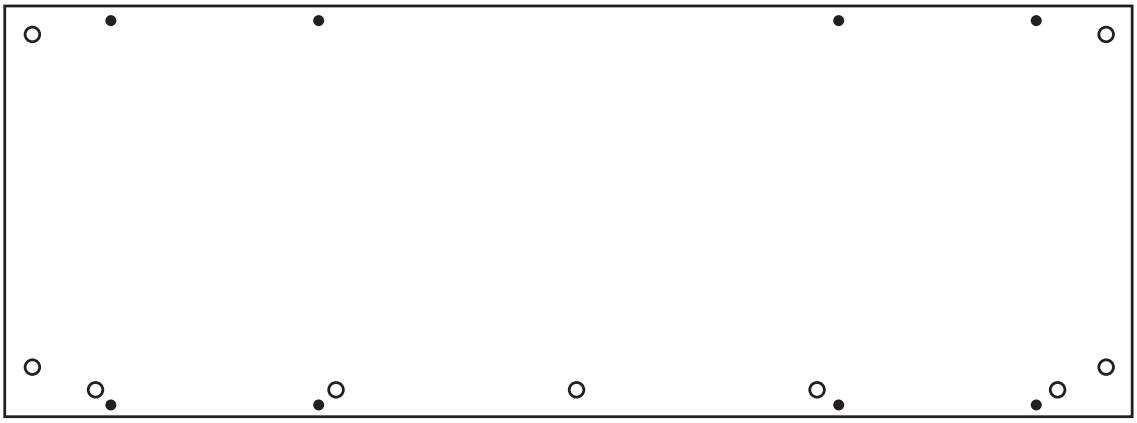

BOTTOM DECK
(1 EACH)




FRONT / BACK KICK
PLATE (2 EACH)



SIDE KICK PLATE
PANEL (2 EACH)



WOOD DOWELS
(4 EACH)

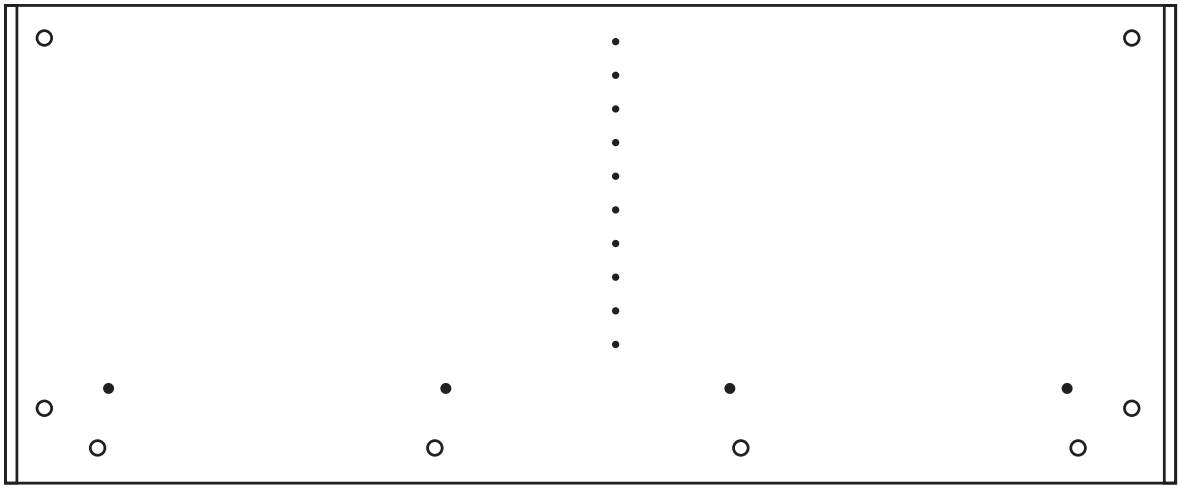


FRONT PANEL (1 EACH)



SHELF PINS
(6 EACH)

48” METAL FRAMED SERVICE COUNTER


PARTS IN CARTON:

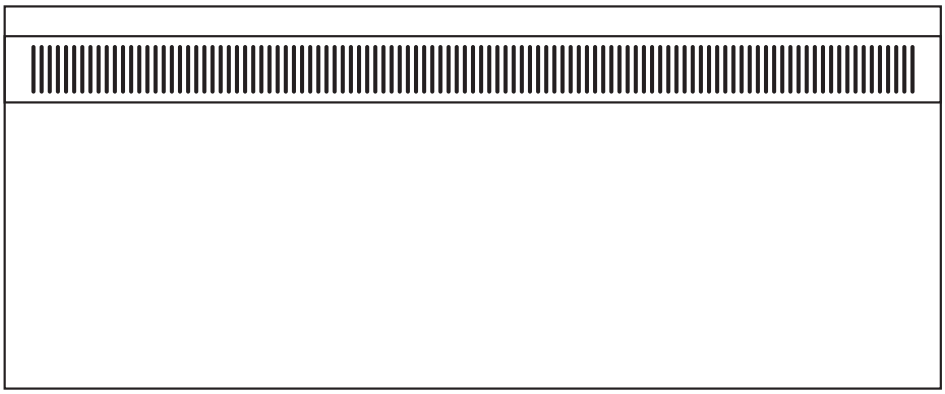

TOP SHELF
PANEL (1 EACH)




CENTER SUPPORT
(1 EACH)

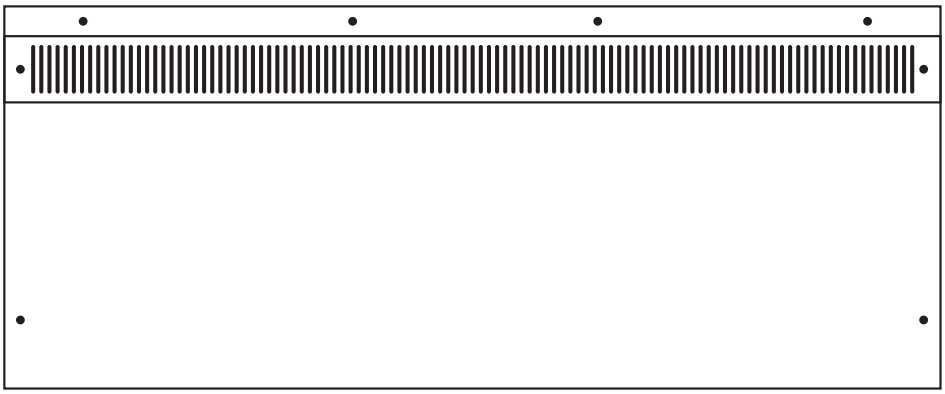

SERVICE COUNTER
TOP (1 EACH)



CORNER CAP
(4 EACH)

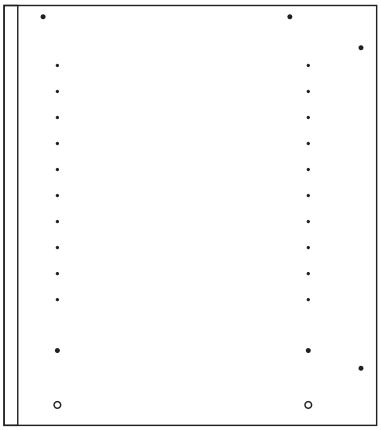

SIDE PANELS L/R
(2 EACH)



SHELF (1 EACH)




SERVICE
COUNTER
CORNER CAP
(2 EACH)

YOU WILL NEED TO SUPPLY YOUR OWN DRILL OR SCREWDRIVER &
RUBBER MALLET FOR INSTALLATION.

48” METAL FRAMED SERVICE COUNTER


STEP 1

INSERT CAM LOCK PINS INTO EACH PANEL (BOTTOM & SIDE PANELS). (USING A MANUAL SCREW DRIVER IS BEST, TO HELP AVOID OVER TIGHTENING.)

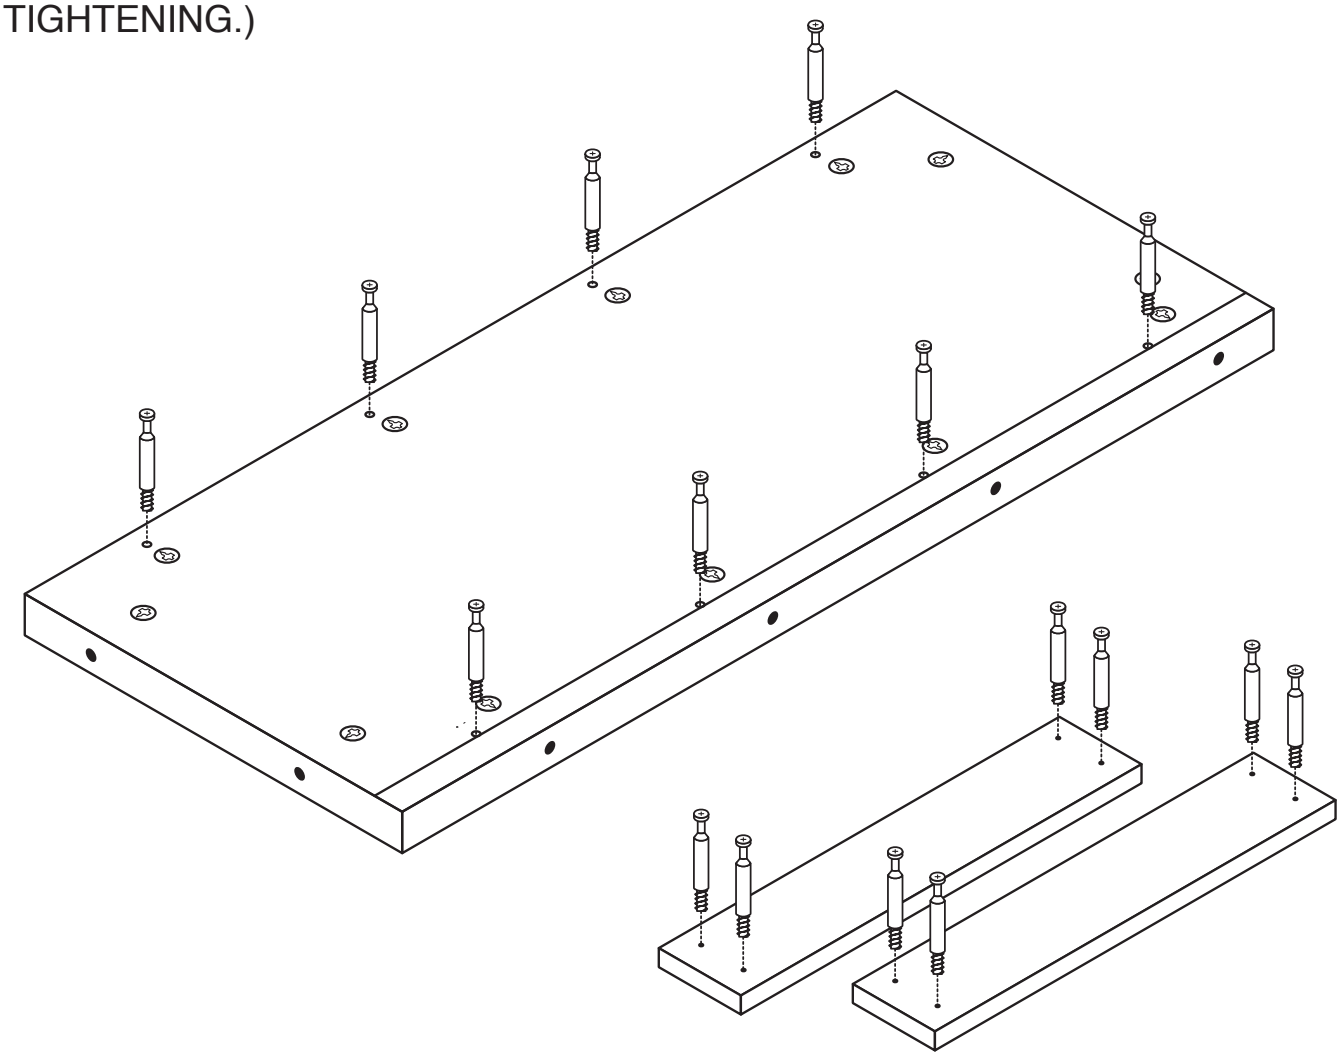

STEP 2


ENSURE EACH PRE-INSERTED CAM IS ORIENTED SO THE CAM ARROW IS FACING THE CORRESPONDING HOLE.

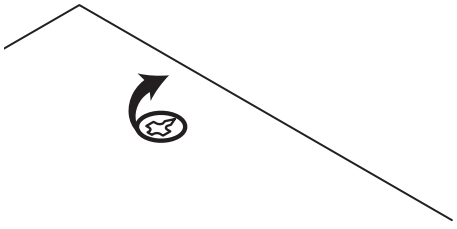

48” METAL FRAMED SERVICE COUNTER


STEP 3

INSERT THE FRONT & BACK KICK PLATES ONTO THE BOTTOM DECK CAM PINS. INSERT SIDE KICK PLATE CAM LOCK PINS INTO FRONT & BACK KICK PLATES. (TIGHTEN CAMS)

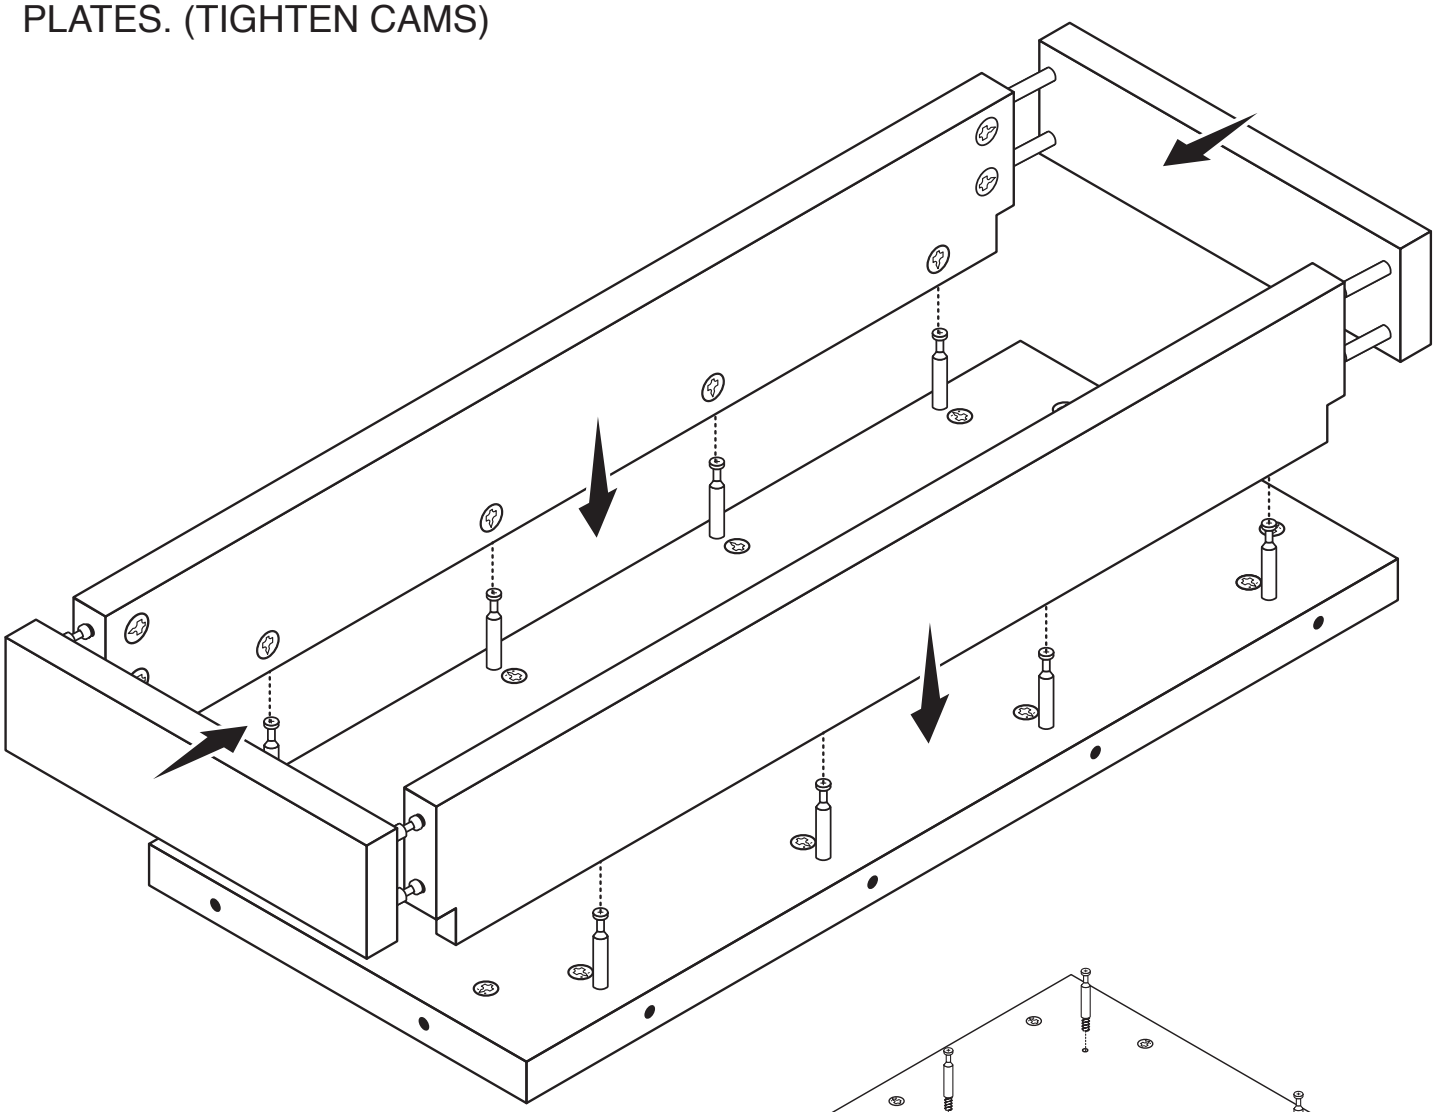

STEP 4


INSERT CAM LOCK PINS INTO THE TOP PANEL.

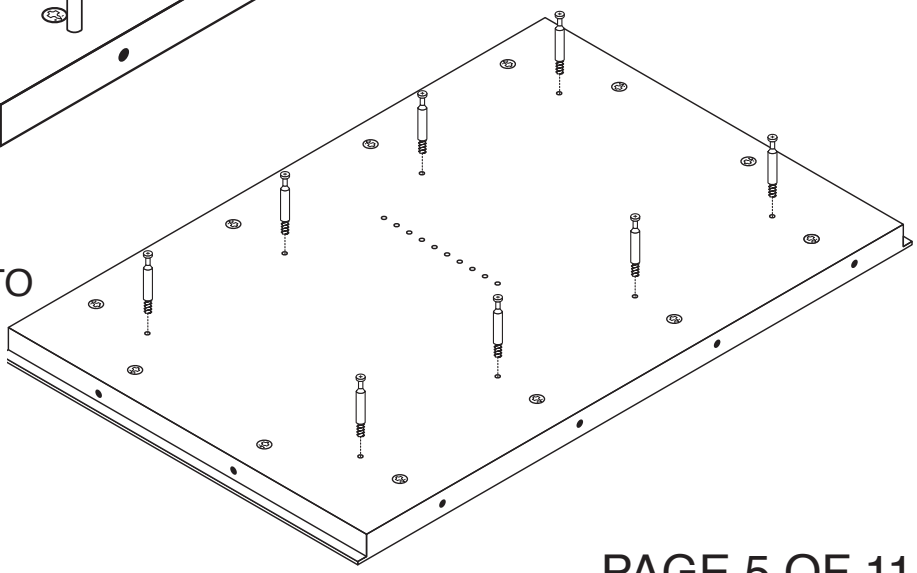

48” METAL FRAMED SERVICE COUNTER


STEP 5

CAREFULLY LOWER THE KICK PLATE DECK ONTO THE FRONT PANEL. (TIGHTEN CAMS)

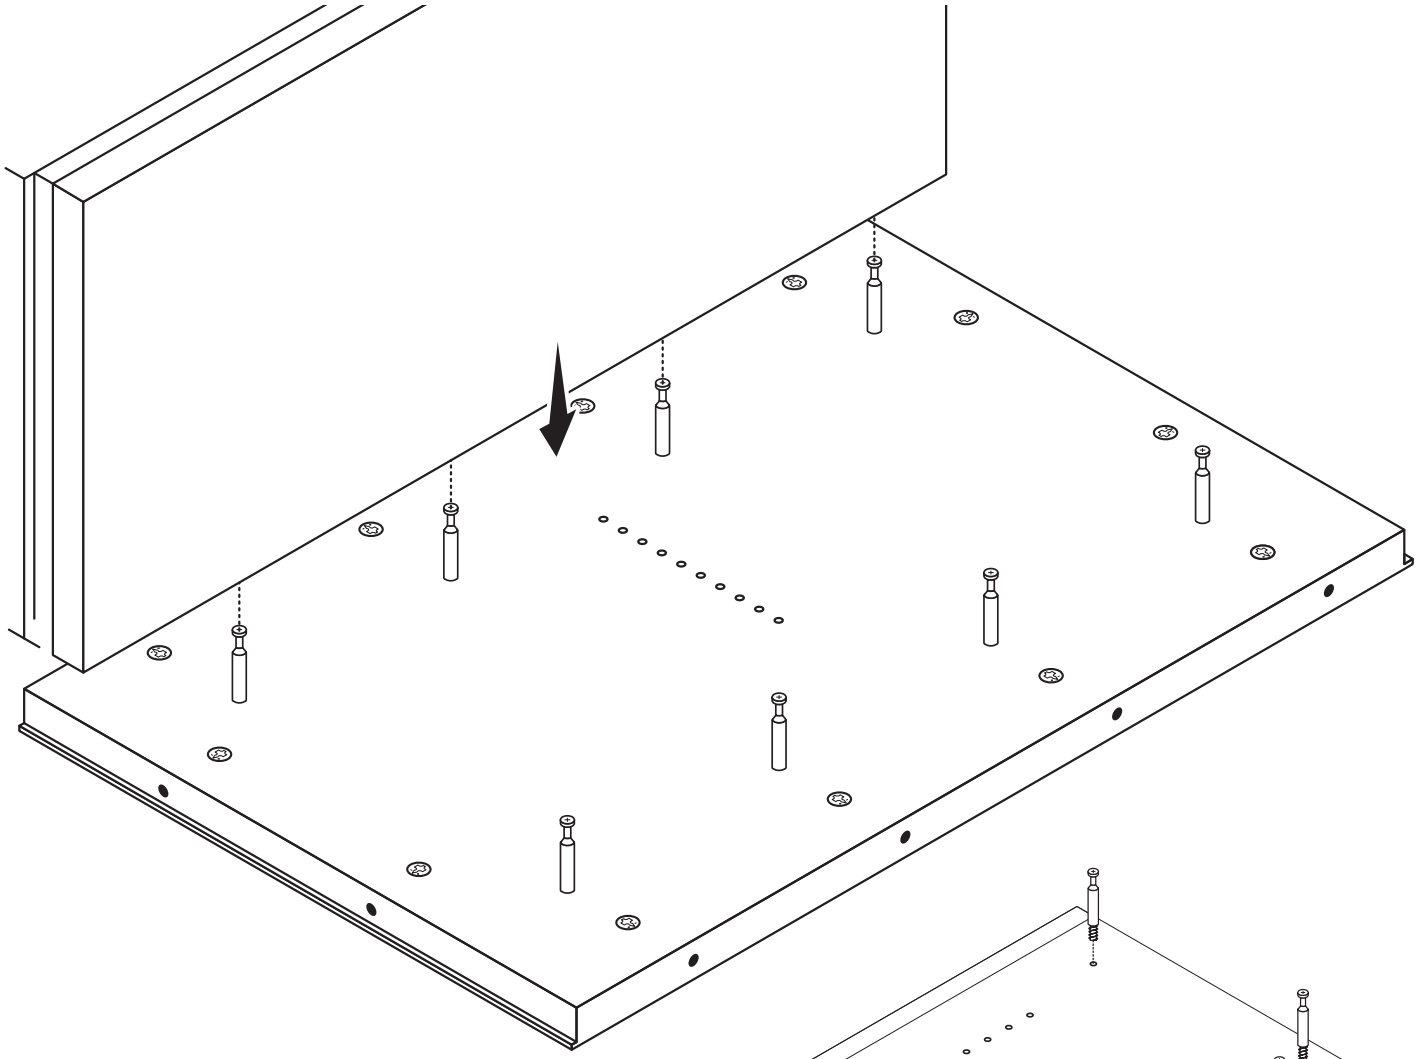

STEP 6


INSERT CAM LOCK PINS INTO BOTH THE LEFT & RIGHT SIDE PANELS.

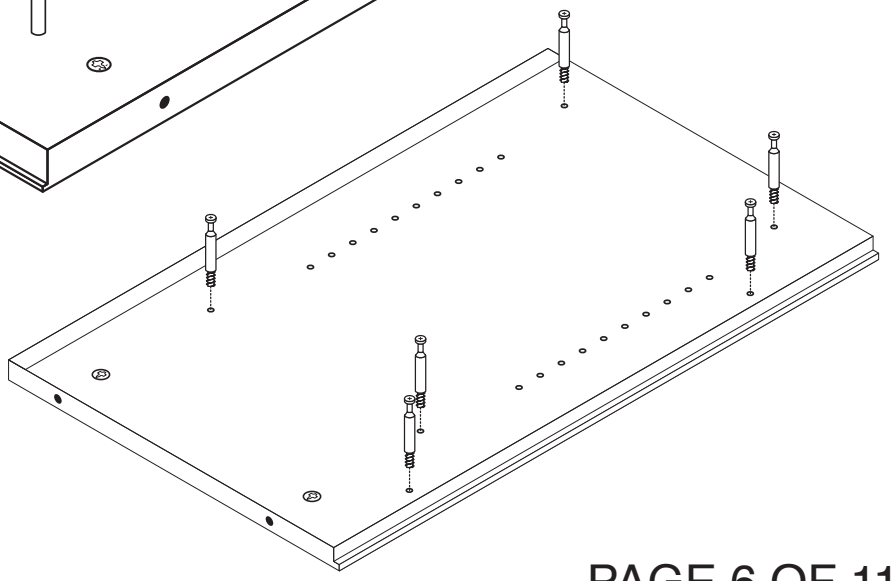

48” METAL FRAMED SERVICE COUNTER

STEP 7


NEXT, CAREFULLY LOWER THE TOP SHELF PANEL ONTO THE FRONT PANEL. (TIGHTEN CAMS)

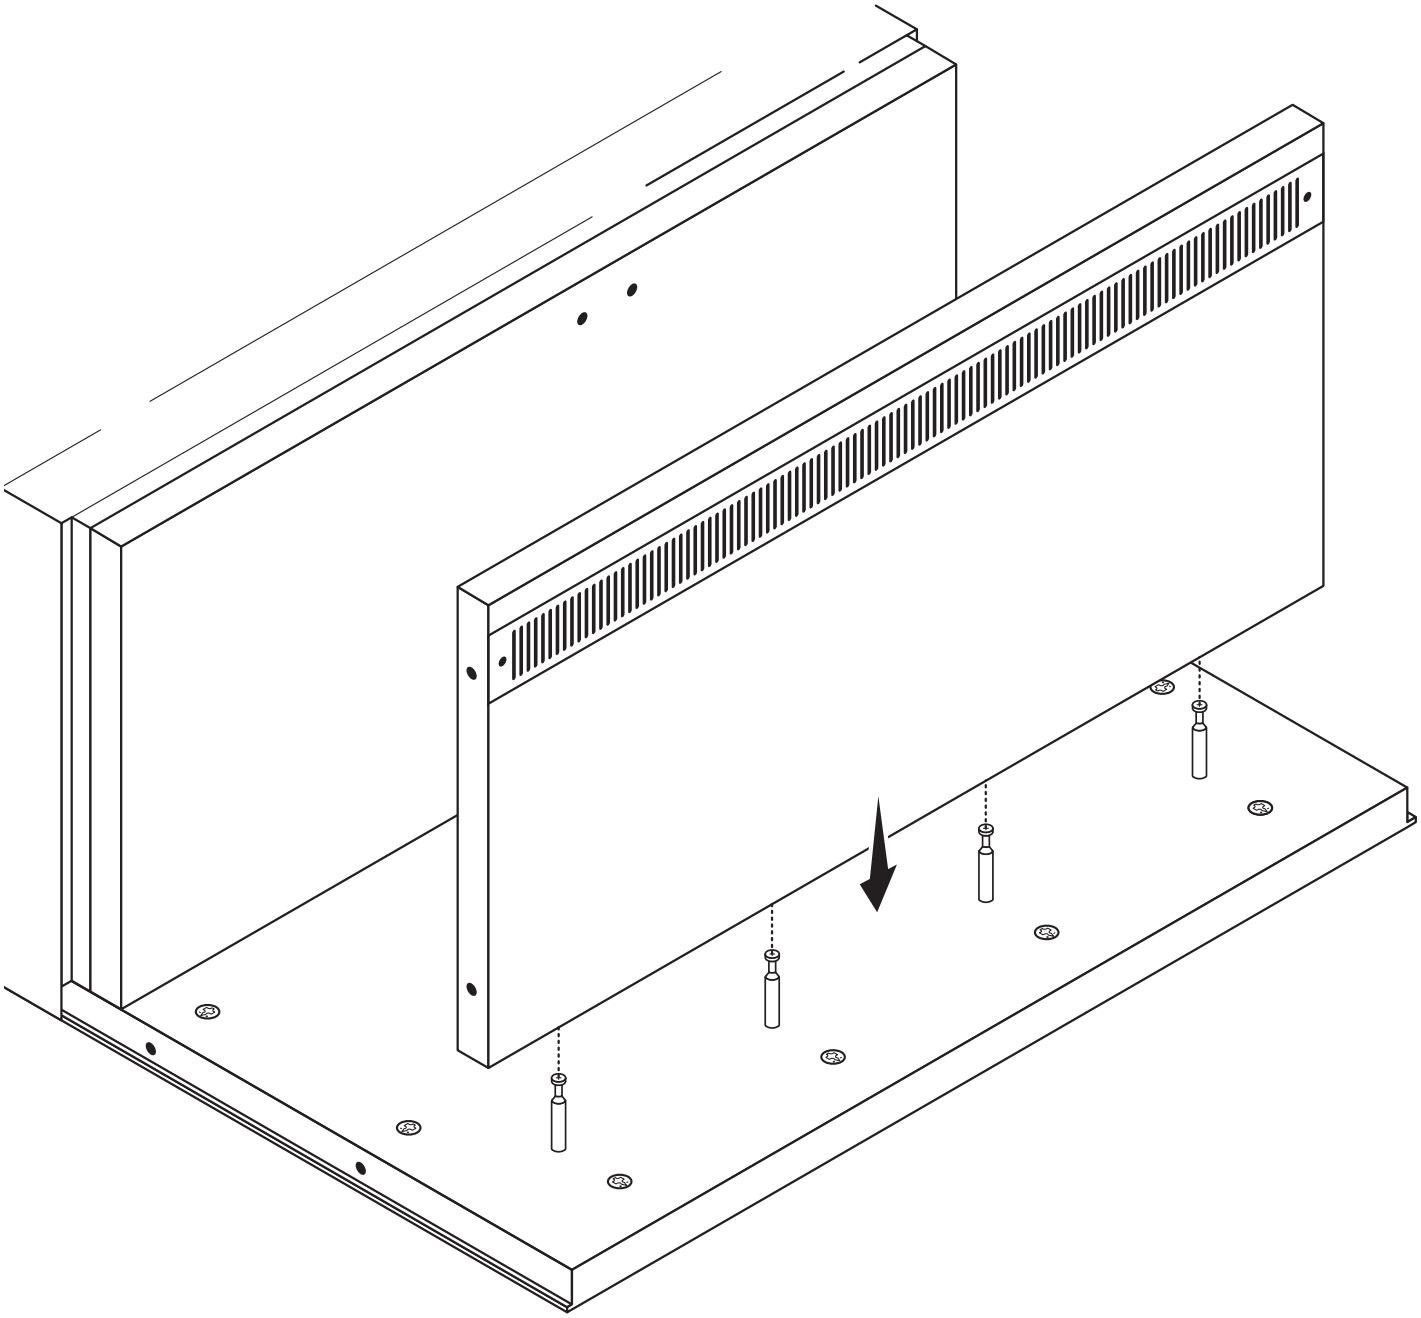

48” METAL FRAMED SERVICE COUNTER

STEP 8

NEXT, CAREFULLY LOWER THE TOP SHELF PANEL ONTO THE FRONT PANEL. (TIGHTEN CAMS)

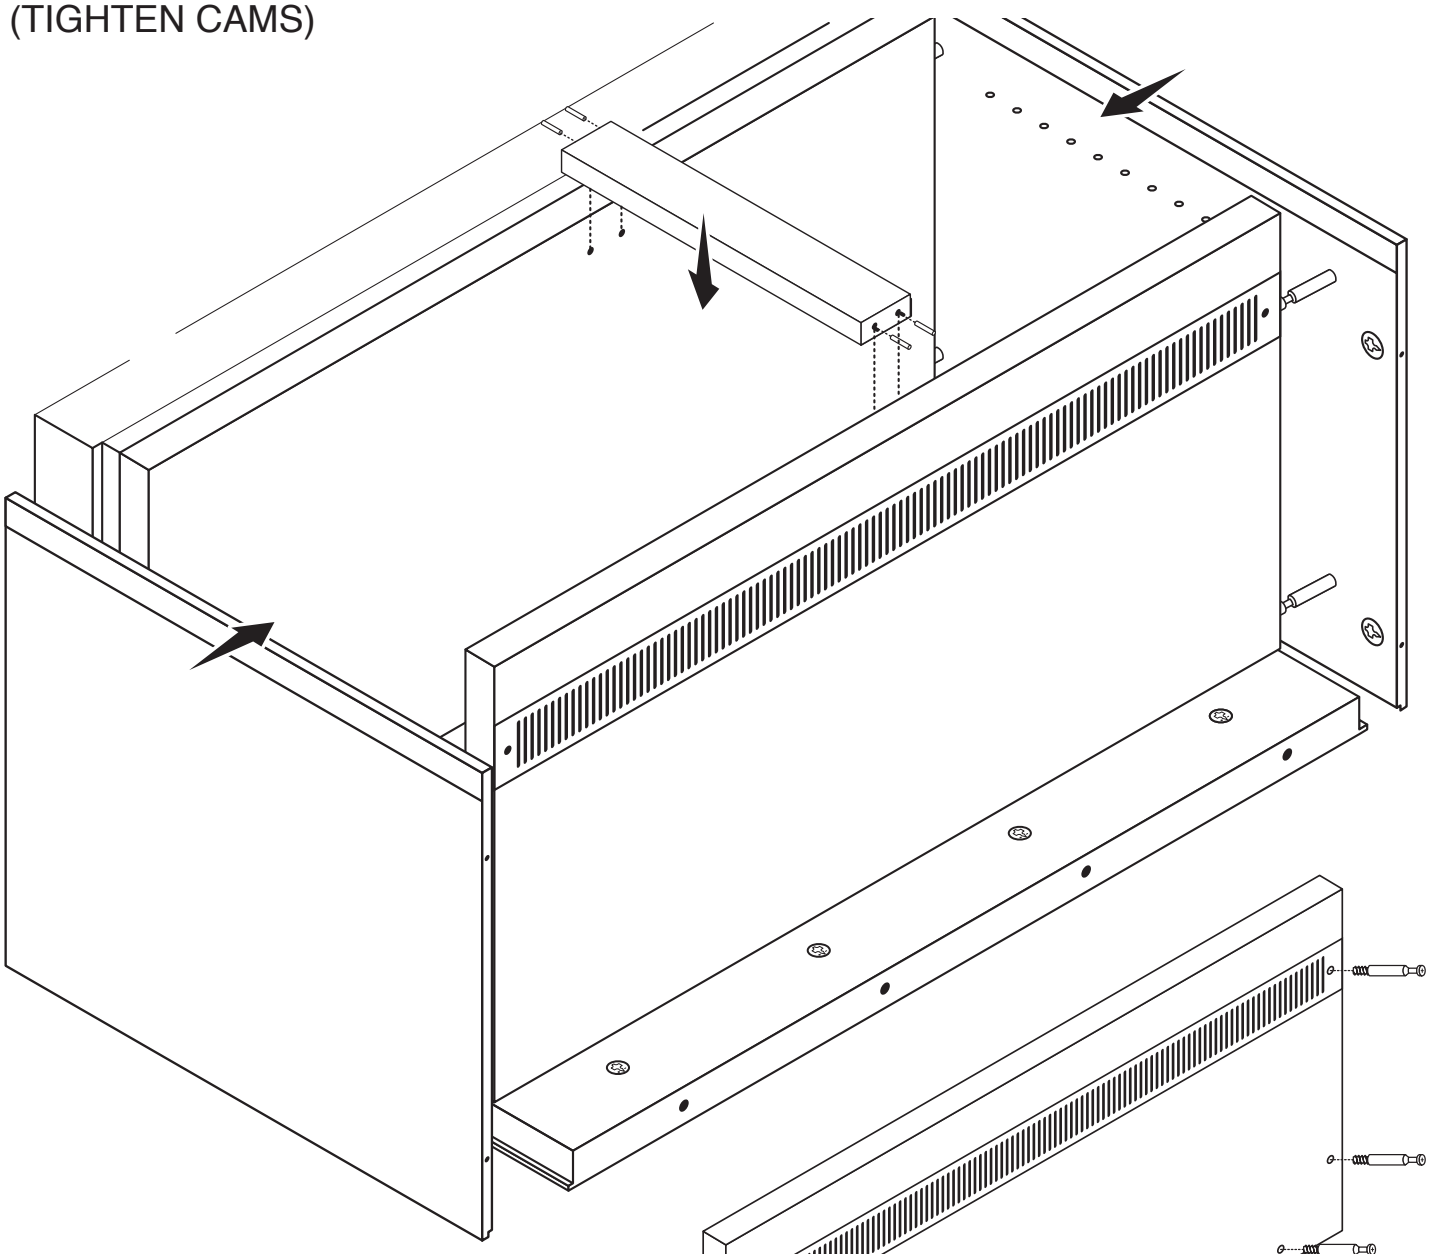


STEP 9

INSERT CAM LOCK PINS INTO THE SERVICE COUNTER TOP PANEL.

48” METAL FRAMED SERVICE COUNTER

STEP 10


LOWER THE SERVICE COUNTER TOP ONTO THE COMPLETED LOWER BASE. (TIGHTEN CAMS) SLIDE IN REAR DIVIDERS TO DESIRED POSITIONS.

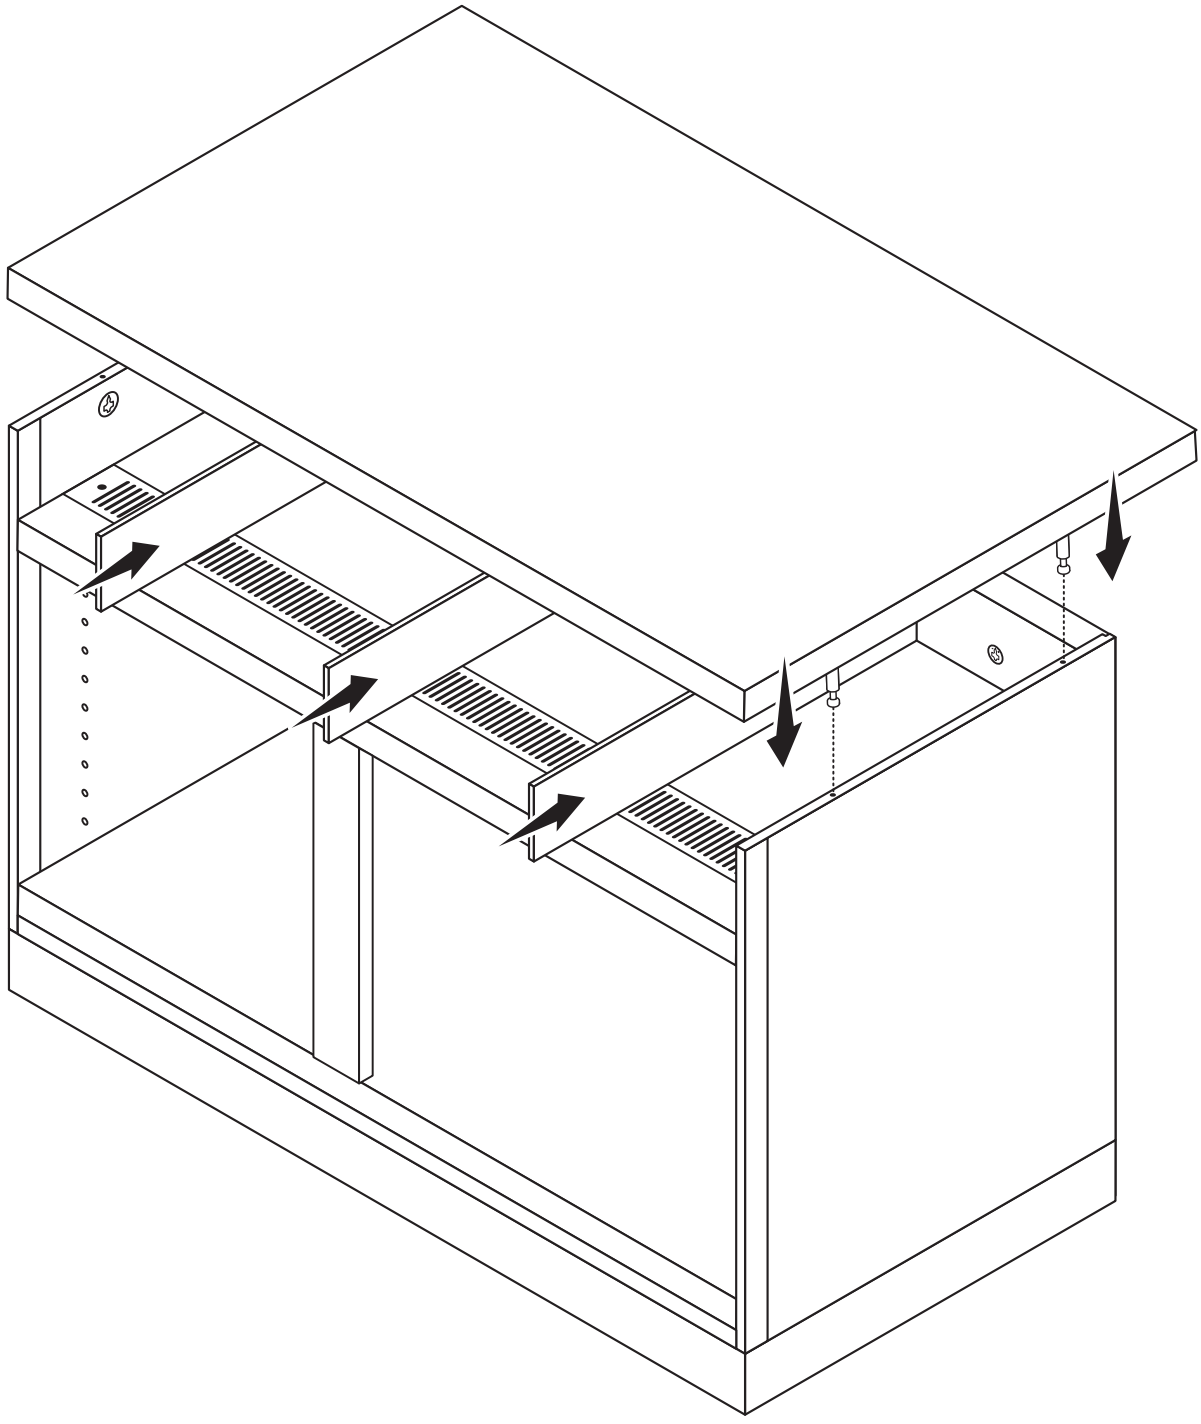


48” METAL FRAMED SERVICE COUNTER

STEP 11

PLACE SHELF PINS AT DESIRED LOCATIONS. SLIDE IN THE SHELF PANEL & SET ONTO SHELF PINS.

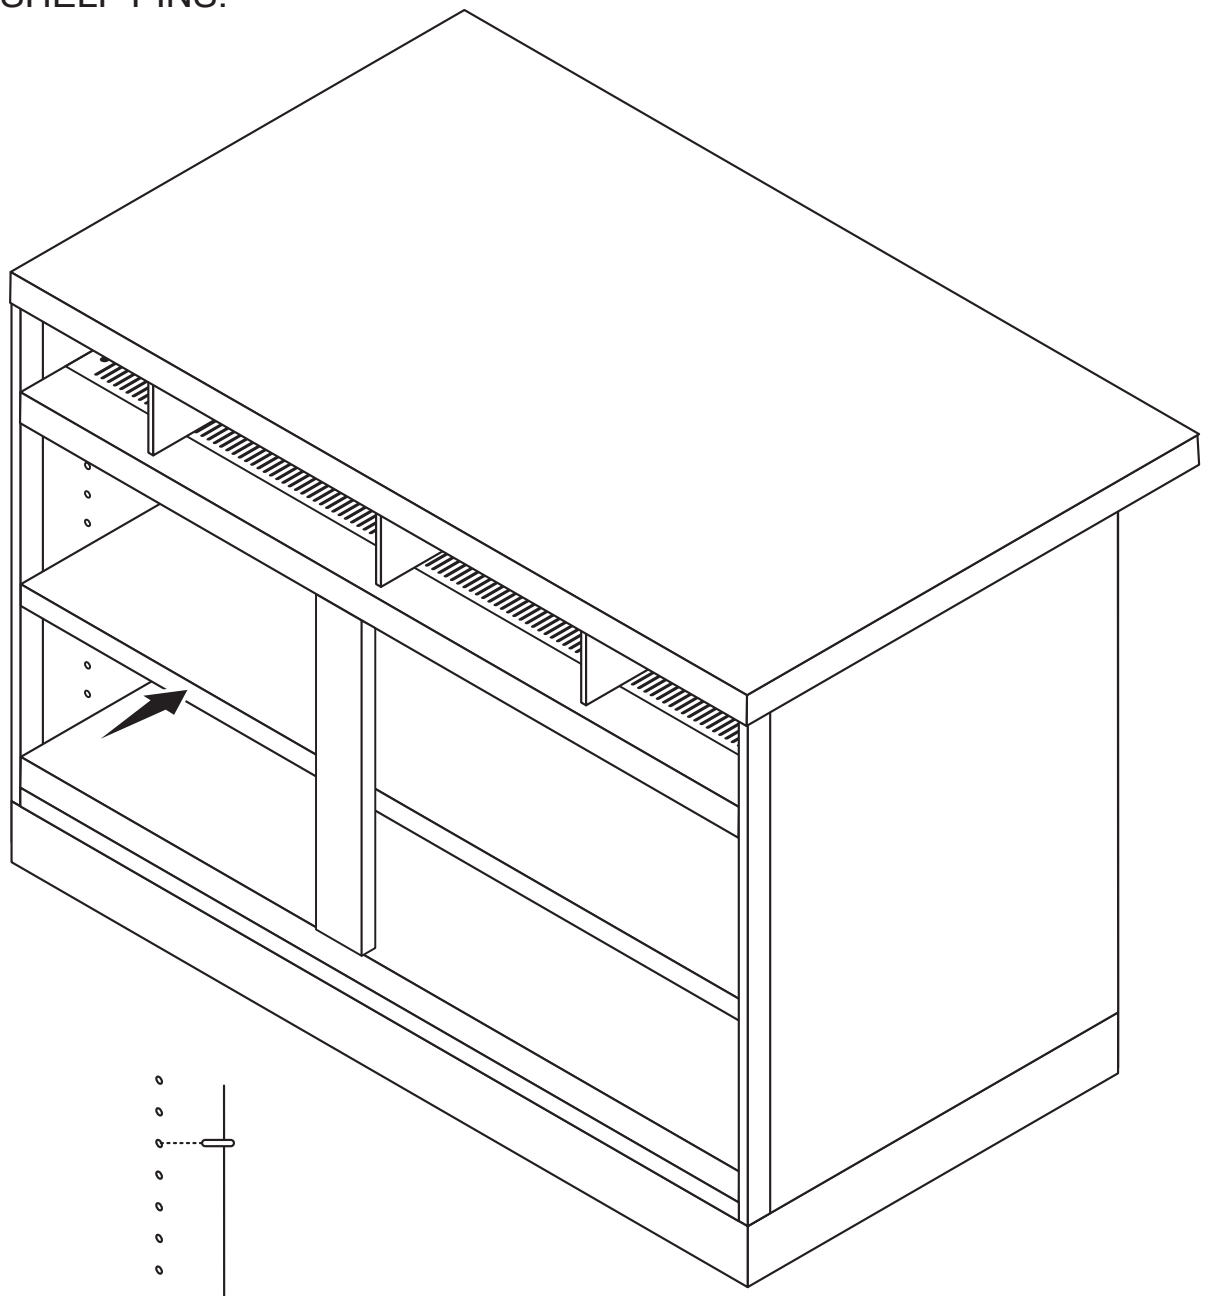

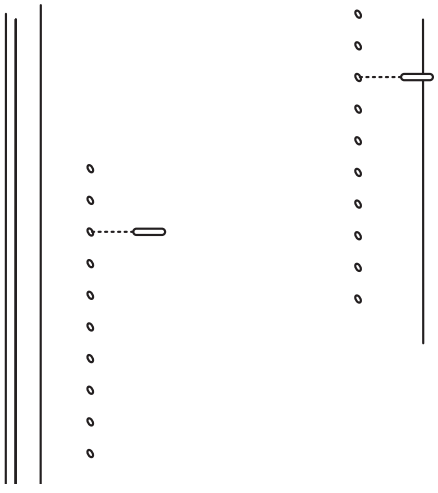

48” METAL FRAMED SERVICE COUNTER

STEP 12

FINALLY, USING A RUBBER MALLET, INSERT EACH CORNER CAP ONTO THE CORNERS.

