



SERVICE COUNTER ASSEMBLY INSTRUCTION MANUAL

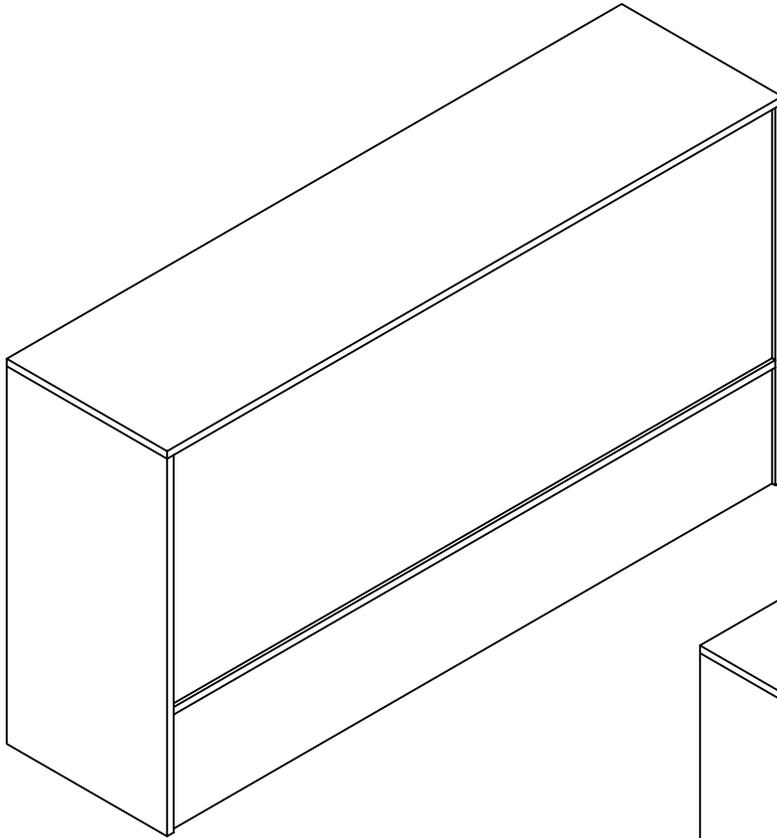

FRONT OF SERVICE COUNTER

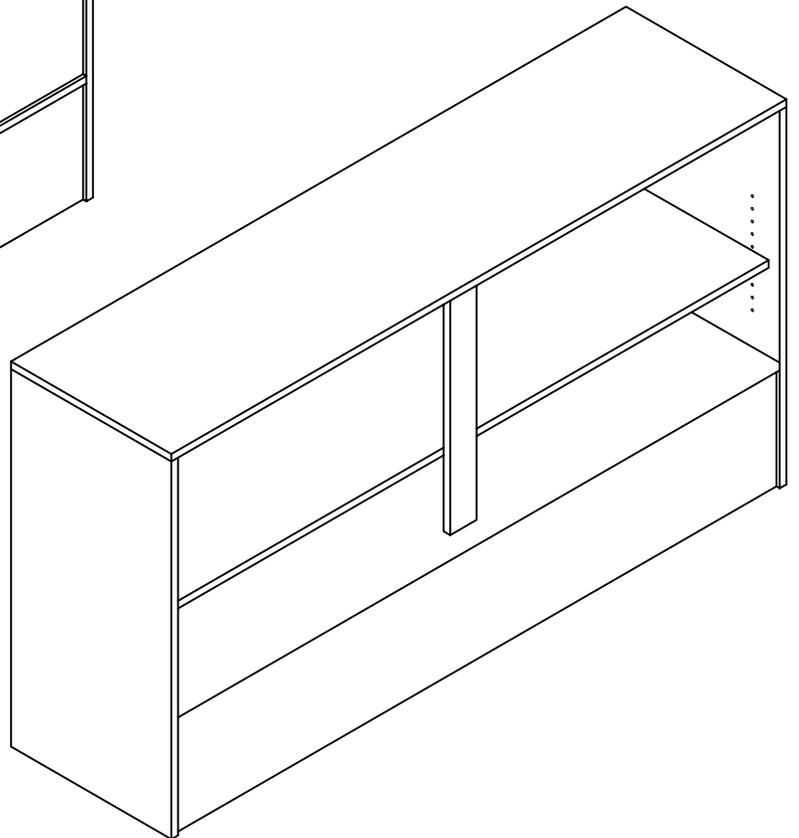

REAR OF SERVICE COUNTER



STORE SUPPLY WAREHOUSE, LLC

PHONE : 1-800-823-8887


FAX : 1-800-823-0004

WWW.STORESUPPLY.COM


04212008

SERVICE COUNTER ASSEMBLY INSTRUCTION MANUAL


RECOMMENDED TOOLS FOR ASSEMBLY




PHILLIPS SCREW DRIVER




ELECTRIC OR BATTERY
SCREWDRIVER WITH
PHILLIPS DRILL BIT



EITHER/OR

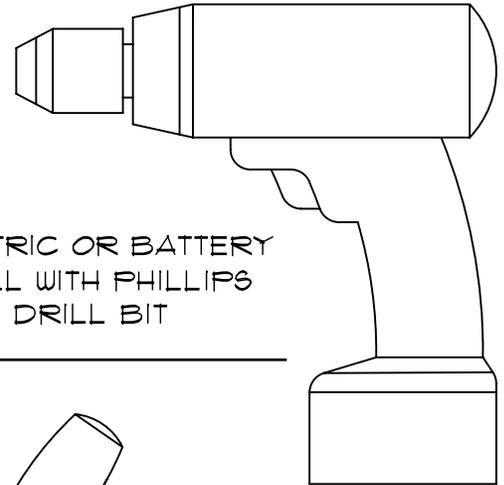


ELECTRIC OR BATTERY
DRILL WITH PHILLIPS
DRILL BIT

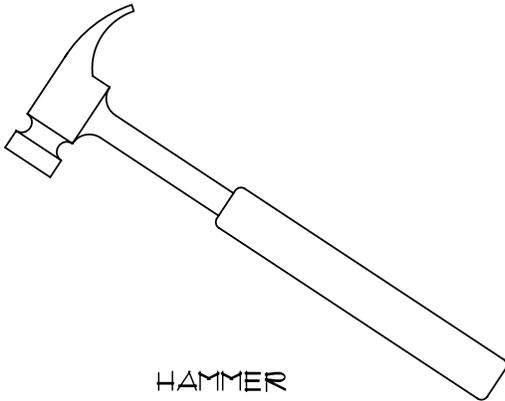

HAMMER

EITHER/OR

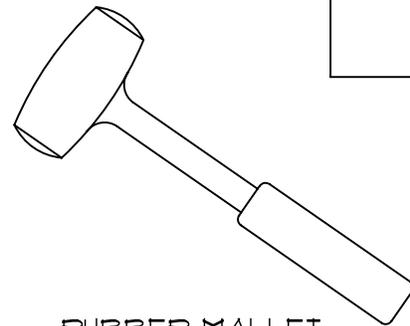

RUBBER Mallet
(PREFERRED)


HARDWARE AND MISC. INCLUDED: (PACKAGED IN A BAG)

NOTE: ALL ITEMS ARE SHOWN ACTUAL SIZE: IF YOU ARE NOT SURE WHICH PARTS IS CORRECT, THEN PLACE ON TOP OF ITEM BELOW FOR HELP DURING ASSEMBLY.



22 EA. - CAM LOCK PINS - 1 3/4" L




NOTE:
THIS ARROW TIP
MUST POINT TO
THE HOLE FOR
CAM LOCK PINS



22 EA. - 3/4" CAM LOCK CONNECTOR NUTS
(CAM LOCK NUTS MAY ALREADY BE INSERTED INTO PANELS)



26 EA. - WOOD DOWELS - 1 1/8" L

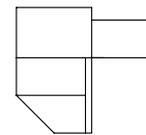






8 EA. - SELF-STICKING COVERS
FOR MINIFIX CAMS

6 EA. - CLEAR PLASTIC SHELF REST
WITH CHROME METAL PIN



SERVICE COUNTER ASSEMBLY INSTRUCTION MANUAL


PARTS INCLUDED INSIDE CARTON:

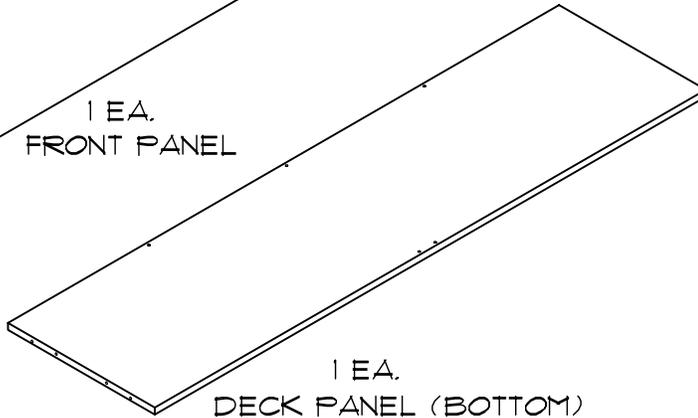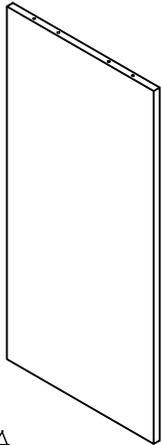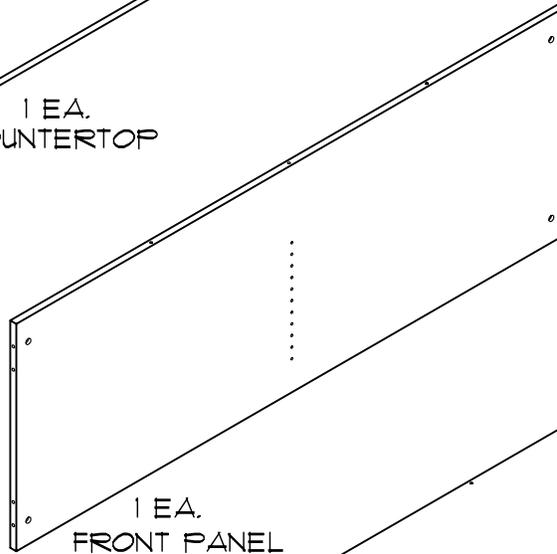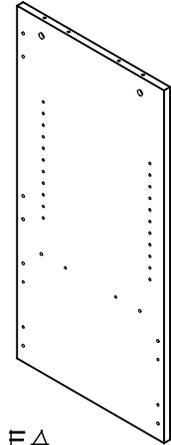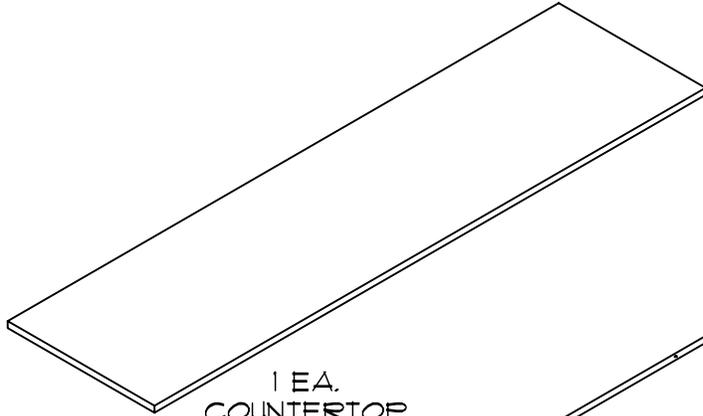


1 EA. INTERIOR
COUNTER SUPPORT

1 EA.
RIGHT END PANEL


1 EA.
DECK PANEL (BOTTOM)

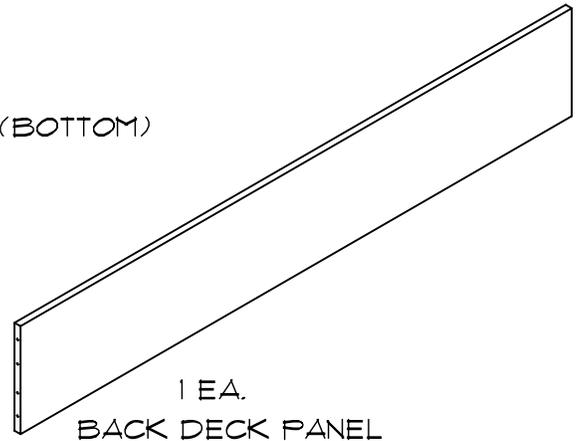

1 EA.
BACK DECK PANEL

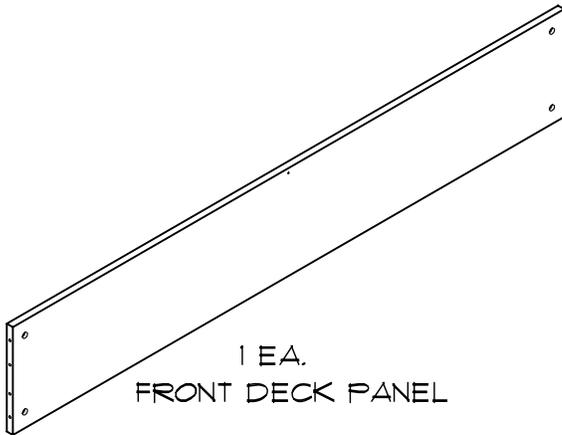

1 EA.
FRONT DECK PANEL

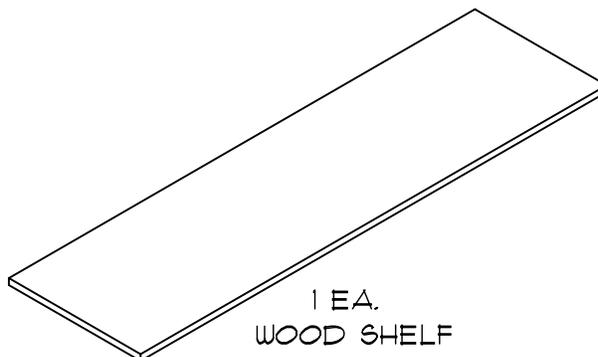


1 EA.
WOOD SHELF



SERVICE COUNTER ASSEMBLY INSTRUCTION MANUAL

ILLUSTRATION OF ASSEMBLY

SCALE: NONE

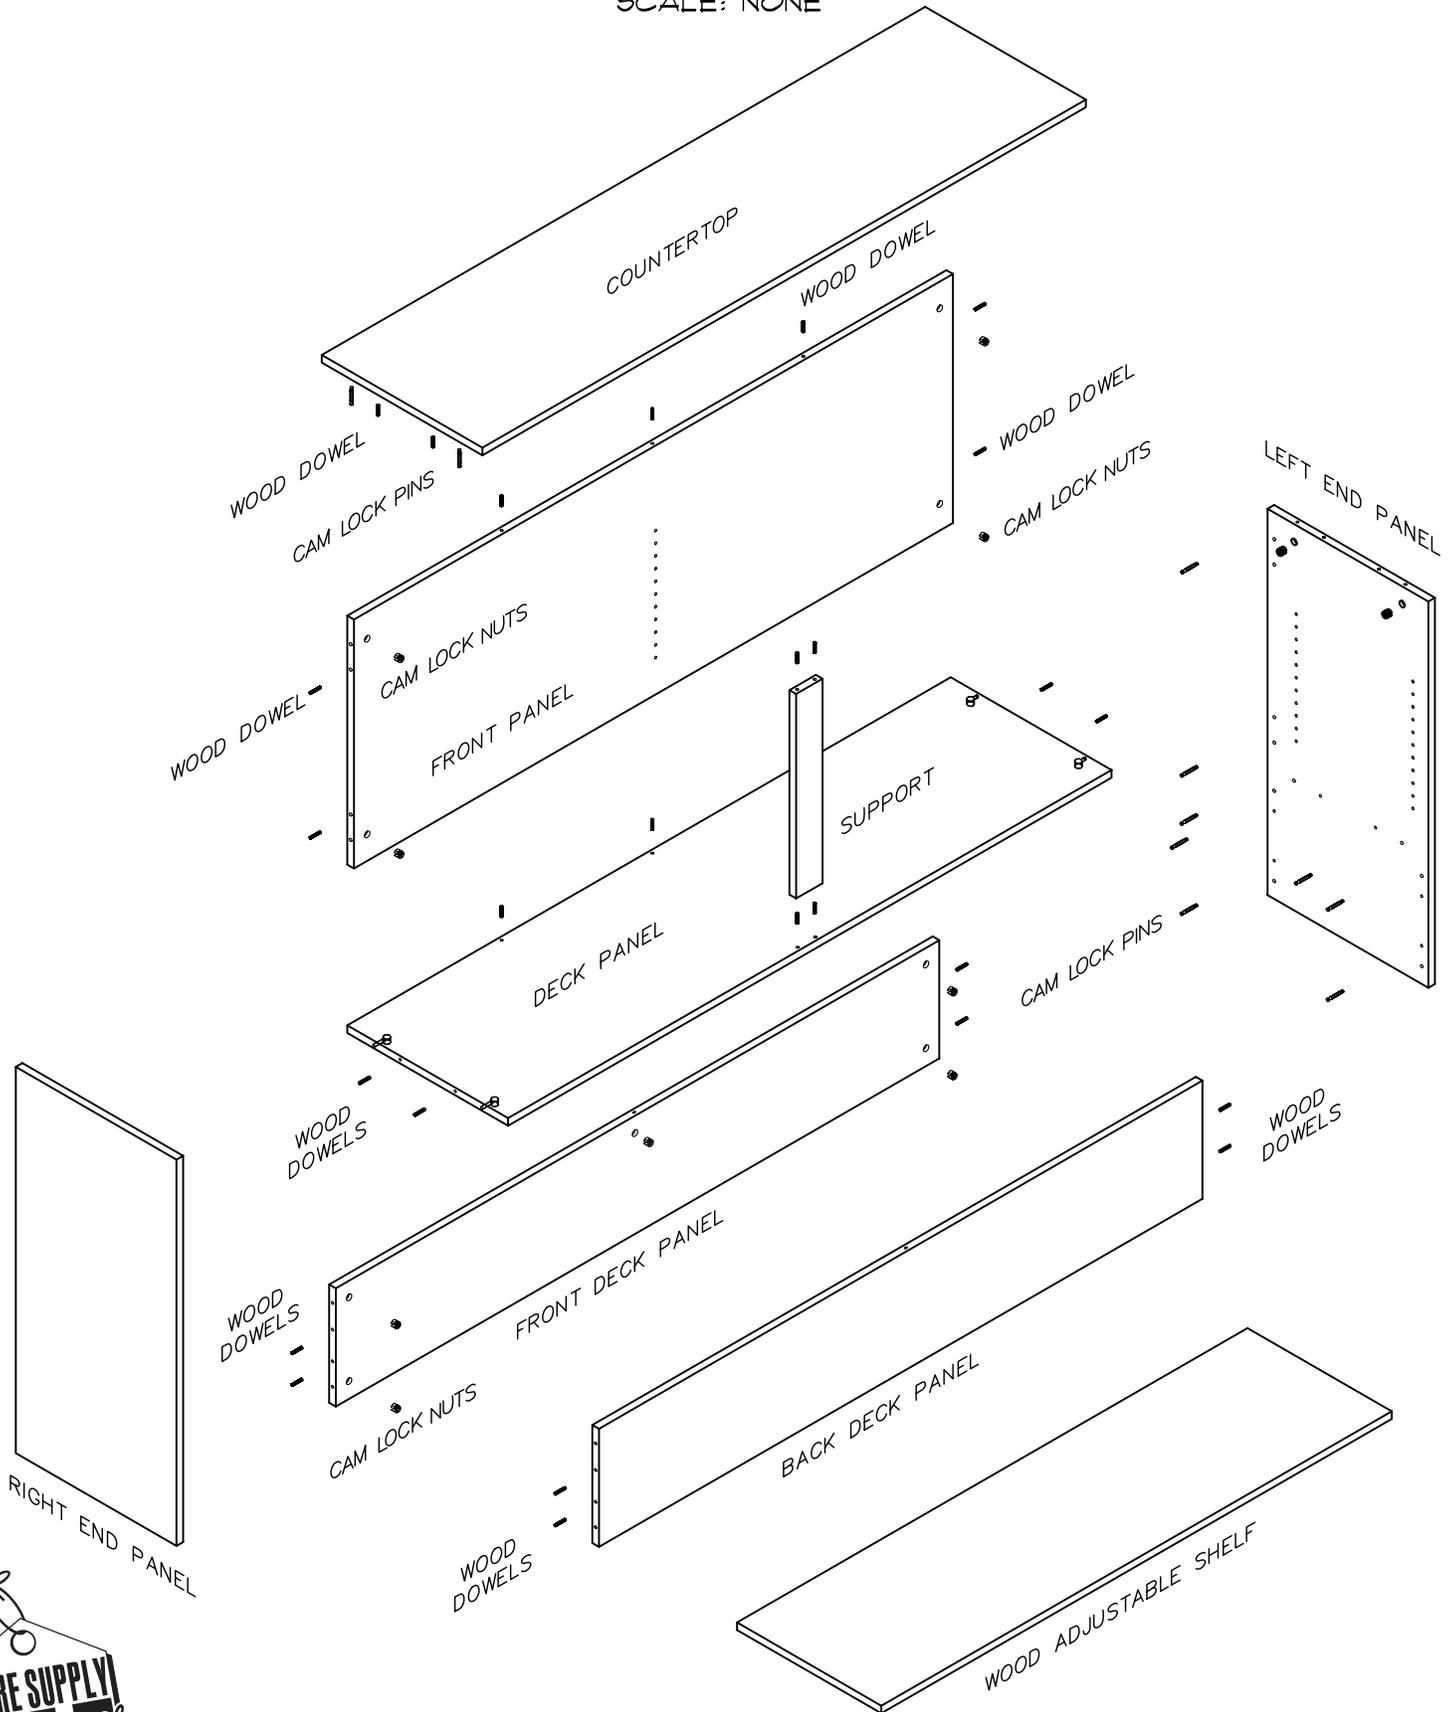


SERVICE COUNTER ASSEMBLY INSTRUCTION MANUAL

ASSEMBLY TIME APPROXIMATELY 1 HOUR


WITH A HELPER

STEP 1 :

LAY EACH END PANEL ON A FLAT SURFACE WITH INSIDE FACE UP AND SCREW ONE CAM LOCK PIN IN EACH OF THE (8) HOLES INDICATED ON EACH IN DIAGRAM "1A".

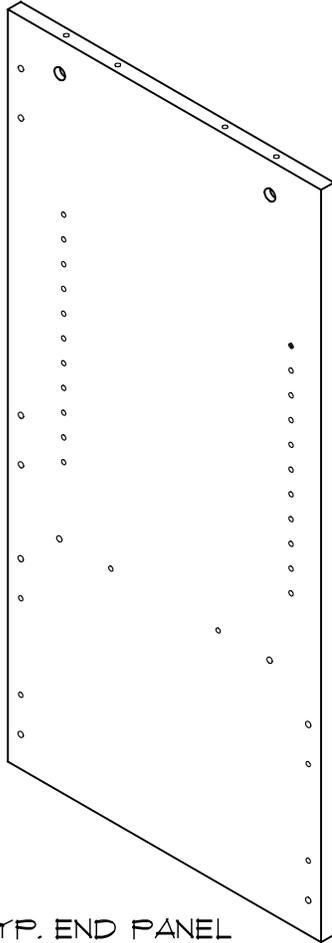

TYP. END PANEL
(RIGHT END SHOWN)

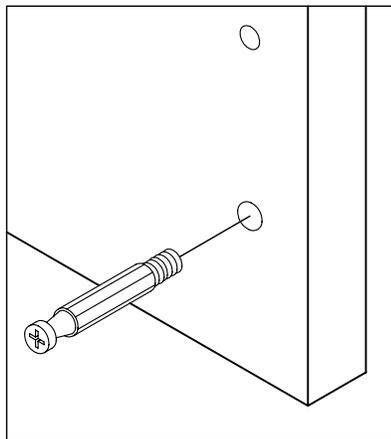

ENLARGEMENT DETAIL

SEE DIAGRAM "1 A" FOR
LOCATION OF HOLES

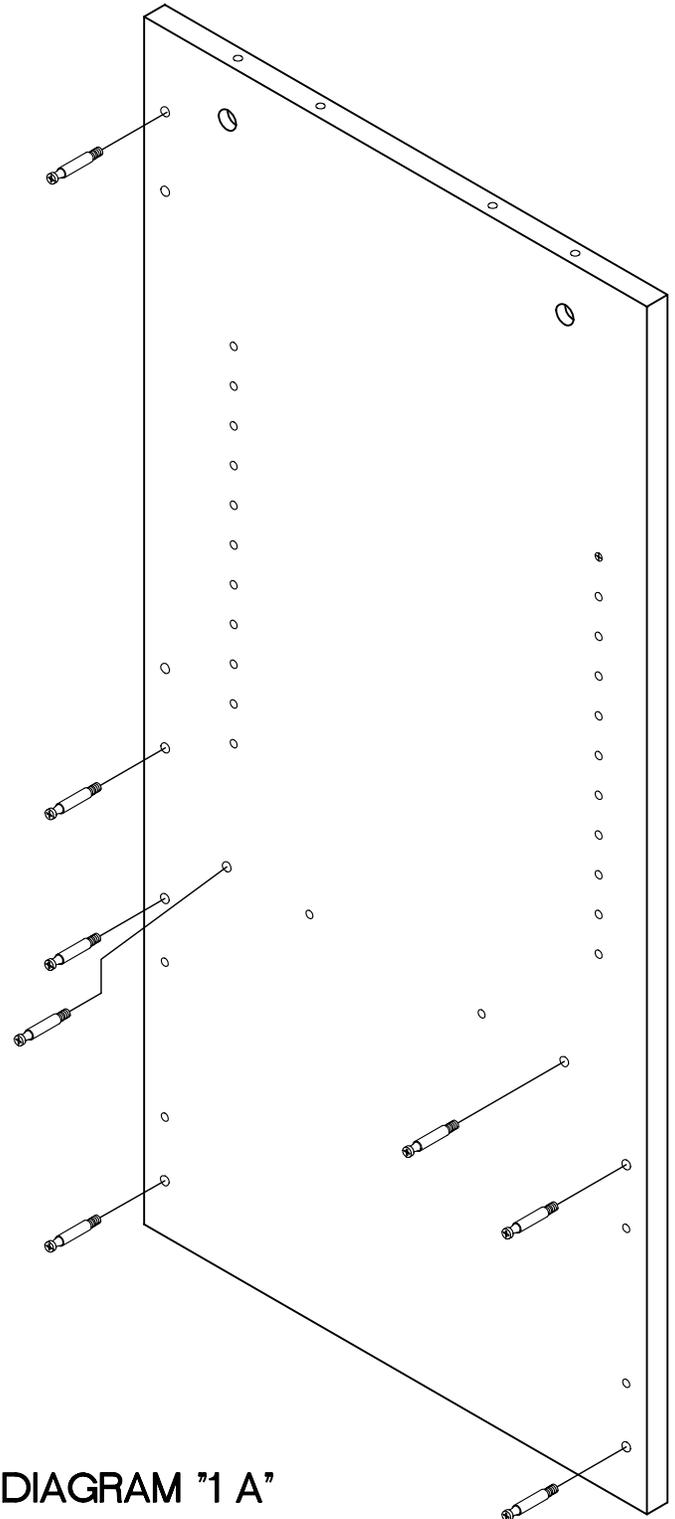



DIAGRAM "1 A"



SERVICE COUNTER ASSEMBLY INSTRUCTION MANUAL


STEP 2 :

WHILE END PANELS ARE ON FLAT SURFACE WITH CAM LOCK PINS IN PLACE, NOW TAP (18) 1 1/8" WOOD DOWELS IN ON EACH OF THE END PANELS WITH RUBBER Mallet OR HAMMER. (SEE DIAGRAM "2A") ALSO AT THIS TIME INSERT CAM LOCK CONNECTOR NUTS INTO THE (2) TOP HOLES OF EACH PANEL. (SEE DIAGRAM "2B")

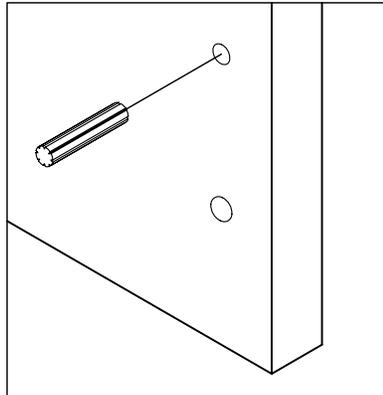

ENLARGEMENT DETAIL

SEE DIAGRAM "2A" FOR LOCATION OF HOLES

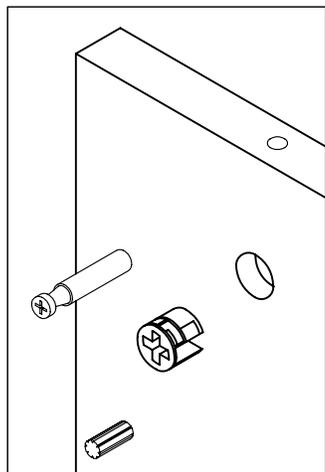

ENLARGEMENT DETAIL

SEE DIAGRAM "2B" FOR LOCATION OF HOLES

PLEASE NOTE

THE CAM LOCK NUTS MUST BE POINTING OUT WITH THE ARROW TIP TOWARD THE HOLE ON THE END EDGE SEE BELOW

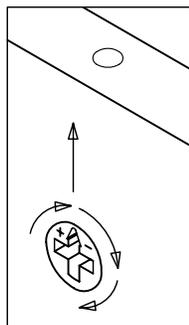


DIAGRAM "2A"


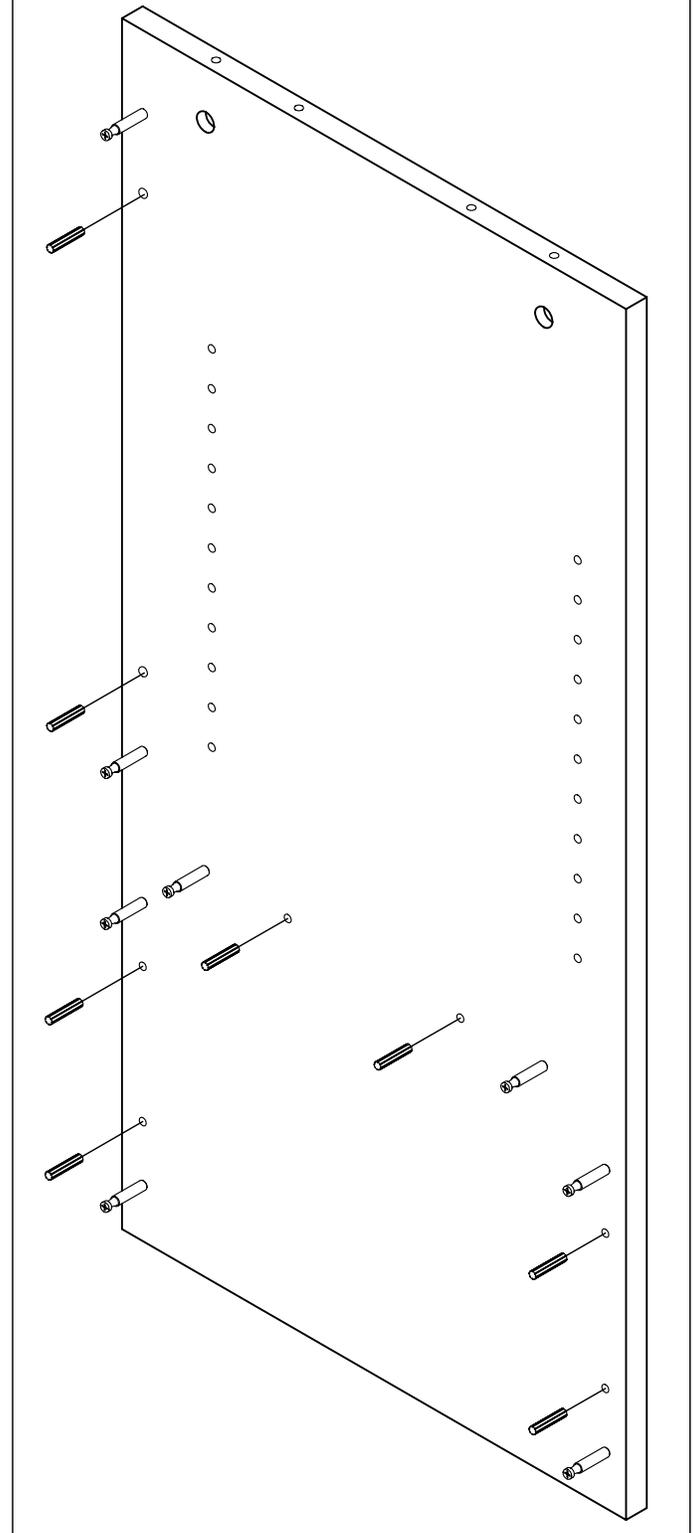






DIAGRAM "2B"

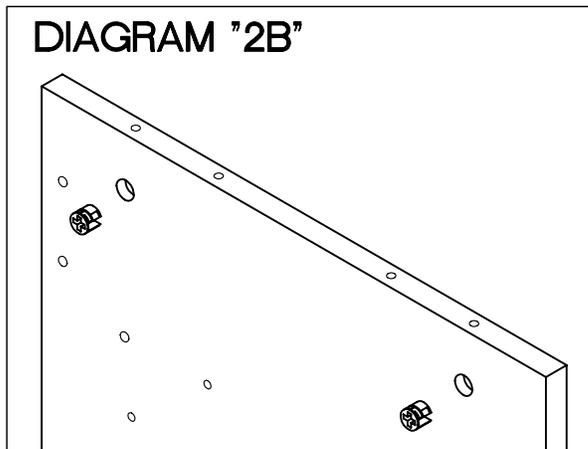

SERVICE COUNTER ASSEMBLY INSTRUCTION MANUAL

STEP 3 :


PLACE COUNTERTOP ON FLAT SURFACE WITH BOTTOMSIDE UP AND SCREW (4) - 1 3/4" CAM LOCK PINS IN HOLES ON EACH OF THE END PANELS BY USING PHILLIPS SCREW DRIVER, POWER SCREW DRIVER OR DRILL. (SEE DIAGRAM "3A") NOW TAP (9) - 1 1/8" WOOD DOWELS WITH RUBBER Mallet OR HAMMER. (SEE DIAGRAM "3B")

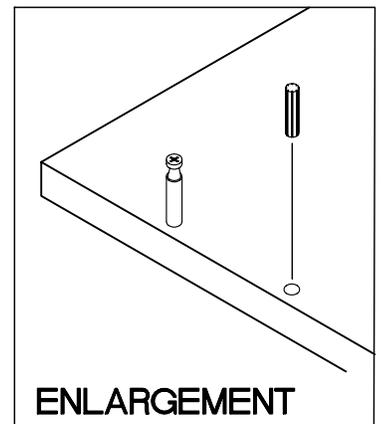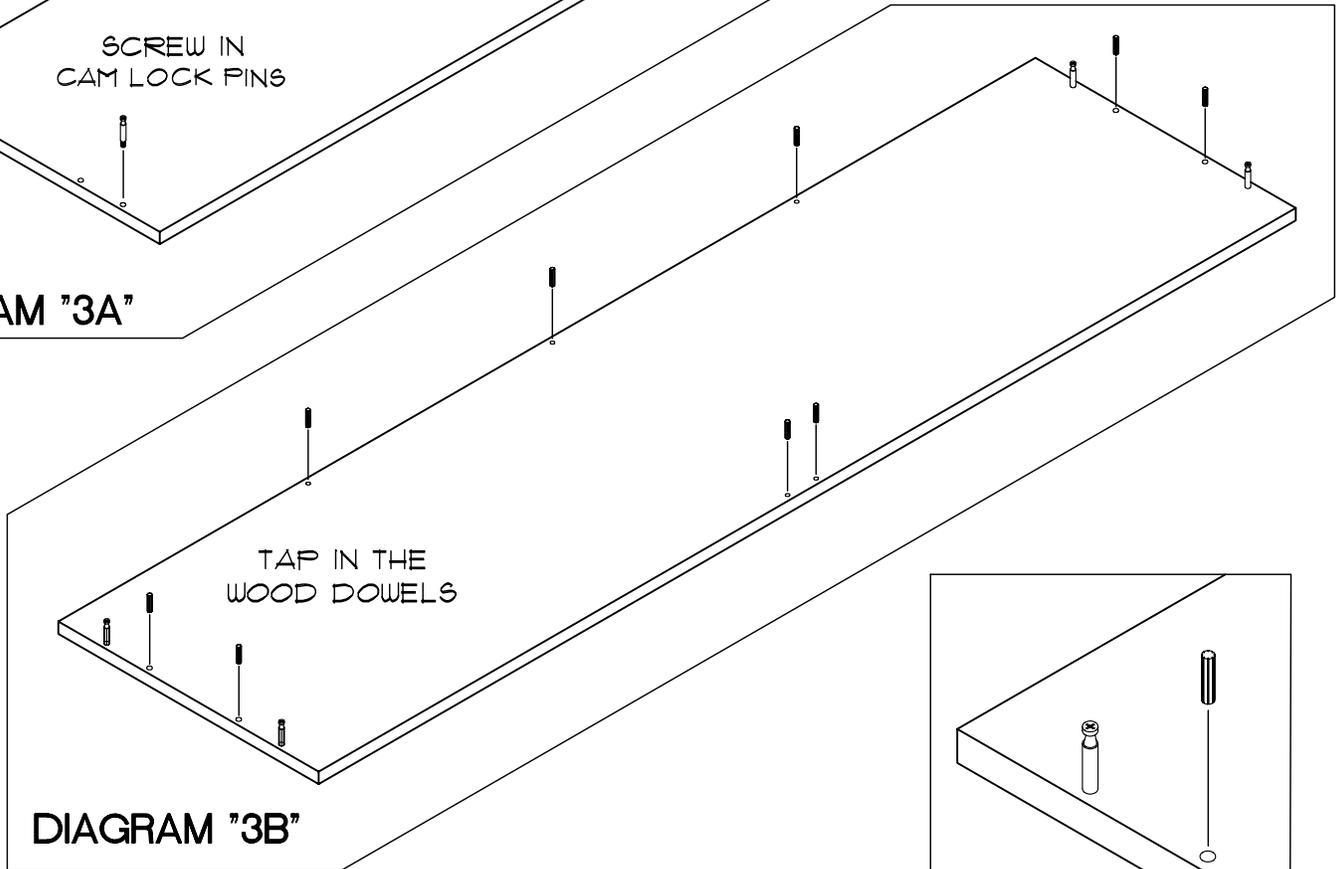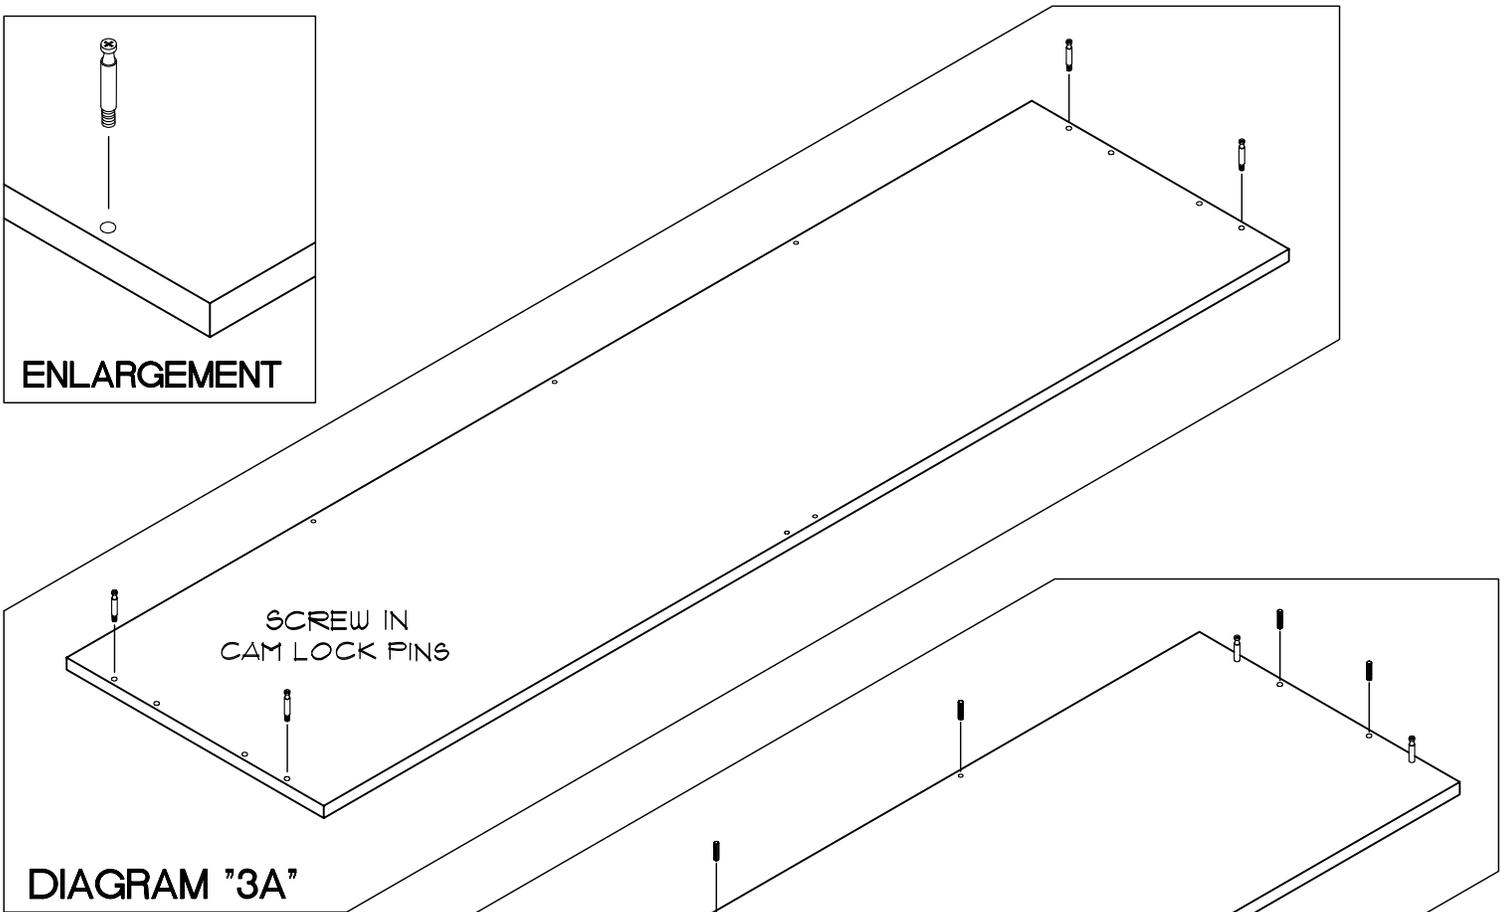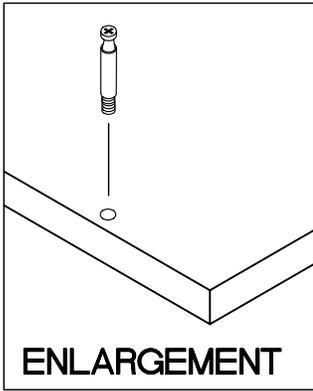

SERVICE COUNTER ASSEMBLY INSTRUCTION MANUAL



STEP 4 :

PLACE THE FRONT & BACK DECK PANELS ON A FLAT SURFACE WITH BACKSIDE UP. NOW PLACE (10) CAM LOCK CONNECTOR NUTS INTO HOLES ON EACH OF THE PANELS JUST LIKE IN STEP 2.

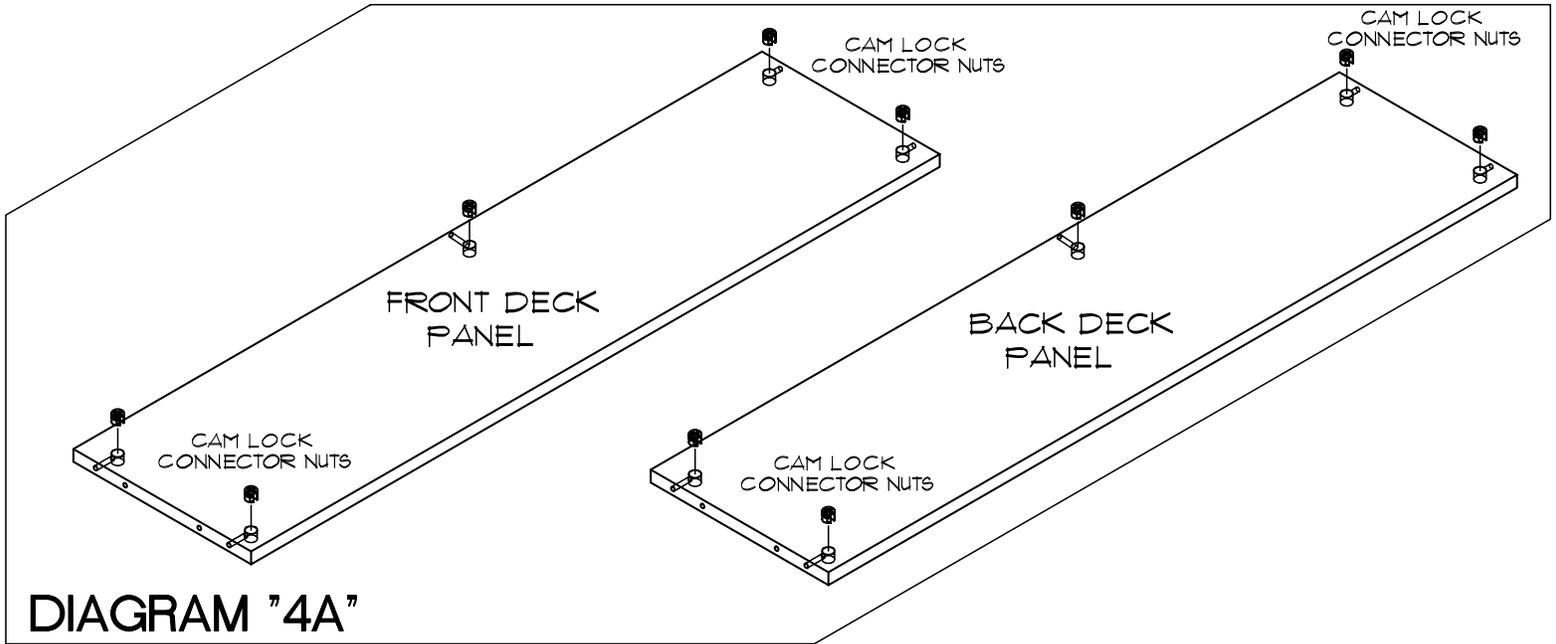

PLEASE NOTE

THE CAM LOCK NUTS MUST BE POINTING OUT WITH THE ARROW TIP TOWARD THE HOLE ON THE END EDGE SEE BELOW

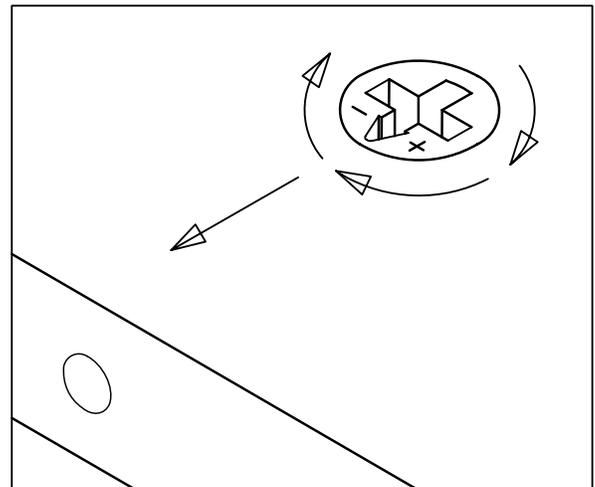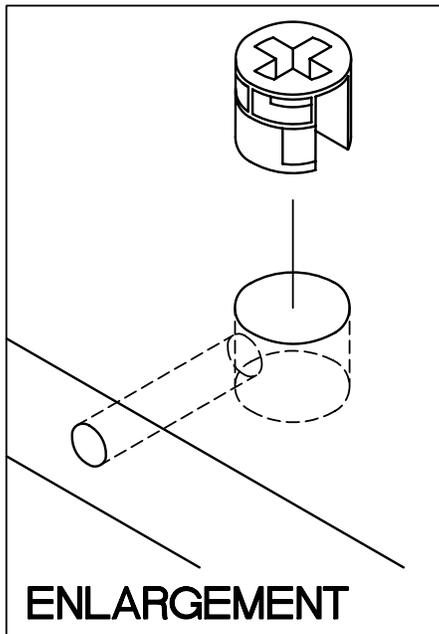


SERVICE COUNTER ASSEMBLY INSTRUCTION MANUAL


STEP 5 :

PLACE THE DECK (BOTTOM) PANEL ON A FLAT SURFACE WITH FACESIDE UP NOW TAP (2) - 1 1/8" WOOD DOWELS INTO HOLES AS SHOWN IN DIAGRAM, BY USING RUBBER Mallet OR HAMMER. (SEE DIAGRAM "5A")

NOW FLIP DECK PANEL OVER SO BOTTOMSIDE IS UP AND PLACE (4) CAM LOCK CONNECTOR NUTS INTO HOLES AS SHOWN IN DIAGRAM. (SEE DIAGRAM "5B")

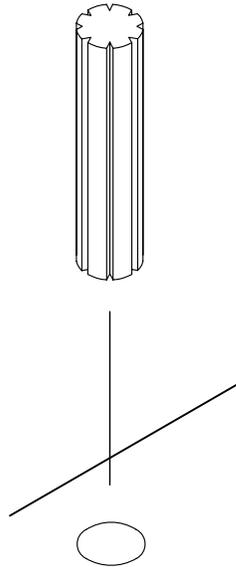

ENLARGEMENT

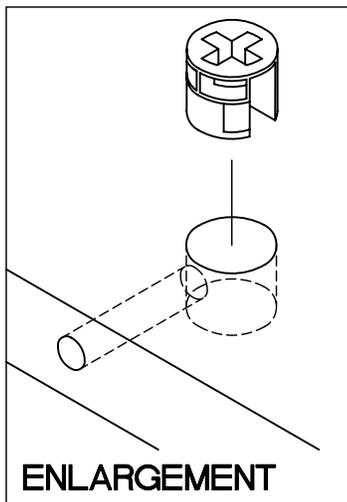

ENLARGEMENT

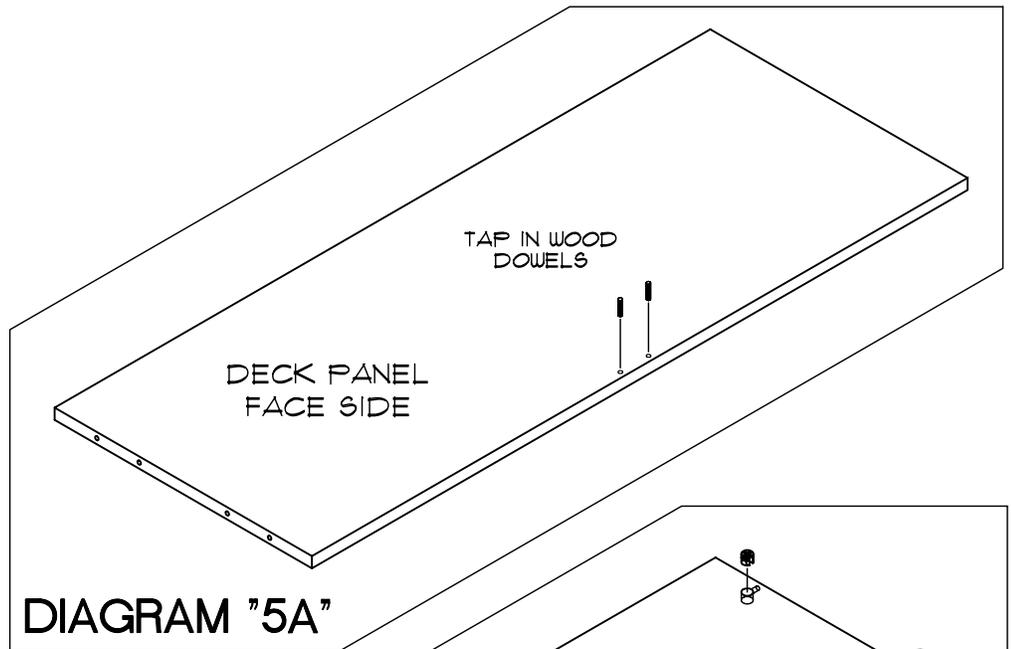


DIAGRAM "5A"


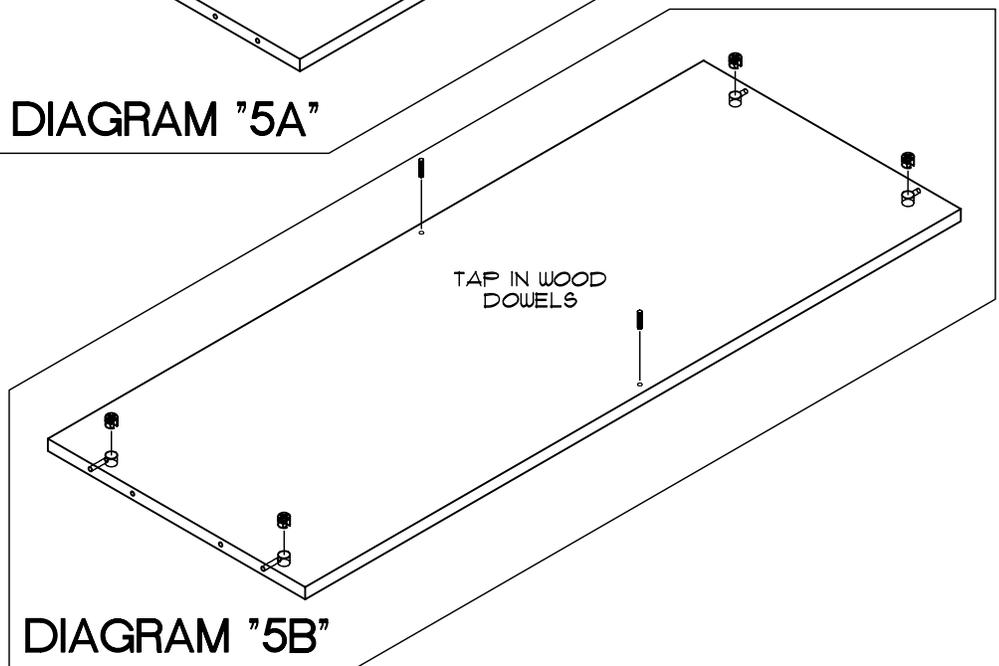


DIAGRAM "5B"



PLEASE NOTE
THE CAM LOCK NUTS MUST
BE POINTING OUT WITH THE
ARROW TIP TOWARD THE
HOLE ON THE END EDGE
SEE BELOW

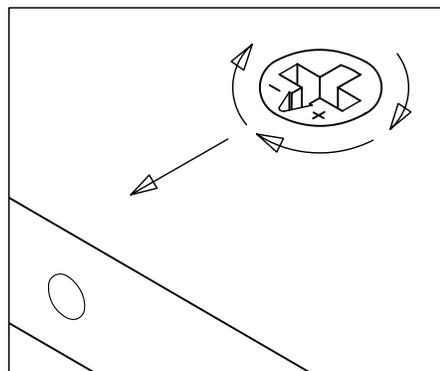

SERVICE COUNTER ASSEMBLY INSTRUCTION MANUAL

STEP 6 :

LAY ONE END PANEL ON THE GROUND WITH DOWELS AND CAM LOCK PINS FACING UP. NOW HOLD UP THE DECK PANEL OVER THE END PANEL ON THE GROUND AND LINE UP THE HOLES IN DECK PANEL WITH THE WOOD DOWELS AND CAM LOCK PINS AND INSERT THE DECK PANEL. (SEE DIAGRAM "6A") TIGHTEN DOWN CAM LOCK CONNECTOR NUTS ATTACH LOWER FRONT AND BACK PANELS IN THE SAME WAY. (SEE DIAGRAM "6B")



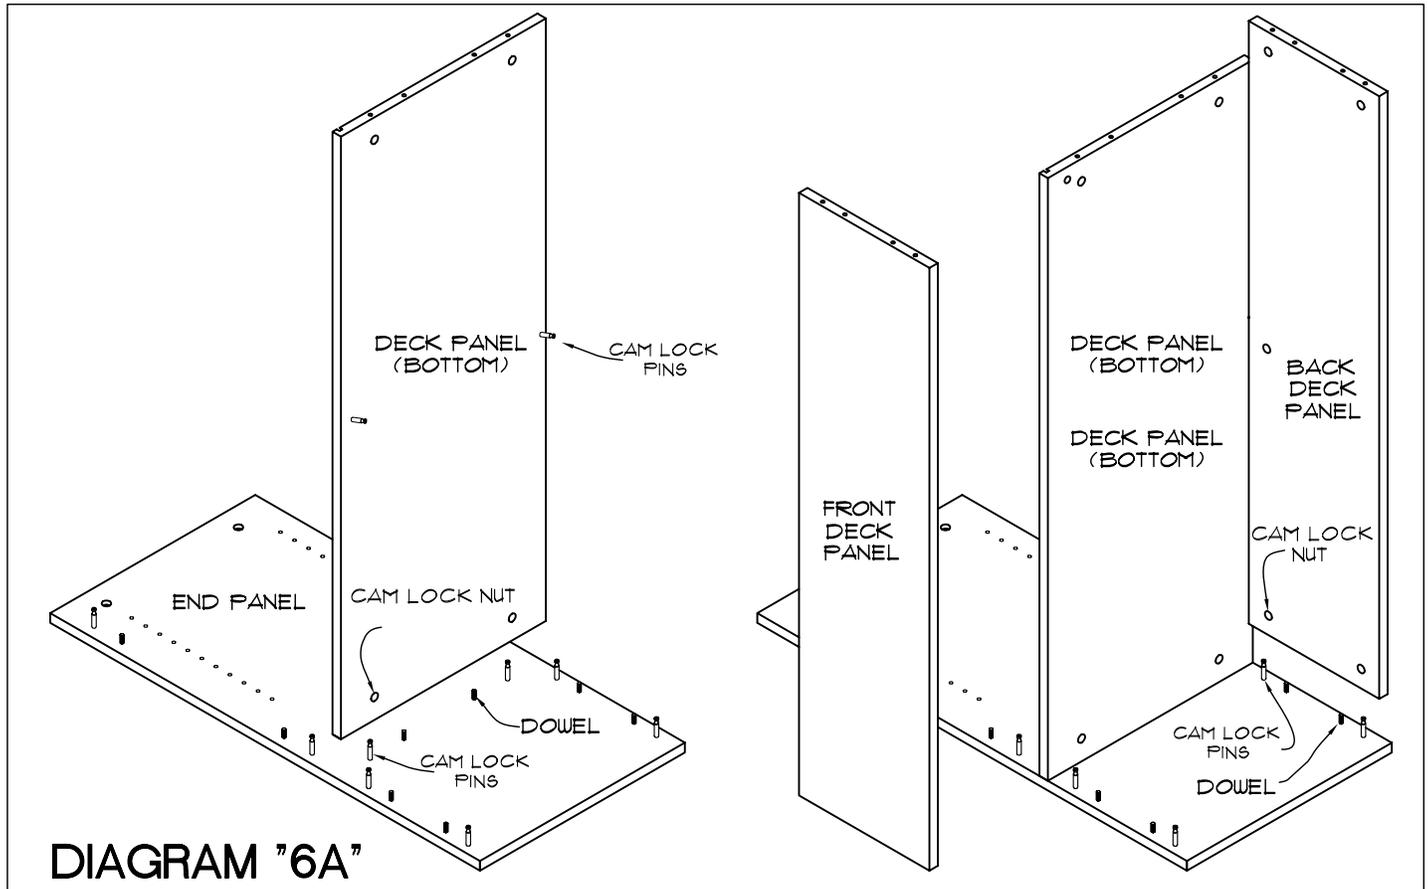


DIAGRAM "6A"

MAKE SURE THAT CAM LOCK PINS AND WOOD DOWELS ARE IN-LINE BEFORE PUSHING DECK PANEL ON END PANEL.

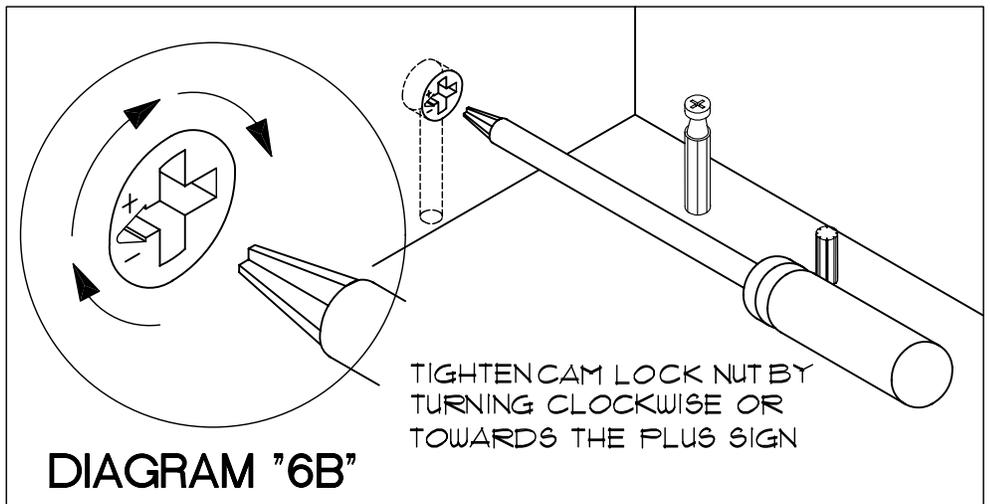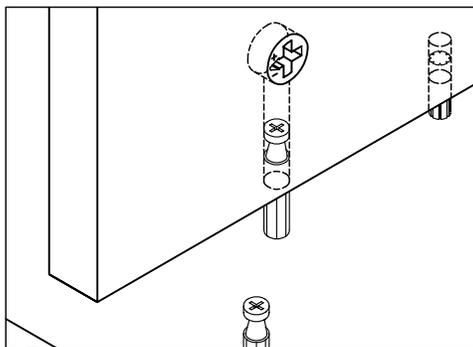

SERVICE COUNTER ASSEMBLY INSTRUCTION MANUAL

STEP 7 :

NOW POSITION AND ALIGN THE FRONT PANEL UP WITH THE WOOD DOWELS AND CAM LOCK PINS ON THE END PANEL AS PREVIOUSLY SHOWN AND TAP DOWN IN PLACE WITH RUBBER MALLET, THEN TIGHTEN (2) OF THE CAM LOCK CONNECTOR NUTS. THEN POSITION THE OTHER END PANEL OVER THE UNIT ALIGNING ALL THE WOOD DOWELS & CAM LOCK PINS AS PREVIOUSLY SHOWN AND TAP DOWN IN PLACE WITH RUBBER MALLET, THEN TIGHTEN (8) OF THE CAM LOCK CONNECTOR NUTS. (SEE DIAGRAM "7B")

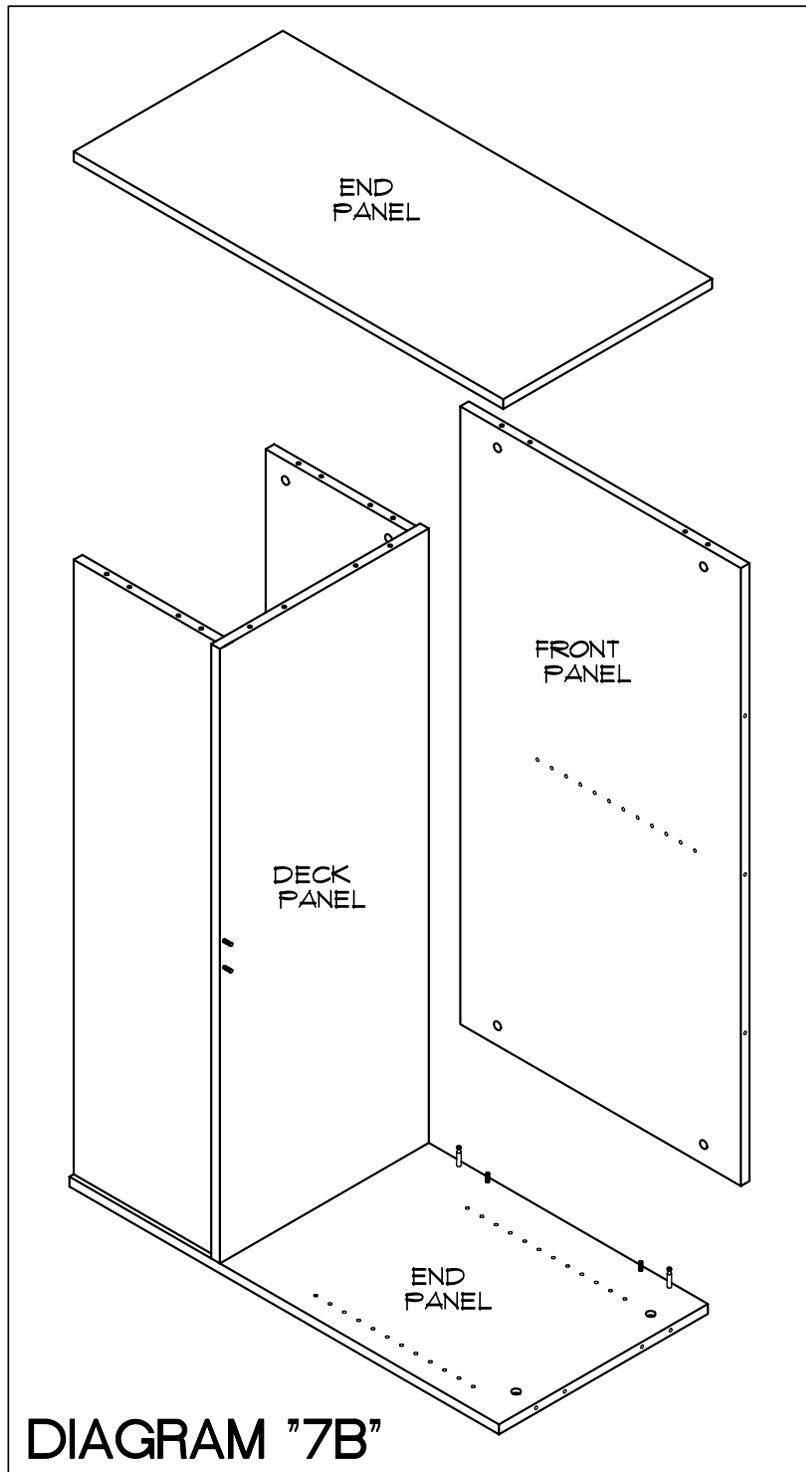


DIAGRAM "7B"



SERVICE COUNTER ASSEMBLY INSTRUCTION MANUAL

STEP 8 :

PUSH THE INTERIOR COUNTERTOP SUPPORT ON THE WOOD DOWELS IN THE DECK (BOTTOM) PANEL. **MAKE SURE THE SHELF PINS HOLE FACES TOWARD THE INSIDE OF CABINET, BEFORE TAPPING DOWN TIGHT IN PLACE.**

NOW YOU MAY TURN THE UNIT TO THE UPRIGHT POSITION AND PROCEED TO ATTACH THE COUNTERTOP IN THE SAME MANNER AS YOU HAVE DONE PREVIOUSLY BY ALIGNING HOLES WITH WOOD DOWELS & CAM LOCK PINS. **SEE DIAGRAM 8A, HOWEVER THE DIAGRAM IS SHOWN STILL ON END FOR CLARITY ONLY.**

TAP DOWN COUNTERTOP IN PLACE AND TIGHTEN (6) MINIFIX CAMS.

APPLY MELAMINE COLOR STICKERS OVER THE (6) CAM LOCK NUTS YOU JUST TIGHTEN DOWN (SEE DIAGRAM 8B) AND INSTALL THE (6) SHELF PINS IN DESIRED HOLES (SEE DIAGRAM 8C) INSTALL SHELF AND THE UNIT IS COMPLETE.

